 



INSTRUCTIONS FOR SETUP

To contact NEMO Customer Service
Email: journey@nemoequipment.com
Phone: 800-997-9301

1 Stake Ridge Line Anchors



Lay the tarp over the area you want to cover, keeping the elastic Spring Link™ ridge line exposed. Tension the anchor lines so the Spring Link™ feature is straight but not stretched. Stake the four anchors.

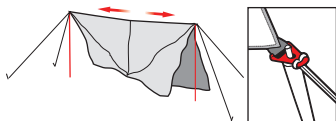


2 Insert Tarp Poles

Insert the first pole into metal anchors at the end of the ridge line and extend to about 2.5m or desired height. The Spring Link™ will hold the pole in place while you insert the second pole. Use the line tensioners on the anchor lines to make sure the ridge line is completely tensioned.




3 Vestibules and Tension

 Pull anchor lines out to the corners of the tarp and stake in place. An additional tarp pole can be added along the side of the tarp to create a standing height entry point and awning.




4 Clip Inner Tent to Tarp

Clip inner tent onto Tarp using the buckles located along the roof line of the inner tent.

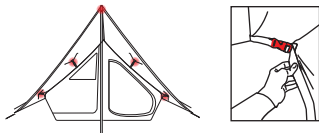

5 Stake Out Tent Corners

Secure the corner anchors by pounding stakes into the ground with a rock or hard object. If the ground is too hard, tie the anchors to a rock or another heavy object.

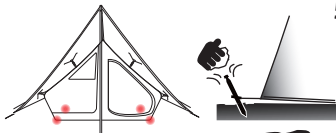

©2018 NEMO Equipment, Inc.



Remember to leave no trace. Before leaving your campsite, take a thorough look around making sure you have not left anything behind, out of place, or damaged.

DARK TIMBER™