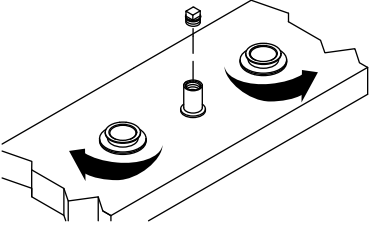
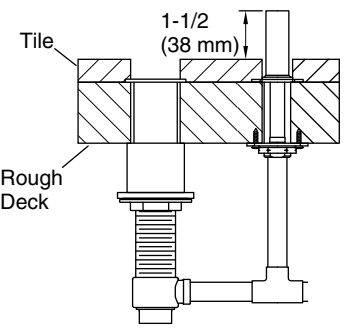
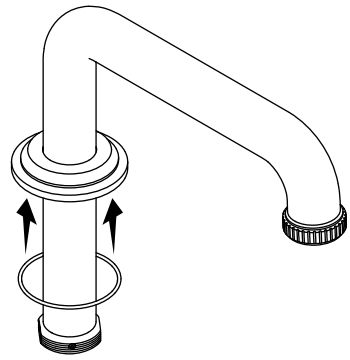
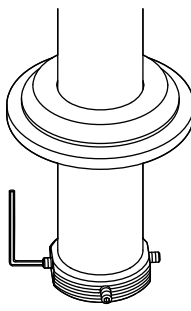
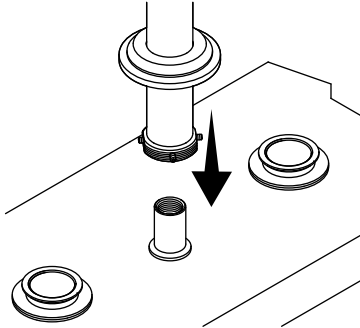
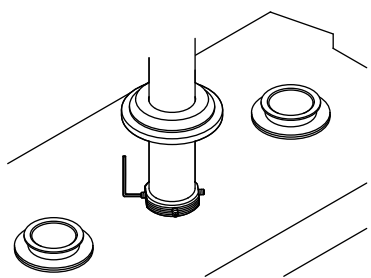
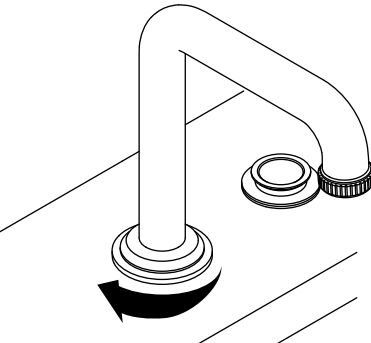
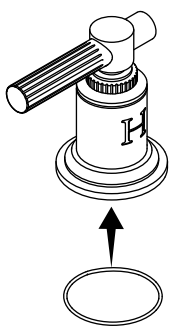
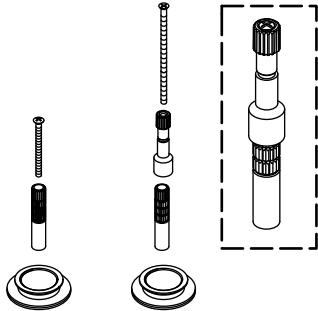
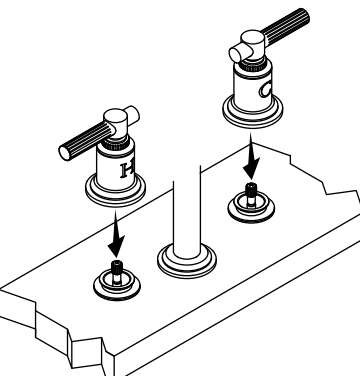
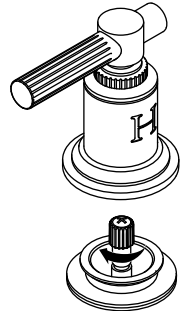
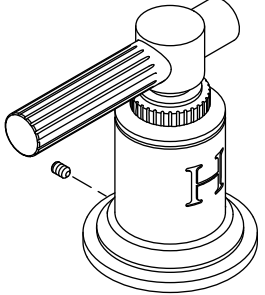
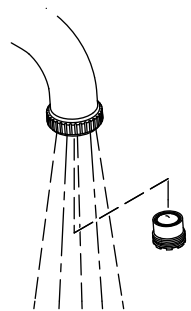


<p>Record your model number.</p>	<p>⚠ WARNING: Risk of personal injury. Do not lean over the pipe plug during removal. The water supply lines may be pressurized, causing water to spray or purge.</p>	<p>⚠ CAUTION: Risk of product damage. The escutcheon is free to move on the spout. Do not allow the escutcheon to scratch the spout finish.</p>	<p>Follow all local plumbing and building codes. Shut off the water supply. Install valve P19303-00-NA before installing this product.</p>	<p>1 Make sure the valves are closed and remove the pipe plug.</p> 
<p>2 The spout supply tube should be at least 1-1/2" (38 mm) above the deck surface.</p> 	<p>3 Install the O-ring into the groove under the spout escutcheon.</p> 	<p>4 Loosen the spout setscrews until they clear the inside wall of the spout.</p> 	<p>5 Use a twisting motion to install the spout on the supply tube until it contacts the deck.</p> 	<p>6 Tighten the setscrews.</p> 
<p>7 Screw the escutcheon onto the base of the spout until it contacts the deck.</p> 	<p>8 Install an O-ring into the grooves under each handle escutcheon.</p> 	<p>9 Install the stem extension on the valve with the screw. Cut the extension or stack the extensions and use the long screw if necessary.</p> 	<p>10 Install the handles with the "H" and "C" facing forward.</p> 	<p>11 To align the handles, rotate the stem extensions.</p> 
<p>12 Tighten the setscrews.</p> 	<p>13 Remove the aerator with the key. Run the water for 1 minute to flush debris.</p> 	<p>14 Reinstall the aerator with the key.</p> 