


# OUTDOOR COMMERCIAL WALL LIGHT

## IMPORTANT SAFETY INSTRUCTIONS AND INSTALLATION GUIDE

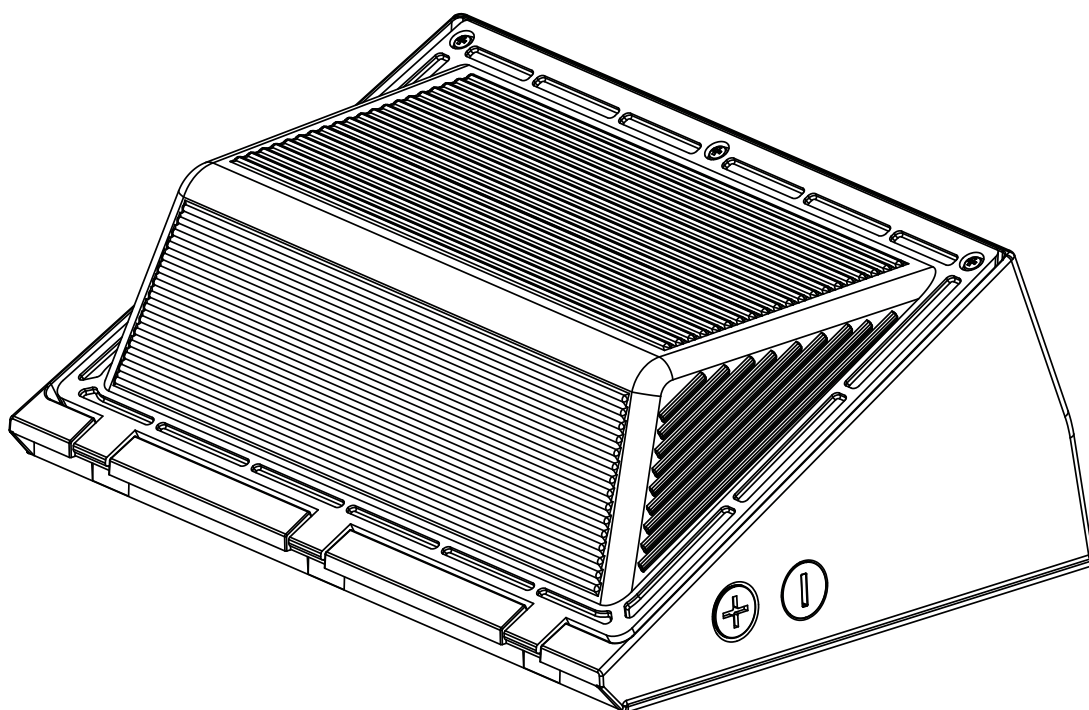

**READ BEFORE INSTALLATION**  
**SAVE THESE INSTRUCTIONS**



# Table of Contents

Table of Contents	2
Safety Information	2
Care and Maintenance	2
Warranty	2
Pre-Installation	3
Tools Required	3
Hardware Included	3
Wall Mount Installation	4
Flush Mount Installation	5
Operation	6
Troubleshooting	6

## Safety Information

For your safety, always remember to:

- ☐ Turn off the power supply at the fuse or circuit breaker box before you install the fixture.
- ☐ Ground the fixture to avoid potential electric shock and to ensure reliable starting.
- ☐ Double-check all connections to be sure they are tight and correct.
- ☐ Wear rubber soled shoes and work on a sturdy wooden ladder.
- ☐ Account for small parts and destroy packing material, as these may be hazardous to children.

This fixture is designed for use in a circuit protected by a fuse or circuit breaker. It is also designed to be installed in accordance with local electrical codes. If you are unsure about your wiring, consult a qualified electrician or local electrical inspector, and check your local electrical code.

Account for small parts and destroy packing material, as these may be hazardous to children.

### Dusk to Dawn Operation:

The light will turn on at dusk and remain on through the night until dawn. The light will remain off throughout the day, until dusk.

**NOTICE:** To make sure this function works properly, always keep the wall switch in the “ON” position (including daytime).

### Product Specifications

- 120VAC, 60Hz, 60W
- Non-Dimmable
- Suitable for wet locations



**WARNING: RISK OF SHOCK.** House electric current can cause painful shock or serious injury unless handled properly.



**CAUTION:** Turn off the main power at the circuit breaker before installing the fixture, in order to prevent possible shock.



**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



**WARNING: RISK OF CUTS.** Some metal parts in the fixture may have sharp edges. To prevent cuts and scrapes, wear gloves when handling the parts.

**NOTICE:** All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections obtain the services of a qualified electrician.

Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustrations on the installation instructions.

## FCC STATEMENT

**Supplier's Declaration of Conformity:**  
47 CFR § 2.1077 Compliance Information  
**Responsible Party:** Feit Electric Company  
4901 Gregg Road, Pico Rivera, CA 90660, USA  
www.feit.com  
**Unique Identifier:** S13WPK/840/DD/BZ/2

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. Any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.


## Care and Maintenance

Periodically clean the fixture and diffuser using a mild, non-abrasive cleaner and soft cloth. When cleaning the fixture, make sure the power is turned off. Do not spray cleaner directly onto any part of the fixture or LEDs.


## Limited Warranty

This product is warranted to be free from defects in workmanship and materials for up to 3 years from date of purchase. If the product fails within the warranty period, please contact Feit Electric at [info@feit.com](mailto:info@feit.com), visit [feit.com/contact-us](http://feit.com/contact-us) for instructions on replacement or refund. REPLACEMENT OR REFUND IS YOUR SOLE REMEDY. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY. LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES IS HEREBY EXPRESSLY EXCLUDED. Some states and provinces do not allow the exclusion of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.


TOOLS REQUIRED (NOT INCLUDED)




Phillips  
screwdriver

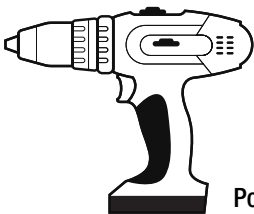


Power drill




7/32 in. Drill Bit

 **NOTE:** Hardware not shown to actual size.


HARDWARE INCLUDED

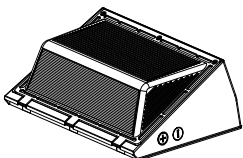


AA



 
BB




CC



DD



EE



FF


Part	Description	Quantity
AA	Wall Light	2
BB	Front Cover Screws 8-32 x 0.5"	6
CC	Wall Mounting Screws 8 x 1.25"	8
DD	J-Box Mounting Screws 8-32 x 1.25"	4
EE	Plastic Anchors	8
FF	Wire Connectors	6

## 1 Turning off the Power

- Turn the power OFF at the switch and fusebox or the circuit breaker.


## 2 Remove the Front Cover

- Open the Wall Light (AA) by unscrewing the Front Cover Screws (BB) using a phillips screwdriver (not provided).
- Remove the Front Cover from the Back Plate by swinging downward and disengage from the 3 bottom slots.

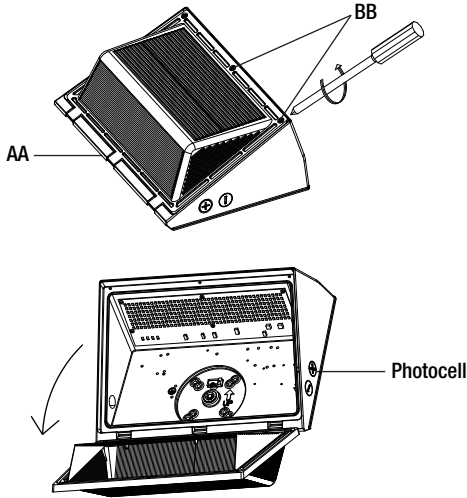


## 3 Prep the Back Plate

- Drill 4 holes from the outside surface on the Back Plate using a  $\frac{3}{16}$  in. drill bit as indicated. Select the desired conduit location and remove the appropriate  $\frac{1}{2}$  inch plug (II).

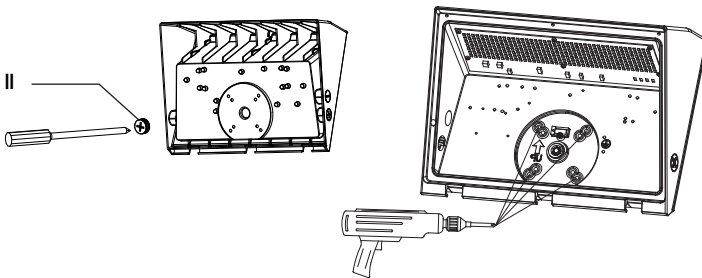


## 4 Affix Back Plate to Wall

- Using the back plate as a guide, mark the position on the wall where the anchors will be placed.

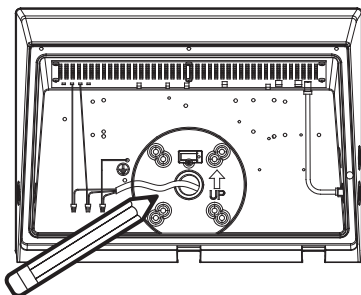


## 5 Lock the Bottom Shell

- Lock the bottom shell on the mounting seat with screws.

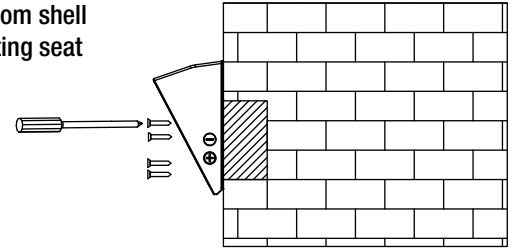


## 6 Connect the Power Supply Wires

- Feed the power supply wires through the desired conduit inlet on the Back Plate. Using Wire Connectors (FF), connect wires coming from the LED driver on the Back Plate to the power supply wires:  
Black - Line voltage  
White - Neutral  
Green - Ground (Bare or Green)

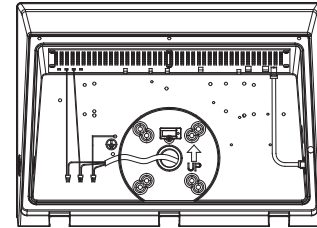


## 7 Re-Attach the Front Cover

- Re-attach the Front Cover to the Back Plate and re-connect the quick release wires.

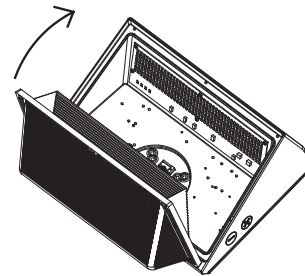

- Close the Front Cover and secure with the Front Cover Screws (BB).

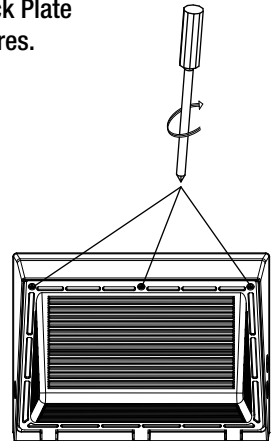

## 8 Apply Sealant

- Once the fixture is tightly secured to the wall, apply silicone sealant around the base of the fixture to prevent moisture from reaching the connections.

## 9 Turn Power On


- Turn power back on at the wall switch, circuit breaker or fusebox.

## 1 Turning off the Power

- Turn the power OFF at the switch and fusebox or the circuit breaker.


## 2 Remove the Front Cover

- Open the Wall Light (AA) by unscrewing the Front Cover Screws (BB) using a phillips screwdriver (not provided).
- Remove the Front Cover from the Back Plate by swinging downward and disengage from the 3 bottom slots.

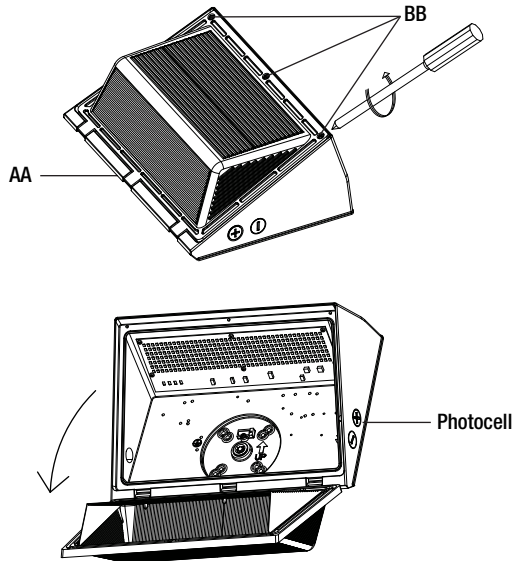


## 3 Prep the Back Plate

- Drill 4 holes from the outside surface on the Back Plate using a  $\frac{3}{16}$  in. drill bit as indicated. Unscrew the center  $\frac{1}{2}$  inch plug (II).

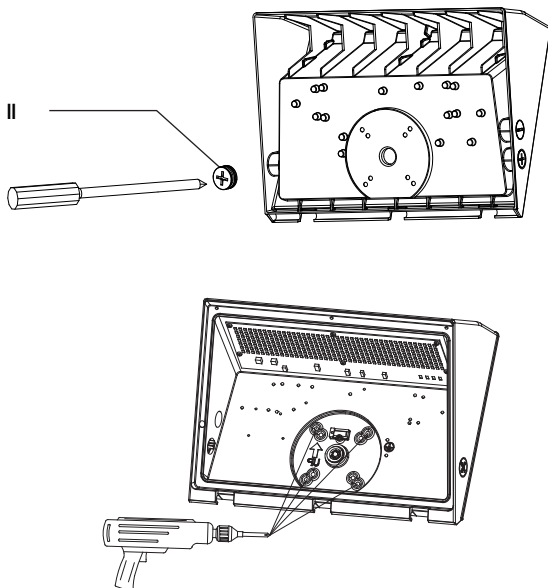


## 4 Connect the Power Supply Wires

- Feed the power supply wires through the knockout hole and mount the Back Plate to the J-Box using the J-Box Mounting Screws (DD). Using Wire Connectors (FF), connect wires coming from the LED driver on the Back Plate to the power supply wires:  
Black - Line voltage  
White - Neutral  
Green - Ground (Bare or Green)

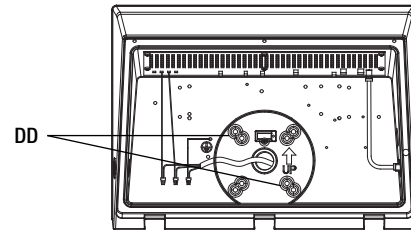

## 5 Re-Attach the Front Cover

- Re-attach the Front Cover to the Back Plate.

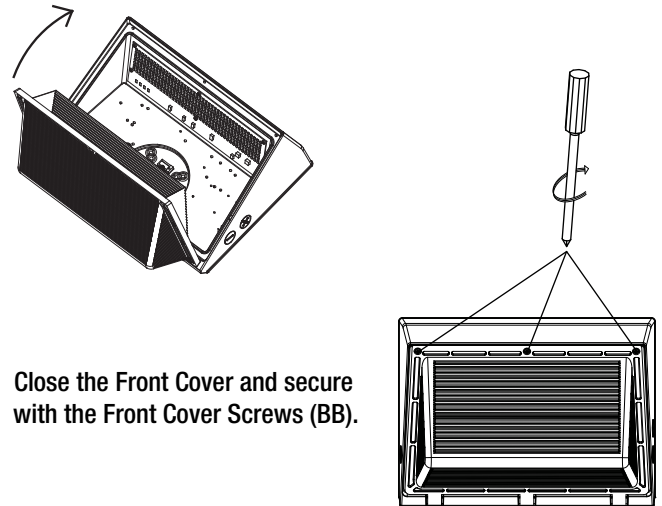

## 6 Apply Sealant

- Once the fixture is tightly secured to the wall, apply silicone sealant around the base of the fixture to prevent moisture from reaching the connections.

## 7 Turn Power On

- Turn power back on at the wall switch, circuit breaker or fusebox.

## D2D Function


- The light will turn on at dusk.
- The light will remain on through the night until dawn. At dawn, the light will turn off.

## Disable the Photocell



**WARNING:** Turn the power OFF directed to your fixture at the switch and circuit breaker before disabling the photocell.

- To access the photocell connector, follow step #2 Removing the Front Cover.
- Disconnect the connector attached to the photocell to disable the dusk to dawn function. This will keep the light continuously ON and the fixture can be controlled through the wall switch or a master photocell.

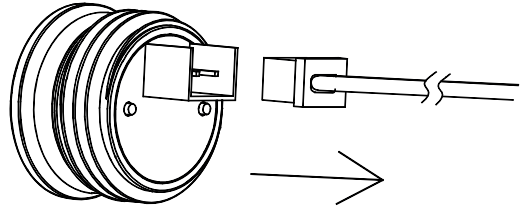

## Troubleshooting

Problem	Possible Cause	Solution
The light will not illuminate.	The power is off.	Make sure the power supply is on.
	There is a faulty wire connection.	Check the wiring. Contact a qualified and licensed electrician if you are not comfortable troubleshooting wiring problems.
	There is a faulty wire switch.	Test or replace the switch.
The light does not automatically turn off during daylight hours.	The photocell is covered.	1. Remove any debris and clean the photosensor.
Security light cycles ON and OFF continuously.	Dusk-to-Dawn sensor is sensing reflected light from the security light or other surrounding light source.	1. Ensure no reflective materials are near to the wall pack. 2. Relocate the fixture to a different location where it no longer causes reflected light.