










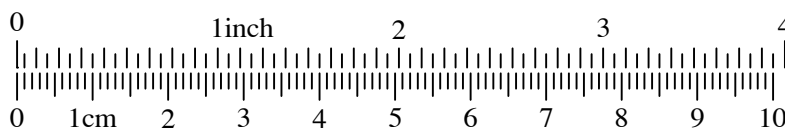
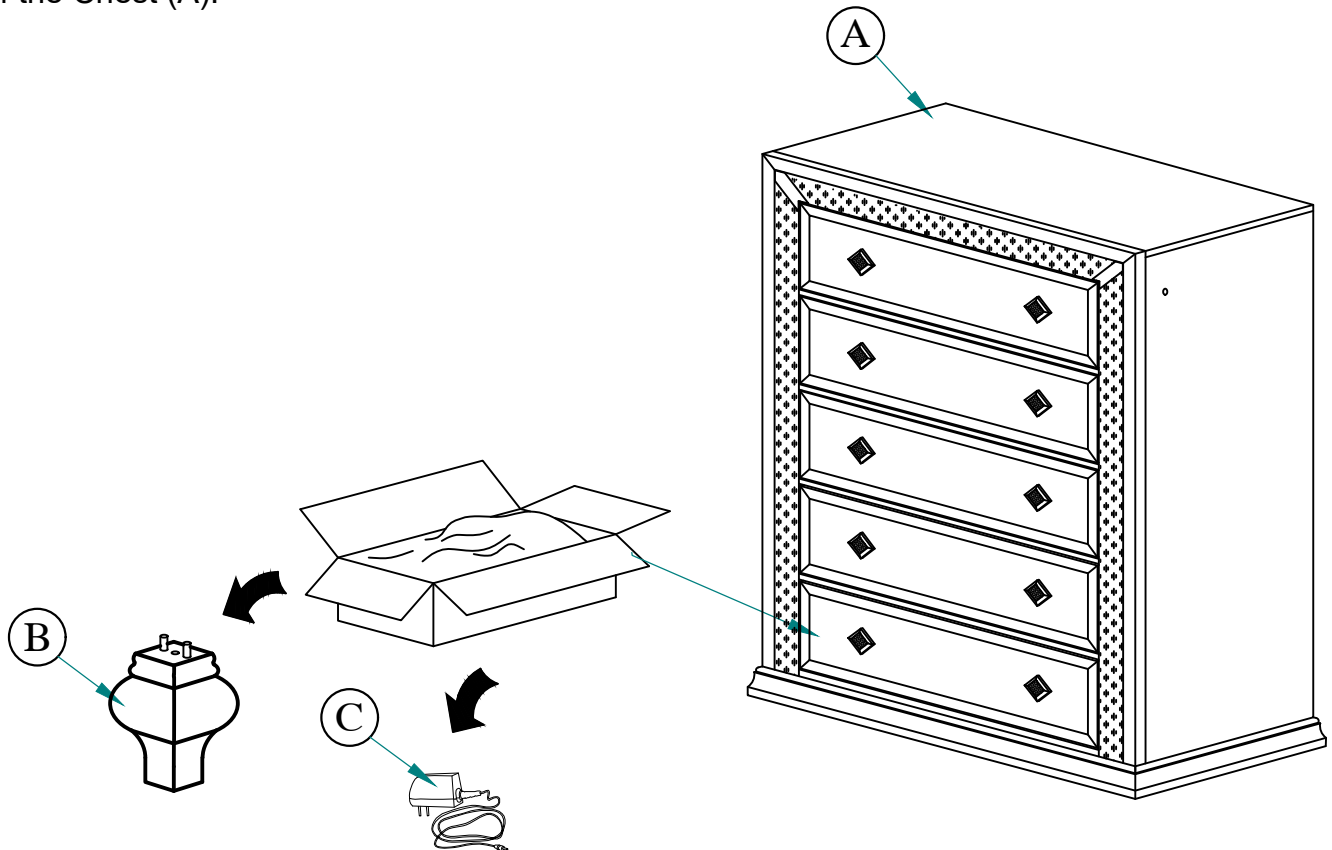
Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts which may have come loose inside the carton during shipment. Identify and count all items and compare with the parts list and hardware list shown below.

PARTS LIST			
NO	DESCRIPTION	SKETCH	QTY
A	Chest		1pc
B	Bun Foot		4pcs
C	AC/DC Adapter		1pc

HARDWARE LIST			
NO	DESCRIPTION	SKETCH	QTY
1	Allen Key - M4		1pc
2	Bolt - M6 x 3-1/8"		4pcs
3	Spring Washer - M6		4pcs
4	Anti-Tipping Kit		1set

PLACE WOOD PARTS ON A
CLEAN NON-ABRASIVE SURFACE


Step 1: Locate the Bun Foot (B) and AC/DC Adapter (C) inside boxes at the bottom drawer of the Chest (A).






PLACE WOOD PARTS ON A
CLEAN NON-ABRASIVE SURFACE


Step 2: Assemble the Bun Foot (B) to the Chest (A) by using Allen Key (1) and the hardware Bolt (2), and Spring Washer (3).

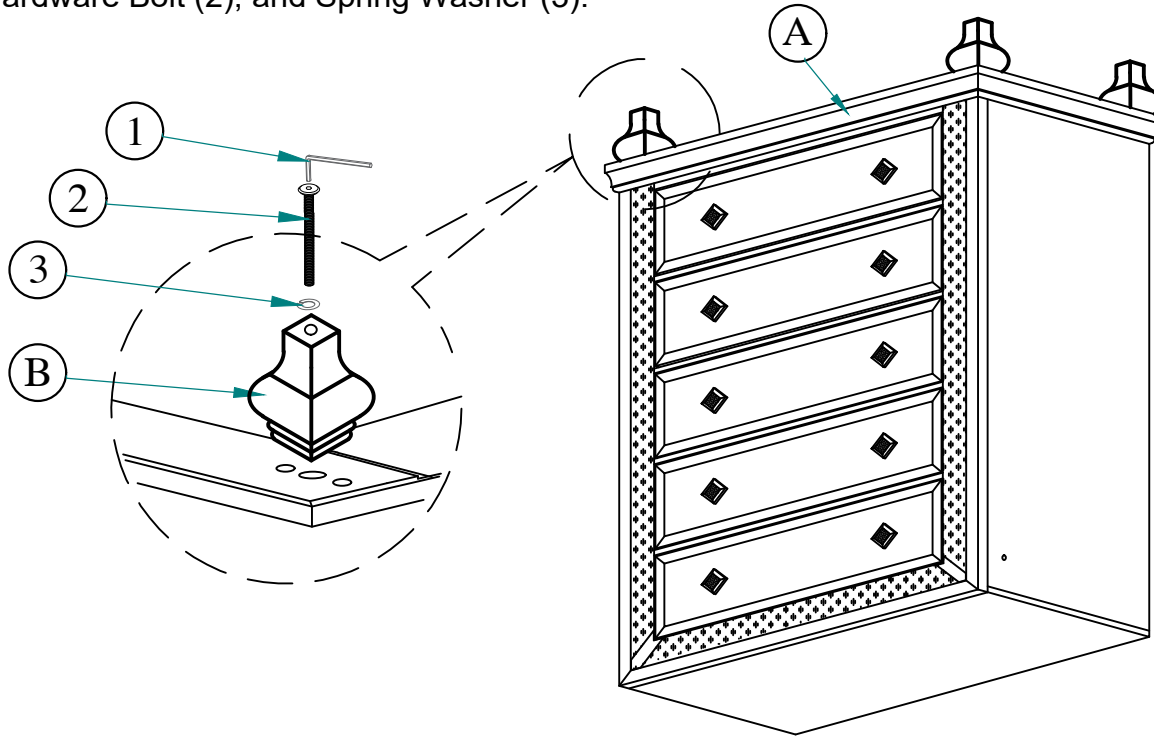

Step 3: Connect the AC/DC Adapter (C) to the wire on the back of Chest (A).

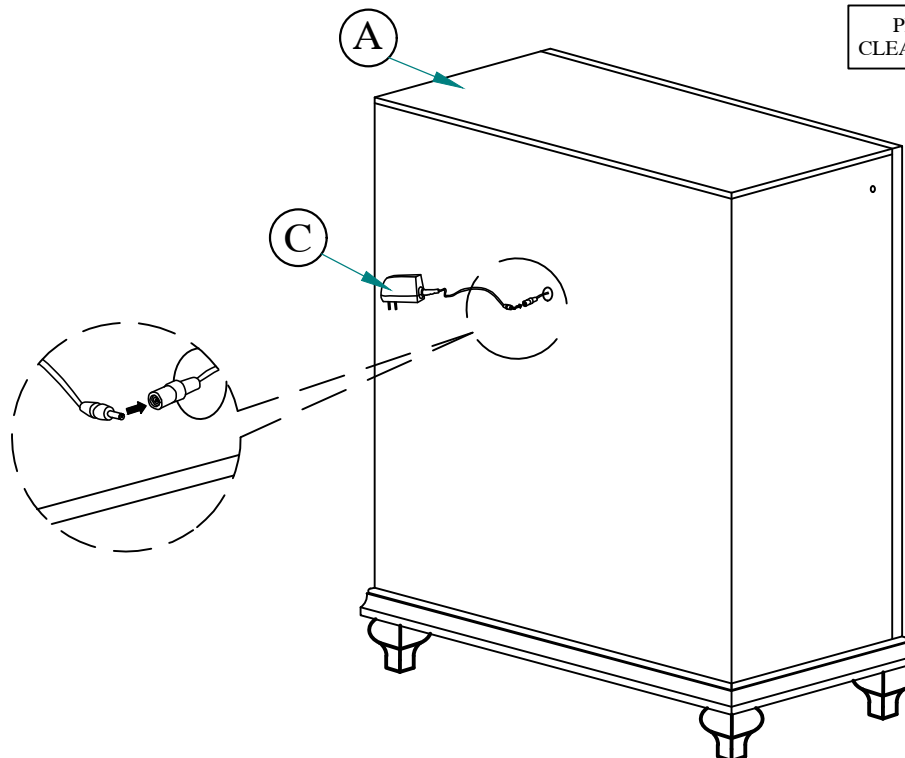


PLACE WOOD PARTS ON A
CLEAN NON-ABRASIVE SURFACE

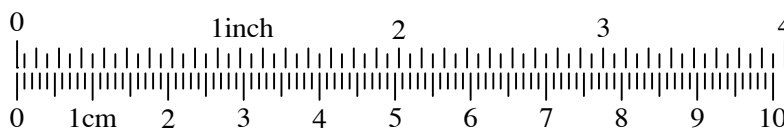




PLACE WOOD PARTS ON A
CLEAN NON-ABRASIVE SURFACE

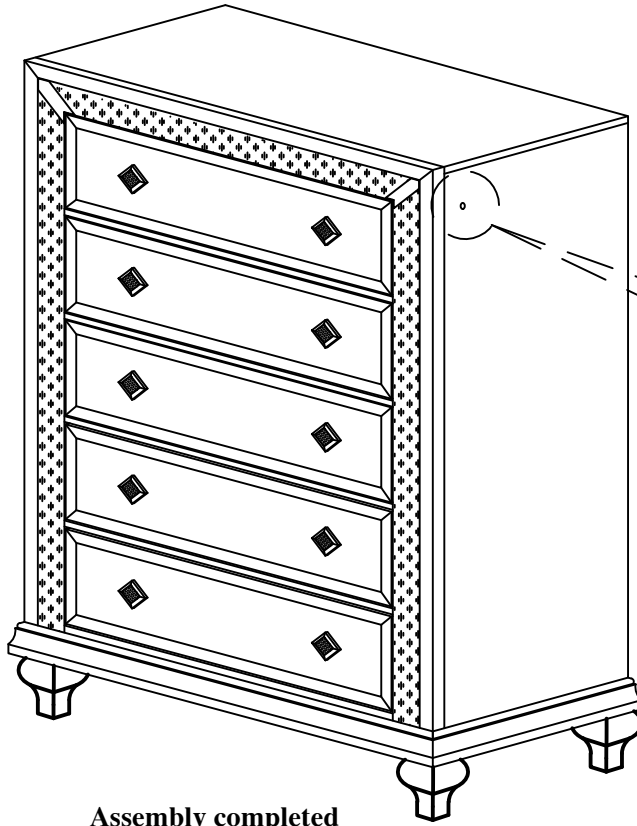

Lighting touch switch
(Left & Right)

Assembly completed

Step 4: Install the Anti-Tipping Kit. Anti-Tipping Kit must always be used to prevent the furniture from tipping.

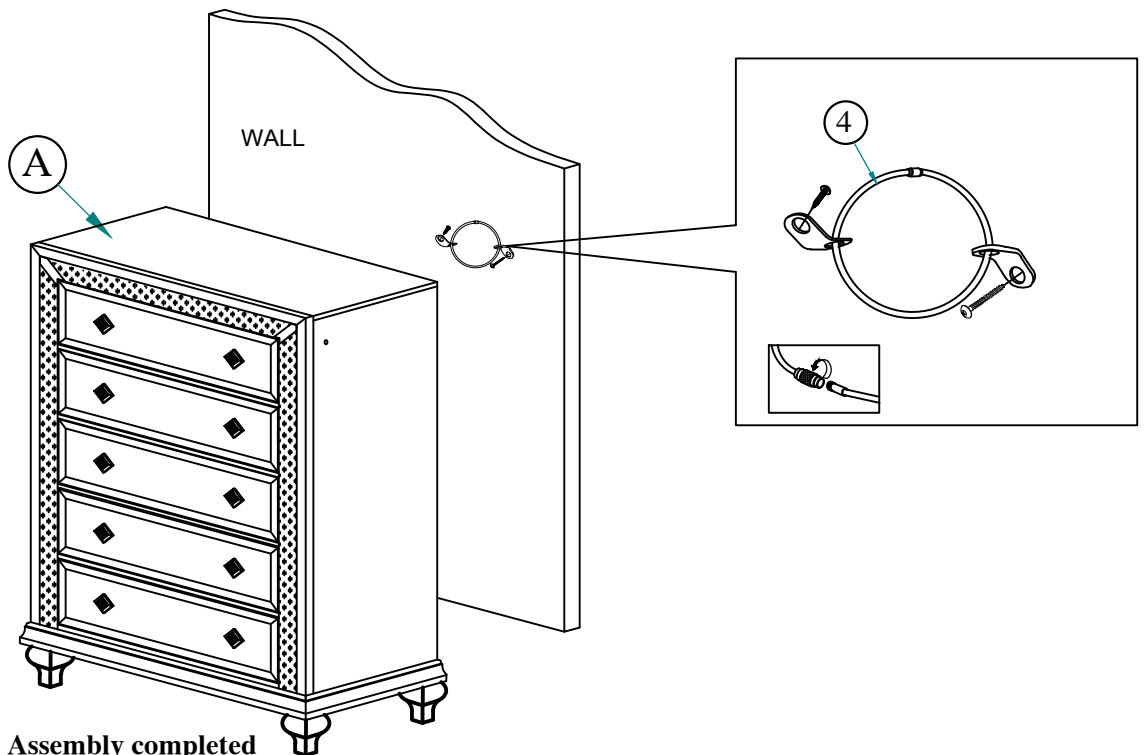

Assembly completed

