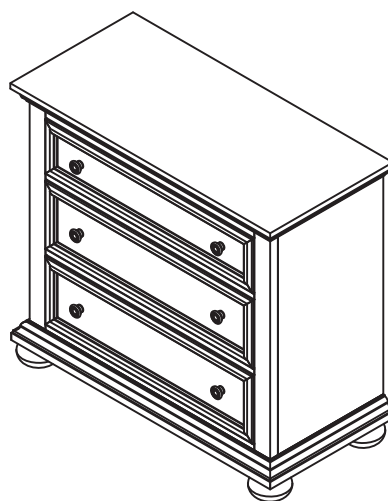
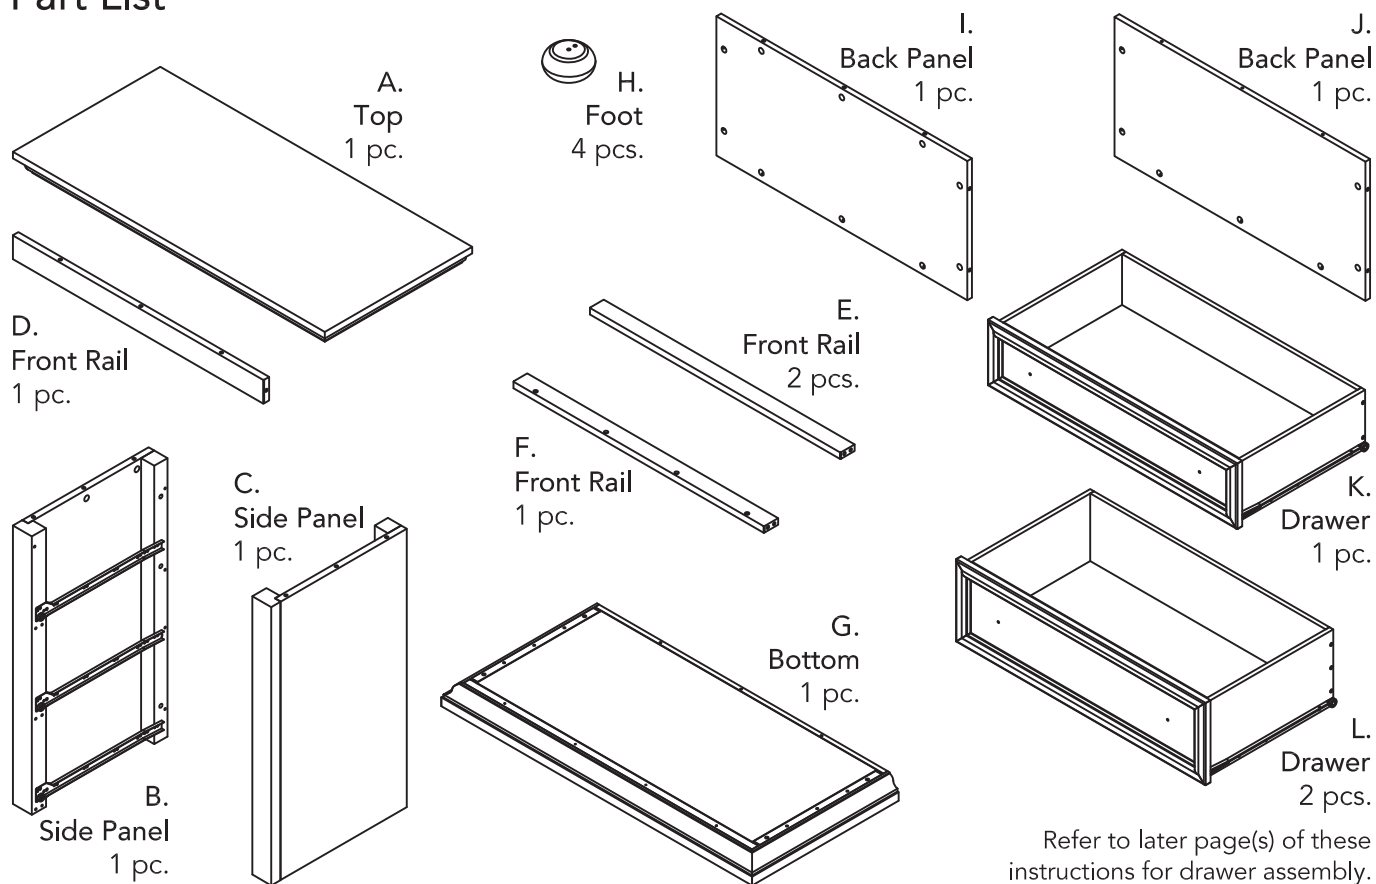


IMPORTANT

Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.

**Part List****Hardware List**

Cam Lock Screw
40 pcs. (+4 extra)



Cam Lock
40 pcs. (+4 extra)



M4x45
1 3/4" Round Head Screw
6 pcs. (+1 extra)



M4x25
1" Round Head Screw
4 pcs. (+1 extra)



M3x32
1 1/4" Flat Head Screw
50 pcs. (+1 extra)



M3x19
3/4" Flat Head Screw
18 pcs. (+1 extra)



M6x90
Bolt
4 pcs. (+1 extra)



Dowel
8 pcs. (+1 extra)



5/32"x7/8"
Machine Screw
6 pcs.



Handle
6 pcs.



Hex Wrench
1 pc.



Hex Wrench (Small)
1 pc.

Tool(s) required for assembly: Phillips screwdriver, Level, Pencil, Drill (8 volts or less), 3/8" Drill Bit

Home Styles Customer Service: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319


Assembly Instructions 2/9

IMPORTANT

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Do not tighten all the screws until each part is properly assembled.
- The unit must be level to work properly. Use the included adjustable levelers to level.
- Keep Hex Wrench as the Bolts may need to be tightened in the future.

STEP 1

Insert Cam Lock Screws into pre-drilled holes in Top (A), Side Panels (B), (C), Bottom (G) and Back Panel (J), then tighten.

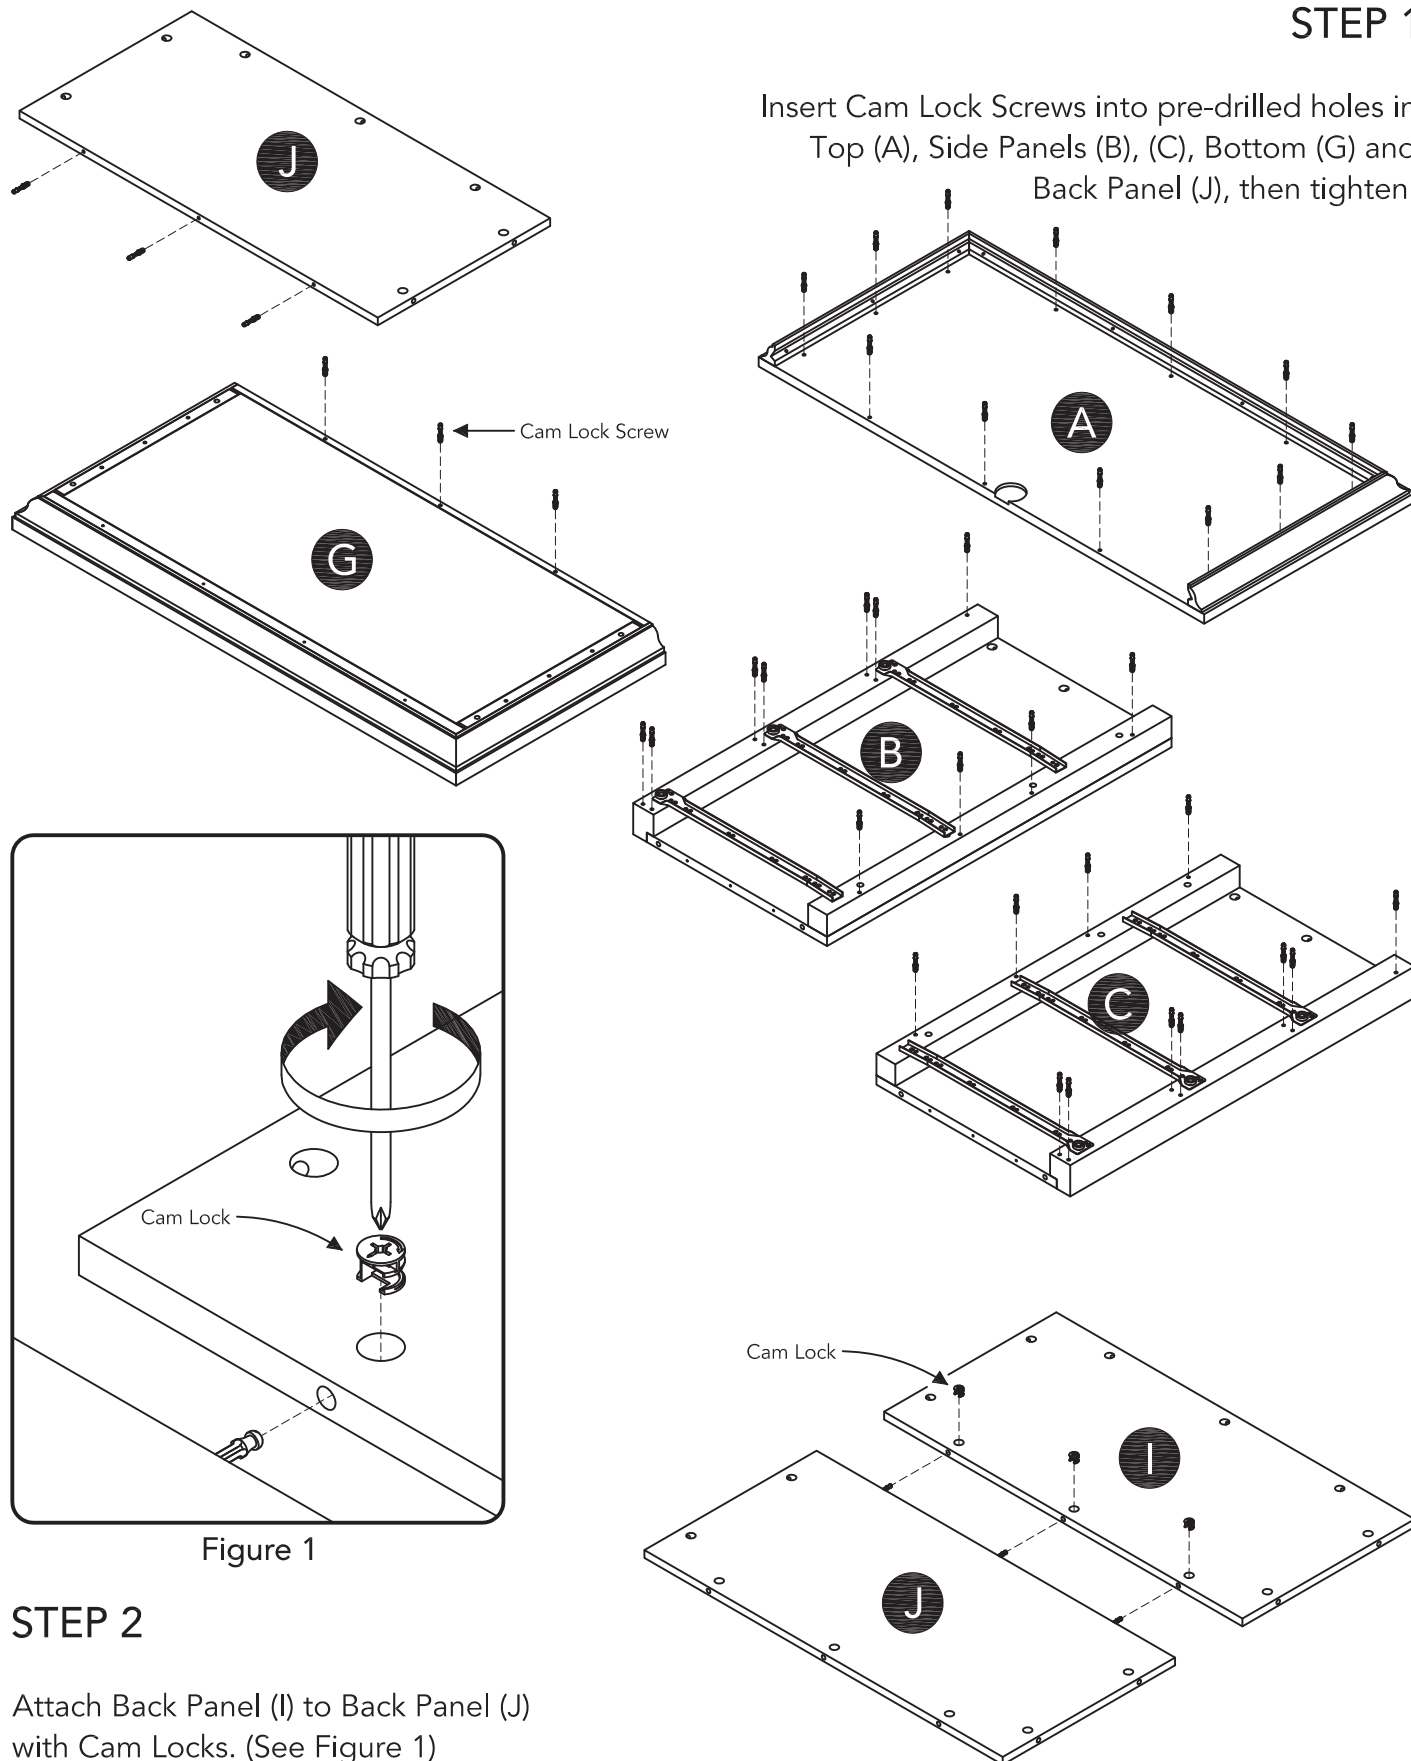



STEP 2

Attach Back Panel (I) to Back Panel (J) with Cam Locks. (See Figure 1)

STEP 3

Orientate Front Rails (E) and (F) with Arrow labels at front, then attach Front Rails (D), (E), (F) and Back Panels (I), (J) to Side Panel (B) with Cam Locks.

Attach Side Panel (C) to unit with Cam Locks.

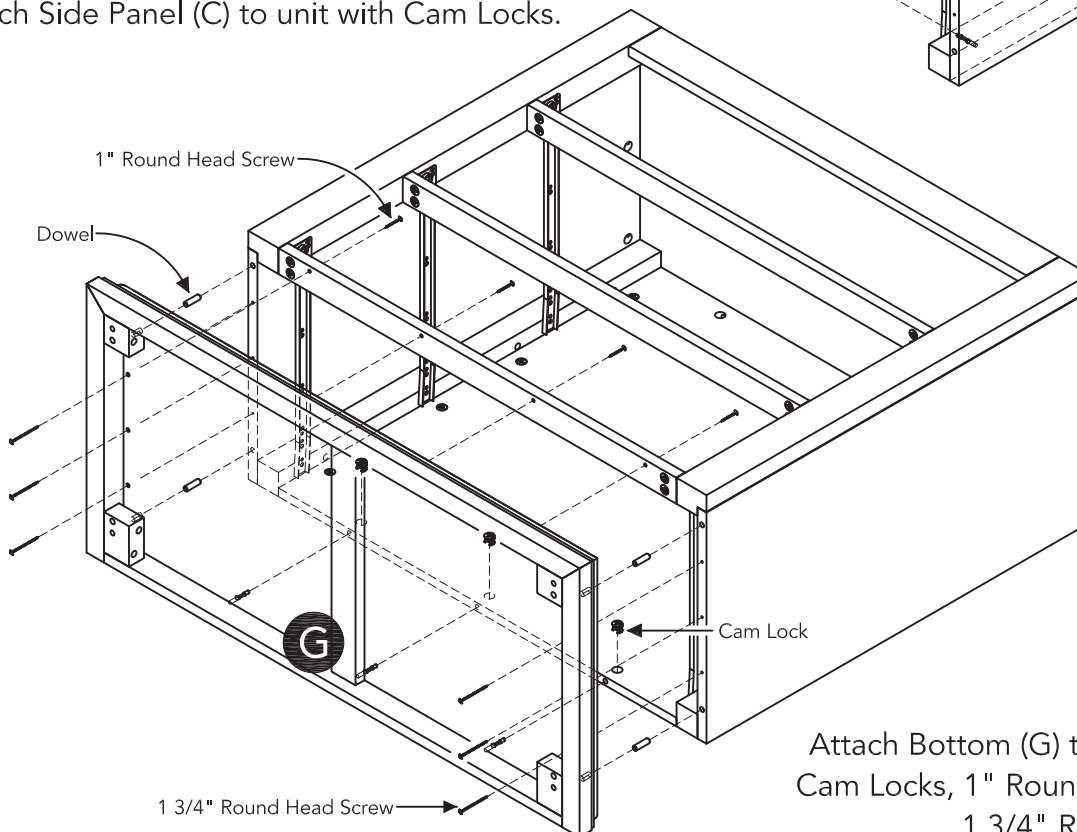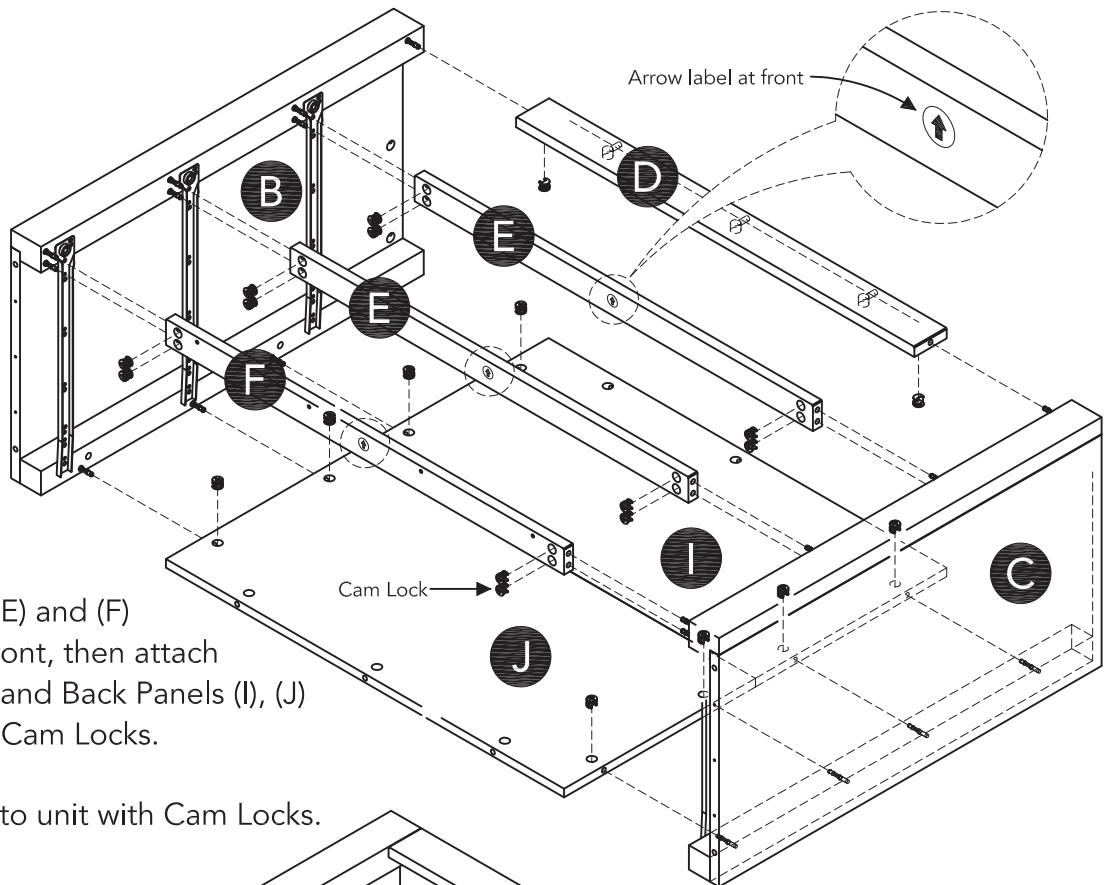


STEP 4

Attach Bottom (G) to unit with Dowels, Cam Locks, 1" Round Head Screws and 1 3/4" Round Head Screws.

STEP 5



Insert Dowels into Feet (H).

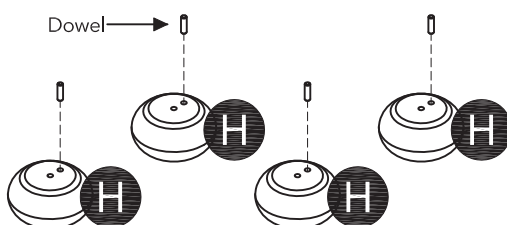

STEP 6

Attach Feet (H) to unit with Bolts.

Tighten Bolts with Hex Wrench.

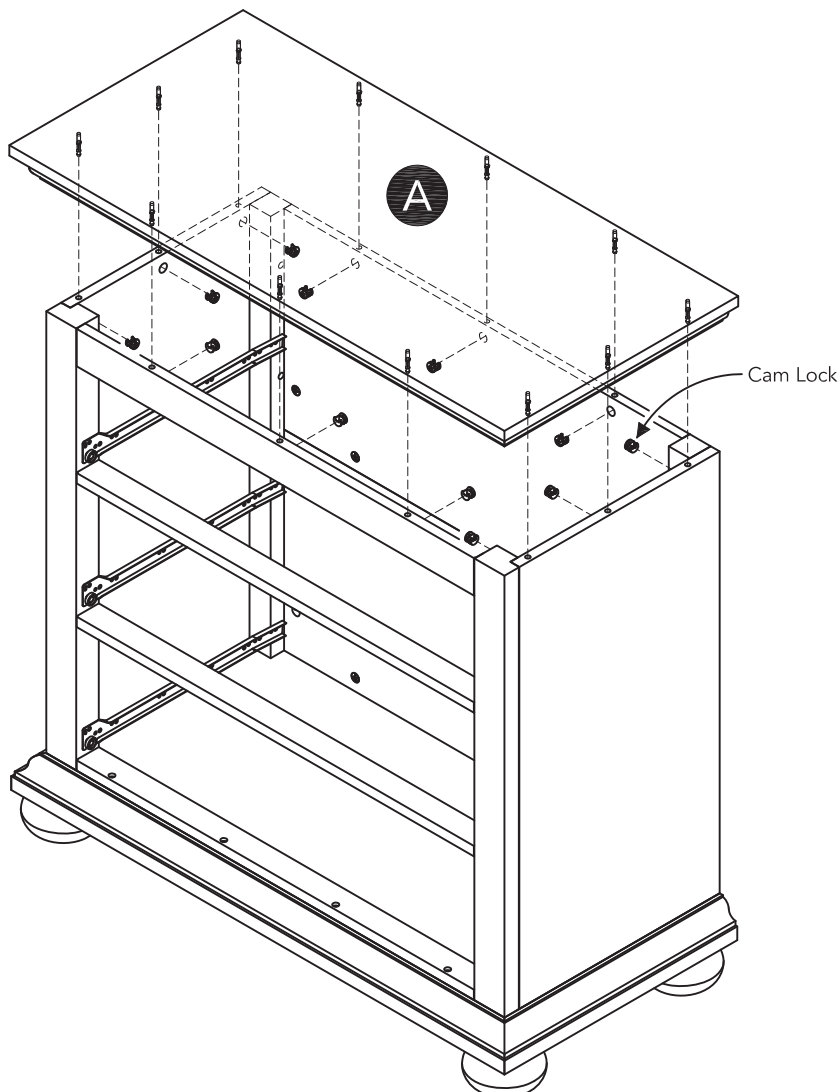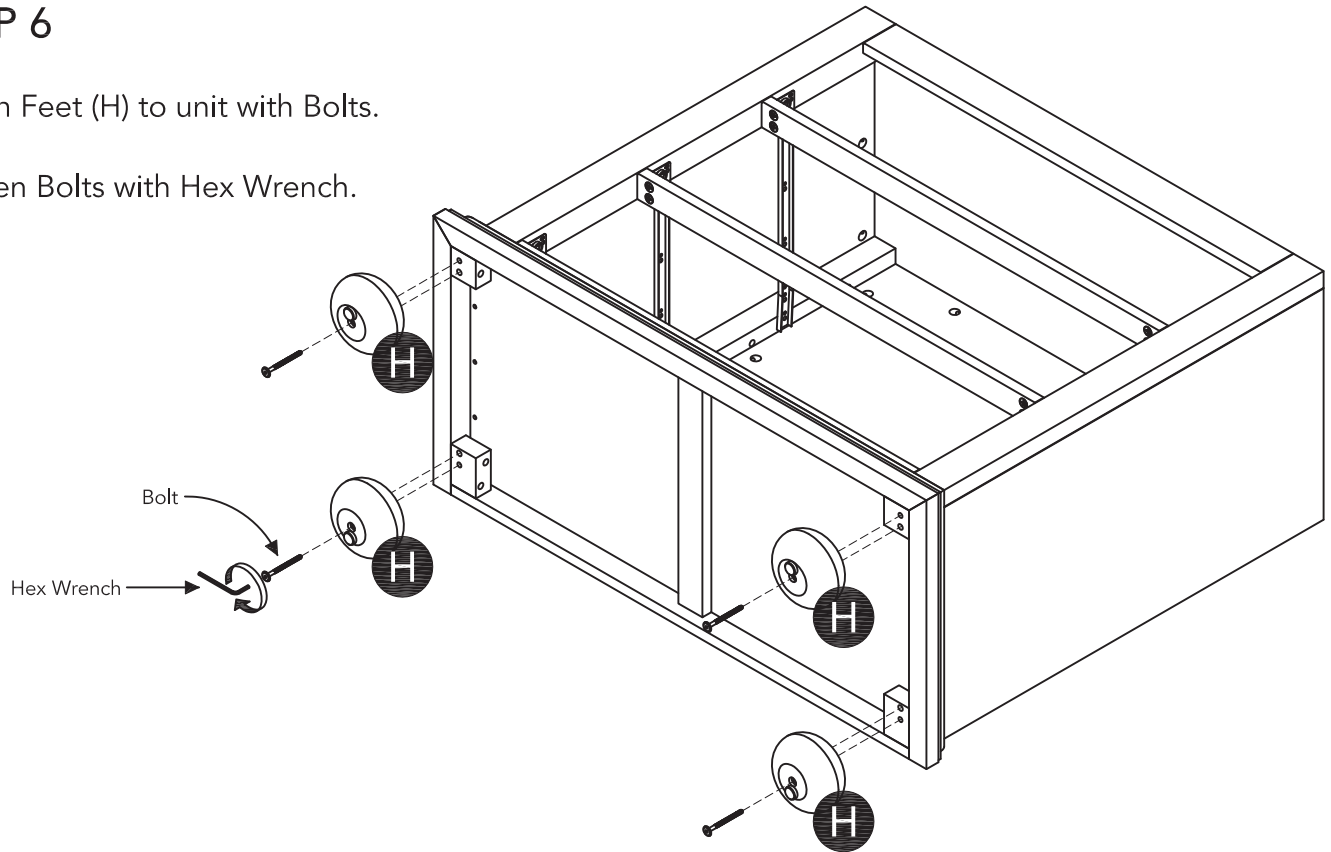

STEP 7

Attach Top (A) to unit with Cam Locks.

Level unit by adjusting the adjustable levelers on bottom of unit.
(See Figure 2)

Note: Unit must be level to work properly.

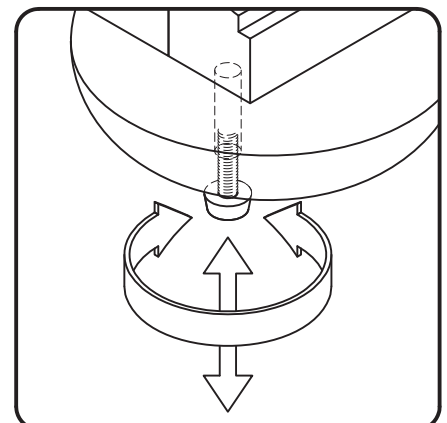


Figure 2

Assembly Instructions 5/9

IMPORTANT

- To help reduce the risk of the unit tipping over, the Tipover Restraint must be installed following these instructions exactly.

STEP 8

Place unit at desired location.

Mark wall with pencil just above and in-line with hole in Top (A). (See Figure 3)

Move unit.

Drill a 3/8" hole in wall 1 1/2" below mark.

Insert Anchor into the wall hole and attach Tipover Restraint to Anchor with 1 1/2" Round Head Screw and Flat Washer. (See Figure 4)

Move unit back into place and insert Tipover Restraint into unit through hole in Top (A). (See Figure 5)

Attach Tipover Restraint to unit with 1/2" Round Head Screw and Flat Washer. (See Figure 6)

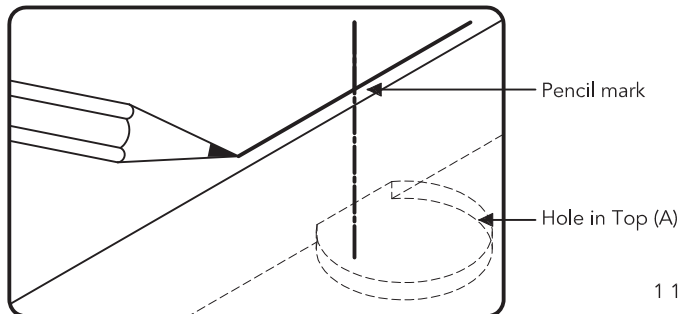


Figure 3

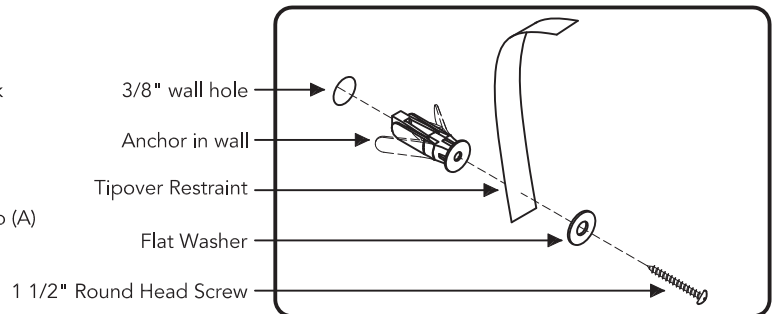


Figure 4

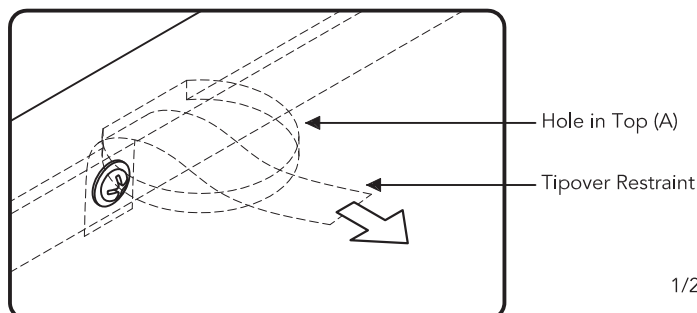


Figure 5


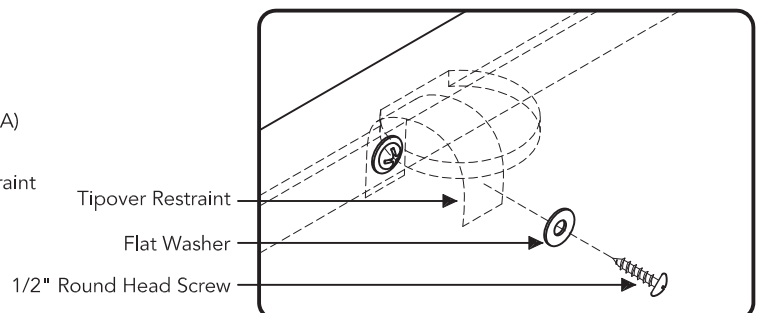


Figure 6

 Hardware List



Tipover Restraint
1 pc.



Anchor
1 pc. (+1 extra)



(M3x38)
1 1/2" Round Head Screw
1 pc. (+1 extra)




(M3x13)
1/2" Round Head Screw
1 pc. (+1 extra)



Flat Washer
2 pcs. (+1 extra)

Drawer (K)

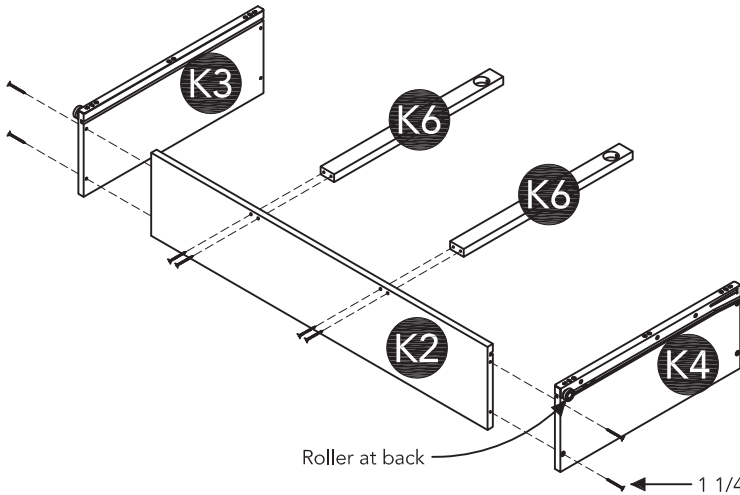

STEP 9


Attach Drawer Sides (K3), (K4) and Drawer Supports (K6) to Drawer Back (K2) with 1 1/4" Flat Head Screws.

STEP 10

Insert Drawer Bottom (K5) into groove.


Attach Drawer Front (K1) to unit with 1 1/4" Flat Head Screws.

1 1/4" Flat Head Screw

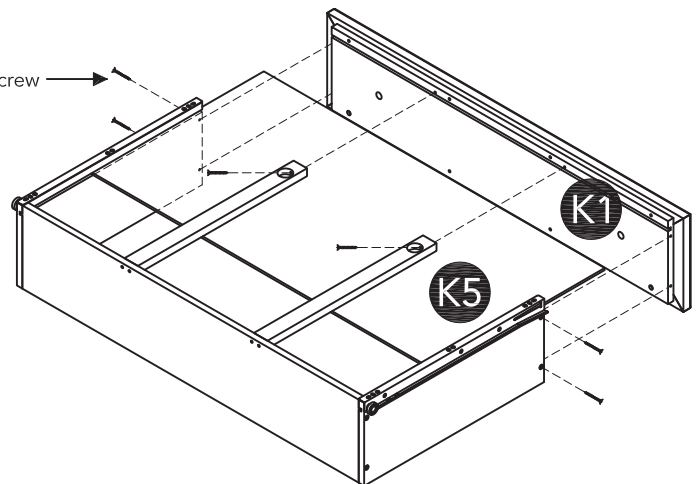


STEP 11

Attach Handles with Machine Screws.

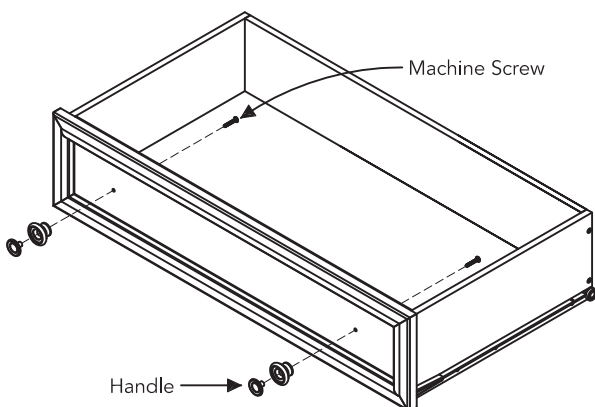


Note: Drawer assembly is not complete until 3/4" Flat Head Screws are used in a later step.


Part List

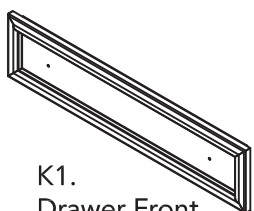


K1.
Drawer Front
1 pc.

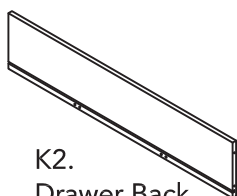


K2.
Drawer Back
1 pc.

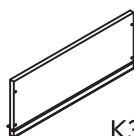

K3.
Drawer Side
1 pc.

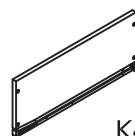

K4.
Drawer Side
1 pc.

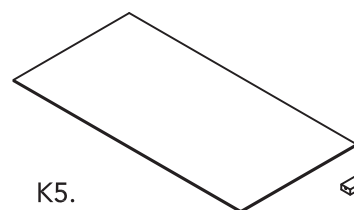


K5.
Drawer Bottom
1 pc.



K6.
Drawer Support
2 pcs.

Drawer (L)

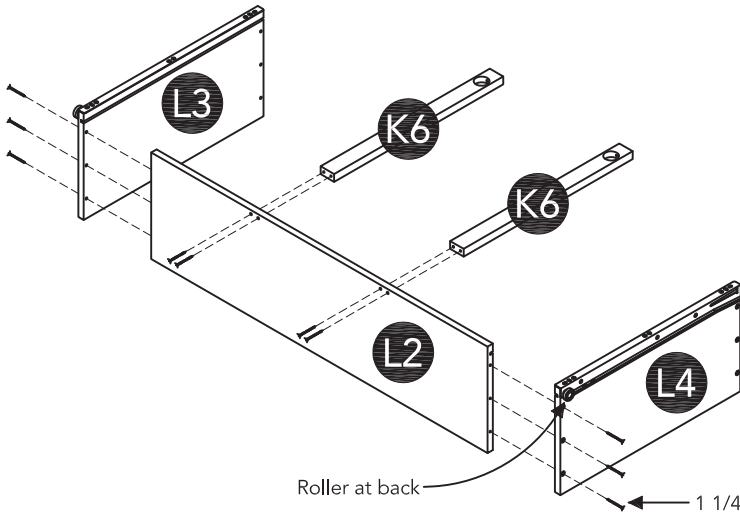



STEP 12

Attach Drawer Sides (L3), (L4) and Drawer Supports (K6) to Drawer Back (L2) with 1 1/4" Flat Head Screws.

STEP 13

Insert Drawer Bottom (L5) into groove.

Attach Drawer Front (L1) to unit with 1 1/4" Flat Head Screws.

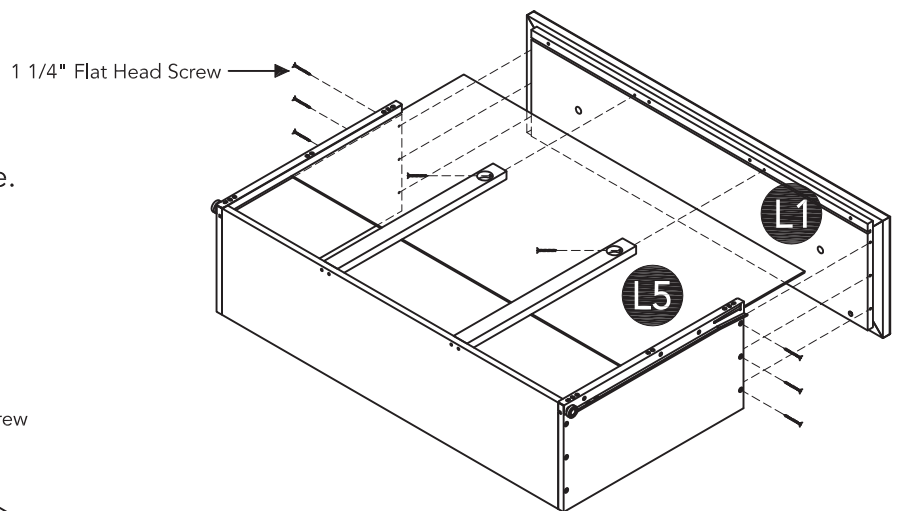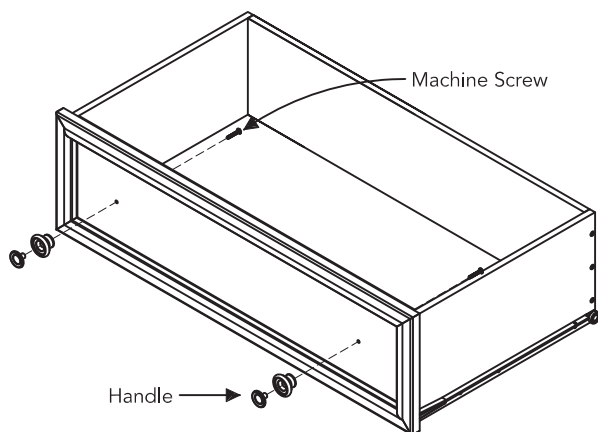


STEP 14

Attach Handles with Machine Screws.

Note: Drawer assembly is not complete until 3/4" Flat Head Screws are used in a later step.




Part List

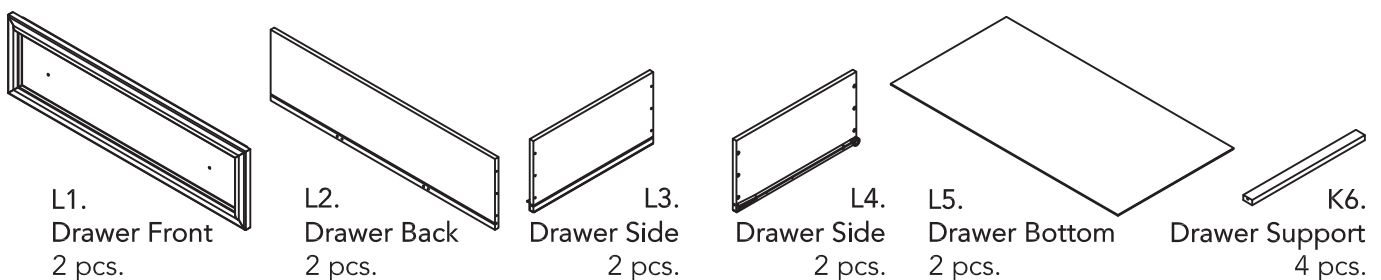

Assembly Instructions 8/9

STEP 15

Loosen slightly screws pre-installed on back of drawer fronts.

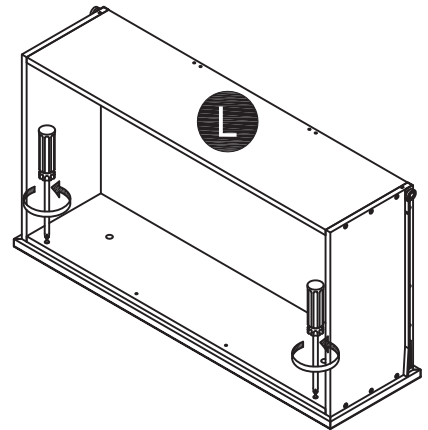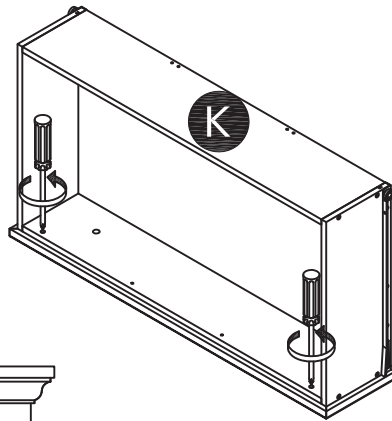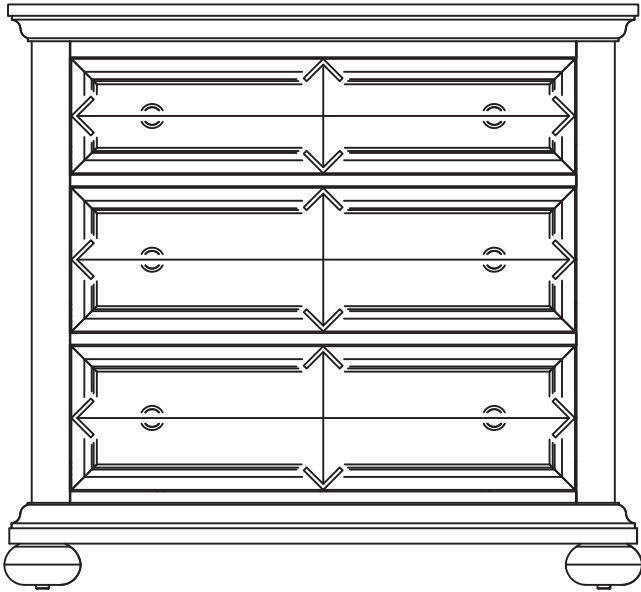

STEP 16


Insert drawers into unit, then adjust drawer front panels left or right and up or down until drawer gaps look proportional.

STEP 17

Pull each drawer open slowly and re-tighten screws from Step 15.


Make sure drawer front panels do not move and lock drawer front panels into position with 3/4" Flat Head Screws.

Note: These 3/4" Flat Head Screws must be installed to complete the drawer assembly.

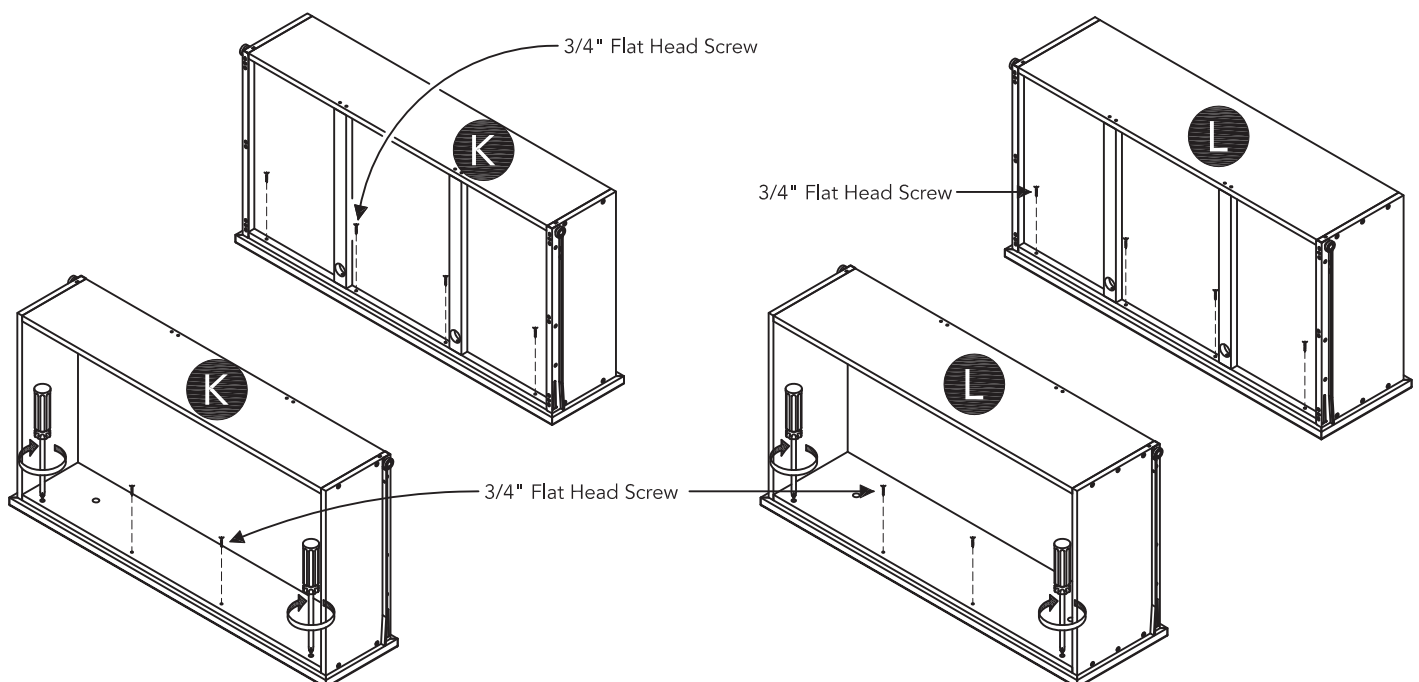

STEP 18

Slide Drawers (K) and (L) into place.

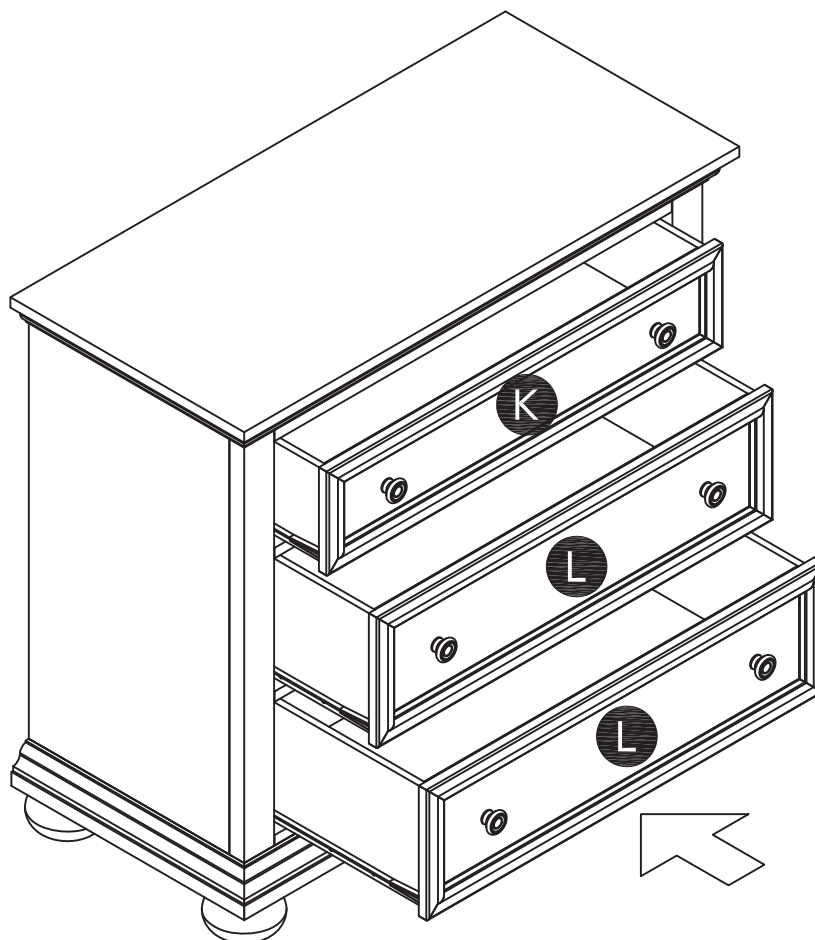

CARE INSTRUCTIONS

NEVER

allow liquids to remain on furniture.
Absorption causes parts to warp
and split and finishes to delaminate.

NEVER

use glass cleaners on
finished furniture. Ammonia
chemically attacks the finish.



Do not use power tools
above 8 volts to assemble.

**PREVENT
CRACKING**



Do not place
in direct sunlight.

**PREVENT
FADING**



Do not write
directly on surface.

**PREVENT
MARKING**



Do not place hot
objects on surface.

**PREVENT
FINISH DAMAGE**



Do not use rubber
based placemats.

**PREVENT
DISCOLORING**



Do not use commercial
waxes and polishes.

**PREVENT
YELLOWING**

CLEAN

with a soft cloth moistened
in lukewarm soap and water.
Buff with a dry clean cloth.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

www.homestyles-furniture.com/customer-service/replacement-parts

Home Styles Customer Service: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319