



PERCHING BIRDS TABLETOP WATER FOUNTAIN DW-914

Read the assembly instructions carefully and follow the care instructions.

Save these instructions for future reference.

Select a smooth, level surface to place the fountain.

**Assemble components of this fountain on a soft, clean surface
to avoid scratching or damaging the finish.**

Thank you for choosing Sunnydaze Decor. We stand behind our brand and the quality of the items we sell. Replacement parts or products will be sent at our discretion within the 1-year warranty period. Proof of purchase, with the date of purchase as well as photos of the merchandise defect, must be provided. Photos are used to determine the cause of defects and for future quality control.

Register your warranty at <https://tiny.cc/SunnydazeWarranty>

If you have any questions, comments or concerns, feel free to contact us by phone at **833-982-1977**, by email: customerservice@sunnydazedecor.com, or via our contact us page at <https://tiny.cc/SunnydazeContact>

Purchase Date: ___ / ___ / ___ Order/Customer Reference Number: _____

Write down the purchase date and order information to help expedite customer service inquiries.

PREPARATION:

Before beginning assembly, read all warnings and safety precautions.

⚠ WARNINGS & CAUTIONS:

WARNINGS:

To reduce the risk of electric shock, only connect the pump to a Ground Fault Circuit Interrupter (GFCI) outlet.

Do not exceed the voltage shown on the pump.

Always disconnect the pump from the power source before performing any maintenance on the pump or fountain.

Inspect the pump and power cord for damage before installation and maintenance. If damage is found, the pump should be replaced.

CAUTIONS:

Use a proper power source as indicated on the pump label. Keep the cords away from high temperatures and heat sources.

Do not lift the pump by its power cord.

Keep the fountain out of reach of children.

Do not let the pump run dry. The pump must be completely submerged for proper operation and cooling.


Do not pump heated liquids.

Operate with freshwater only. Avoid heavily chlorinated water and water with high PH levels.

Do not use harsh chemicals such as bleach to clean the fountain or pump.

ASSEMBLY:

NOTE: The water tubing is built into the decorative top. Take care when handling the water tube; detaching the water tube from the fountain will damage the fountain and void the product warranty.

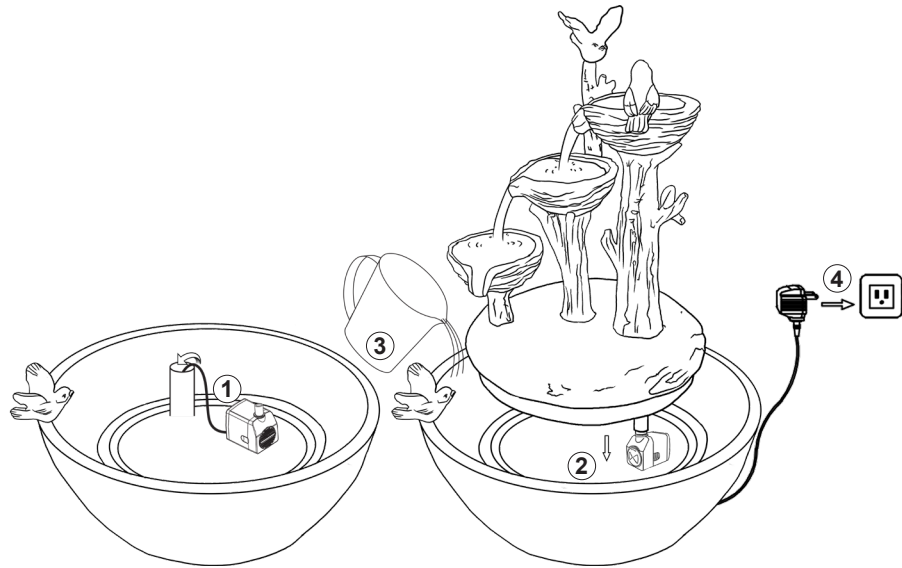

1. Place the pump inside the bowl and run the power cord through the tube in the bowl and out the back of the fountain.
2. Locate the water tube underneath the decorative top. Firmly connect the water tube to pump and carefully place the fountain body onto the bowl.
3. Fill the fountain with enough water to keep the pump fully submerged during operation.
4. Connect the AC adapter to the power cord and plug it into a properly grounded GFCI outlet.

Note: When first used, there may be air in the pump. It may take several minutes for trapped air to escape, allowing water to flow.

! IMPORTANT INFORMATION !

USE & CARE

- For indoor use only.
- Keep fountain out of reach of children and pets.
- Keep power cord away from all heat sources. Do not place electrical cords in areas with high temperatures.
- Check the water level frequently to ensure the pump remains fully submerged; never allow the pump to run dry as it will burn out the motor.
- Only use water in this fountain; distilled water is recommended to prevent mineral buildup.
- Periodically change the water to keep the water, fountain and pump clean. Remove scale and buildup regularly.
DO NOT use harmful additives such as bleach, chlorine, etc.
DO NOT use anything abrasive to scrub the fountain.
- Always shut off the power supply before cleaning and maintaining the fountain and the recirculating pump.
- Take care when handling the pump; only pick it up by the body of the pump, never the power cord.

TROUBLESHOOTING

- Ensure the pump is fully submerged under water. Add water to the basin as necessary.
- Check the pump and tubing for obstructions.
- Check the flow control on the body of the pump as it may need to be adjusted to achieve the desired flow rate.
- Check to make sure the power outlet is working; if in doubt about electrical connections, consult a certified electrician.
- If water is not flowing within several moments of the fountain being plugged in, unplug the power supply for a few moments and plug it back in. The pump may have air bubbles in it, which can prevent water from circulating properly.

If you are still experiencing issues, please contact our customer service team through one of the methods mentioned at the top of page 1. Please have the item number and order information available to help expedite response time.

Any modification to the product or failure to follow recommended care will void the product warranty.