 
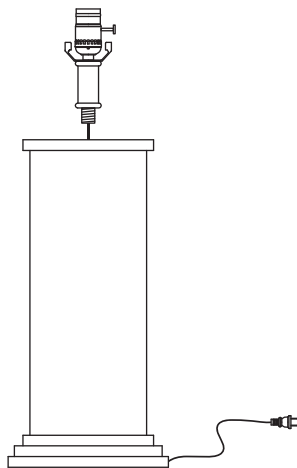 
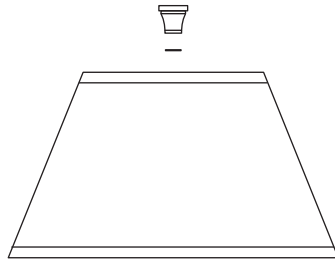 
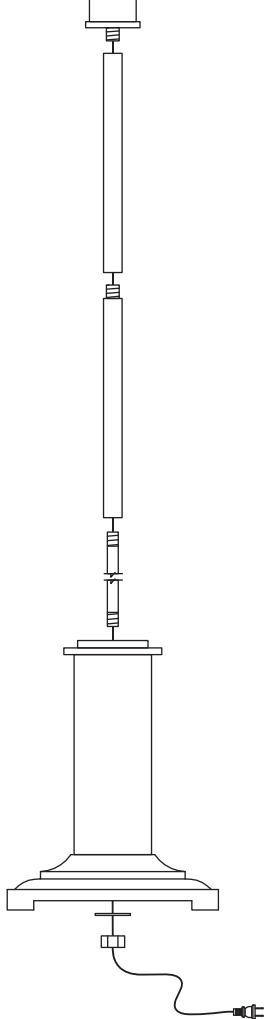 
 


Thank you for choosing Sunnydaze Decor. We stand behind our brand and the quality of the items we sell. Replacement parts or products will be sent at our discretion within the 1-year warranty period. Proof of purchase, with the date of purchase as well as photos of the merchandise defect, must be provided. Photos are used to determine the cause of defects and for future quality control. Register your warranty at <https://tiny.cc/SunnydazeWarranty>. If you have any questions, comments or concerns, feel free to contact us by phone at 833-982-1977, by email: customerservice@sunnydazedecor.com, or via our contact us page at <https://tiny.cc/SunnydazeContact>


TIMELESS ABODE SLATE LAMP SET GSI-7971

Review all assembly and care information before using this product.
Save this manual for future reference.

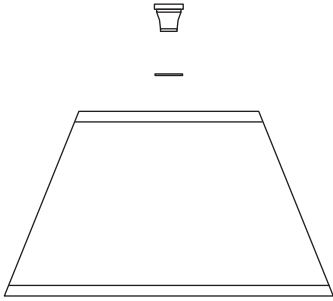

Inspect packaging to ensure all parts are accounted for before disposing of packing materials.
Save the packing slip.

PARTS	QTY.
Floor Lamp	1
Table Lamp	2
Lamp Harp Set	3
Lamp Shade	3
Light Bulb	3

INCLUDED TOOLS

Offset Spanner



IMPORTANT: Slate is a natural product; the colors and texture of each piece are unique, no two units will look the same. Variations in the slate colors and textures are not a cause for return. Each piece of slate is cut from a larger slab. Spalling (flaking) may occur during product production, naturally over time, and/or if slate is dropped.

Variations in the natural characteristics of slate are not a cause for return.

ASSEMBLY

1. Screw the table lamp socket into the top of the lamp.
2. Screw the floor lamp components together. Stabilize the pole by securing the metal nipple in the base with the metal washer and nut.
3. Install one lamp harp and lamp shade onto each lamp.
4. Install the light bulbs.
5. Plug the power cords into properly grounded GFCI outlets.

Care & Maintenance

- For indoor use only.
- Ensure the lamps are situated on a flat, stable surface.
- Keep the power cords away from all heat sources.
- To prevent risk of electric shock, turn the lamp off and unplug it when changing the light bulb.
- Always grip the plug end when unplugging the lamp; never pull or yank the power cord as doing so can damage the wiring.

Cleaning

Do not use liquids, chemicals or abrasive materials to clean the lamp or shade.

Weekly dusting is recommended to prevent dust from settling into the lamp shade fabric. Use a feather duster or a microfiber cloth to clean the lamp and shade.

WARNING: THE ONE-YEAR WARRANTY DOES NOT COVER DAMAGES OR DEFECTS CAUSED BY THE APPLICATION OF CHEMICAL TREATMENTS OR THE USE OF CLEANING PRODUCTS.

IMPORTANT SAFETY INFORMATION

- For indoor use only.
- Ensure the power cord is away from traffic areas where it could become a trip hazard.
- Keep power cord away from all heat sources.
- Always turn the switch off and unplug the power supply before changing the light bulb.
- Never use the lamp if any wires or fixtures are damaged.
- Only use a compatible A19/E26 replacement bulb. Wait until the light bulb is cool before replacing.

Any modification to the product or failure to follow recommended care will void the product warranty.

If you experience any issues with the product or it was damaged during shipping, please contact our customer service team through one of the methods mentioned at the top of page 1. Please have the item number and order information ready to expedite response time.

WARNING!

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.