



Professional EASY-OFF®

Oven & Grill Cleaner

Easy-Off® Professional Oven & Grill Cleaner has an advanced grease-cutting formula that is effective against burned-on grease and grime. It can be used to clean a wide variety of surfaces and equipment including warm and cold ovens.

Features & Benefits

- Oven & Grill Cleaner cleans tough baked-on spills quickly
- Spot cleans in 5 minutes
- Great for everyday spot cleaning!
- Ideal for cleaning: ovens, broilers, and barbecue grills





Professional EASY-OFF®

Oven & Grill Cleaner

Use Instructions

- Read warnings, precautions and entire label before use. Shake can well and frequently. Wear long rubber gloves. Do not get on skin, clothing or in eyes.

Fast Cleaning:

- Preheat oven to 200° F. Once preheated, turn oven off before applying Professional Easy-Off® Oven & Grill Cleaner.
- Wear long rubber gloves while using
- Liberally spread newspaper under oven door and surrounding area to protect floor. For ease of application remove oven racks and clean separately.
- Hold can upright pointed away from face. Spray surfaces from a distance of 9-12 inches. Make sure pointing arrow is aligned with black dot. Spray top of oven first, then spray sides and bottom. After application, close oven door.
- Allow foam to work 5-10 minutes then wipe clean with wet cloth or sponge, rinsing frequently. For heavily soiled areas, allow to work longer.
- After use, rinse spray button thoroughly and drain excess water. Replace cap promptly.

Quick Cold Oven Cleaning:

- Spray on cold oven using steps 2-4 above
- Close door and allow to stand for at least 20 minutes, longer for heavier soils, then wipe clean with wet cloth or sponge, rinsing frequently
- Follow Step 6 above

Easy Overnight Cleaning:

- Spray on cold oven using Fast Cleaning steps 2-4 above
- Close door and allow to stand overnight for eight hours or longer
- Next morning, wipe clean with wet cloth or sponge, rinsing frequently
- Follow Step 6 above

BBQ Grill Cleaning:

- Do not use on grill exterior, interior or components
- Remove rack from grill and place on several layers of newspaper on a non-wood surface such as pavement or in utility sink. Brush cooking racks with a stiff wire brush to remove any remaining food.
- Hold can upright pointed away from face and spray from a distance of 9-12 inches. Allow foam to work for 20 minutes or longer.
- Wipe rack with wet cloth or sponge, rinsing frequently
- Follow Step 6 above. Recommend for use only on porcelain, enamel, iron, stainless steel, ceramic and glass surfaces. Avoid excessive use on glass. Do not use on exterior oven surfaces, aluminum, chrome, baked enamel. Do not use on self-cleaning or continuous cleaning ovens.

Technical data	Professional EASY-OFF® Oven & Grill Cleaner
Color/Form	Tan, Liquid
pH	13.3
Scent	Lemon
Shelf Life	2 Years

Product	Pack size	Dilution	Product code
Professional EASY-OFF® Oven & Grill Cleaner	6 x 24 oz. Aerosol	Ready-to-use	CB852614

Safe handling

Please make sure your employees read and understand the product label and Safety Data Sheet before using this product. The label contains directions for use; and both the label and SDS contain hazard warnings, precautionary statements and first aid procedures. SDS are available online at www.diversey.com or by calling 888.352.2249. Improper use or dilution may result in damage to surfaces and may result in health and physical hazards that match those of the concentrate.