

User's Manual

BV9998B

**BLUETOOTH®- ENABLED
IN-DASH DVD/MP3/CD RECEIVER
WITH MOTORIZED, FLIP-OUT 7" WIDESCREEN
TOUCH SCREEN DIGITAL TFT MONITOR
WITH USB AND SD MEMORY CARD PORTS
AND FRONT PANEL AUX INPUT**

RDS COMPATIBLE MODEL



BV9998B

**BLUETOOTH®- ENABLED
IN-DASH DVD/MP3/CD RECEIVER
WITH MOTORIZED, FLIP-OUT 7" WIDESCREEN
TOUCH SCREEN DIGITAL TFT MONITOR
WITH USB AND SD MEMORY CARD PORTS
AND FRONT PANEL AUX INPUT**

RDS COMPATIBLE MODEL

12 2011



iPod® is a trademark of Apple, Inc.
registered in the U.S. and other countries.

tech support: www.bossaudio.com/support

**BOSS®
AUDIO SYSTEMS**

BOSS Audio Systems
3451 Lunar Court • Oxnard, CA 93030

www.bossaudio.com

800.999.1236

**BOSS®
AUDIO SYSTEMS**

Boss Audio Systems is not affiliated with Apple, Inc.

Accessory

Accessory	Quantity
User Manual	1PC
Wire	1PC
USB Cable	1PC
Keys	2PCS
Remote controller	1PC
Warranty card	2PCS

SETUP NEED PASSWORD

Setup need password

- ★ During actual operation, when you enter TV setup, system setup, radio area and touch calibration, you need to enter the password "888888".
- ★ DVD Parental control function: The default set for DVD is #8 adult, which means all grades of DVD can be read without entering password. To change the default grade, you need to follow the below procedure: Press SETUP button on the remote, display will show the system set up menu and the submenu, select password and enter 0000, you will be able to choose the DVD grade as default.

Specifications:

Power supply	DC 12V
Power range	10.8-16.0V DC
Max operate current	10A
Dimensions	155X182X53MM
Ground system.....	Negative ground
Amp Rating	85 Watts x 4 Channels

FM tuner

European frequency range	87.5-108MHz
USA frequency range	87.5-107.9MHz
Signal/Noise ratio	55dB
Stereo separation	30dB
Search station volt	20-30dBuv
Distortion rate	1.5%

AM tuner

European frequency range	522-1620KHz
USA frequency range	530-1710KHz
Limit noise sensitivity	32dB

DVD PLAYER

Signal/Noise ratio	70dB
Frequency response	20Hz-20KHz

CONTENTS

To use this product safely and properly, be sure to read this manual carefully before use and keep it safe for future reference. As we constantly keep improving our products, function and appearance are subject to updates without prior notice.

Precautions

Safety	4
Cleaning Device.....	4
Lens Mist.....	4
About Audio File.....	5
About Video File.....	5
About Image File.....	6

Basic Operation

Panel button control instruction...7
Remote Control Function.....10
Reset Device.....12
Turn On/Off Host.....12
Volume Control..... 12
Sound Effect Setup.....12
Turn On/Off Equal Loudnes.....12
EQ Setup..... 12
Setup Operation..... 12

Function Operation

Radio Function Operation.....	15
RDS Function Operation.....	16
Multifunction Operation.....	17
DVD/VCD/CD Function Operation.....	18
MP3 Function Operation.....	20
Bluetooth Function Operation.....	21
Other Functions Operation.....	23

Additional Information

Trouble Shooting	24
Wiring Diagram	25
Specifications.....	26
Accessory.....	27
SETUP NEED PASSWORD	27

INSTRUCTIONS

Precaution

Safety


To ensure driving safety, please follow the guide given below:

- 1.The unit is installed in car with 12V power supply.
- 2.Connect each wire as the manual suggests, any wrong connection may cause dysfunction or damage to the electrical system.
- 3.Be sure the speaker(-) lead is connected to the speaker(-) terminal instead of the body of car. Speakers are not allowed to interconnected.
- 4.Make sure all the wires are correctly connected before turning on the unit.
- 5.When you change a blown fuse, replace it with a new one of same specification.
- 6.Do not block the blowhole or heat sink to avoid fire hazard caused by overheating inside the unit.
- 7.After completing installation you can use the product(including changing the car battery); Press (RESET) button on the panel with penpoint (sharp,prong objects not allowed) to set the system in initial status
- 8.To ensure driving safety and avoid breaking traffic regulation, drivers should not watch program or operate this device while driving.

Cleaning Device

If any stains are found on the front panel, use clean soft cloth (such as cleaning cloth)to wipe them off.

If the front panel is too much dirty, use neutral cleaning fluid to wipe it, then clean the left fluid with clean soft cloth.

 Directly spray the cleaning fluid onto the device may effect mechanical parts. Use rough cloth Or volatile fluid(such as thinner or alchhol) may scratch the surface or remove the characters.

Lens Mist

 
In cold weather, mist occurs on the lens of disc player when heat is open. This is called lens mist which may effect the disc play. In that case, dject the disc and wait until the condensate fully evaporates, then you can play it again.

INSTRUCTIONS

Wiring Diagram

This player is equipped with ISO standard connector, please follow below instruction:

- Red - ACC ON (+12V)
- Yellow – 12 V Constant
- Black – Ground wire
- Blue - Power Antenna / Remote Amp Turn On
- Orange – Back-Up Camera Trigger (+)
- Grey/Grey black - Right front speaker (+/-)
- White/White black - Left front speaker (+-)
- Purple/Purple black - Right rear speaker (+/-)
- Green/Green black - Left rear speaker (+/-)

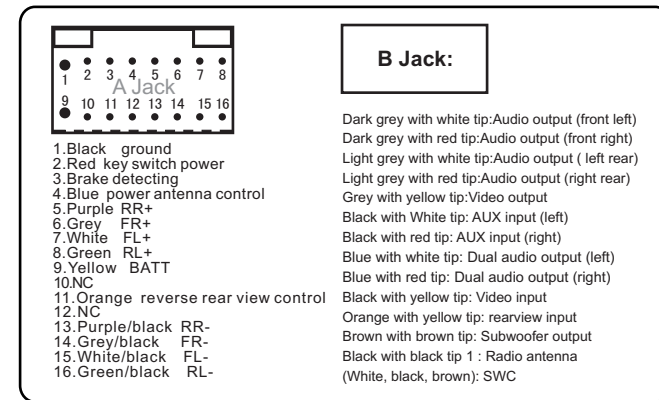

INSTRUCTIONS

Trouble Shooting

PROBLEM	CAUSE	SOLUTION
Cannot power on	Check fuse	Change fuse same as the old one
	Some factors cause MPU wrong operation	Press RES button on the panel by penpoint, then, power on
After ignition switch off ,setting information all lose	Change battery or fuse	Reset information and save
Poor performance of radio station	Weak signal	Move the car to another place, then research
Connot load disk	There is a disk inside	Remove disc before inserting another one
Cannot play disc	Disc is scratched	Change new disc
	Put wrong side of disc into the unit	Insert in the disk with sign side up
	Lens is dirty	Clean lens by lens clean disc
Cannot switch language/subtitle	There is only one language/subtitle in disc	If disc is not with multi-language/subtitle, it cannot switch language/subtitle
No image	Other factors cause MPU wrong operation	Press [RES] button on the panel by penpoint, then, power on
Cannot watch image during driving	It's not allowed to watch image during driving	Park the car in a safe place, put the car stall in " P " postion, pull up the hand brake, parking brake wire must be grounded

INSTRUCTIONS

About Audio File

• Playable Audio File

MP3(. mp3)、WMA(. Wma)

• Playable MP3 File

Format: MPEG 1/2 Audio Layer 3 file
 Transmission Bit Rate: 8-320kbp/VBR
 Sample Rate: 8、11.025、12、16、22.05、24、32、44.1、48kHz
 ID3 Labels: Version1.0、1.1
 (Title/Artist/Album: does not support image display)

• Playable WMA File

Format: files comply with Windows Media Audio (files for Windows Media Player9 or utilize new function excepted)
 Transmission Bit Rate: 48-192kbps/VBR
 Sample Rate: 32、44.1、48kHz
 WMA Label (content description): Title/Artist
 WMA Label (extended content description): WM/Title of Abum

- If normal disc music and other play systems are recorded on the same disc, then it only plays the play system recorded at the very beginning.
- Never add extended name to non-audio file. Otherwise it will cause big noise during play and damage the speaker.
- Files protected from copy cannot be played.
- Audio files may not be able to play due to code software setup or recording situation
- The unit is not compatible with additional specification or non-standard upgrate of compressed format.

- Due to recording situation of audio files, play time sometimes cannot display correctly.
- Optimum setting can not be used forVBR -encoded song.

• Playable Disc Media

CD-R/RW/ROM、DVD±R/RW

• Playable Disc File Format

ISO 9660 Leve | 0 1/2、Joliet、Long file names.

• Limits of Files and File Folder Structure

Max Layer of Contents: disc: 8; SD card/USB: 16.
 Max File Folder: 128
 Max File per Folder: 2400
 Max File: 2400

- You may have to wait a while for some files to play due to different recording situations such as file layer and file folder structures, etc.

About Video File

- **Acceptable Video File**
MPEG1、MPEG2、DivX
- **Acceptable MPEG-1 File**
Extended Name: .mpg、.mpeg、.mpe、.m1v
Image Size: 320x240、352x240
Audio Format: MPEG Audio Layer 2
Audio Sample Rate: 32/44.1/48kHz
Audio Bit Rate: 32-320kbps (constant bit rate only)
- **Acceptable MPEG-2 File**
Extended Name: .mpg、.mpeg、.m2v
Image Size: 640x480|704x480
Audio Format: MPEG Audio Layer 2
Audio Sample Rate: 32/44.1/48kHz
Audio Bit Rate: 32-320kbps (constant bit rate only)

INSTRUCTIONS

- **Acceptable DivX File**

Extended Name: .divx, .div, .avi

Image Size: 352x240, 352x288, 720x450, 720x576

Audio Format: MP3, Dolby Digital
Audio Sample Rate: 32/44.1/48kHz
Audio Bit Rate: 32-320kbps
(constant bit rate only)

- **Useable Media**

CD-R/RW/ROM, DVD±R/RW, VCD usable disc, disc format, file and file folder

Name and playing sequence are the same as audio file.

- **Max Displayable characters**

File/File Folder: 128

 
MP3 ID3 Label: 30

WMA Content Attribute: 30

- Character number depends on byte unit.
- The unit can display the following version of MP3 ID3 label: version1.0/1.1.

- **Playing Sequence of Audio File**

The files are played in the following sequence from 1 to 10:

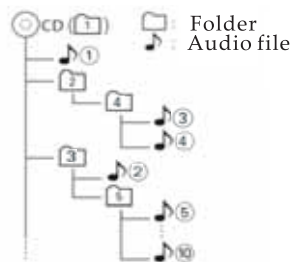

- **About Image File**

Acceptable Image File
JPEG

- **Extended Name**

.jpg, .jpeg, .jpe

- **Usable Media**

CD-R/RW/ROM, DVD±R/RW

 
- Additional information (such as Exif)'s image file may not be able to normal display or operate (such as revolving display).

INSTRUCTIONS


Other Functions

CCD

In any running mode, the video signal will switch to CCD status when backing the car, after backing it resumes to its previous status

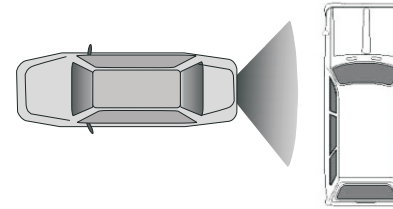

Analog on-site backup

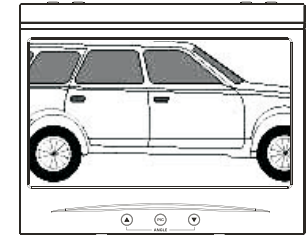 

Backup rearview




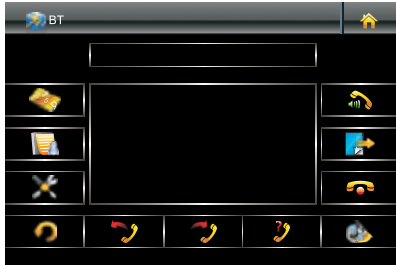 
Warm:





Do not rely entirely on CCD, please confirm safety of the environment with naked eyes while you are driving. CCD only assists the drive to park the car. Due to the limits in CCD range and distance, it may cause traffic accident if the drive relies entirely on CCD.

INSTRUCTIONS

Call Log

Touch  button to access call log interface which keeps records of received call, missed call and dialed call.

 


-  Page Turn
-  To check dialed call records
-  To check received call records
-  To check missed call records

- Receive call/Missed call/Dialed call can save the recent 16 records at most.
- The sequence of phone number in "Call Log" is set according to the order in which the calls are made.

INSTRUCTIONS


PANEL ARRANGEMENT

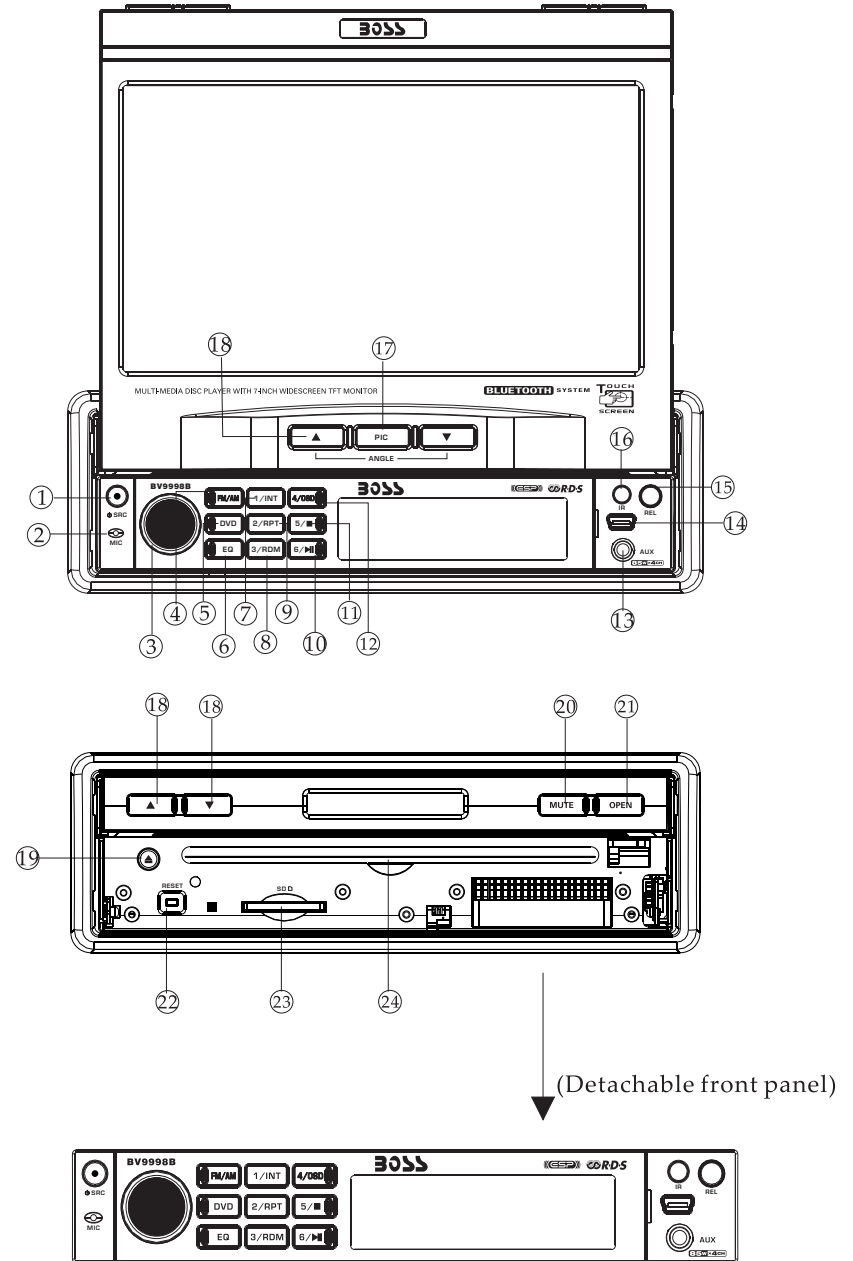

1. SRC

When the power on, press this button to turn on/off host; in any application procedure, When the unit is power on, Repeat press this button can switch to different function mode as following picture.

 Note: When the device without connecting to USB, SD, or DVD no disc inside, the system will automatically skip these related working mode.

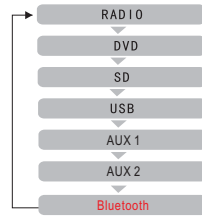

2. MIC

Input interface of bluetooth microphone

3. Sound effect setup

Repeatedly short press the button to select:

Bas→Tre→Bal→Fad→Bright→Hue→Cont→Sharp→Vol

You can make setup as you like, once a certain function is selected, work with the encoder knob to adjust.

4. FM/AM

In any mode, press the button to radio mode.

In radio mode, press the button to switch band.

5. DVD

In any mode, press this button to read the disc.

6. EQ Button

Press this button shortly to choose preset EQ mode to adjust timbre.

POP → ROCK → CLAS → OFF

7. Number Button 1/INT (Intro Scan)

In radio mode, press this button to hear radio preset;

In disc playback mode, press this button to start or stop the intro scan function.

8. Number Button 3/RDM (Random playback)

In radio mode, press this button to hear radio preset;

In disc playback mode, press this button to play tracks on the disc in random order.

9. Number Button 2/RPT (Repeat Playback)

In radio mode, press this button to hear radio preset;

In disc playback mode, press this button to repeat the current track indefinitely.

10. Number Button 6/PLAY

 
In radio mode, press this button to hear radio preset;

In disc playback mode, press this button for Play/Pause.

Bluetooth Function Operation

Enter/Exit


Touch Bluetooth icon on the main interface to enter bluetooth interface:

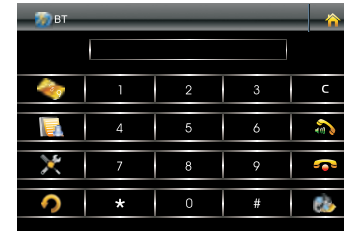

Pair/Connect

The first time you match your phone with the unit, please do follow the procedures:

 (1) Touch icon to enter the interface:

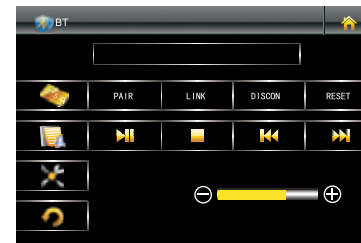

(2) Touch [PAIR] icon.

(3) Open the bluetooth function in your phone and set searching (within 10 meters), the screen displays "linking", when the system receives signals from the cellphone, your phone shall display the name of the unit.

(4) During linking your phone suggests you to input connecting password, input "0000" and then begin to pair.

(5) After successful pairing, the screen displays "linked".

(6) Touch [DISCON] to disconnect the bluetooth, Then press [LINK] can relink. Touch [RESET] to clear bluetooth pair information and resume to factory default setting.

Dial/Answer/Switch/Hand-up

Dial

- After successful linking between the phone and unit, input phone number by touching number button on the screen, then touch button to dial.

- In dial process, if you put wrong number Click to delete one by one, long press it to delete all.

- In the dial mode, click to hang up the call.

Answer

When there is an incoming call, the system will automatically switch to bluetooth function in any mode, and turn speaker sound to ringtones. Touch in the bluetooth interface to answer a call.

Touch to refuse a call.

 
Hang-up

After finishing a call, touch on the bluetooth interface to hang up the call.



Bluetooth Music Play

- If your phone has bluetooth music play function, you can shift its audio into the speaker of the unit, then the unit will play the music.

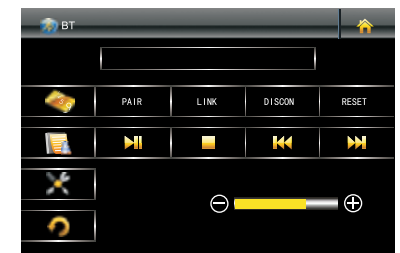- To pause or exit the music player, direct action



 
- Only the phone bluetooth with A2DP can this function be achieved. You can use on the screen to play music.

- This function can only be achieved by remote control.
- This function is only for DVD discs recorded with multi angles.
- The symbol  on the disc cover indicates multi-angle scene. The number in  Sign indicates number of the angles.
- You cannot switch visual angle in slow play.

MP3 Function Operation

After inserting SD card, U disc or the MP3 disc playing MP3 files, you will enter the interface as below:

- You need to press REL button on the front panel to release the panel, insert SD card on the base.

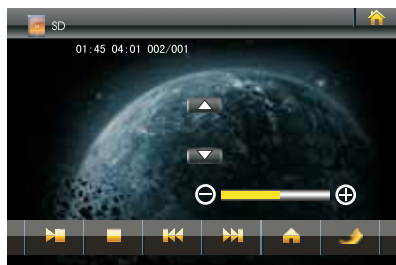

In MP3 play, if it contains file folder, press **[■]** button on the screen and use **[▶▶]** **[◀◀]** to access preferred folder, then press [ENTER] button on the remote control to confirm. Touch **[▲]** **[▼]** button on the screen to access previous/next track. Touch **[▶▶]** to play.

Skip/Speed forward/backward

In playback mode, short press SEEK-/SEEK+ on the remote control to skip play, long press it to speed forward/backward play. The speed changes as below:

X2 → X4 → X8 → X16 → X32

- This function can also be achieved by screen operation or pressing relative buttons on the panel.

Repeat Play

In MP3 play, press [RPT] button on the remote control to choose repeat mode: single repeat. After you select single repeat, the unit will play the current song repeatedly.

Select Song

In playback mode, directly press number buttons 1-9 on the remote control to input the serial number of the song, the unit will play the corresponding program automatically.

For the discs have more than 10 songs, use number button 10+ and 0-9 on the remote control to choose.

- This function can also be achieved by screen operation.
- Press number button 10+ once to get 10+, press it twice to get 20+, the rest may be deduced by analogy.

Stop

Touch **[■]** button on the remote control to stop playing MP3 files.

- This function can also be achieved by screen operation

Pause

In the mp3 file. Touch **[⏸]** button on the remote control to switch between play and pause.

- This function can also be achieved by screen operation

11. Number Button 5/ STOP

In radio mode, press this button to hear radio preset; In disc playback mode, press this button for to stop playback.

12. Number Button 4/OSD

In radio mode, press this button to hear radio preset; In disc playback mode, press this button to display the disc location and playing time of the current music.

13.AUX

Insert AUX input cable, then press **AUX** icon enters AUX mode.

14.USB

Insert USB device, the unit will play the files **automatically**.

15.REL

Press the button to release the front panel.

16.IR

To receive infrared signal from the remote **control**.

17.PIC

Press the button to switch between the following video modes:

BRIGHT → HUE → CONT → SHARP

Work with [VOL] knob to setup relative parameters.

18.▲▼

Press the button to adjust the angle of screen.

19.▲

When there is a disc in the unit, press the button to eject the disc.

20. MUTE

Press the button to highlight the liquid screen; long press the button for 1 second or longer to close the screen. When the screen is highlighted, press the button to close volume output; repress it to return volume level to its previous status.

21.OPEN

Press the button to open/close the screen.

22. RESET

If the unit or its connected device does not work normally, use prong object to press the button. After the unit restart, the setup returns to its previous status.

 
23.SD

Insert SD/MMC card, the unit will play the files **automatically**.

24.Disc Loading Slot

Window for the disc's in/out.

REMOTE CONTROL FUNCTION

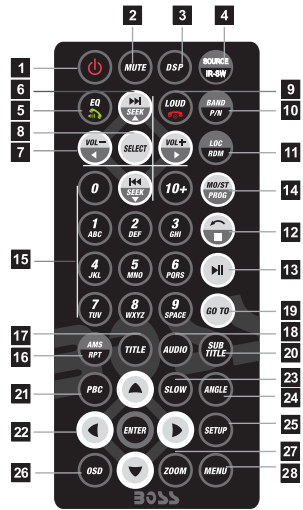

- 1. POWER**
Press once to switch on, press again to switch off.
- 2. MUTE button**
Press once to turn off audio output, press again to resume volume level.
- 3. DSP**
Press this button to show the time.
- 4. SOURCE/IR-SW**
Short press the button to switch the mode. Long press the button to switch between foreground/background remote control.
 - Only works when the background mode is on.
- 5. EQ/🔊**
Press the button to select different sound effect mode. When the unit supports Bluetooth, press the button to answer the call.

6. SEEK ▼ ▲ ⏪ ⏩

In playback mode, short press the button to access previous track/next track; long press it to speed forward/backward play. In radio mode, short press this button can search station manually; long press it to scan radio station manually.

7. VOL

Press this button to increase/decrease volume level.

8. SEL

Press this button repeatedly to choose sound feature.

9. LOUD/📞

Press to turn on/off LOUD function. If the unit supports Bluetooth, press this button to hang up the call.

10. BAND/P/N

In radio mode, press it to switch band. In playback mode, press it to choose AUTO, PAL OR NTSC system.

11. LOC/RDM

In radio mode, press the button to switch between remote and local. In playback mode, press it to random play.

12. STOP

Press it once to pause, press it twice to stop.

13. ▶▶

Press to switch between play and pause; in stop status, press it to play.

14. ST/PROG

In radio mode, press this button to select stereo or mono station. In playback mode, work with number button to access programmed play.

Title Select

In DVD mode, press [TITLE] button on the remote control can return to the title menu. All titles in the disc are displayed. Use up/down/left/right button or number button on the control to choose preferred chapter, then press [ENTER] or [▶▶] button to play the chapter.

- This function can only be achieved by remote control.

Menu Select

In playback mode, press PBC button on the remote control to back to the main menu, all chapters are displayed on the screen. Use direction button or number button on the control to select preferred chapter, then press [▶▶] or ENTER button to play selected chapter.

- This function can only be achieved by remote control

Video Play

When you are driving, the screen displays "You cannot watch video files during driving" Please park your car in a safe area and pull up the hand brake before watching.

Back rearview switch

When you are backing the car, the unit will automatically switch to back mode; after backing the system will switch to its previous running status.

Select Sound Output Mode

 
In VCD mode, repeatedly press [AUDIO] button on the remote control to switch the sound track in the following sequenc:

MONO LEFT → MONO RIGHT → MIX MONO → STERERO

Change the Angle (multi-angle)

For DVD discs recorded from multi angles, you can press ANGLE button on the remote control to change the visual angle. Switch is done in the following sequence:

ANGLE 1 (visual angle 1) → ANGLE 2 (visual angle 2) → ANGLE 3 (visual angle 3)

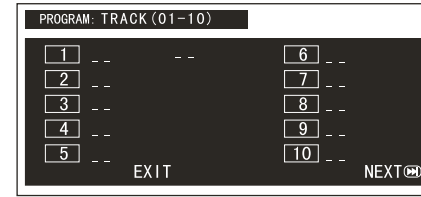

Then insert the serial number of title and chapter by using number button on the remote control and up/down/left/right button, move the cursor to PLAY, press ENTER button on the contro to complete programmed play.

- This function can only be achieved with remote control

Change Subtitle Language (multi subtitles)

For DVD disc recorded with multi subtitles, you can change subtitle language during play. Press [SUB-T] button repeatedly can change subtitle language during play.

- This function can only be achieved by remote control.

- This function is only for DVD discs recorded with multi subtitles.

- The number in the "2" sign on the DVD disc cover indicates how many languages the subtitle is recorded with.

Change Dialogue Language (multi-tone)

Audio play can has various dialogue languages and audio systems. If the disc is recorded with multi tones, you can change dialogue language and audio system during play.

In play mode, press [AUDIO] button on the remote control repeatedly can change dialogue language.

- This function can only be achieved by remote control.

- This function is only for DVD disc recorded with multi tones.

- The number in the "2" sign on the DVD disc cover indicates how many languages the subtitle is recorded with.

DVD/VCD/CD Founction Operation

DVD Play

(1) Insert DVD disc into disc loader then it plays automatically. If there is a disc in the unit, directly touch the DVD icon on the main menu to access play mode.

(2) Press [VOL+/-] on the screen to adjust the volume level.

Rotate [VOL] knob or touch [VOL+/-] button on the screen can also adjust the volume.

Skip /Speed forward/backward

In play mode, short press SEEK button on the remote control to skip to previous track/next track; long press it to access speed forward/backward play. Each time you press the button, the speed changes in the flowing sequence:

X2→X4→X8→X16→X32→play

- This function can also be achieved by operating on the screen or using relative button on the panel.

Stop

In DVD mode, press [■/↶] button once on the control to access prestop status, when press [▶▶] button on the control can continue to play; press [■/↶] twice to completely stop, then press [▶▶] the disc is played from the first song.

- This function can also be achieved by screen operation or pressing relative button on the front panel.

Random Play

In VCD/DVD mode, press [RDM] on the remote control to random play, repress [RDM] to return to the normal play mode.

- In VCD mode, this function can only be achieved when PBC is off.

Repeat Playback

In DVD mode, press [RPT] button on the remote control to start repeating function of the following contents.

Chapter → title → off

In VCD/CD mode, press [RPT] to start repeat function of the following contents:

Single repeat → off

Slow Play

In VCD mode, press [SLOW] button on the remote control to access slow play. The speed changes as below

Slow ½ → slow 1/3 → slow 1/4 → play

In DVD mode, press SLOW to slow forward/backward, the speed changes as below:

Slow forward ½ → slow forward 1/4 → slow forward 1/8 → slow forward 1/16 → Play

Slow backward ½ → slow backward 1/4 → slow backward 1/8 → slow backward 1/16 → play

- This function can only be achieved by remote control

Image Zoom In/Out

During play, press ZOOM on the remote control to zoom in/out image in the following sequence:

2→3→4→½→1/3→1/4→off

- This function can only be achieved with remote control.

- Reduced image cannot be moved on the screen.

Display

In playback mode, press [OSD] button on the remote control to display all information about the currently played disc.

- Only use remote control can this function be achieved.

Programmed play

In DVD mode, you can set playing sequence of your favorite songs by programmed play. Press [PROG] button on the remote control and the screen displays program-edit menu as below:

15.0-10+

In radio mode, press the button to select pre-stored station; long press the button 1-6) to save current frequency in the pre-stored station. In playback mode, press number button can directly choose song and chapter.

16.AMS/RPT

In radio mode, press the button to browse memorized stations; in playback mode, press it to choose repeated play.

17.TITLE

In DVD mode, press the button to back to the top layer menu of the disc.

18.AUDIO

In DVD mode, press the button to switch dialogue language. In VCD mode, press it to choose left/right track and stereo.

19.GOTO

In play mode, after pressing this button, you can use number button to choose songs or timely play.

20.SUB-T

In DVD mode, press the button to change subtitle language.

21.PBC

In VCD mode, press this button to display song menu, work with number button to select songs. In DVD menu, press the button to back to the root menu

22. ▲▼◀▶ ENTER

In DVD mode, press the button to move the cursor up, down, left and right to choose item in setup menu, confirm the item with ENTER button.

23.SLOW

In play mode, press the button to slow forward play.

24.ANGLE

In DVD mode, press the button to change recorded angle of the program.

25.SETUP

In play mode, press the button to switch among setup items.

26.OSD

Press the button to display the title, chapter, play time and left time.

27.ZOOM

During the play of VCD/DVD, press the button to zoom in the image as below:

2X→3X→4X→½→1/3→1/4→OFF

 
28.MENU

Press the button to switch between the main Interface and current mode.

Change the Battery

When the remote control becomes to control a shorter distance or not work, please change with a new battery. Please confirm polarity before change.

• Press the plug, at the same time pull out the battery. • Put the battery in the battery holder. • Insert the battery holder into the remote controller.

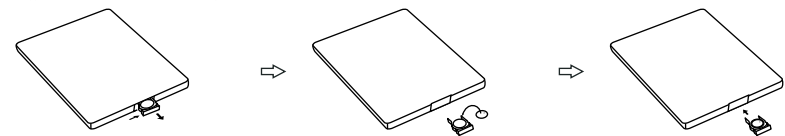

Reset Device

If the unit or its connected device does not work normally, use prong tool to press the reset button, after it restarts, the unit resumes to its initial setup.

Turn on/off Host

• On

When the ignition switch is put in ACC or ON position, press [P] button on the front panel to turn on the unit.

• Off

After the host starts, hold [P] button for 3 seconds or longer, the host will turn off.

- After turning the unit on, put ignition switch in LOCK or take out the key, then the host will turn off automatically. Next time put ignition switch in ACC or ON place, the unit will turn on automatically.

• Volume Control

Press [VOL] button on the remote control can increase/decrease volume level. Rotate VOL knob on the front panel, or touch [VOL+/-] on the panel also can adjust the volume.

• Sound Effect Setup

Press [SEL] button on the remote control or [SEL] button on the front panel to switch sound effect as below shows:

Bass → **Treble** → Balance → Fader → Bright → Hue → Contrast → **Sharp** → Volume

- After choose the mode, you can use [VOL] button on the remote control to adjust the parameters.
- If you do not adjust the mode within 3 seconds, the system will return to it previous status.

• Turn on/off Equal Loudness

Short press the [LOUD] button on the remote control to turn on equal loudness, repress it to turn off.

EQ Setup

When listening music, you can choose preset mode (POP, CLASSIC, ROCK). By pressing EQ on the remote control to switch as blow :

POP → **ROCK** → **CLASSIC** → OFF

Setup Operation

The unit will resume to it previous running status if none operation is performed with 5 seconds.



1. **Foreground**

Touch [FRONT] to enter the foreground main interface.



Touch each icon to access responding functions.

2. **Background**

Touch [BACK] to enter background main interface.

- When the unit is connected with background equipment, use background mode of the unit to play audio and video files.

Multifunction Operation

In DVD mode, touch the top center of the screen will display the following menu.



1. **Play/Pause**

Play/Pause

2. **Stop play**

Stop play

3. **Previous track/Next track**

Previous track/Next track

4. **System Setup**

To enter DVD setup interface, refer to "System Setup" below for detailed information.

5. **Number Button**

Touch [TA] area on the screen and the number button pops up, touch the button to choose song and play.

6. **Exit**

Touch the top right corner on the screen to exit DVD play mode.

System Setup

 
Press [SETUP] button on the remote control or [Home] button on the screen to enter the interface of system setup. System setup modes consist of basic setup, audio setup, video setup and password setup.

You can press [▲] [▼] [◀] [▶] button on the screen to move the cursor, then confirm with ENTER button. Press [◀] button on the remote control backs to the previous menu.

Touch **X** icon or [SETUP] button on the control to exit system setup menu.

- Directly touch each item on the screen also achieves this function.

RDS Function Operation

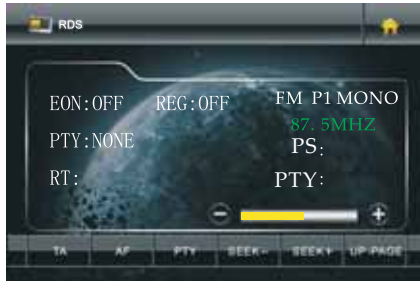

RDS provides series information(traffic information, name of station), and can automatically switch to the station with stronger signal of the same program.

Additional Information
RDS datas contain the following contents:
 P1---program identify code
 PS---program name
 AF---switch frequency list
 TP---traffic program
 TA---traffic announcement
 PTY---program type
 EON---strengthen other networks

1.AF

- Touch the button to turn on/off AF function
- When the receiving station signal becomes weak, it will automatically switch to other frequencies.
- When receiving urgent program, the screen will display "ALARM".

Receiving Traffic Radio:

1. Press [TA] button to open TA mode.
2. The radio will automatically search traffic stations when the traffic station is On. The screen will display "TP" character after searching is completed. Only when the traffic information is radioed can it be received, after the traffic radio is completed, it automatically switches to the previous mode.
3. Reprress TA button to close TA function. In other modes, the traffic announcement can automatically switch to radio mode. After it is completed, it will switch to the previous mode and then play.

2. PTY

- PTY allows searching for a given program type.
- ① Touch PTY button to select searched program type.
 - ② 3 seconds after the selecting program type, the radio will automatically search the radio of set program type.

3. EON

ON: Open EON function and the radio will receive another AF chart.

OFF: Close EON function.

4. REG

ON: Open REG function can only receive local RDS stations.

OFF: Close REG function.

5. SEEK-/SEEK+

 
Short press the button to manually search a station upforward/downforward; long press it to automatically search station upforward/downforward.

4. Video Setup

Touch [VIDEO] icon to enter the interface below.



- When the unit works at AUX mode, you cannot achieve this function.

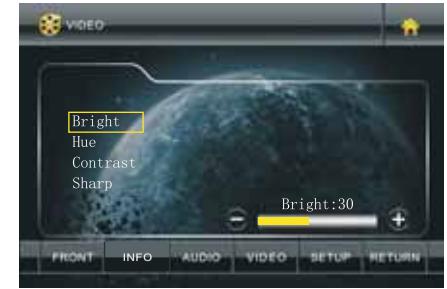

You can adjust the following video effect on the interface: Bright, Hue, Contrast, Sharp.

5. System Setup

Touch [SETUP] icon to enter the system setup interface.

Clock sys

Choose time display mode(24h/12h system)

Key Beep

- To open/close touch tone.
- BEEP ON: open touch tone.
- BEEP OFF: close touch tone.

Local Area

To select radio area of your country on the interface.

Reverse Vol

To set the reverse volume : 00,15,20,25

BlueT Vol

To set the bluetooth volume : 20,25,30,35

Back Bright

To select screen brightness: 100%, 75%, 50%, 25%

SW Control

To set function for the steering wheel.

Back Light

To select screen light: OFF, 15S, 30S, 60S

3. Audio

Touch the [AUDIO] icon to enter the Interface below.



You can adjust the following sound effect on the interface: volume, bass, treble, balance, FAD.

- Touch ▲▼ to switch among these sound effects.
- Touch [-/+] to adjust selected sound effect.

Clock Adjust

Touch and move the cursor to hour, minute, second.

Touch to adjust hour, minute and second.

Touch Adjust

If deviation occurs in touch, or if it's the first time to use the unit, you need to calculate the screen.



Use touch pen to click the center of “x” for 2s or longer until the screen displays “successful calculation”.

 
 
 
6. Return

Touch [RETURN] icon can return to the previous working mode.

Learning Steering Wheel Function Operation

You can also perform control operation of the unit by the car steering wheel buttons. Setup method is as follows:

- As is shown in Fig. 1, select a setup position from 1 to 8 (such as: 1. NO KEY):
- As is shown in Fig.2, press a steering wheel button that you need to set up:
- Select a function in the menu that pops up on the right side (such as: SOURCE), as is shown in Fig.3.
- As is shown in Fig. 4, then the function setup of button 1 is finalized:
- Repeat procedures A to D above can set up function of the next steering wheel button.
- Hold any button from 1 to 8 for 3 seconds can clear the button function that has already been set.



Radio Function Operation

Touch [RADIO] icon to enter the radio interface as below.



1. Preset Station Button

To display preset station list (long press the button to store the current frequency onto the prestored list).

2. BAND

Touch the button to switch band.

3.LOC

Touch the button to switch between remote and local.

4.AMS

Short press to browse the stations in sequence for 6 seconds each, long press to search station automatically.

5.EQ

Press the button to select preset balance mode.

6.LOUD

Press the button to turn on/off equal loudness.

7.SEEK-\SEEK+

Short press it to adjust station frequency manually, long press it to browse station upforward/downforward automatically.

8.DN-PAGE

Touch the button to switch to RDS operation interface.

(For detailed information please refer to “RDS Function Operation”)

Band Switch

Touch the BAND button on the screen to switch band in the following sequence.

Fm1→Fm2→Fm3→MW1→MW2

Press remote control or [BAND] button on the panel also achieves this function.

Manually/Automatically Search Station

1.Manual Search

Short press SEEK button on the screen to adjust frequency and search stations upforward/downforward.

2.Automatic Search

Long press SEEK button on the screen to search station upforward/downforward. While searching, Retouch it to stop.

- press the remote control or SEEK button on the front panel also achieves this function.

Manual Preset Station

30 stations can be stored in the radio(18 FM bands, 12 AM bands).

- Search a station by manual searching.
- Long press any number button in 1-6 on the radio main interface, the station will be stored in the appointed position in radio (such as: ⑥ 87.5M).
- If the prestored position has been stored, after executing store operation, the original station will be replaced by the new.

Browse Station/Select Station

• Browse Station

After searching and storing station, short press [AMS] icon to browse, 6s for each. During browsing, repress [AMS] if you find favorite program and need to stop browsing.

• Select Station

After searching and storing station, short press [AMS] icon to browse, 6s for each station. During browsing, repress [AMS] if you find favorite program and need to stop browsing.

Directly touch number button 1-6 on the screen to play.

- Press the remote control or [AMS] button on the panel can also achieve this function.