


Entertainment Stand

IMPORTANT


Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.


Do not use power tools above 8 volts to assemble.

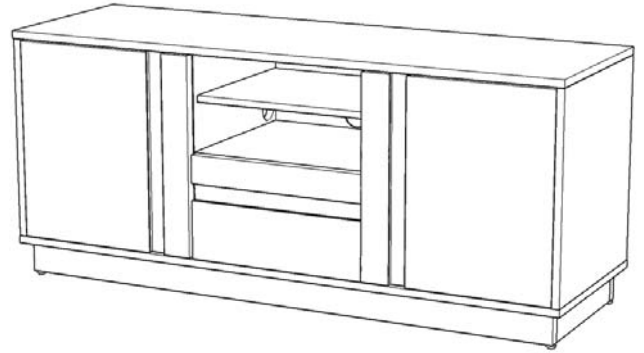


Part List

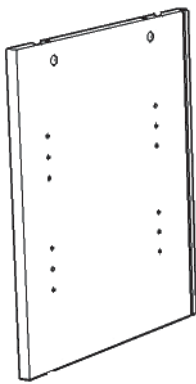


B.
Side Panel
1 Pc.

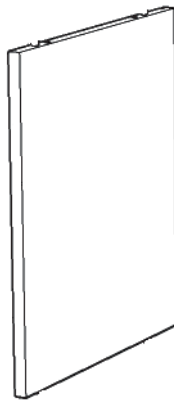


C.
Side Panel
1 Pc.

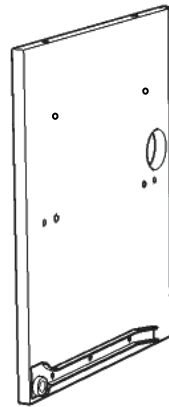


D.
Middle Panel
1 Pc.

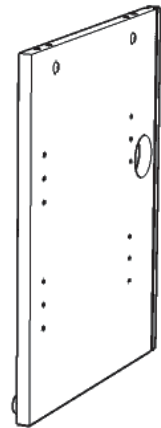


E.
Middle Panel
1 Pc.

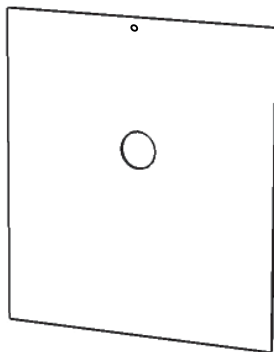

G.
Back Panel
1 Pc.

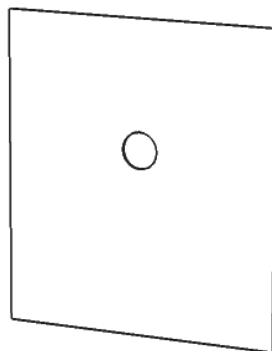

H.
Back Panel
2 Pcs.

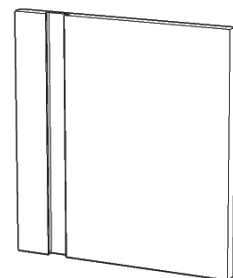

M.
Door
2 Pcs.

For assembly see instructions in carton 20 08000 0101.