


WOODPLAY[®]

Playsets

P I C N I C T A B L E Assembly Instructions

 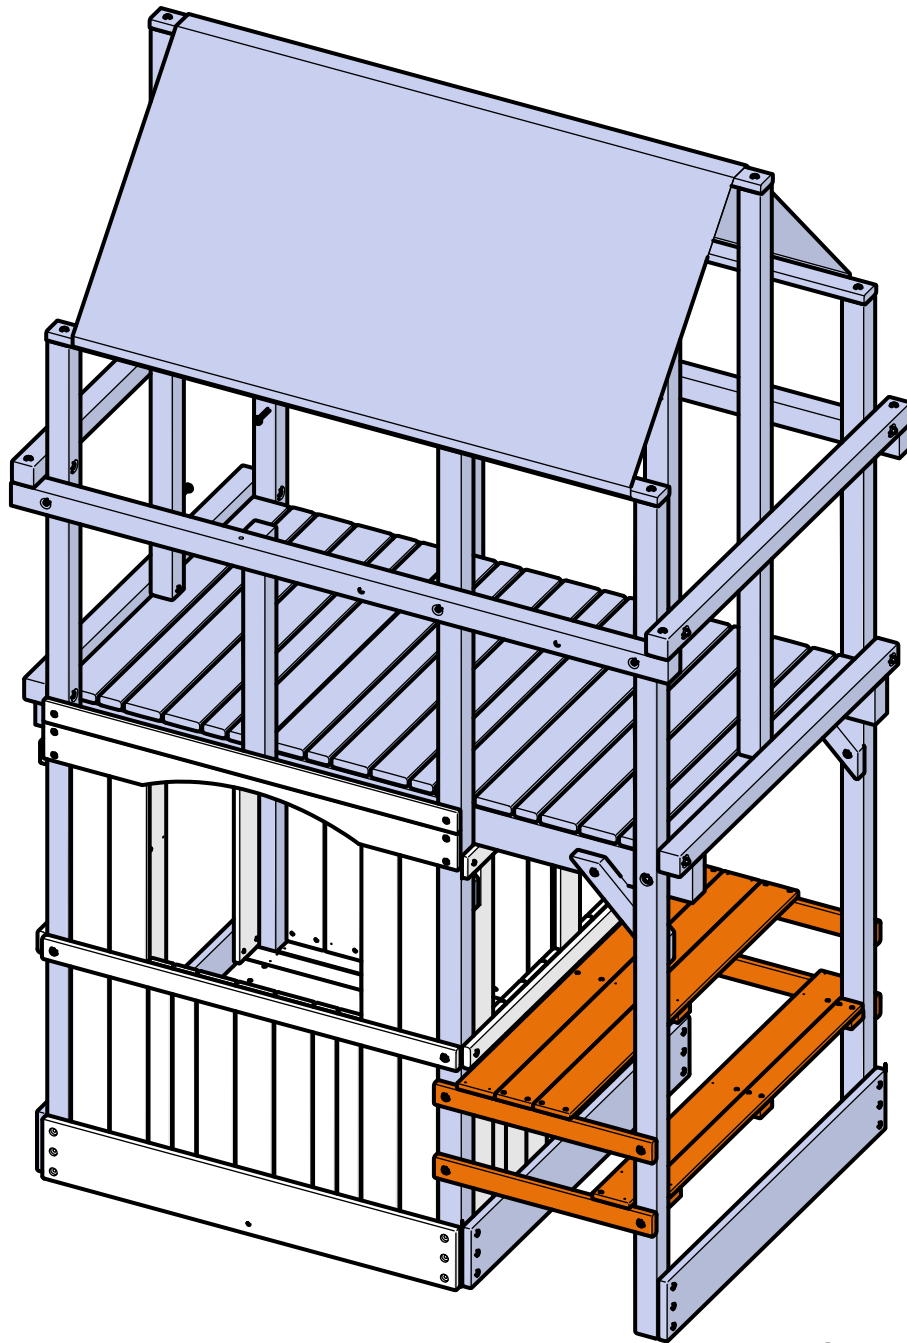


PG-MAN-PIC-PH-XL-00


HARDWARE IDENTIFICATION

NOTE TO INSTALLER


You must assemble this product in accordance with these Assembly Instructions.
After assembly is complete, please give this Owner's Manual to the owner of the play system.




1/4" x 4.5" LAG SCREW
PG-HW-L002
QTY (2)

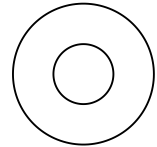


1/4" Flat Washer
PG-HW-W002
QTY (2)

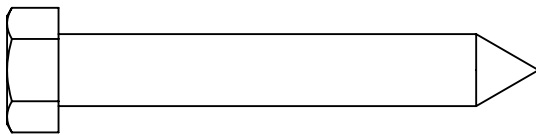

3/8" X 2.5" Lag Screw
PG-HW-L016
QTY (8)

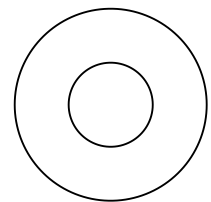


3/8" Flat Washer
PG-HW-W004
QTY (8)

 


#10 X 1-3/4" Flat Head Screw
PG-HW-S018
QTY (34)

S T A N D A R D P A R T S L I S T


NOTE: Parts will have the part number (Starts with PG-) stamped on the part itself.

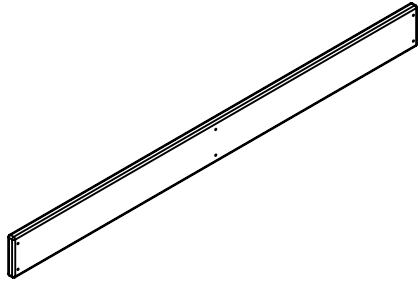


Picnic Table Board
PG-546-064-PIC
QTY (3)

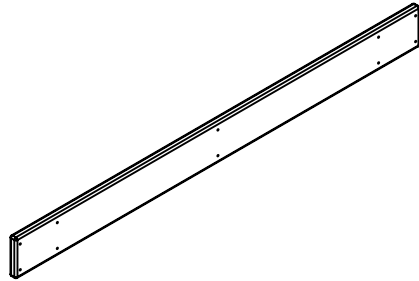


Picnic Table Seat Board
PG-546-064-PIC-A
QTY (1)

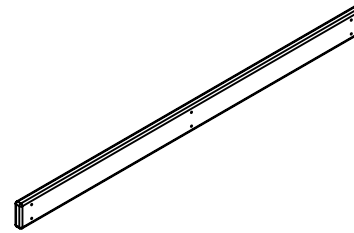


Picnic Table Board Short
PG-544-054-PIC
QTY (1)

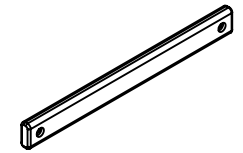

Picnic Table Support
PG-2X4-032-PT
QTY (4)

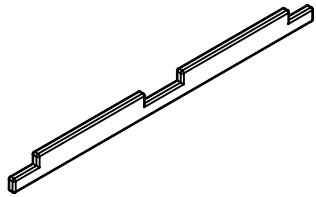

 Window Top Filler Notched
PG-544-047-ENC-a
QTY (1)



Picnic Table Backboard
PG-2X4-016-BB
QTY (1)



Picnic Table Backboard
PG-2X4-009-BB
QTY (1)



Picnic Table Backboard
PG-2X4-009-BB-A
QTY (2)



*Used only if installing Bonus Room

BONUS ROOM TOP FILLER BOARD





This step is **only** if installing a **Bonus Room** and a Picnic table. If not installing a Bonus Room **skip** this page and **go to step 2 on page 5**.

1. Install Window Top Filler Notched as shown in **Detail A**, fasten from the **inside** of the bonus room with 4 screws.

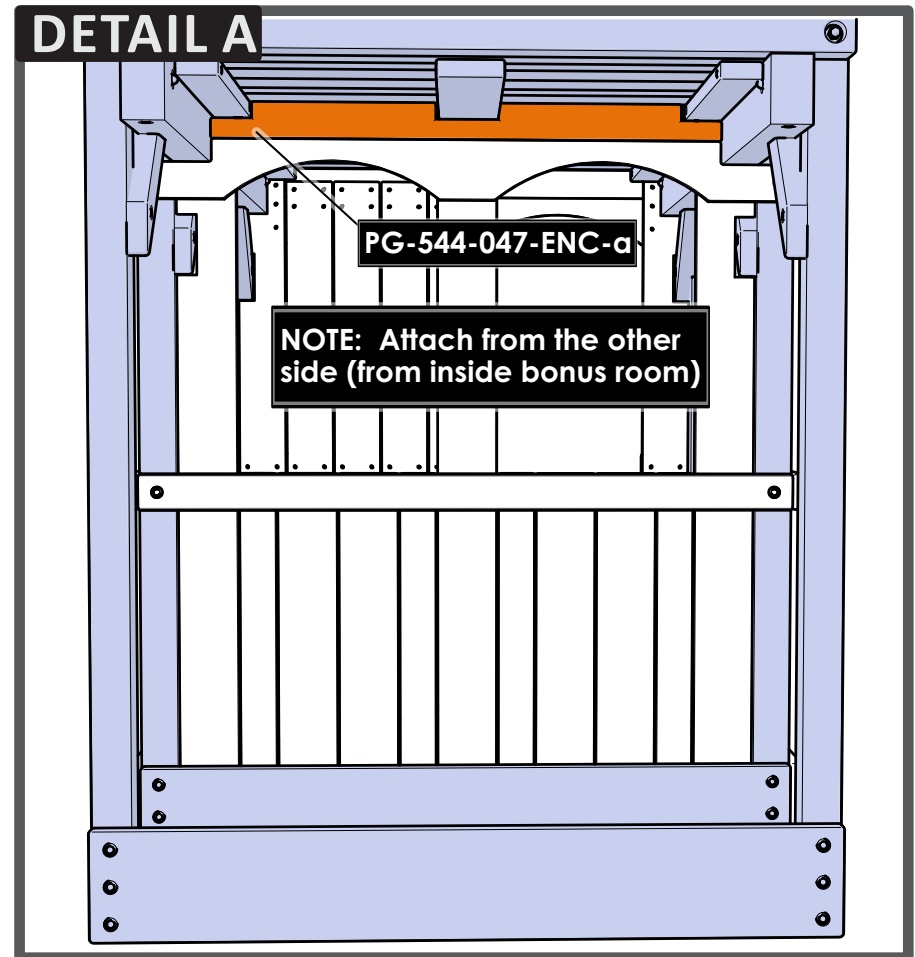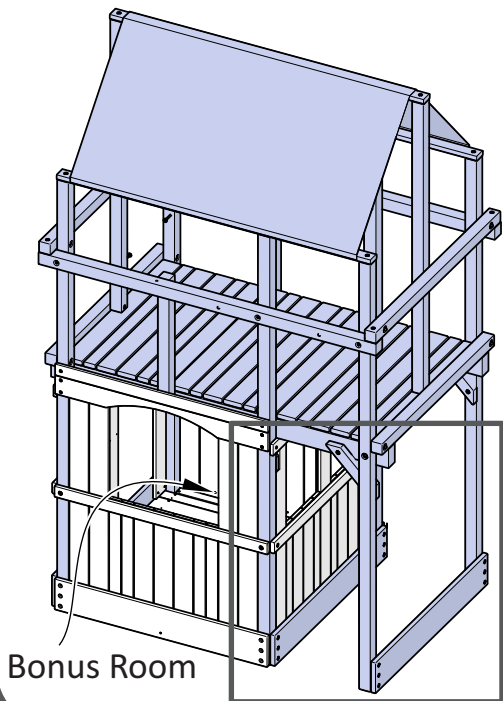


ATTACH PICNIC TABLE SUPPORTS

2. Attach two Picnic Table Supports (PG-2X4-032-PT) on each side as shown in Detail B.

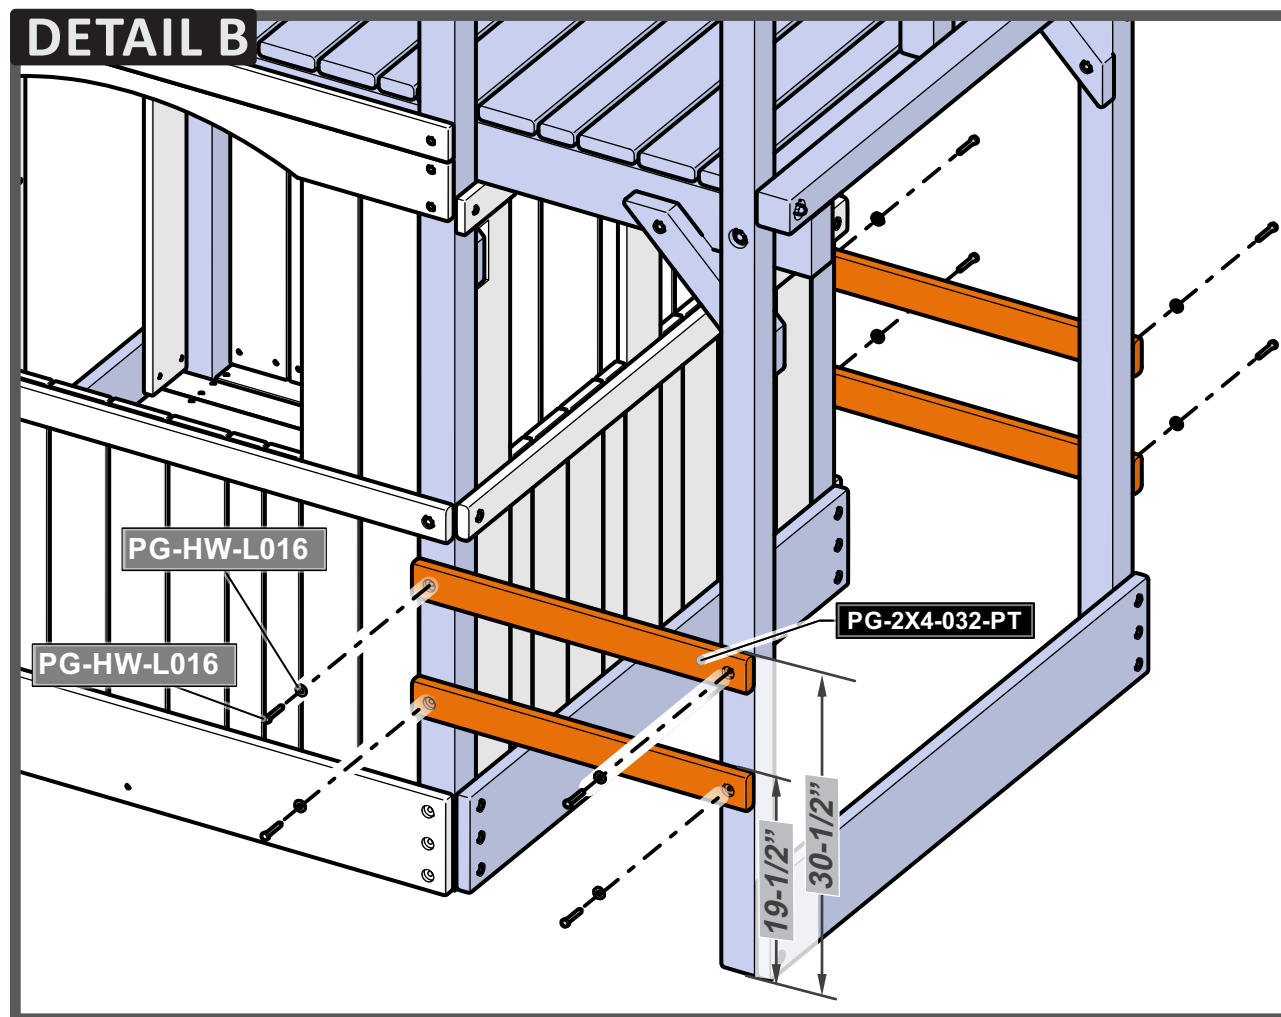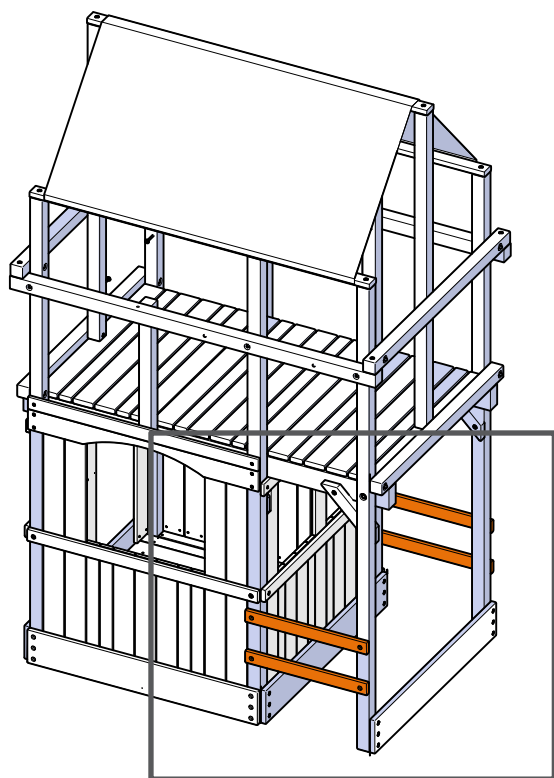



MAKE TABLE AND SEAT ASSEMBLIES

3. Make a Table top assembly and Seat Assembly as shown.

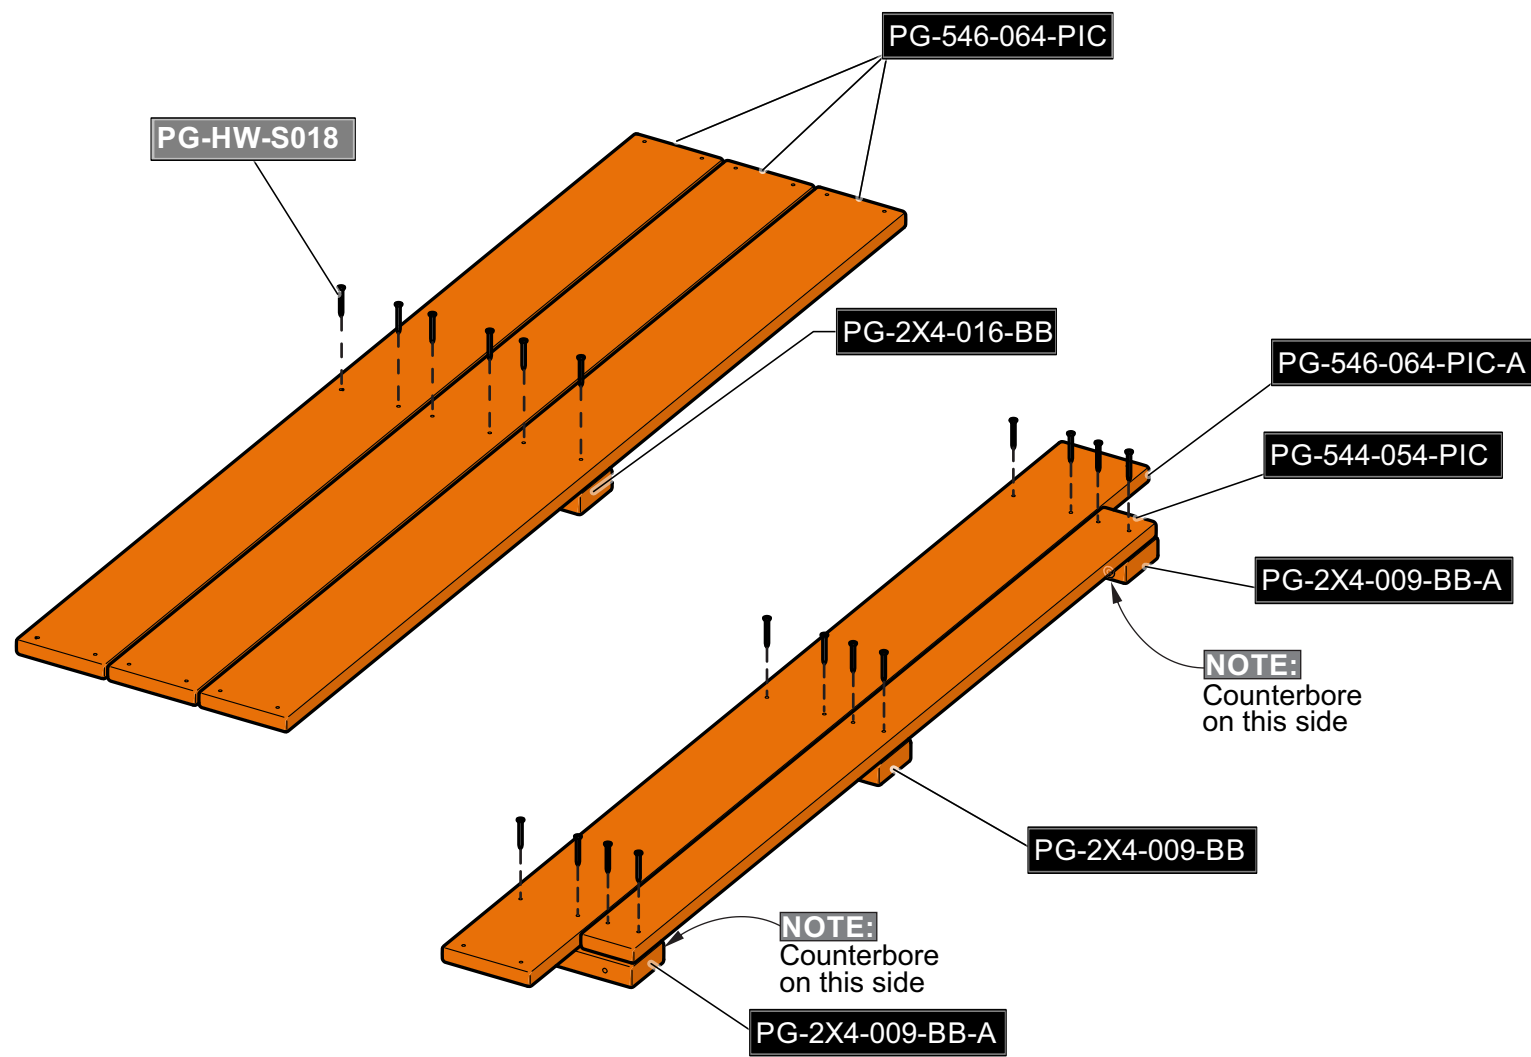

ATTACH ASSEMBLIES TO SUPPORTS

4. Attach **table top assembly** with four screws in each board as shown in **Detail C**.
5. Attach **seat assembly** with four screws in the big board. Complete securing seat with two Washers and two Lag screws as shown in **Detail C**.

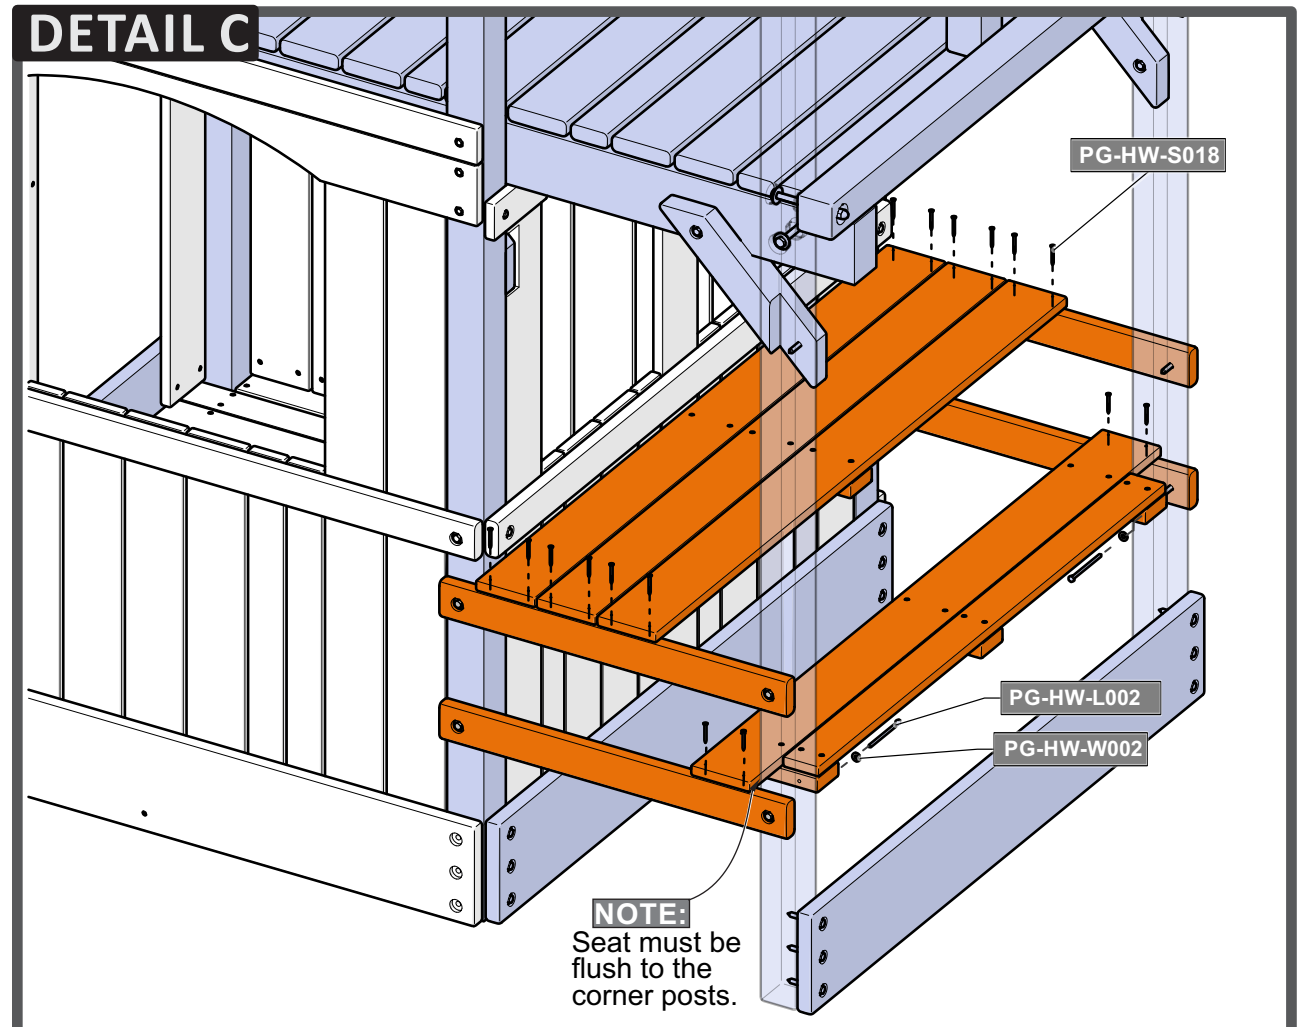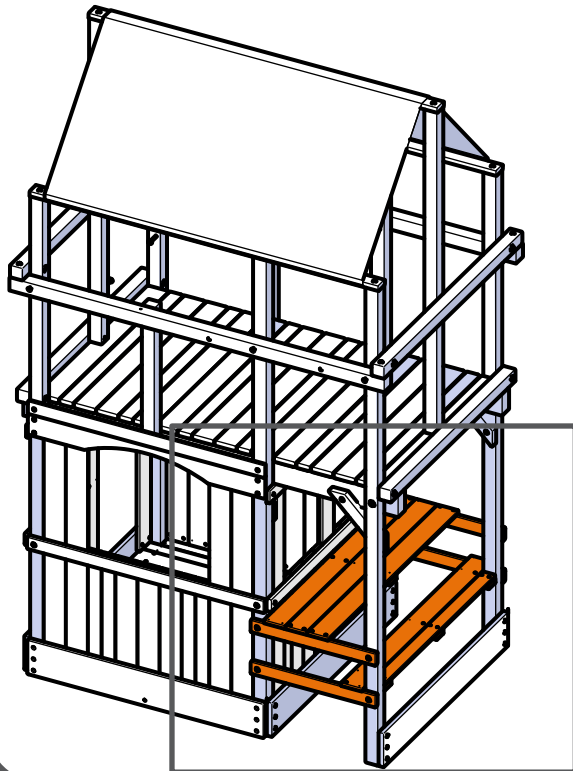

WOODPLAY®

2016 WARRANTY

5 Year Warranty

Subject to proper installation and normal residential use, Woodplay warrants, subject to the limitations stated below, to the original retail purchaser, all chain, seats, swing hangers, hardware, metal braces, ropes and accessories to be free from defects in material and workmanship for a period of **five years** from date of purchase. Cracks in non-functional plastic components are not considered defects in materials and workmanship if they do not affect the functionality of the playset. Merchandise covered under this limited **five-year** warranty will, at our option, be repaired or replaced, excluding any freight or labor fees.

15 Year warranty

In addition, for **Fifteen years** after the original purchase date of our **Cedar** playsets, Woodplay warrants, to the original retail purchaser, all wooden components against structural failure due to corrosion, wood rot, or insect infestation. Seasonal checks, surface cracks, knotholes and knots, natural characteristics of all wooden play equipment, not resulting in structural failure, are not covered under this warranty. And will not affect the integrity of your playset.

Limited Lifetime Warranty

In addition, for the **lifetime** of our **Redwood** playsets, Woodplay warrants, to the original retail purchaser, all wooden components against structural failure due to corrosion, wood rot, or insect infestation. Seasonal checks, surface cracks, knotholes and knots, natural characteristics of all wooden play equipment, not resulting in structural failure, are not covered under this warranty. And will not affect the integrity of your playset. Woodplay warrants to the original retail customer that we will replace any swing hangers, swing chains, metal braces, metal rungs or hardware that fail due to rust or breakage (excludes surface rust). This limited lifetime warranty also applies to our exclusive Super Slide, Hurricane Slide and Alpine Slide.

Timber is a natural material which can absorb and release moisture. Although this product is designed to minimize this effect, in certain circumstances some movement or distortion is unavoidable. During dry hot weather timber may shrink and check - this is a normal process of weathering. After the first year of service it is advisable to clean and apply a non-toxic stain or sealant to the wood, safe for children's use.

Components covered under this **5 year, 15 year** and limited **lifetime warranty** will be replaced free of charge excluding freight and labor fees.

Non-residential use of the playset is prohibited and voids the warranty as the playsets are designed for residential use only.

Escalade Sports reserves the right to examine photographs and/or physical evidence of merchandise claimed to be defective, and to recover said merchandise, prior to disposition of warranty claims. Merchandise returned to our factory for examination or recovery must be shipped freight prepaid, unless a Return Authorization Number is issued.

This warranty program does not cover normal wear and tear, color fading, or damages resulting from misuse, abuse, vandalism, alteration, acts of God, or assembly and maintenance contrary to our instructions. Escalade Sports assumes no responsibility for incidental or consequential damages which may arise from the purchase or use of our equipment. Please supervise your children's play activity and maintain your play equipment periodically.

This warranty is expressly in lieu of all other warranties, expressed or implied, including warranties of merchantability or fitness for use. Woodplay does not assume or authorize any person to assume for us, any other liability in connection with the sale of our products.

Special Note: Woodplay reserves the right to make changes in materials, design, and pricing without notice. See your instruction manual for maintenance requirements. Your child's safety is your responsibility; therefore, you should inspect this equipment regularly for wear and safety.

For warranty service, contact:

**Woodplay Playsets
Escalade Sports
P.O. Box 889
Evansville, IN 47706
1-800-GO-SWING**

Or E-Mail us at: playgroundcs@escaladesports.com

Revised 2015