

F29355

JUNGLE JOURNEY PLAYSET





OBSTACLE FREE SAFETY ZONE - 318 5/8" x 306 1/2" (8.09m x 7.79m) area requires Protective Surfacing. See page 4.

MAXIMUM VERTICAL FALL HEIGHT - 6'4" (1.93m).

CAPACITY - 9 Users Maximum, Ages 3 to 10; Weight Limit 110 lbs. (50 kg) per child.

RESIDENTIAL HOME USE ONLY. Not intended for public areas such as multi-unit residences, schools, churches, nurseries, day cares or parks.

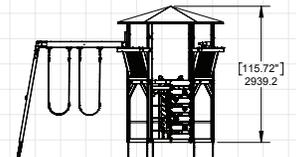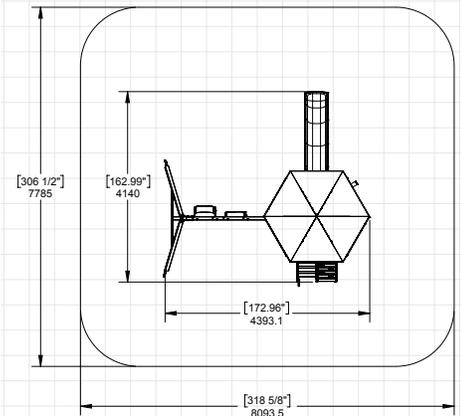

INSTALLATION AND OPERATING INSTRUCTIONS

FOR 24/7 ONLINE PARTS REPLACEMENT

parts.kidkraft.com

KidKraft, Inc.
4630 Olin Road
Dallas, Texas 75244
USA

customerservice@kidkraft.com

1.800.933.0771
972.385.0100

parts.kidkraft.eu


KidKraft Netherlands BV
Olympisch Stadion 8
1076 DE Amsterdam
The Netherlands

europcustomerservice@kidkraft.com

+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)

9409355

Rev 07/25/2022

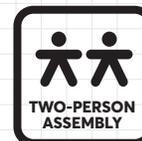

WARNING

To reduce the risk of serious injury or death, please read and follow these instructions. Keep and refer to instructions as needed and pass along to any future owners of this item.

Congratulations on purchasing a KidKraft product!

**Our items are made of high-quality,
durable Cunninghamia Lanceolata wood
from the cypress family.**

**Lumber from these trees are known for
their light weight and excellent strength.
The porosity of this wood allows the
moisture to absorb and evaporate in the
fibers, resisting rot and bugs.**

**Engineered for great play, our products
also go through extensive testing for safety.**

**Plus, our team has developed a series of
proprietary methods for a simpler, more
organized assembly. Less build time and
more play time is our motto!**

**However, during assembly if you have any
questions or concerns, please reach out.
Our Customer Service can help with missing
parts, instructions or maintenance.**



Warnings and Safe Play Instructions



CONTINUOUS ADULT SUPERVISION REQUIRED. Most serious injuries and deaths on playground equipment have occurred while children were unsupervised! Our products are designed to meet mandatory and voluntary safety standards. Complying with all warnings and recommendations in these instructions will reduce the risk of serious or fatal injury to children using this play system. Go over the warnings and safe play instructions regularly with your children and make certain that they understand and follow them. Remember on-site adult supervision is required for children of all ages.



WARNING

SERIOUS HEAD INJURY HAZARD

Installation over concrete, asphalt, dirt, grass, carpet and other hard surface creates a risk of serious injury or death from falls to the ground. Install and maintain shock absorbing material under and around play-set as recommended on page 3 of these instructions.

COLLISION HAZARD

Place play-set on level ground at least 2m from any obstruction such as a garage or house, fences, poles, trees, sidewalks, walls, landscape timbers, rocks, pavement, planters, garden borders, overhanging branches, laundry lines, and electrical wires. (See OBSTACLE FREE SAFETY ZONE on cover)

CHOKING HAZARD/SHARP EDGES & POINTS

Adult assembly required. This product contains small parts and parts with sharp edges and points. Keep parts away from children until fully assembled.

WARNING LABEL

Owners shall be responsible for maintaining the legibility of the warning labels.

STRANGULATION HAZARD

- NEVER allow children to play with ropes, clotheslines, pet leashes, cables, chains or cord-like items when using this play-set or to attach these items to play-set.
- NEVER allow children to wear loose fitting clothing, ponchos, hoods, scarves, capes, necklaces, items with draw-strings, cords or ties when using this play-set.
- NEVER allow children to wear bike or sport helmets when using this play-set.

Failure to prohibit these items, even helmets with chin straps, increases the risk of serious injury and death to children from entanglement and strangulation.

TIP OVER HAZARD

Choose a level location for the equipment. This can reduce the likelihood of the play set tipping over and loose-fill surfacing materials washing away during heavy rains.

DO NOT allow children to play on the play-set until the assembly is complete and the unit is properly anchored.

Never add extra length to chain or rope. The chains or ropes provided are the maximum length designed for the swinging element(s).



WARNING – Safe Play Instructions

- ✓ Observe capacity limitations of your play-set. See front cover.
- ✓ Dress children with well fitting and full foot enclosing footwear.
- ✓ Teach children to sit with their full weight in the center of the swing seat to prevent erratic swing motion or falling off.
- ✓ Check for splintered, broken or cracked wood; missing, loose, or sharp edged hardware. Replace, tighten and or sand smooth as required prior to playing.
- ✓ Verify that suspended climbing ropes, rope ladders, chain or cable are secured at both ends and cannot be looped back on itself as to create an entanglement hazard.
- ✓ On sunny and or hot days, check the slide and other plastic rides to assure that they are not very hot as to cause burns. Cool hot slide and rides with water and wipe dry prior to using.
- ✓ Orientate slide such that it gets the least amount of exposure to the sun.
- ✗ Do not allow children to wear open toe or heel footwear like sandals, flip-flops or clogs.
- ✗ Do not allow children to walk, in front, between, behind or close to moving rides.
- ✗ Do not let children twist swing chains or ropes or loop them over the top support bar. This may reduce the strength of the chain or rope and cause premature failure.
- ✗ Do not let children get off rides while they are in motion.
- ✗ Do not permit climbing on equipment when it is wet.
- ✗ Do not permit rough play or use of equipment in a manner for which it was not intended. Standing on or jumping from the roof, elevated platforms, swings, climbers, ladders or slide can be dangerous.
- ✗ Do not allow children to swing empty rides or seats.
- ✗ Do not allow children to go down slide head first or run up slide.

⚠️ Protective Surfacing - Reducing Risk of Serious Head Injury From Falls

One of the most important things you can do to reduce the likelihood of serious head injuries is to install shock-absorbing protective surfacing under and around your play equipment. The protective surfacing should be applied to a depth that is suitable for the equipment height in accordance with ASTM F1292. There are different types of surfacing to choose from; whichever product you select, follow these guidelines:

Loose-Fill Materials

- Maintain a minimum depth of 9 inches (23 cm) of loose-fill materials such as wood mulch/chips, engineered wood fiber (EWF), or shredded/recycled rubber mulch for equipment up to 8 feet (2,45 m) high; and 9 inches (23 cm) of sand or pea gravel for equipment up to 5 feet (1,5 m) high. NOTE: An initial fill level of 12 inches (31 cm) will compress to about a 9-inch (23 cm) depth of surfacing over time. The surfacing will also compact, displace, and settle, and should be periodically raked and refilled to maintain at least a 9-inch (23 cm) depth.
- Use a minimum of 6 inches (16 cm) of protective surfacing for play equipment less than 4 feet (1,22 m) in height. If maintained properly, this should be adequate. (At depths less than 6 inches (16 cm), the protective material is too easily displaced or compacted.)

NOTE: Do not install home playground equipment over concrete, asphalt, or any other hard surface. A fall onto a hard surface can result in serious injury to the equipment user. Grass and dirt are not considered protective surfacing because wear and environmental factors can reduce their shock absorbing effectiveness. Carpeting and thin mats are not adequate protective surfacing. Ground level equipment -- such as a sandbox, activity wall, playhouse or other equipment that has no elevated play surface -- does not need any protective surfacing.

- Use containment, such as digging out around the perimeter and/or lining the perimeter with landscape edging. Don't forget to account for water drainage.
- Periodically rake, check and maintain the depth of the loose-fill surfacing material. Marking the correct depth on the play equipment support posts will help you to see when the material has settled and needs to be raked and or replenished. Be sure to rake and evenly redistribute the surfacing in heavily used areas.
- Do not install loose fill surfacing over hard surfaces such as concrete or asphalt.

Poured-In-Place Surfaces or Pre-Manufactured Rubber Tiles


You may be interested in using surfacing other than loose-fill materials - like rubber tiles or poured-in-place surfaces.

- Installations of these surfaces generally require a professional and are not “do-it yourself” projects.
- Review surface specifications before purchasing this type of surfacing. Ask the installer/manufacturer for a report showing that the product has been tested to the following safety standard: ASTM F1292 *Standard Specification for Impact Attenuation of Surfacing Materials within the Use Zone of Playground Equipment*. This report should show the specific height for which the surface is intended to protect against serious head injury. This height should be equal to or greater than the fall height - vertical distance between a designated play surface (*elevated surface for standing, sitting, or climbing*) and the protective surfacing below - of your play equipment.
- Check the protective surfacing frequently for wear.

Placement

Proper placement and maintenance of protective surfacing is essential. Refer to diagram on front cover. Be sure to;


- Extend surfacing at least 6 feet (1,8 m) from the equipment in all directions.
- For to-fro swings, extend protective surfacing in front of and behind the swing to a distance equal to twice the height of the top bar from which the swing is suspended.
- For tire swings, extend surfacing in a circle whose radius is equal to the height of the suspending chain or rope, plus 6 feet (1,8 m) in all directions.

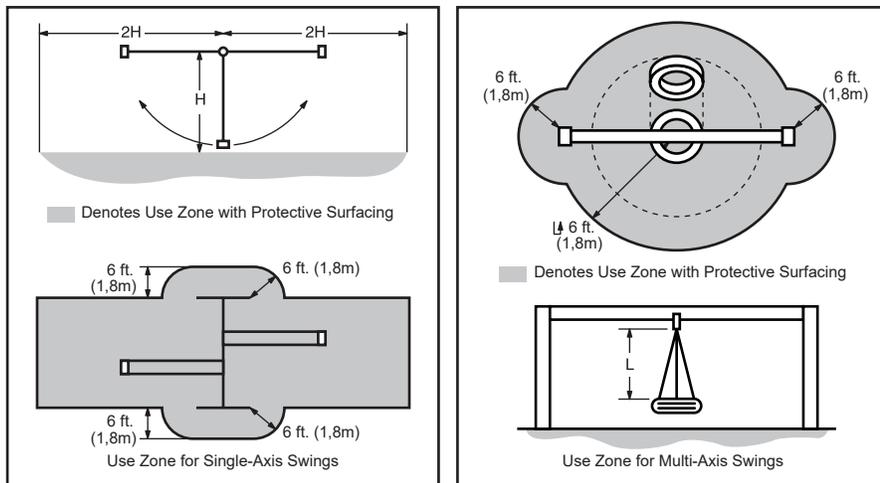

Instructions for Proper Maintenance

Your KidKraft Play System is designed and constructed of quality materials with your child's safety in mind. As with all outdoor products used by children, it will weather and wear. To maximize the enjoyment, safety and life of your Play Set, it is important that you, the owner, properly maintain it.

Check the following at the beginning of the play season:
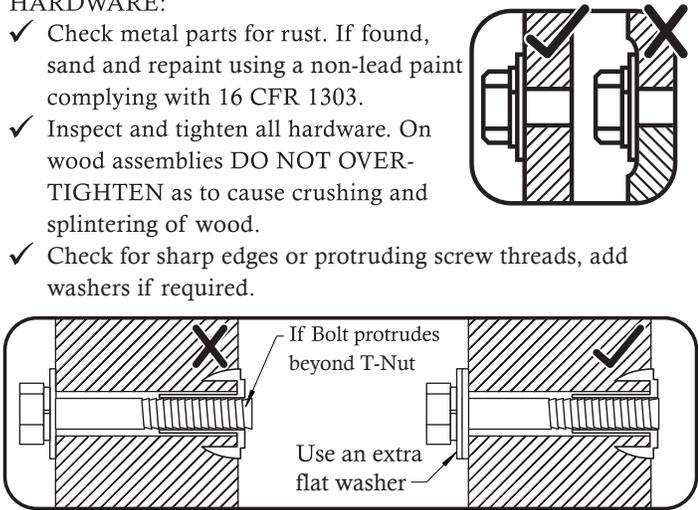
<p>HARDWARE:</p> <ul style="list-style-type: none"> ✓ Check metal parts for rust. If found, sand and repaint using a non-lead paint complying with 16 CFR 1303. ✓ Inspect and tighten all hardware. On wood assemblies DO NOT OVER-TIGHTEN as to cause crushing and splintering of wood. ✓ Check for sharp edges or protruding screw threads, add washers if required.  <p>If Bolt protrudes beyond T-Nut</p> <p>Use an extra flat washer</p> <p>SHOCK ABSORBING SURFACING:</p> <ul style="list-style-type: none"> ✓ Check for foreign objects. Rake and check depth of loose fill protective surfacing materials to prevent compaction and maintain appropriate depth. Replace as necessary. (See Protective Surfacing, page 3) 	<p>GROUND STAKES (ANCHORS):</p> <ul style="list-style-type: none"> ✓ Check for looseness, damage or deterioration. Should firmly anchor unit to ground during use. Re-secure and or replace, if necessary. <p>SWING HANGERS:</p> <ul style="list-style-type: none"> ✓ Check that bolts are secure and tight. Quick clips should be completely closed and threaded clips screwed tight. ✓ If squeaking occurs lubricate bushings with oil or WD-40®. <p>SWINGS, ROPES AND RIDES:</p> <ul style="list-style-type: none"> ✓ Reinstall if removed during cold season. Check all moving parts including swing seats, ropes, chains and attachments for wear, rust and other deterioration. Replace as needed. ✓ Check that ropes are tight, secure at both ends and cannot loop back as to create an entrapment. <p>WOOD PARTS:</p> <ul style="list-style-type: none"> ✓ Check all wood members for deterioration, structural damage and splintering. Sand down splinters and replace deteriorated wood members. As with all wood, some checking and small cracks in grain is normal. ✓ Applying a water repellent or stain (water-based) on a yearly basis is important maintenance to maintain maximum life and performance of the product.
--	---

Check twice a month during play season:

<p>HARDWARE:</p> <ul style="list-style-type: none"> ✓ Inspect for tightness. Must be firmly against, but not crushing the wood. DO NOT OVER-TIGHTEN. This will cause splintering of wood. ✓ Check for sharp edges or protruding screw threads. Add washers if required. 	<p>SHOCK ABSORBING SURFACING:</p> <ul style="list-style-type: none"> ✓ Rake and check depth of loose fill protective surfacing materials to prevent compaction and maintain appropriate depth. Replace as necessary. (See Protective Surfacing, page 3)
---	---

Check once a month during play season:

<p>SWING HANGERS:</p> <ul style="list-style-type: none"> ✓ Check that they are secure and orientated correctly. Hook should rotate freely and perpendicular to support beam. ✓ If squeaking occurs lubricate bushings with oil or WD-40®. 	<p>SWINGS AND RIDES:</p> <ul style="list-style-type: none"> ✓ Check swing seats, all ropes, chains and attachments for fraying, wear, excessive corrosion or damage. Replace if structurally damaged or deteriorated.
--	---

Check at the end of the play season:

<p>SWINGS AND RIDES:</p> <ul style="list-style-type: none"> ✓ To prolong their life, remove swings and store inside when outside temperature is below 32°F/0°C. Below freezing, plastic parts may become more brittle. 	<p>SHOCK ABSORBING SURFACING:</p> <ul style="list-style-type: none"> ✓ Rake and check depth of loose fill protective surfacing materials to prevent compaction and maintain appropriate depth. Replace as necessary. (See Protective Surfacing, page 3)
--	---

If you dispose of your play set: Please disassemble and dispose of your unit so that it does not create any unreasonable hazards at the time it is discarded. Be sure to follow your local waste ordinances.

About Our Wood

KidKraft Premium Play Systems uses only premium playset lumber, ensuring the safest product for your children's use. Although we take great care in selecting the best quality lumber available, wood is still a product of nature and susceptible to weathering which can change the appearance of your set.

What causes weathering? Does it affect the strength of my Play System?

One of the main reasons for weathering is the effects of water (moisture); the moisture content of the wood at the surface is different than the interior of the wood. As the climate changes, moisture moves in or out of the wood, causing tension which can result in checking and or warping. You can expect the following due to weathering. These changes will not affect the strength of the product:

1. **Checking** is surface cracks in the wood along the grain. A post (4" x 4") will experience more checking than a board (1" x 4") because the surface and interior moisture content will vary more widely than in thinner wood.
2. **Warping** results from any distortion (twisting, cupping) from the original plane of the board and often happens from rapid wetting and drying of the wood.
3. **Fading** happens as a natural change in the wood color as it is exposed to sun-light and will turn a grey over time.

How can I reduce the amount of weathering to my Play System?

At the factory we have coated the wood with a water repellent or stain. This coating decreases the amount of water absorption during rain or snow thus decreasing the tension in the wood. Sunlight will break down the coating, so we recommend applying a water repellent or stain on a yearly basis (see your local stain and paint supplier for a recommended product).

Most weathering is just the normal result of nature and will not affect safe play and enjoyment for your child. However if you are concerned that a part has experienced a severe weathering problem please call our consumer relations department for further assistance.

Complete and mail registration card to receive important product notifications and assure prompt warranty service.

KidKraft Limited Warranty

MISSING OR DAMAGED PARTS:

KidKraft will replace any parts within 90 days from date of purchase found to be missing from or damaged in the original packaging. See Fig. 1

Fig. 1	<u>Product Age (All Parts)</u> 0-90 Days from date of purchase	<u>Consumer Pays</u> \$0 for Part + Free Shipping
--------	---	--

DEFECTS IN MATERIAL AND WORKMANSHIP:

KidKraft warrants that this product is free from defects in materials and workmanship for a period of one (1) year from the original date of purchase (dated sales receipt and/or product registration is required). This one (1) year warranty covers all parts including wood, hardware, and all accessories (Such as swings, rides, and slides). See Fig. 2

Fig. 2	<u>Product Age (All Parts)</u> 91 Days to 1 Year	<u>Consumer Pays</u> \$0 for Part + Free Shipping
--------	---	--

WOOD ROT, DECAY, AND INSECT DAMAGE:

All wood carries a five (5) year warranty against rot, decay, and insect damage (dated sales receipt and/or product registration is required). Refer to the schedule below for charges associated with replacement of wood parts under this **Limited Warranty**. See Fig. 3

Fig. 3	<u>Product Age (Wood Parts)</u> 0 Days to 1 Year After 1 Year to 5 Year Over 5 Years	<u>Consumer Pays</u> \$0 for Part + Free Shipping \$0 for Part + Shipping & Handling 100% for Part (if available) + Shipping & Handling
--------	---	--

This warranty applies to the original owner and registrant and is non-transferable. Regular maintenance is required to ensure the integrity of this product. Failure by the owner to maintain the product according to the maintenance requirements may void this warranty.

This Limited Warranty does NOT cover:

- Any inspection cost
- Labor and/or costs for replacement of any defective item(s), including but not limited to, professional installer costs
- Incidental or consequential damages, including but not limited to, as a result of set relocation, move and/or reinstall
- Cosmetic defects which do not affect performance or integrity of a part or the entire product
- Vandalism, improper use or installation, or acts of nature, including but not limited to, high winds, fire, and flood
- Minor twisting, warping, checking, or any natural occurring properties of wood that do not affect performance or integrity.
- Any KidKraft product purchased, including but not limited to, a non-approved retailer, auction houses, second-hand, and as-is clearance items.

KidKraft products have been designed for safety and quality. Modifications made to the original product may damage the structural integrity of the unit leading to failure and possible injury. KidKraft cannot assume any responsibility for the modified products. Furthermore, modifications void all warranties.

This product is warranted for **RESIDENTIAL USE ONLY**. Under no circumstance should a KidKraft product be used in public settings such as schools, churches, playgrounds, parks, home and professional day cares and the like. Such use may lead to product failure and potential injury. Public use will void this warranty. KidKraft disclaims all other representations and warranties of any kind, express or implied.


Keys to Assembly Success

Tools Required

<ul style="list-style-type: none"> • Tape Measure • Carpenters Level • Carpenters Square • Claw Hammer • Standard or Cordless Drill • Rubber Mallet 	<ul style="list-style-type: none"> • #1 Phillips, #2 Robertson and Screwdriver • Ratchet with extension (1/2" & 7/16" sockets) 	<ul style="list-style-type: none"> • Open End Wrench (1/2" & 7/16") • Adjustable Wrench • 1/8" & 3/16" Drill Bits 	<ul style="list-style-type: none"> • 3/16" Hex Key • 8' Step Ladder • Safety Glasses • Adult Helpers • Pencil
---	--	--	--


Part Identification Key

On each page, you will find the parts and quantities required to complete the assembly step illustrated on that page. Here is a sample.

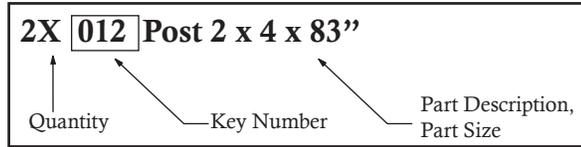


Symbols

 Throughout these instructions symbols are provided as important reminders for proper and safe assembly.

<p>This identifies information that requires special attention. Improper assembly could lead to an unsafe or dangerous condition.</p> 	<p>Check that set or assembly is properly level before proceeding.</p> <p>Use Level</p> 
<p>Use Help</p>  <p>Use Help</p>  <p>Where this is shown, 2 or 3 people are required to safely complete the step. To avoid injury or damage to the assembly make sure to get help!</p>	<p>Pre-drill 1/8" & 3/16" Bit</p>  <p>Pre-drill a pilot hole before fastening screw or lag to prevent splitting of wood.</p>
<p>Measure Distance</p>  <p>Check that assembly is square before tightening bolts.</p> <p>Use a measuring tape to assure proper location.</p> <p>Square Assembly</p> 	<p>Tighten Bolts</p>  <p>This indicates time to tighten bolts, but not too tight! Do not crush the wood. This may create splinters and cause structural damage.</p>

CAUTION – Protrusion Hazard

Once the assembly is tightened, watch for exposed threads. If a thread protrudes from the T-Nut, remove the bolt and add washers to eliminate this condition. Extra washers have been provided for this purpose.

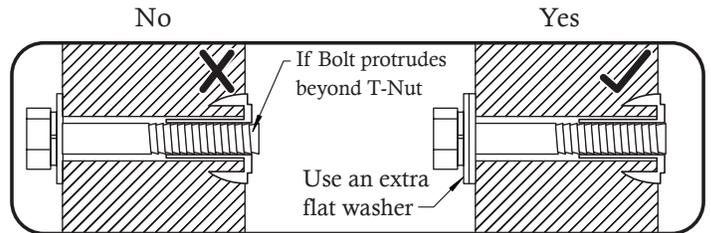


Proper Hardware Assembly

Lag screws require drilling pilot holes to avoid splitting wood. Only a flat washer is required. For ease of installation liquid soap can be used on all lag-type screws.

For bolts, tap T-Nut into hole with hammer. Insert the hex bolt through lock washer first then flat washer then hole. Because the assemblies need to be squared do not completely tighten until instructed. Pay close attention to diameter of the bolts. 5/16" is slightly larger than 1/4".

Note: Wafer head bolts with blue lock tight or a bolt with a Ny-Lok nut do NOT require a lock washer.

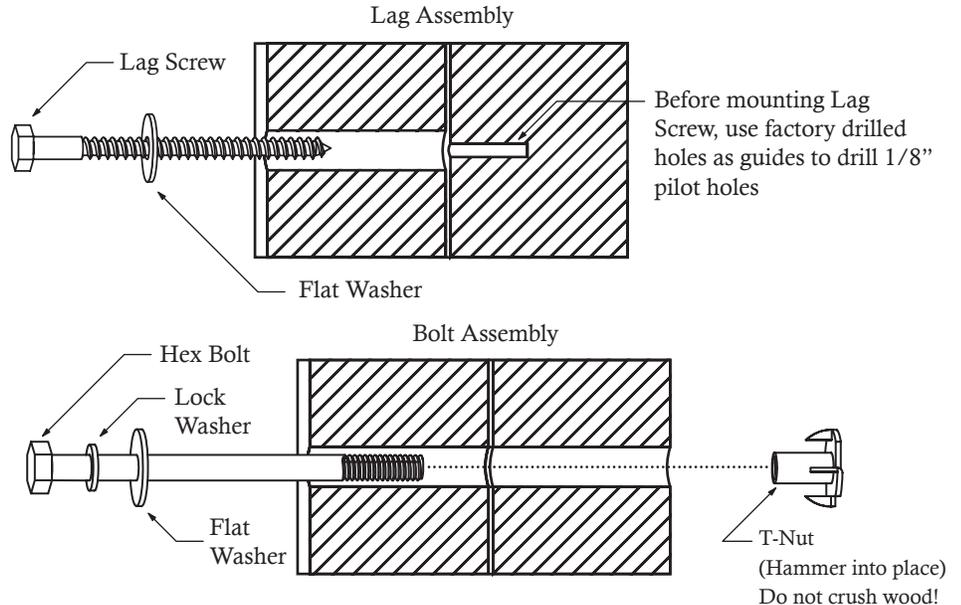

Part Identification (Reduced Size)

1x - [10070] - 31.8 x 76.2 x 1564.2 mm - 37110070



2x - [10071] - 31.8 x 76.2 x 1564.2 mm - 37110071



 
4x - [10040] - 31.8 x 31.8 x 750 mm - 37110040



6x - [10042] - 15.9 x 34.9 x 1137.2 mm - 37110042




6x - [10043] - 31.8 x 76.2 x 431.8 mm - 37110043



6x - [10044] - 31.8 x 76.2 x 139.7 mm - 37110044



 4x - [10045] - 25.4 x 31.8 x 183.7 mm - 37110045



10x - [10046] - 31.8 x 76.2 x 431.8 mm - 37110046



 
1x - [10047] - 31.8 x 85.7 x 406.4 mm - 37110047



6x - [10048] - 31.8 x 49 x 406.4 mm - 37110048



5x - [10049] - 31.8 x 85.7 x 406.4 mm - 37110049



Part Identification (Reduced Size)

6x - [10050] - 939.8 x 76.2 x 31.8 mm - 37110050



1 1/4" X 3" X 37"

4x - [10051] - 31.8 x 76.2 x 263 mm - 37110051



1 1/4" X 3" X 10 3/8"

2x - [10053] - 31.8 x 76.2 x 976.5 mm - 37110053



1 1/4" X 3" X 38 7/16"

2x - [10054] - 31.8 x 76.2 x 976.5 mm - 37110054



 
1 1/4" X 3" X 38 7/16"

4x - [10055] - 31.8 x 63.5 x 800 mm - 37110055




1 1/4" X 2 1/2" X 31 1/2"

4x - [10056] - 31.8 x 76.2 x 654.1 mm - 37110056




1 1/4" X 3" X 25 3/4"

 4x - [10057] - 31.8 x 76.2 x 629.3 mm - 37110057




1 1/4" X 3" X 24 3/4"

 24x - [10058] - 31.8 x 31.8 x 699.1 mm - 37110058



1 1/4" X 1 1/4" X 27 1/2"

 4x - [10059] - 15.9 x 88.9 x 1026.8 mm - 37110059



5/8" X 3 1/2" X 40 7/16"

Part Identification (Reduced Size)

12x - [10061] - 31.8 x 76.2 x 152.4 mm - 37110061



 
1 1/4" X 3" X 6"

6x - [10062] - 15.9 x 88.9 x 1118.8 mm - 37110062




5/8" X 3 1/2" X 44 1/16"

1x - [10063] - 15.9 x 76.2 x 865.1 mm - 37110063



5/8" X 3" X 34 1/16"

 4x - [10064] - 23.8 x 82.6 x 411 mm - 37110064




15/16" X 3 1/4" X 16 3/16"

2x - [10065] - 15.9 x 133.4 x 450 mm - 37110065




5/8" X 5 1/4" X 17 11/16"

 5x - [10066] - 15.9 x 133.4 x 450 mm - 37110066



5/8" X 5 1/4" X 17 11/16"

 1x - [10067] - 15.9 x 82.6 x 450 mm - 37110067



5/8" X 3 1/4" X 17 11/16"

 
1x - [10068] - 85 x 76.2 x 406.4 mm - 37110068



3" X 3 3/8" X 16"

1x - [10069] - 76.2 x 133.4 x 1854.2 mm - 37110069

3" X 5 1/4" X 73"



Part Identification (Reduced Size)

1x - [9054] - 34.9 x 63.5 x 1468.8mm - 3719054

1 3/8" x 2 1/2" x 57 53/64"



1x - [9055] - 34.9 x 63.5 x 1468.8mm - 3719055

1 3/8" x 2 1/2" x 57 53/64"

 


1x - [9058] - 34.9 x 63.5 x 1468.8mm - 3719058

1 3/8" x 2 1/2" x 57 53/64"




2x - [2613] - 50.8 x 76.2 x 2201.9mm - 3712613




2" x 3" x 86 11/16"

 1x - [2615] - 76.2 x 76.2 x 1294.3mm - 3712615



3" x 3" x 50 15/16"

 
1x - [2616] - 23.8 x 82.6 x 1181.1mm - 3712616




15/16" x 3 1/4" x 46 1/2"

Part Identification (Reduced Part Size)

1 1/4" x 23 3/8" x 71"
1x - 9361 - 31.8 x 594 x 1803 mm - 37719361

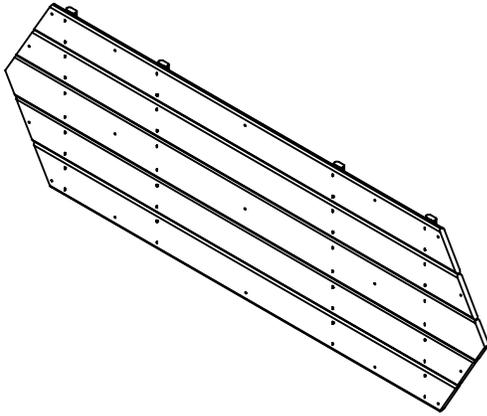

1 1/4" x 19" x 57 3/8"
2x - 9362 - 31.8 x 482 x 1458 mm - 37719362

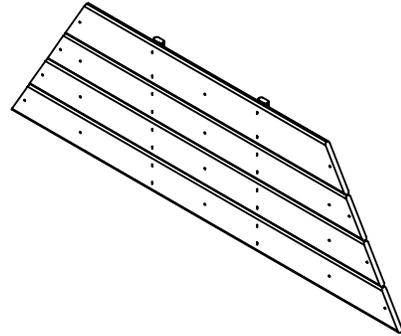


Part Identification (Reduced Part Size)


1x - **9363** - SW Wall
2 9/16" x 38 1/4" x 92"
65.7 x 971.2 x 2336.8mm - 37719363

**If you need to order parts,
please order below part #**


37719355 - SW Wall Left - 1pc
37719356 - SW Wall Right - 1 pc
9331660 - Wall Hinge - 1pc
S39 - 52013903 - Wood Screw #5 x 3/4" - 1pc

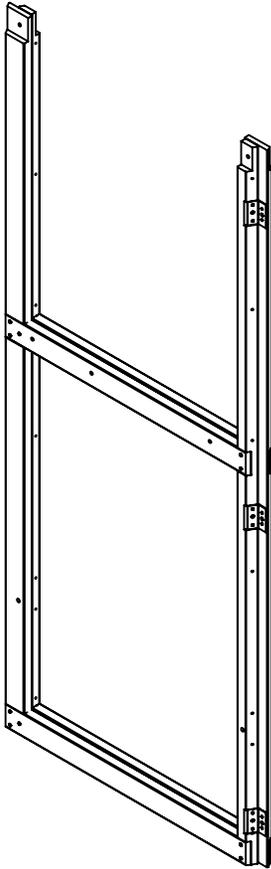

S39 - 52013903

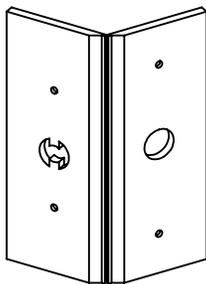

9331660


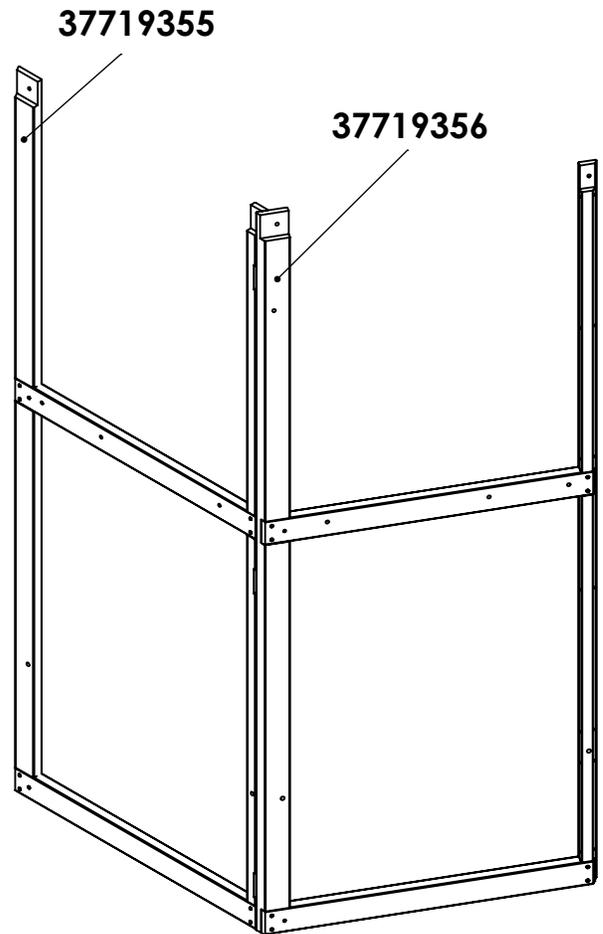


Part Identification (Reduced Part Size)


1x - **9364** - Rock Wall
2 9/16" x 38 1/4" x 92"
65.7 x 971.2 x 2336.8mm - 37719364

**If you need to order parts,
please order below part #**

37719357 - Rock Wall Left - 1pc
37719358 - Rock Wall Right - 1 pc
9331660 - Wall Hinge - 1pc
S39 - 52013903 - Wood Screw #5 x 3/4" - 1pc

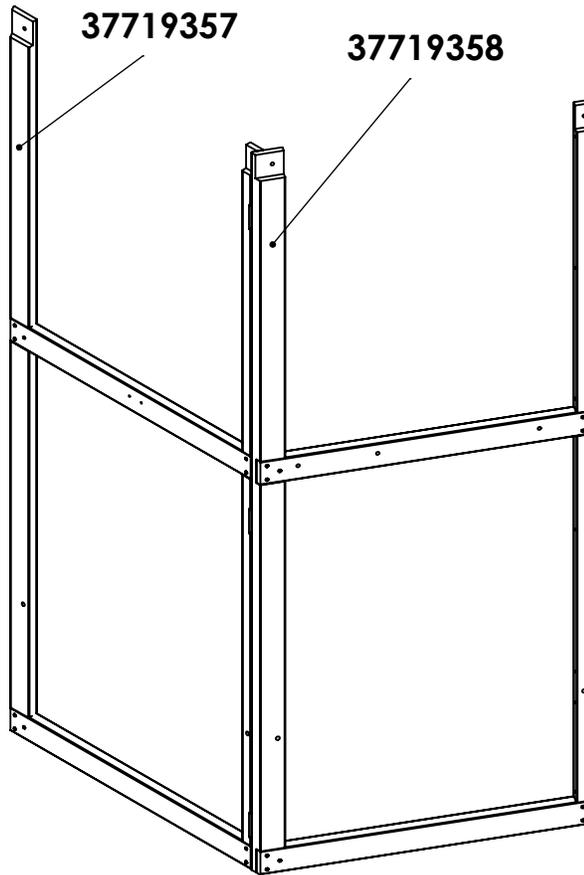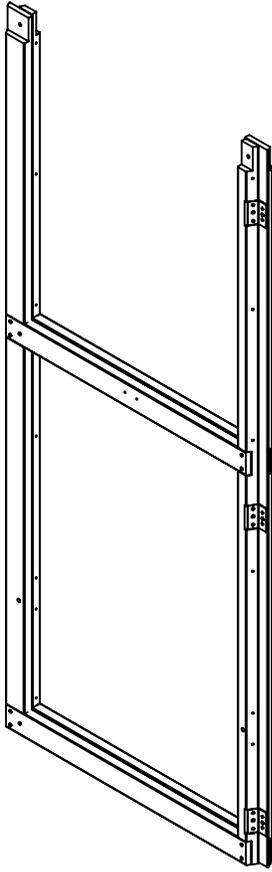


S39 - 52013903

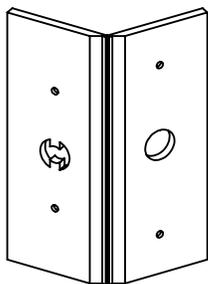

9331660


Part Identification (Reduced Part Size)

1x - **9365** - Slide Wall
2 9/16" x 38 1/4" x 92"
65.7 x 971.2 x 2336.8mm - 37719365

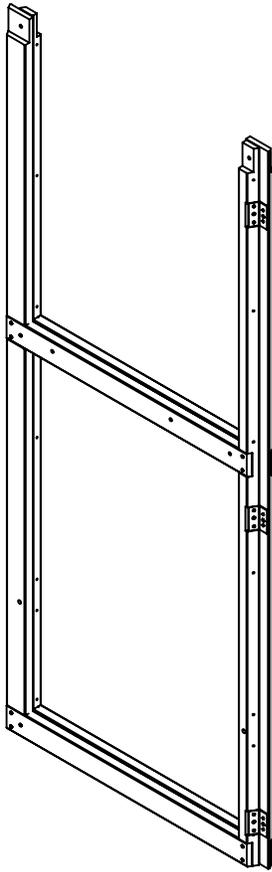


**If you need to order parts,
please order below part #**

- 37719359 - Slide Wall Left - 1pc
- 37719360 - Slide Wall Right - 1 pc
- 9331660 - Wall Hinge - 1pc
- S39 - 52013903 - Wood Screw #5 x 3/4" - 1pc

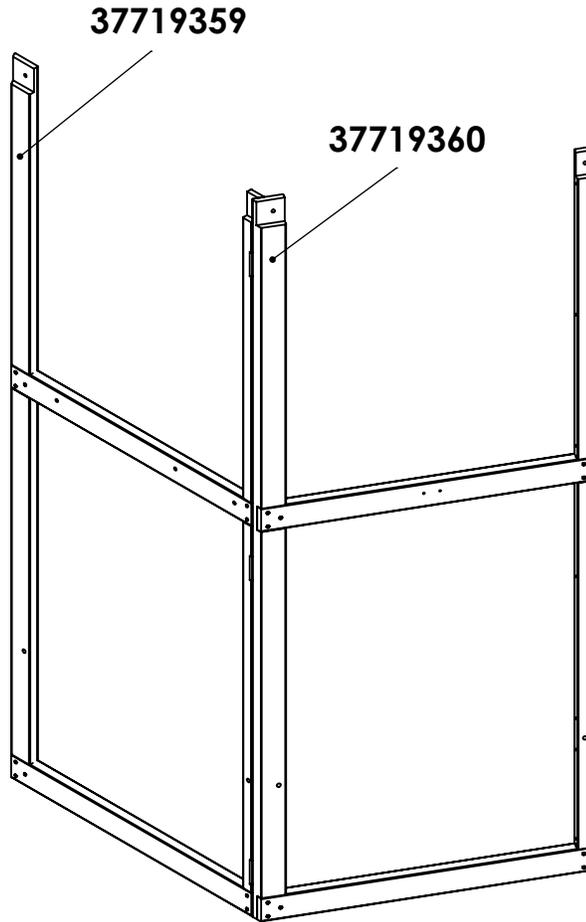

S39 - 52013903

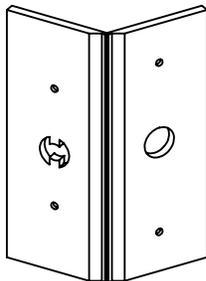


9331660


Part Identification (Reduced Part Size)



 1x - (9320374)




7x - (9290318)

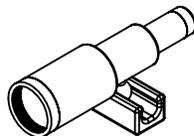


1x - (3320161)

 1x - 3320267 (5pk)




4x - 9200106

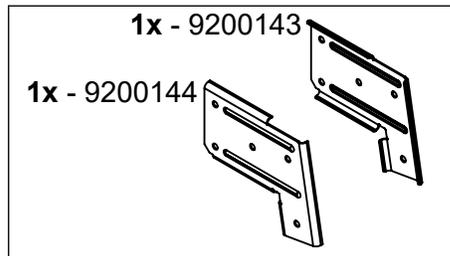

1x - 9200143

1x - 9200144


1x - (3200143)

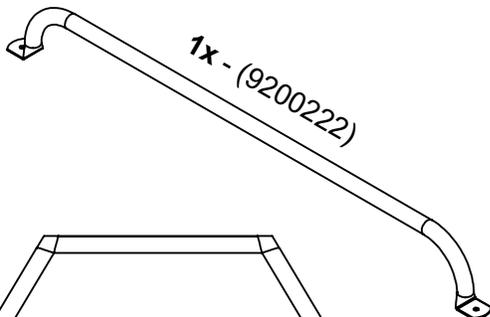


1x - (9200222)




2x - (9200149)

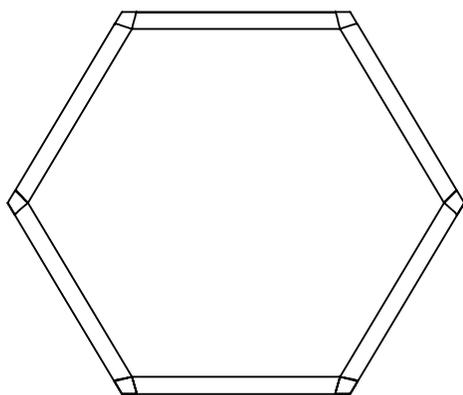


1x - (3320122)

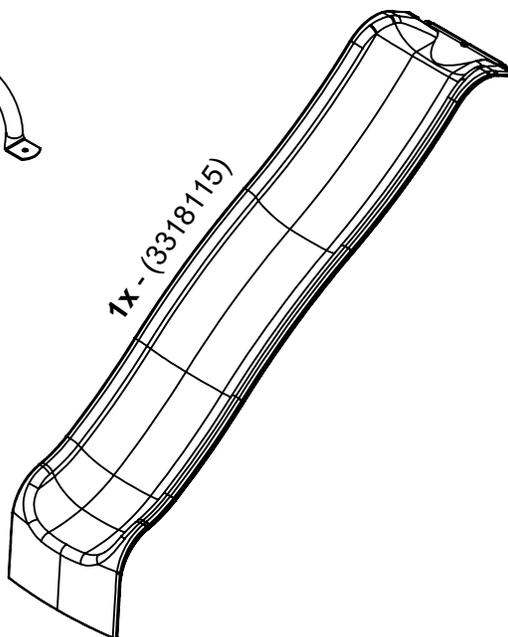


1x - (3318115)

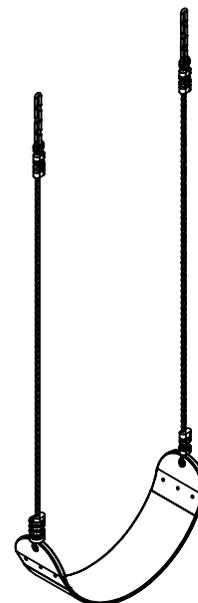

2x - (3724943)

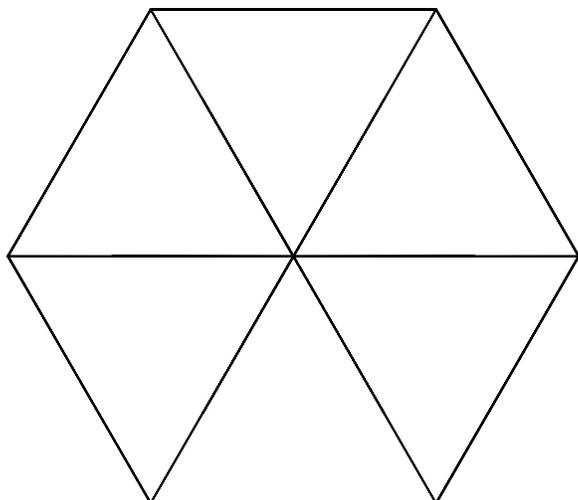

1x - (3322809)

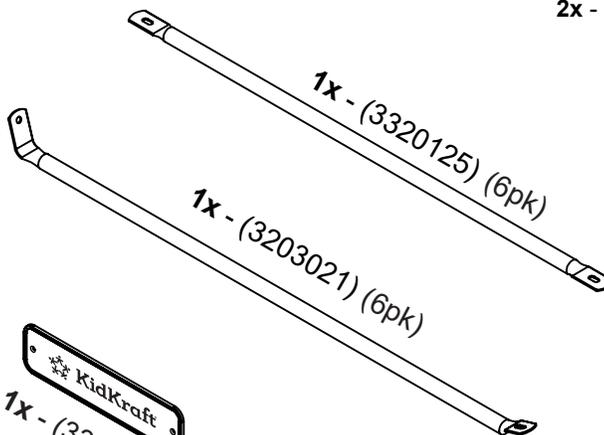

1x - (3320125) (6pk)

 
1x - (3203021) (6pk)




1x - (3320355)

Hardware Identification (Actual Size)

5x **(FW0)** - 3/16" (4.8mm)
- 51103100




110x **(FW2)** - 5/16" (7.9mm)
- 51103300

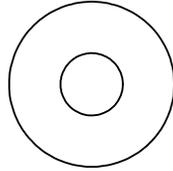


5x **(LW1)** - 1/4" (6.4mm)
- 51303200



 72x **(LW2)** - 5/16" (7.9mm)
- 51303300




2x **(FW1)** - 1/4" (6.4mm)
- 51103200

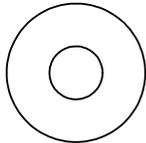


24x **(FW3)** - #8
- 51003500




5x **(BN1)** - 1/4" (6.4mm)
- 54803200

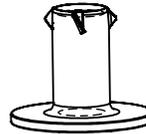


63x **(TN2)** - 5/16" (7.9mm)
- 54503300

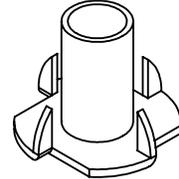

 30x **(LN2)** - 5/16" (7.9mm)
- 54303300



2x **(WL3)** - 1/4 x 1-3/8" (6.4 x 34.9mm)
- 52613216

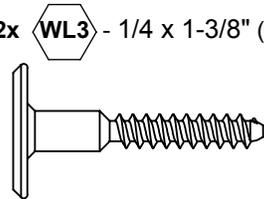

14x **(S20)** - #8 x 1-3/8" (34.9mm) - 52043516



120x **(S11)** - #8 x 2" (50.8mm) - 52043520



161x **(S2)** - #8 x 1-1/2" (38.1mm) - 52043512



90x **(S3)** - #8 x 2-1/2" (63.5mm) - 52043522



 
4x **(S15)** - #8 x 1-3/4" (44.5mm) - 52043513




4x **(S4)** - #8 x 3" (76.2mm) - 52043530




4x **(S13)** - #6 x 5/8" (15.9mm)
- 52413908



 
26x **(S37)** - #7 x 5/8" (15.9mm)
- 52433009



 
5x **(S10)** - #8 x 1" (25.4mm)
- 52433510



 
7x **(S6)** - #12 x 1" (25.4mm)
- 52433610



 
29x **(S7)** - #12 x 2" (50.8mm) - 52433620



 12x **(S24)** - #10 x 4" (101.6mm) - 52043940




 5x **(PB2)** - 1/4 x 1-1/4" (6.4 x 31.8mm)
- (53433212)




Hardware Identification (Actual Size)


31x **WB2** - 5/16 x 1-3/8" (7.9 x 34.9mm) - 53613316

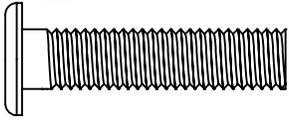

 
4x **WB9** - 5/16 x 2-1/8" (7.9 x 53.9mm) - 53613324




 
8x **WB10** - 5/16 x 2-5/8" (7.9 x 66.7mm) - 53613329



 8x **WB7** - 5/16 x 3" (7.9 x 76.2mm) - 53613330





  12x **G8** - 5/16 x 2" (7.9 x 50.8mm) - 53703320




3x **G4** - 5/16 x 4" (7.9 x 101.6mm) - 53703340

  17x **G21** - 5/16 x 3-3/4" (7.9 x 95.3mm) - 53703333



10x **G7** - 5/16 x 5-1/2" (7.9 x 139.7mm) - 53703352

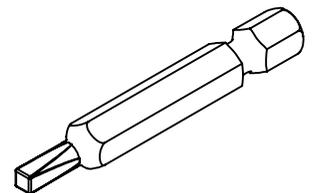

1x **D4** - #2 x 2" (50.8mm)
- 9200014

 
Step 1: Inventory Parts - Read This Before Starting Assembly



Inventory should be completed before starting installation. KidKraft will not cover costs of any additional installation trip due to missing or damaged pieces.

A. This is the time for you to inventory all your hardware, wood and accessories, referencing the parts identification sheets. This will assist you with your assembly.

- The wood pieces will have the key number stamped on the ends of the boards. Organize the wood pieces by step, as per the key numbering system below.



B. Read the assembly manual completely, paying special attention to ANSI warnings; notes; and safety/maintenance information on pages 1 - 8.

**If there are missing or damaged pieces,
please contact the KidKraft Consumer Engagement team
before going back to the retailer.**

Order Replacement Parts 24/7

You can order replacement parts for this product 24 hours a day / 7 days a week:

Outdoor Swingsets and Playhouse Parts Ordering



<https://parts.kidkraft.com/partsorderemail>

If you have assembly or product questions, please refer to the front cover for direct contact information for our Consumer Engagement team OR you can also use this QR code with your smartphone for common questions and contact information.



KidKraft Help Center **<https://kidkraft.zendesk.com/hc/en-us/>**



Step 2

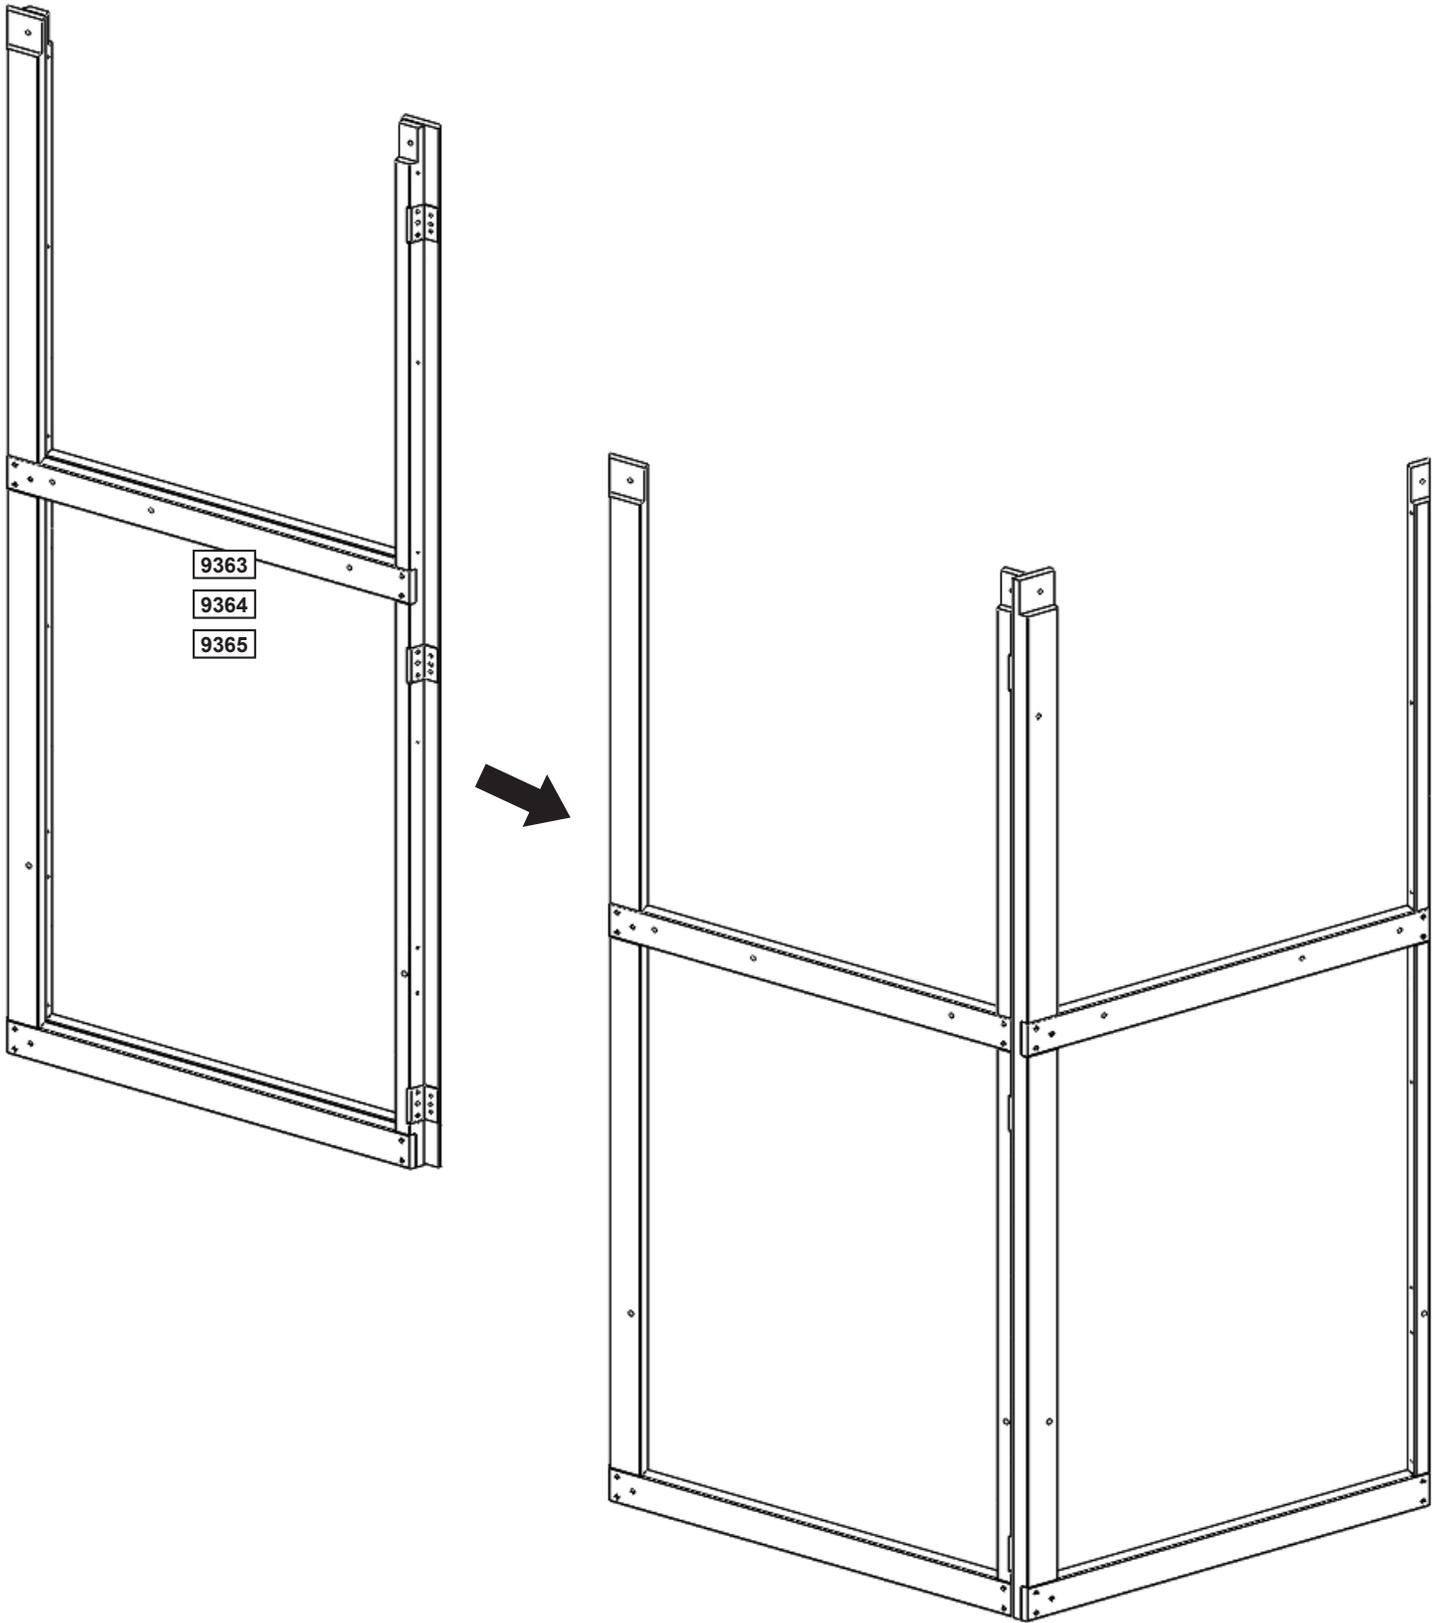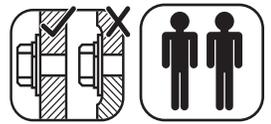


Wood Parts

- 1 x 9363 65.7 x 971.2 x 2336.8mm (2-9/16 x 38-1/4 x 92")
- 1 x 9364 65.7 x 971.2 x 2336.8mm (2-9/16 x 38-1/4 x 92")
- 1 x 9365 65.7 x 971.2 x 2336.8mm (2-9/16 x 38-1/4 x 92")

Step 3

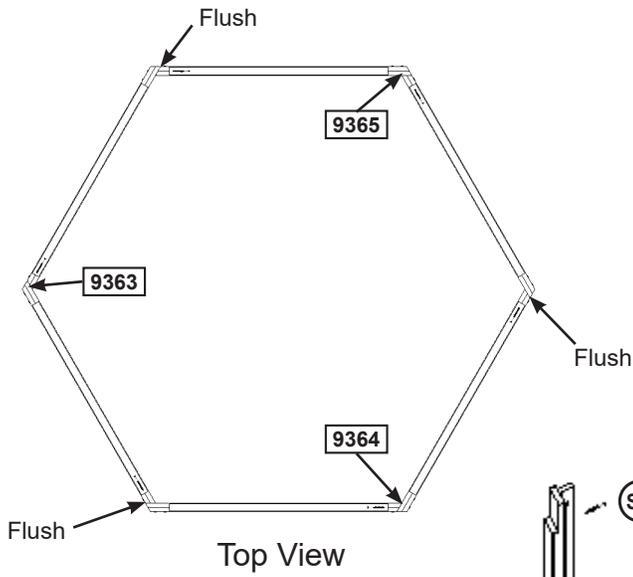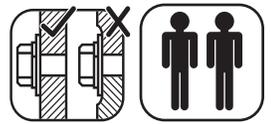

Top View

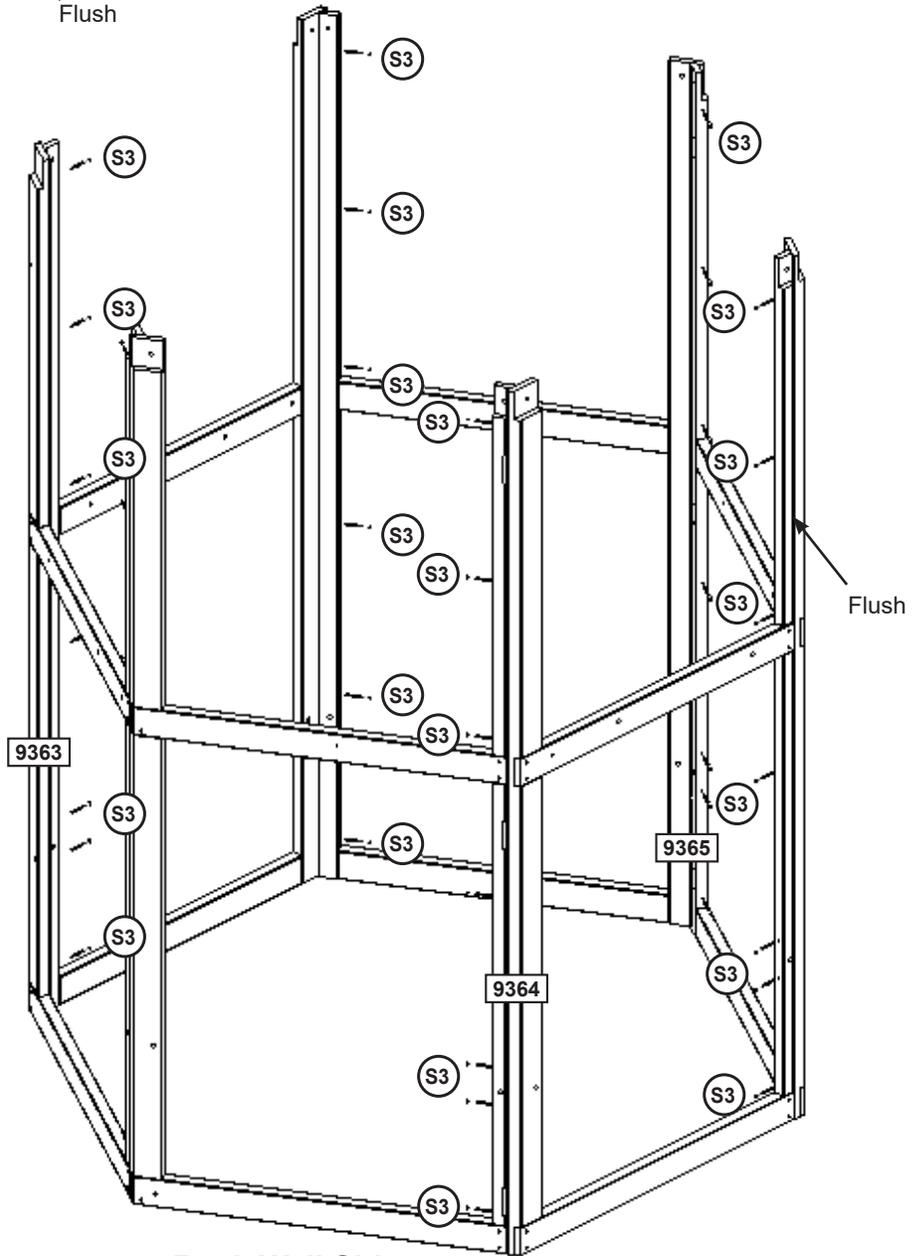

Rock Wall Side
(BACK)



Hardware

42 x (S3) #8 x 63.5 mm (#8 x 2-1/2")

Step 4



Note: Install T-Nut first!

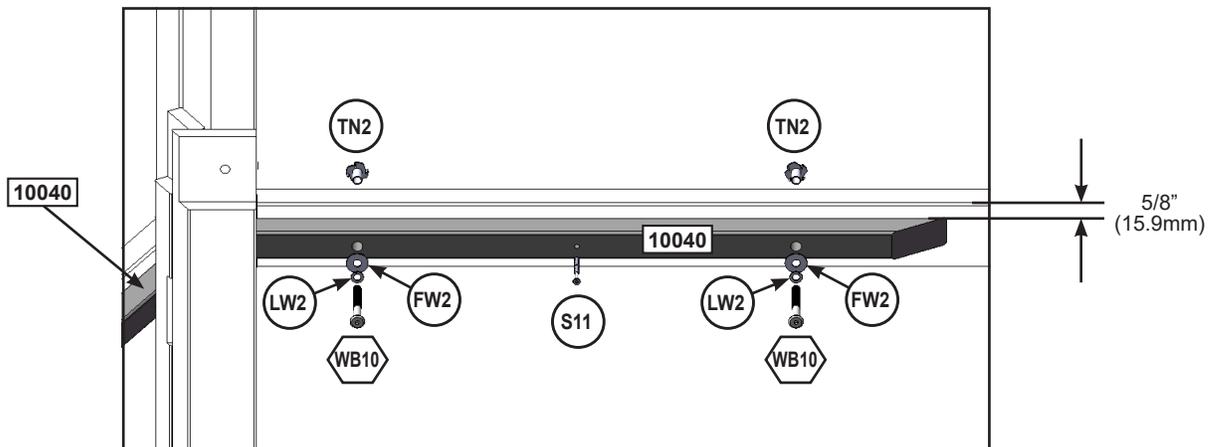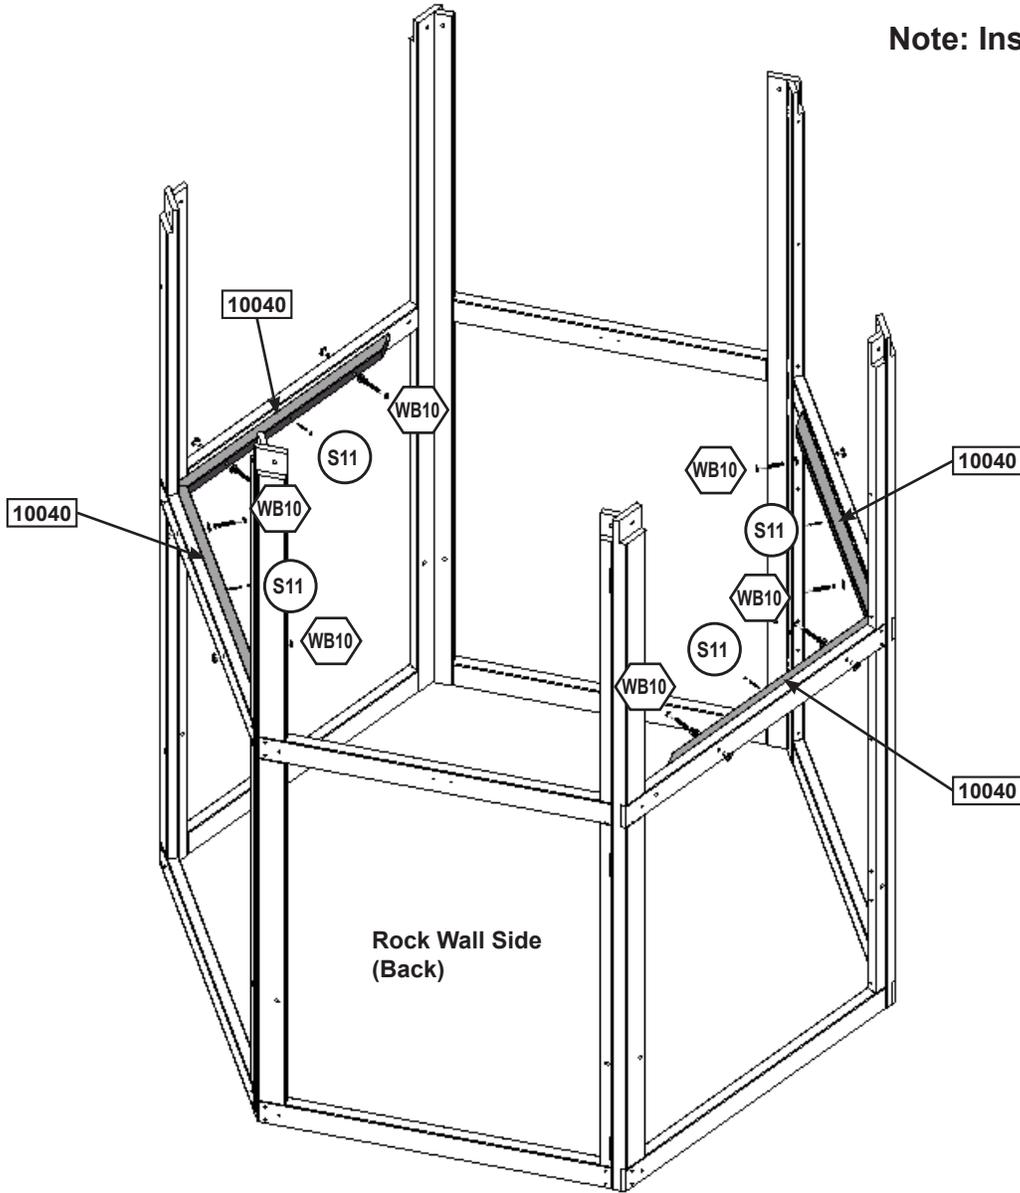

Wood Parts



4 x **10040** 31.8 x 31.8 x 750 mm (1-1/4 x 1-1/4 x 29")

Hardware



8 x **WB10** 7.9mm x 66.6 mm (5/16 x 2-5/8") (FW2, LW2, TN2)

4 x **S11** #8 x 50.8 mm (#8 x 2")

Step 5

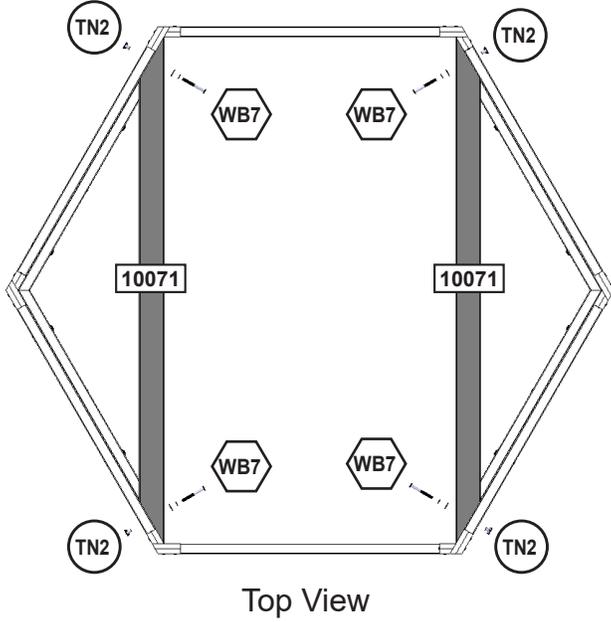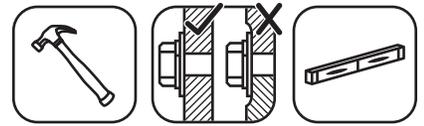

Note: Install T-Nut first!

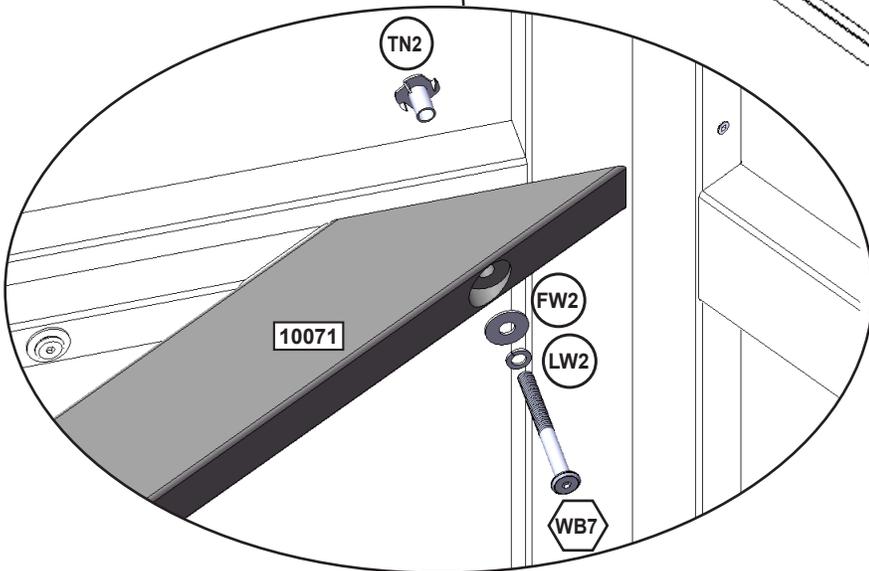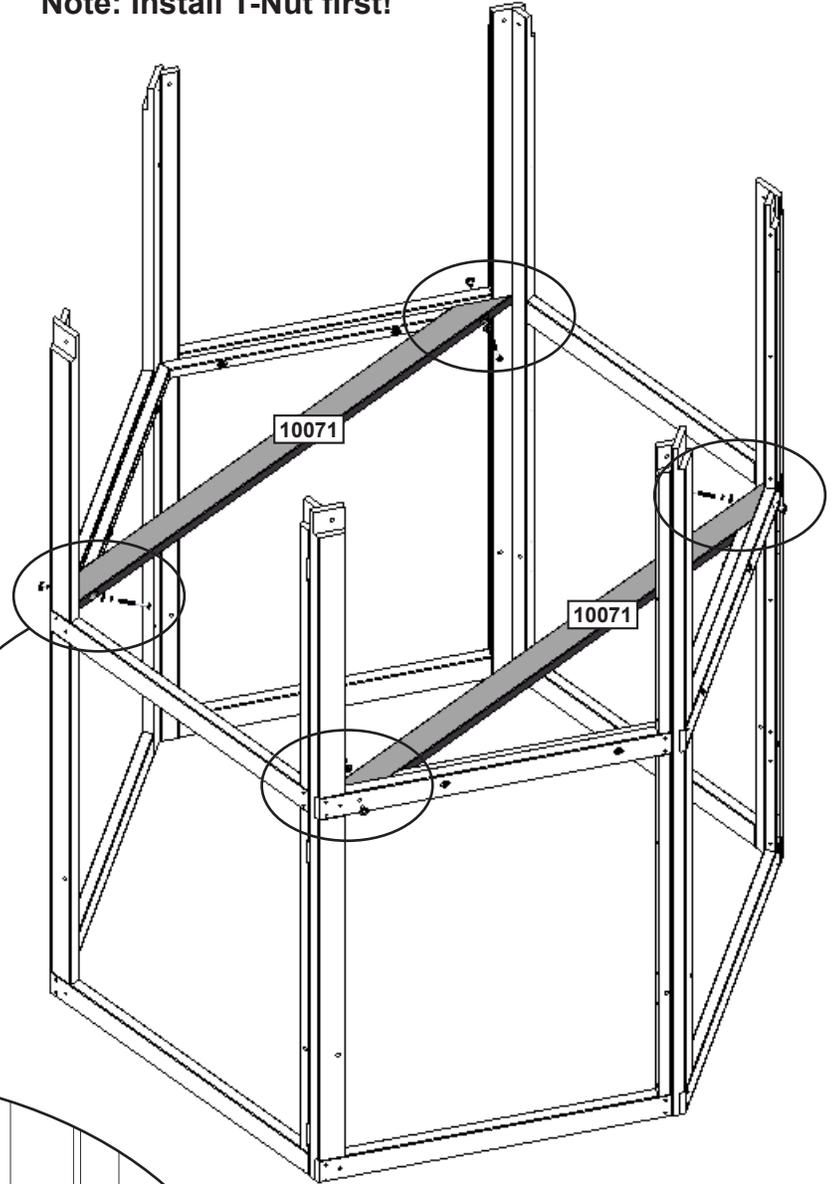




Wood Parts

2 x **10071** 31.8 x 76.2 x 1564.2 mm (1-1/4 x 3 x 61-9/16")

Hardware

4 x **WB7** 7.9mm x 76.2mm (5/16 x 3") (FW2, LW2, TN2)

Step 6

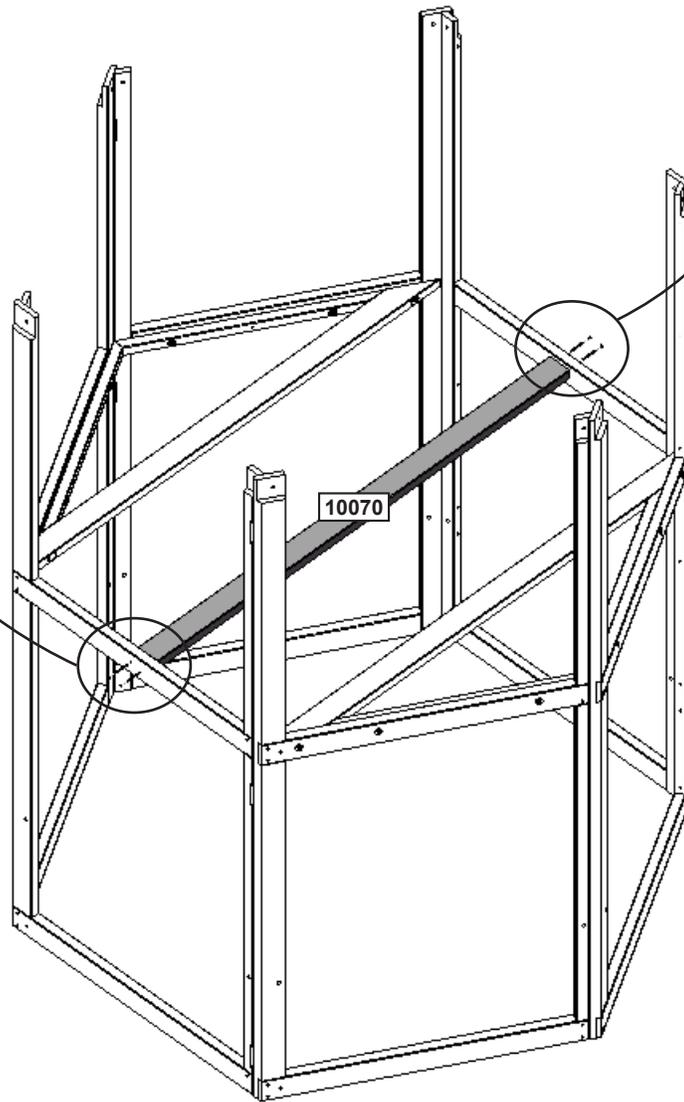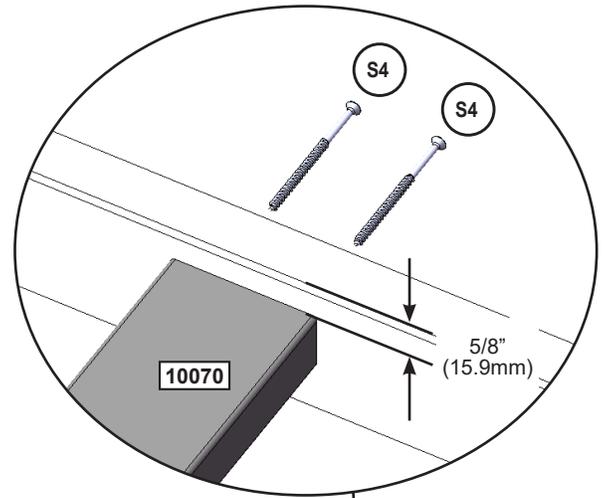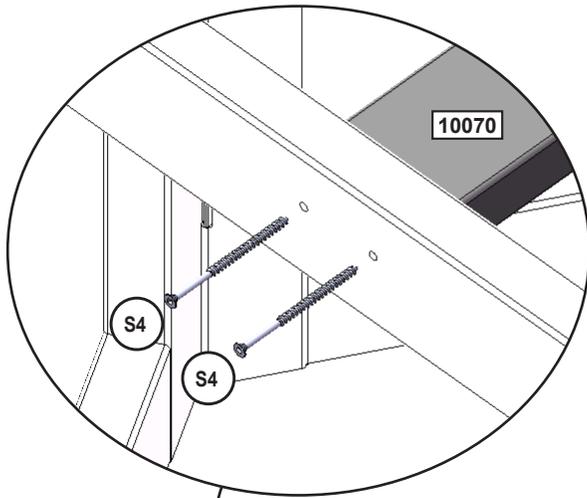



Wood Parts

1 x **10070** 31.8 x 76.2 x 1564.2 mm (1-1/4 x 3 x 61-9/16")

Hardware

4 x **S4** #8 x 76.2mm (#8 x 3")

Step 7

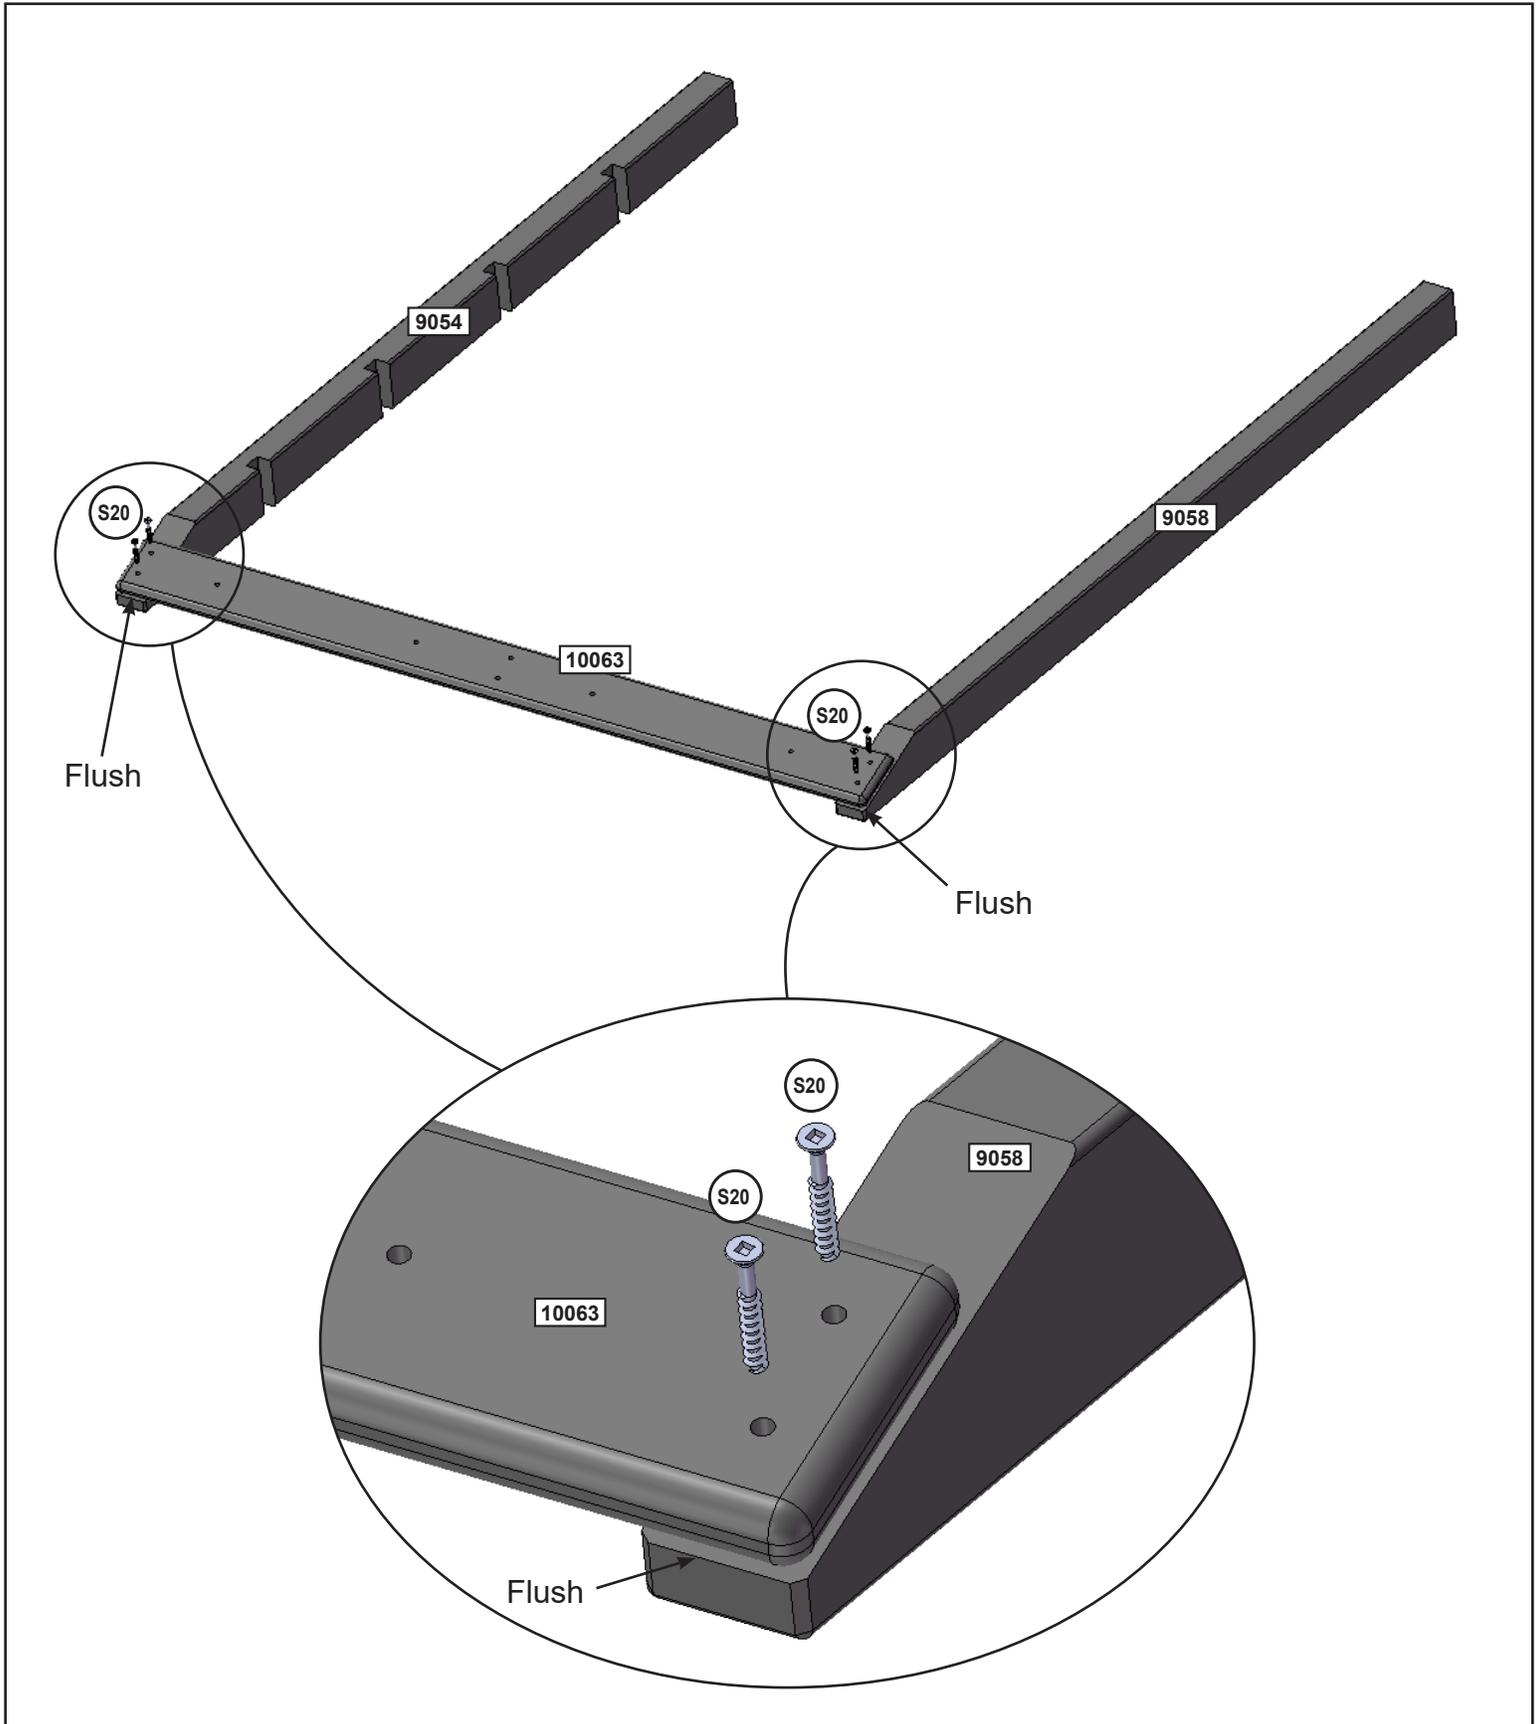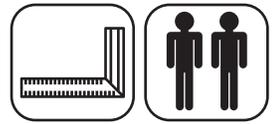




Wood Parts

- 1 x **9054** 34.9 x 63.5 x 1468.8 mm (1-3/8 x 2-1/2 x 57-53/64")
- 1 x **9058** 34.9 x 63.5 x 1468.8 mm (1-3/8 x 2-1/2 x 57-53/64")
- 1 x **10063** 31.8 x 939.8 x 2336.8 mm (5/8 x 3 x 34-1/16")

Hardware

- 4 x **S20** #8 x 35mm (#8 x 1-3/8")

Step 8

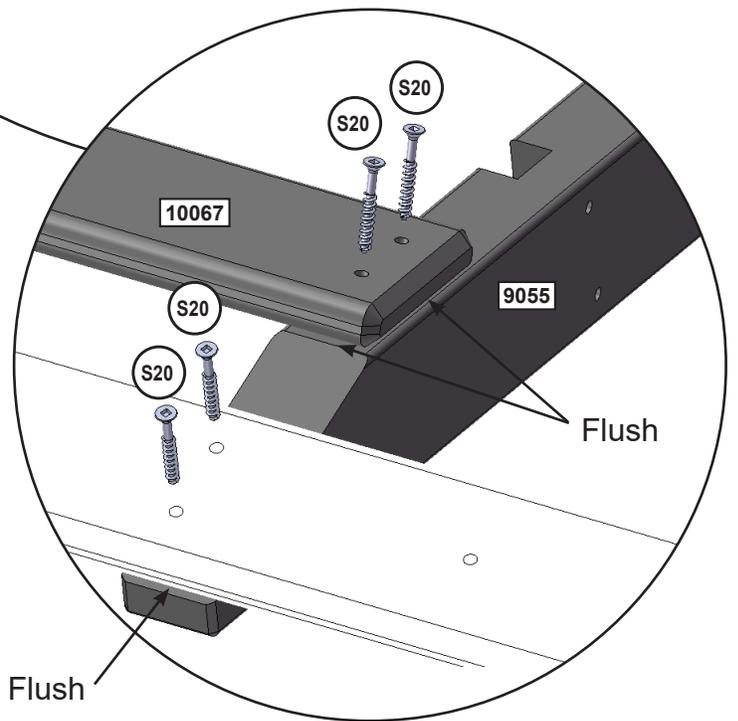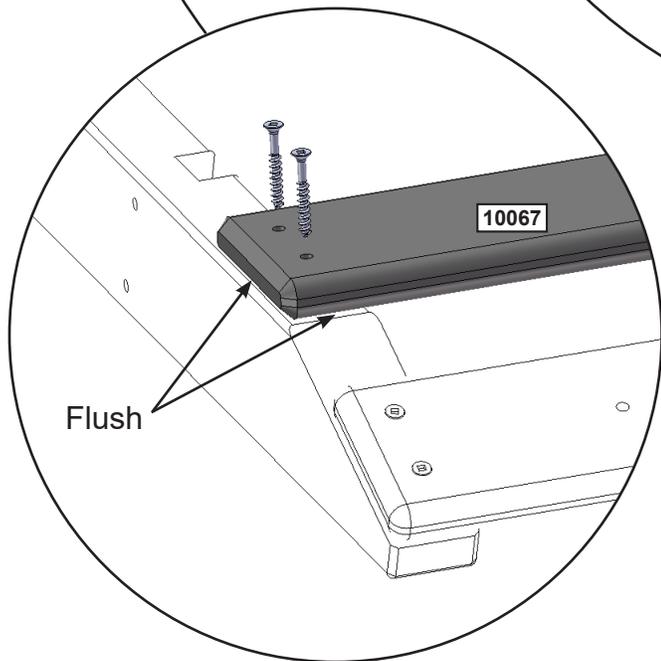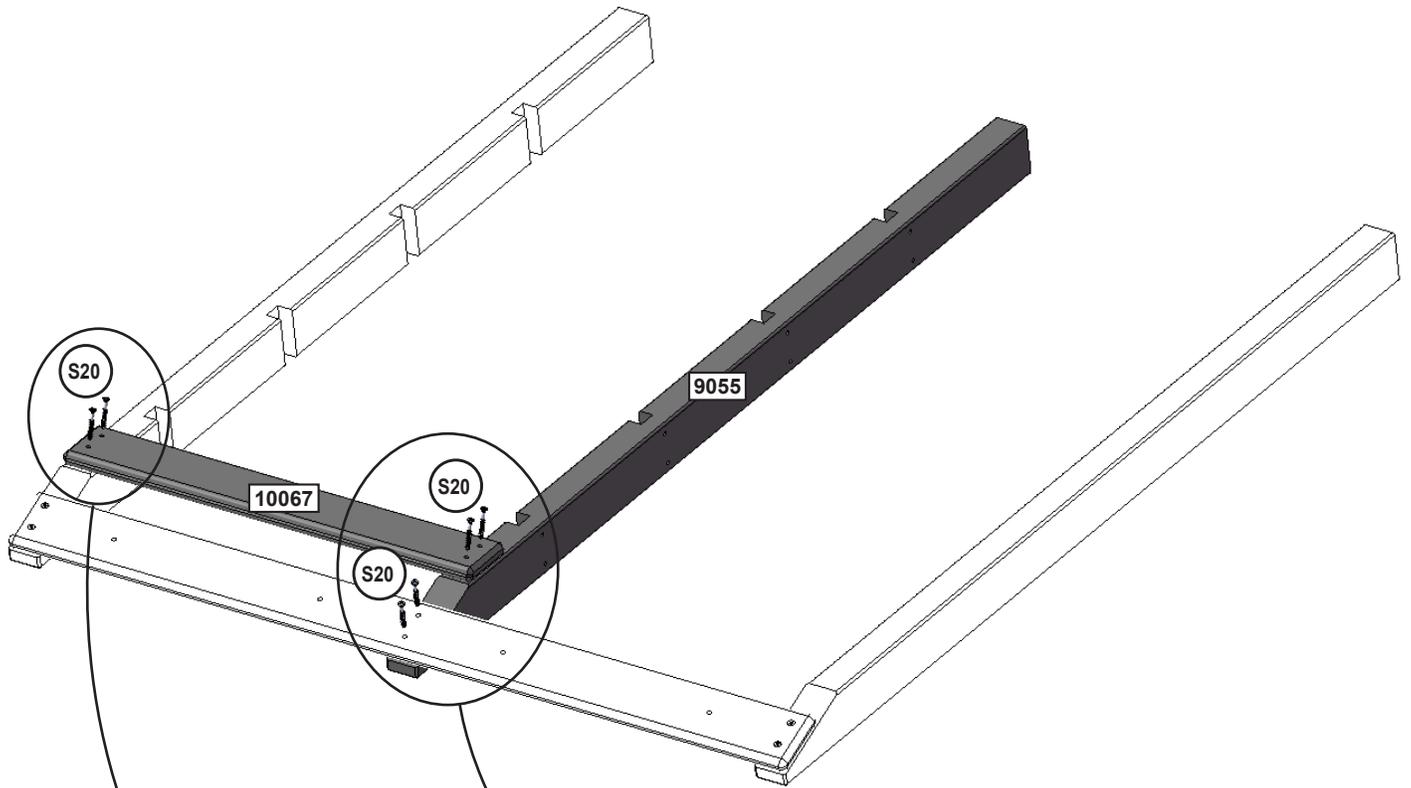


Wood Parts

- 1 x **9055** 34.9 x 63.5 x 1468.8 mm (1-3/8 x 2-1/2 x 57-53/64")
- 1 x **10067** 15.9 x 82.6 x 450mm (5/8 x 3-1/4 x 17-11/16")

Hardware

- 6 x **S20** #8 x 35mm (#8 x 1-3/8")

Step 9

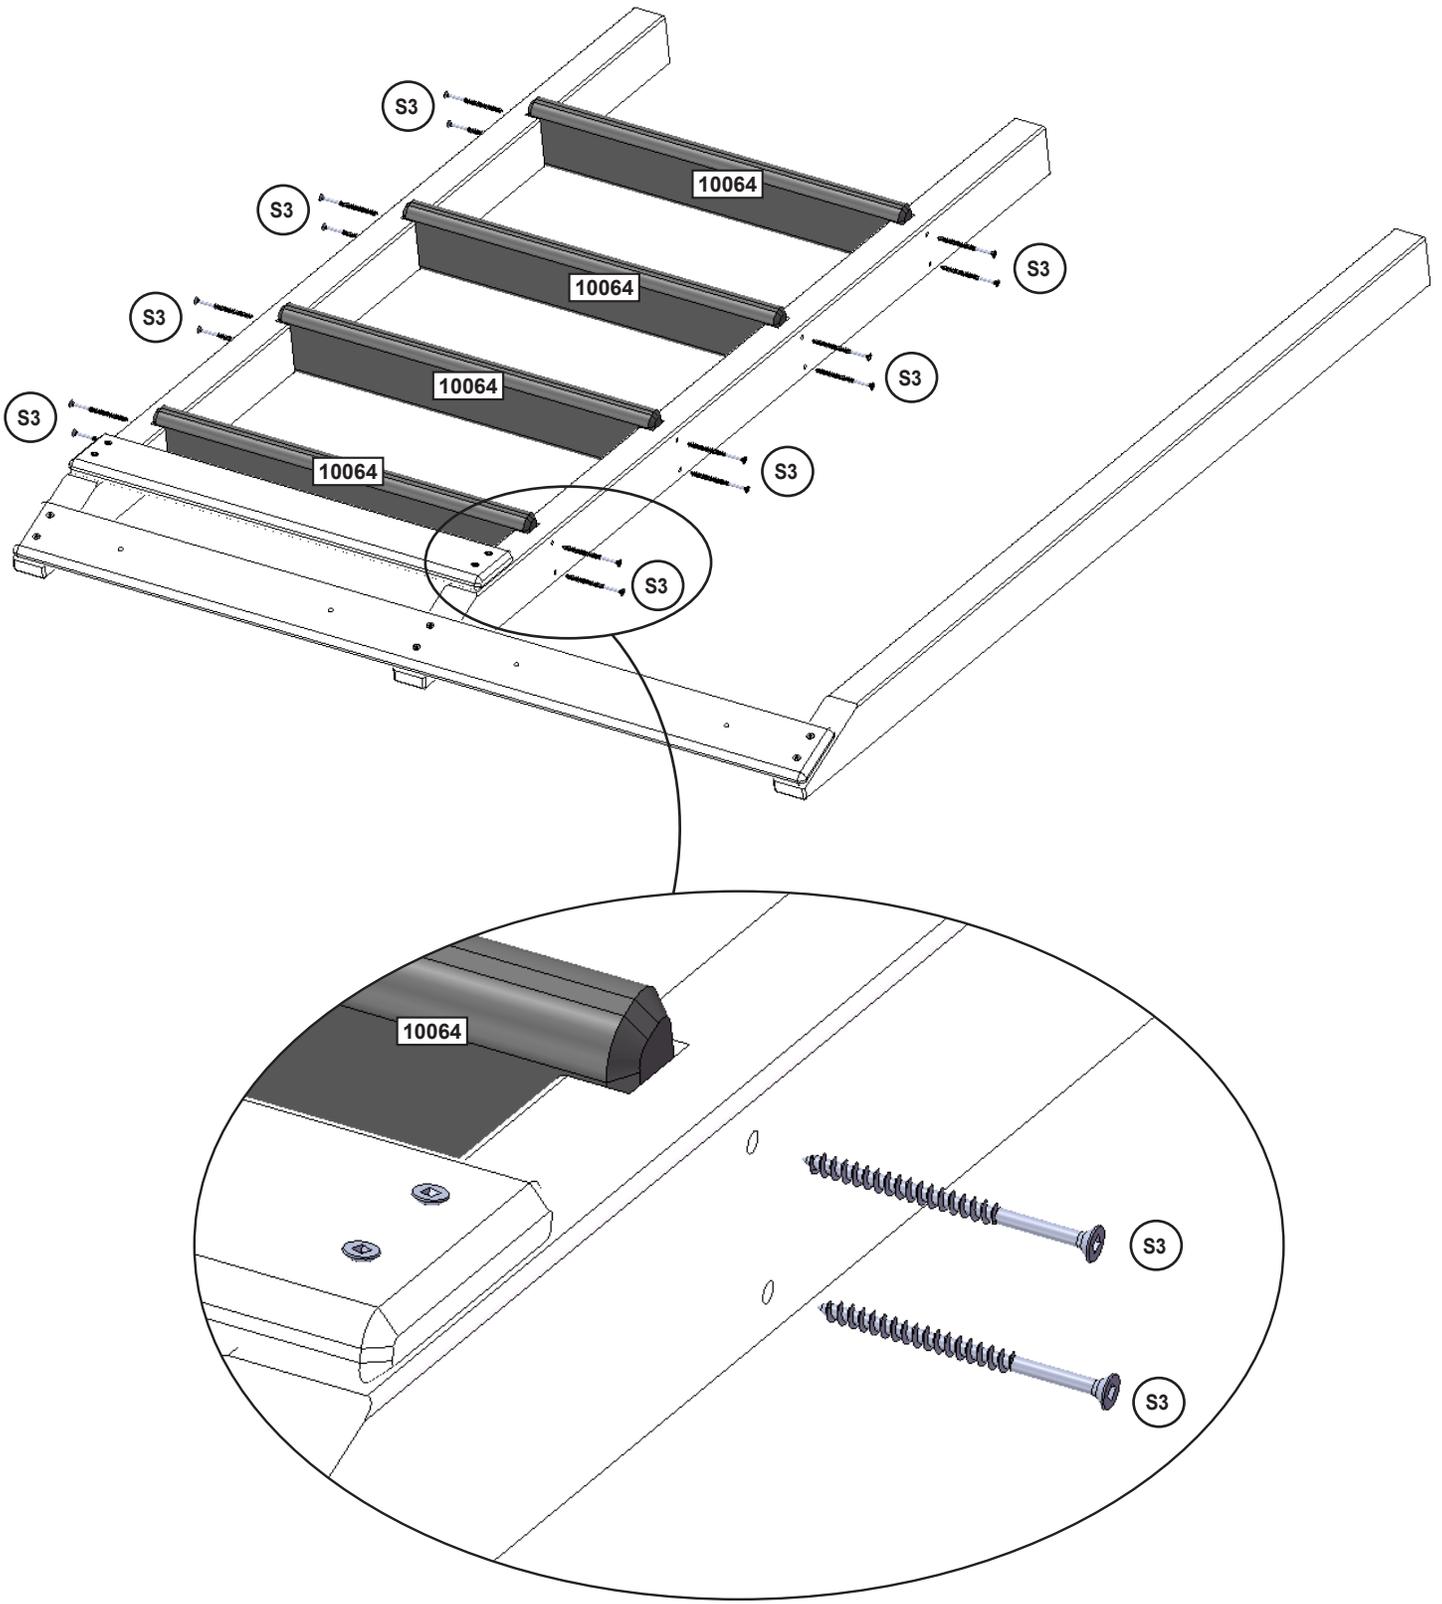

Wood Parts

4 x **10064** 23.8 x 82.6 x 417.2 mm (15/16 x 3-1/4 x 16-7/16")

Hardware




16 x **S3** #8 x 64mm (#8 x 2-1/2")

Step 10



IMPORTANT!
Follow hole pattern

Pre-drill holes using a
1/8" drill bit.

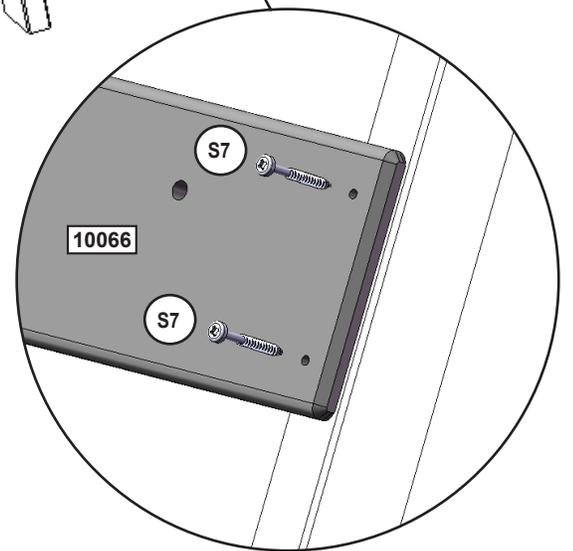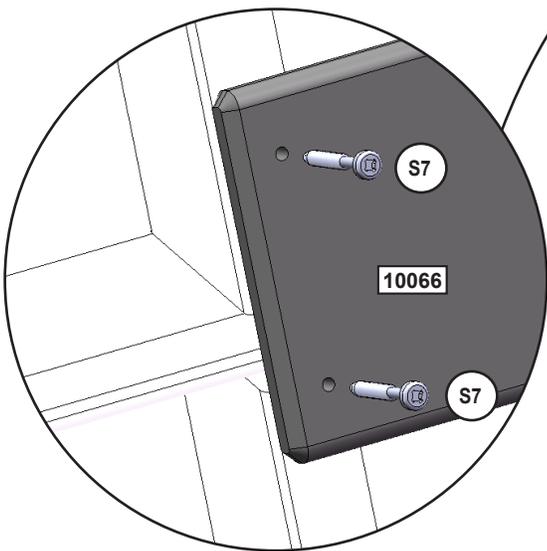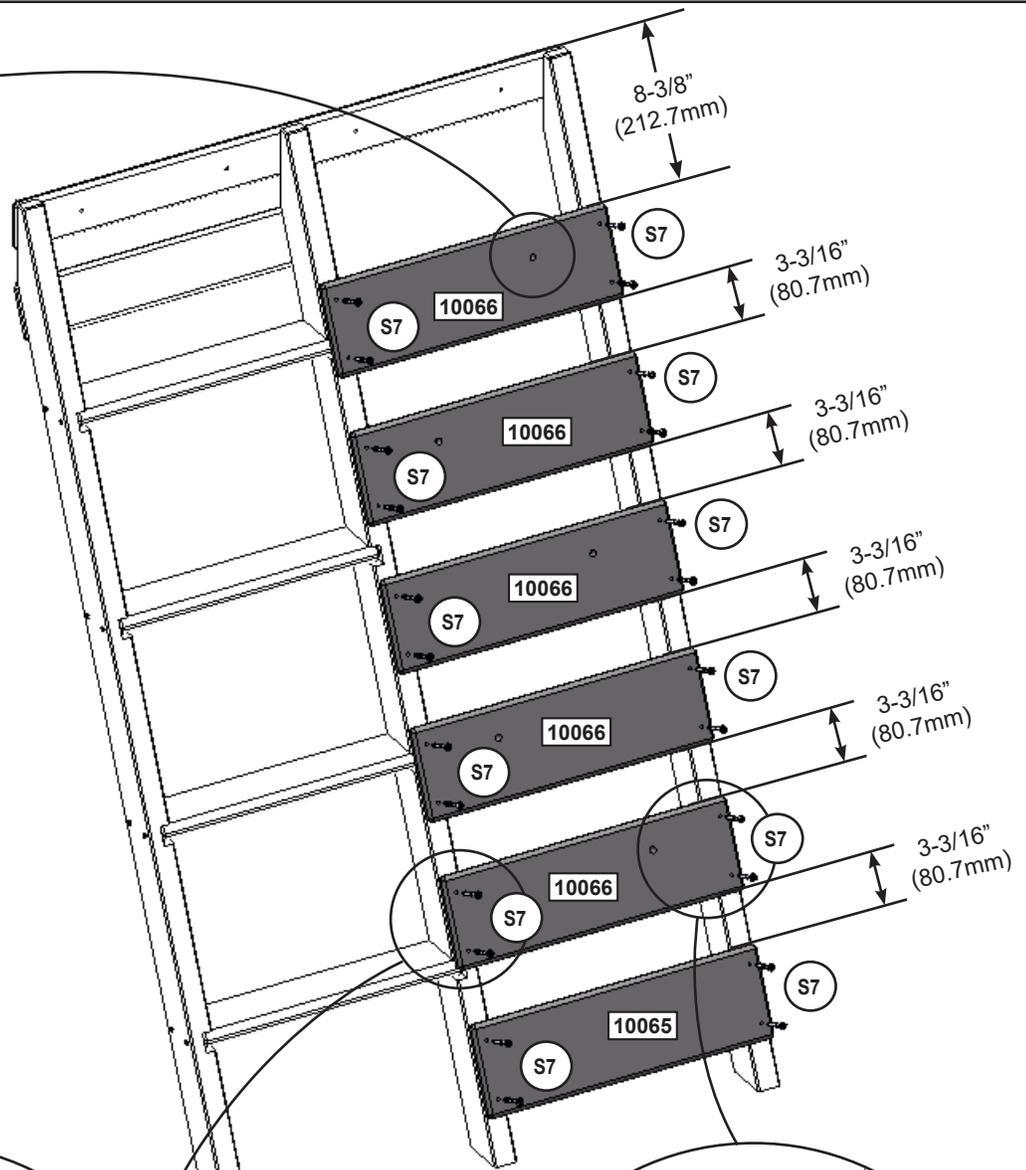

Wood Parts



- 1 x 15.9 x 133.4 x 444.8 mm (5/8 x 5-1/4 x 17-1/2")
- 5 x 15.9 x 133.4 x 444.8 mm (5/8 x 5-1/4 x 17-1/2")

Hardware

- 24 x #12 x 50.8mm (#12 x 2")

Step 11

Note: Make sure all hardware is used to properly secure each rock.

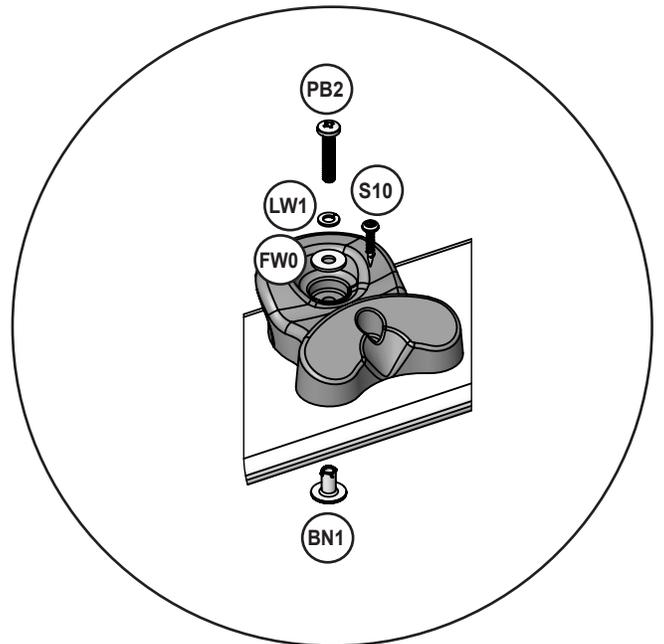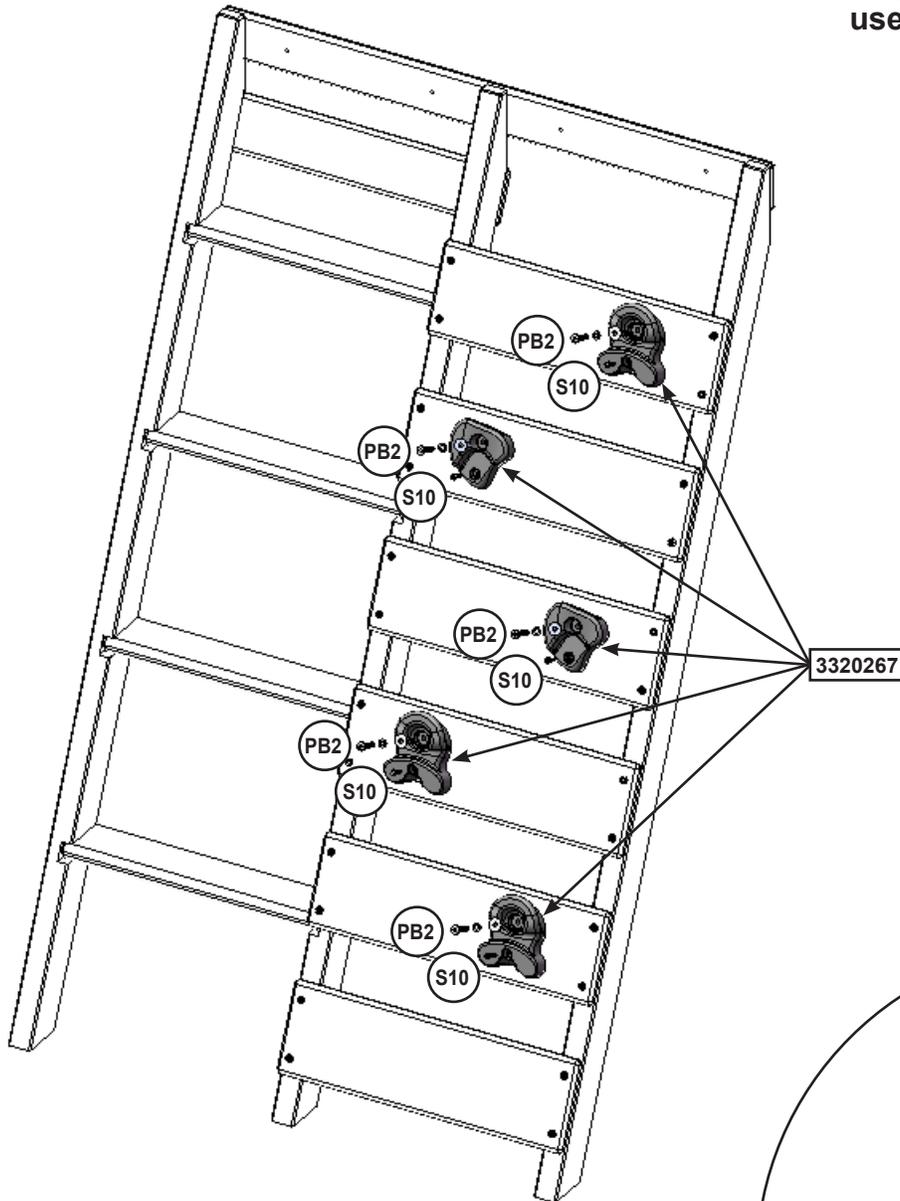

Hardware


5 x (PB2) 7.9mm x 32 mm (5/16 x 1-1/4") (FW0, LW1, BN1)

5 x (S10) #8 x 25.4 mm (#8 x 1")


Other Parts

1 x 3320267 (5pk)

Step 12

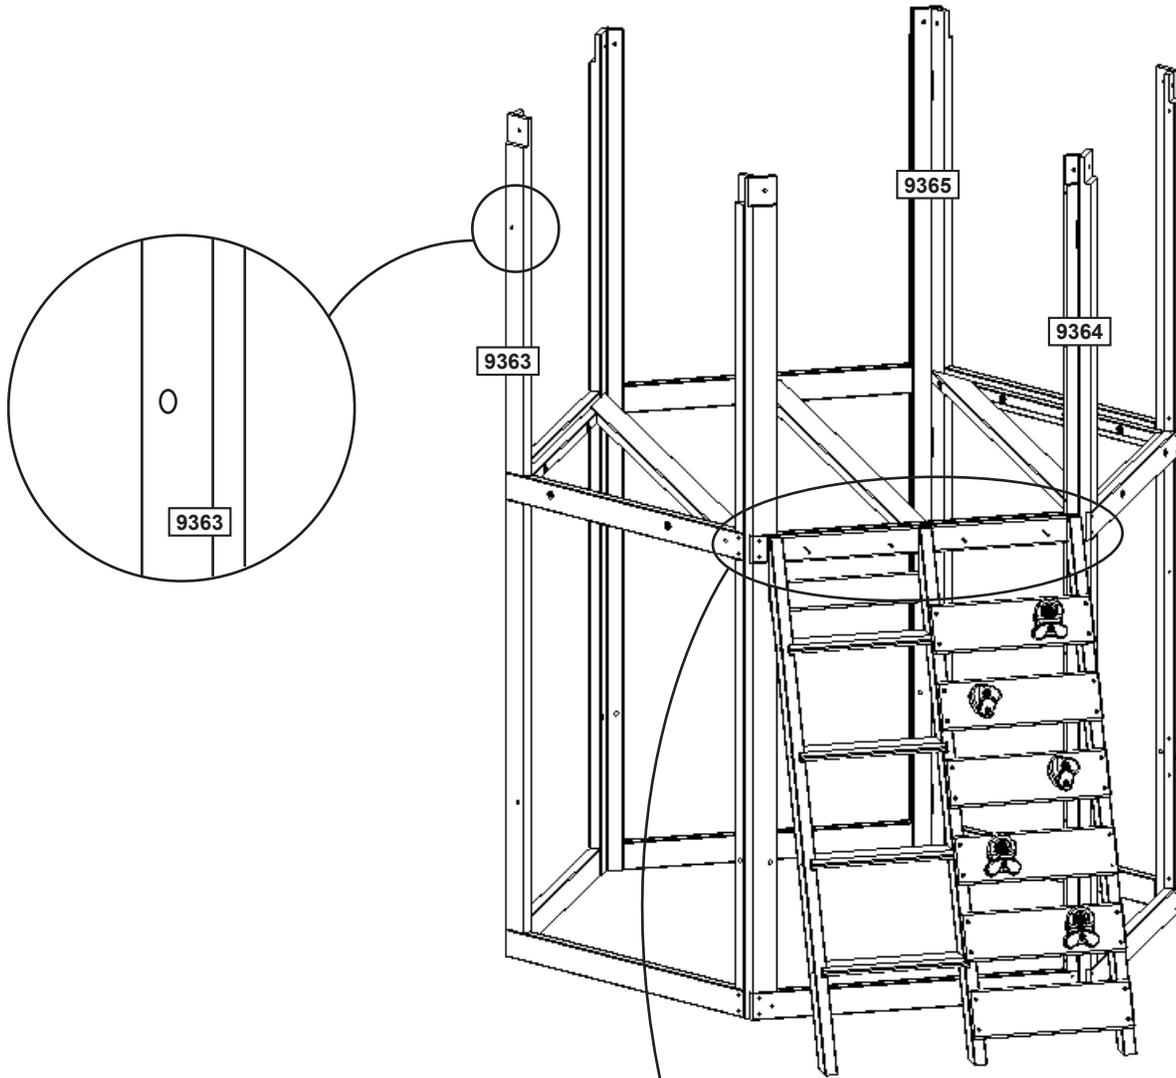


Rock Wall Side (BACK)

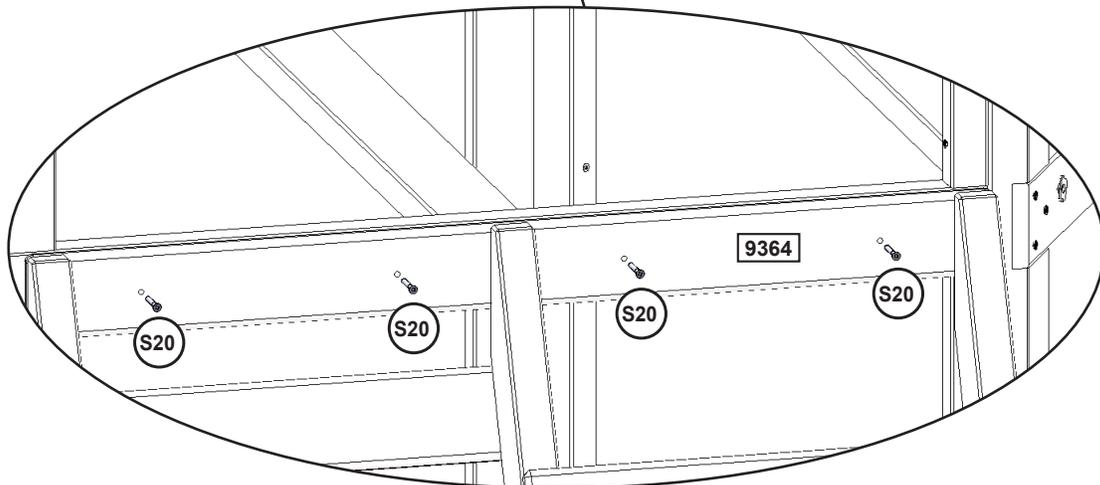


Hardware

4 x  #8 x 35mm (#8 x 1-3/8")

Step 13

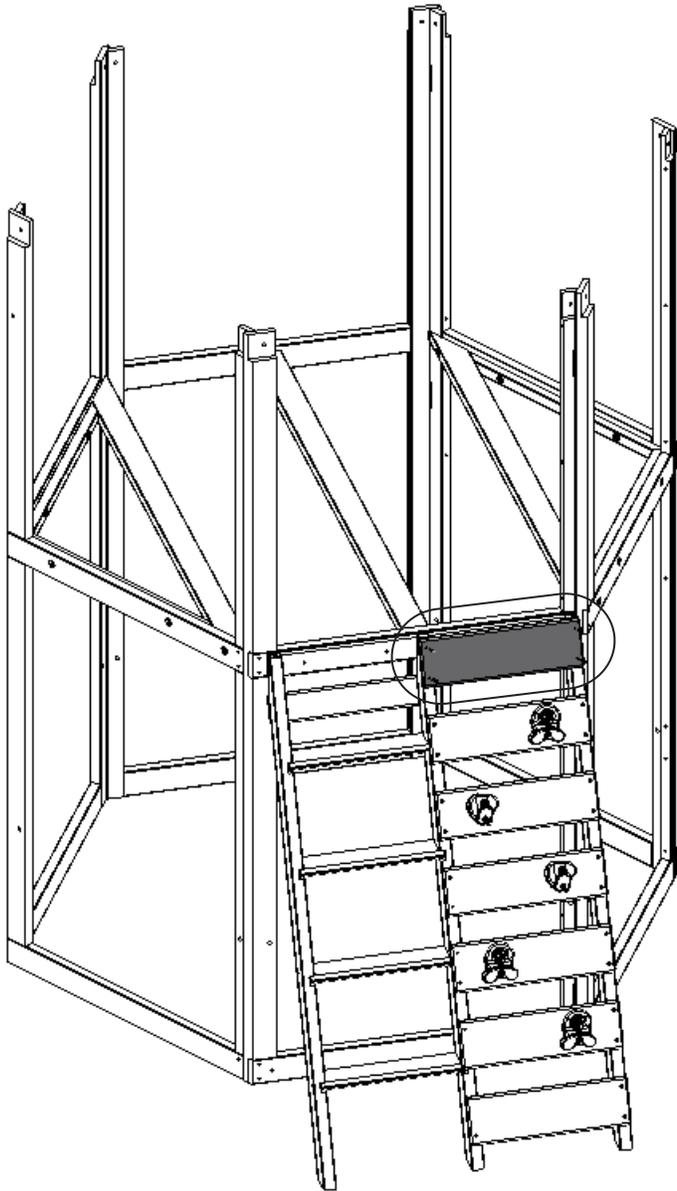

Pre-drill holes using a 1/8" drill bit.

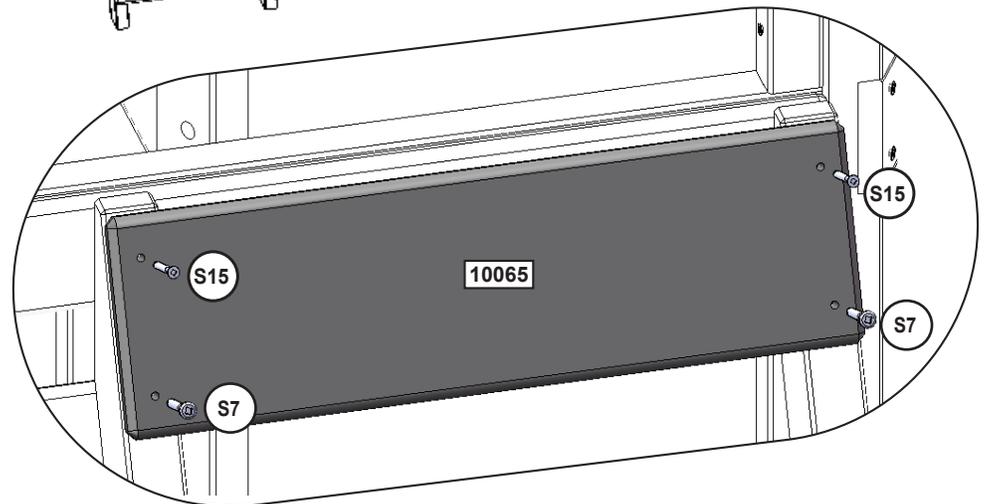

Wood Parts



1 x **10065** 15.9 x 133.4 x 444.8 mm (5/8 x 5-1/4 x 17-1/2")

Hardware


2 x **S7** #12 x 50.8mm (#12 x 2")

2 x **S15** #8 x 44.5mm (#8 x 1-3/4")

Step 14

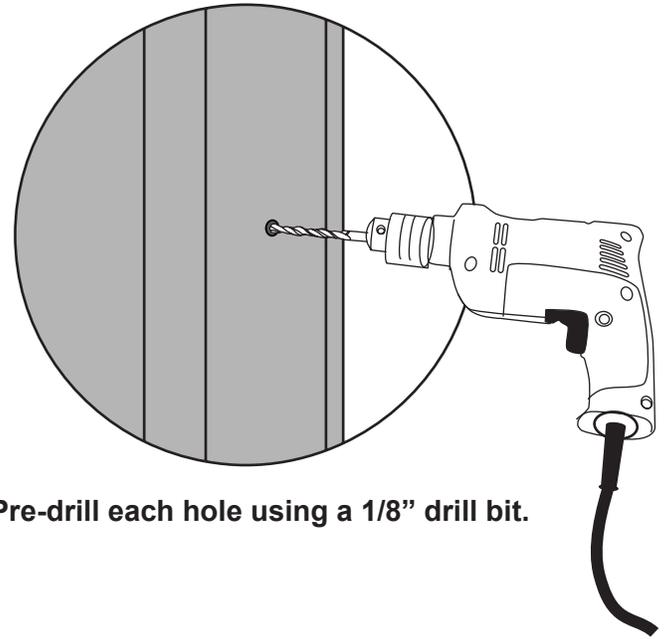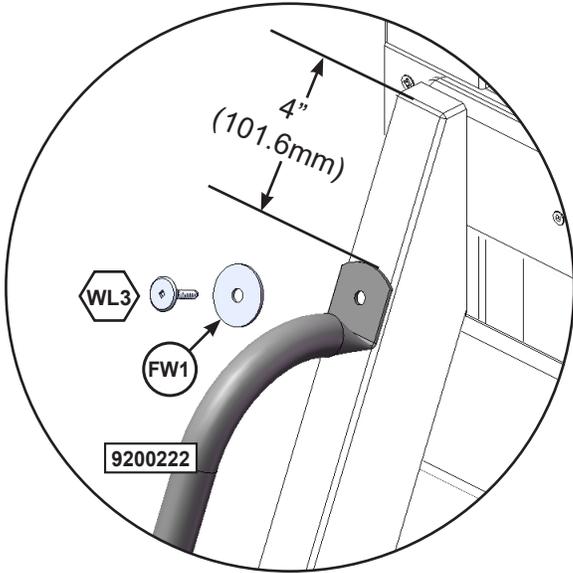

Pre-drill each hole using a 1/8" drill bit.

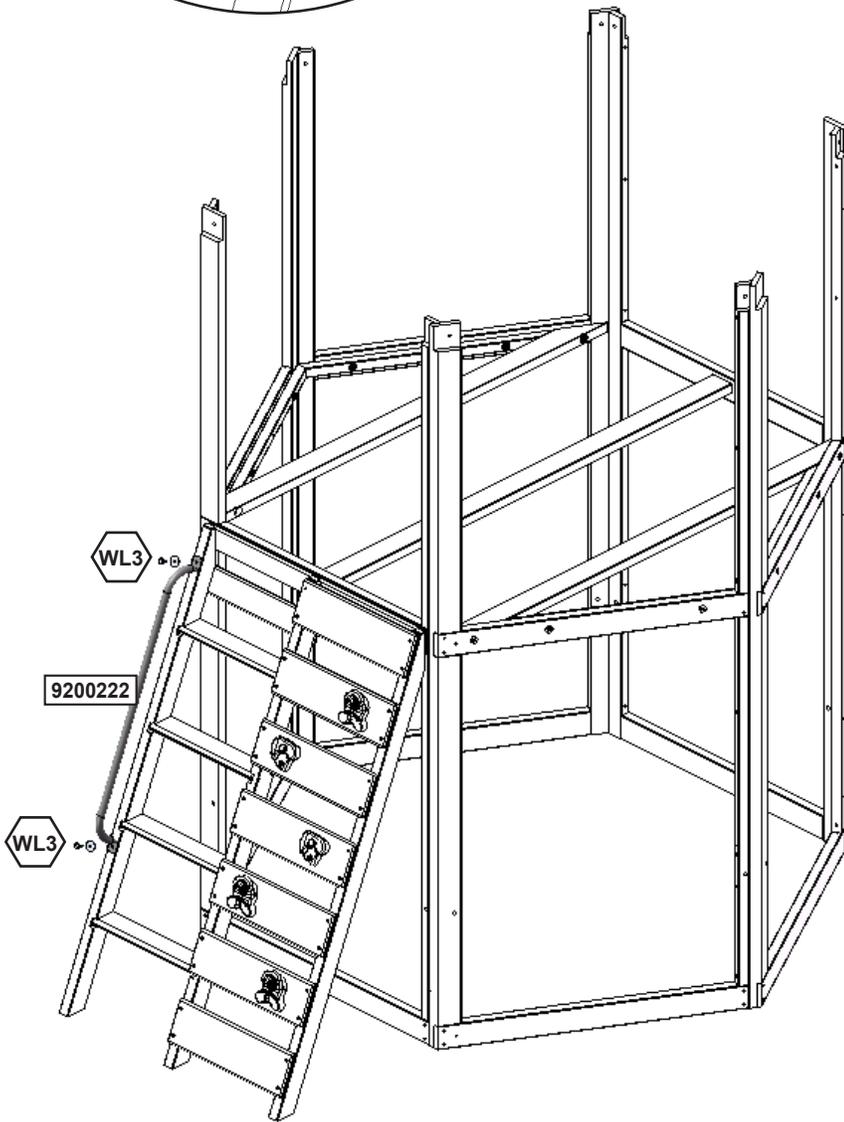

Hardware

2 x  6.4 x 35 mm (1/4 x 1-3/8") (FW1)


Other Parts

1 x 



Step 15



Note: Align all floor panels before securing with hardware.

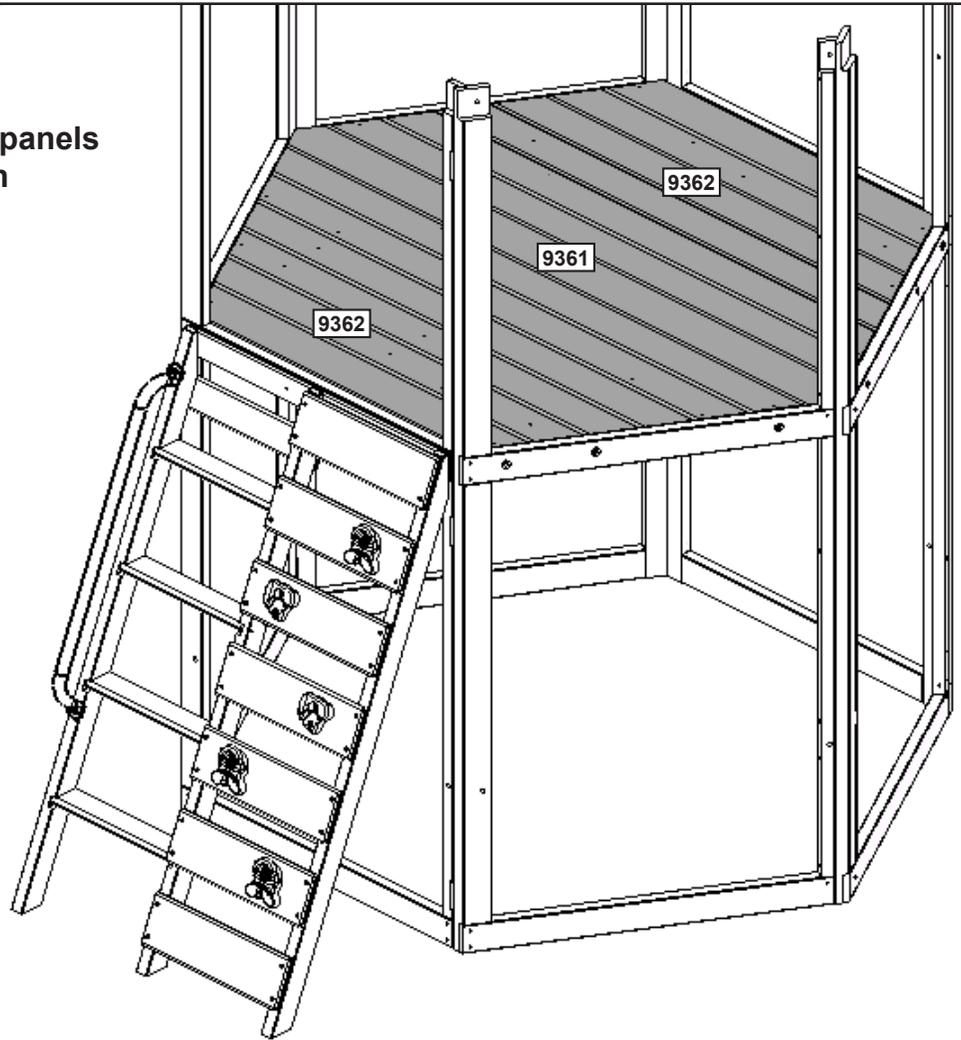

Top half of structure removed for clarity.

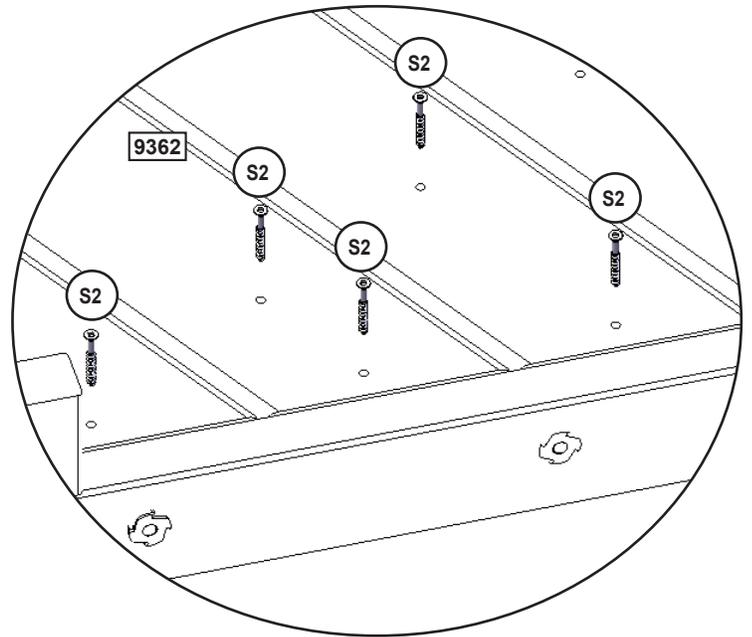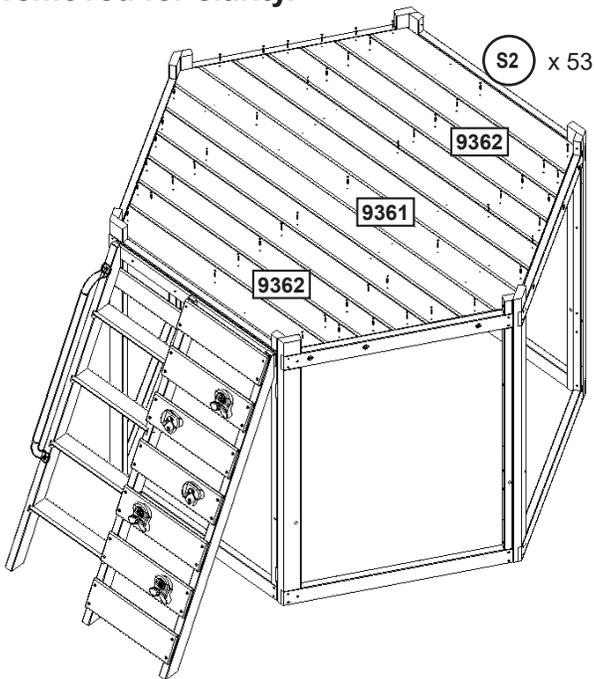

Wood Parts

- 2 x 9362 31.8 x 482.6 x 1458 mm (1-1/4 x 19 x 57-3/8")
- 1 x 9361 31.8 x 594 x 18030 mm (1-1/4 x 23-3/8 x 71")


Hardware

- 53 x S2 #8 x 38.1mm (#8 x 1-1/2")

Step 16 x 5



Note: Install T-nuts first!

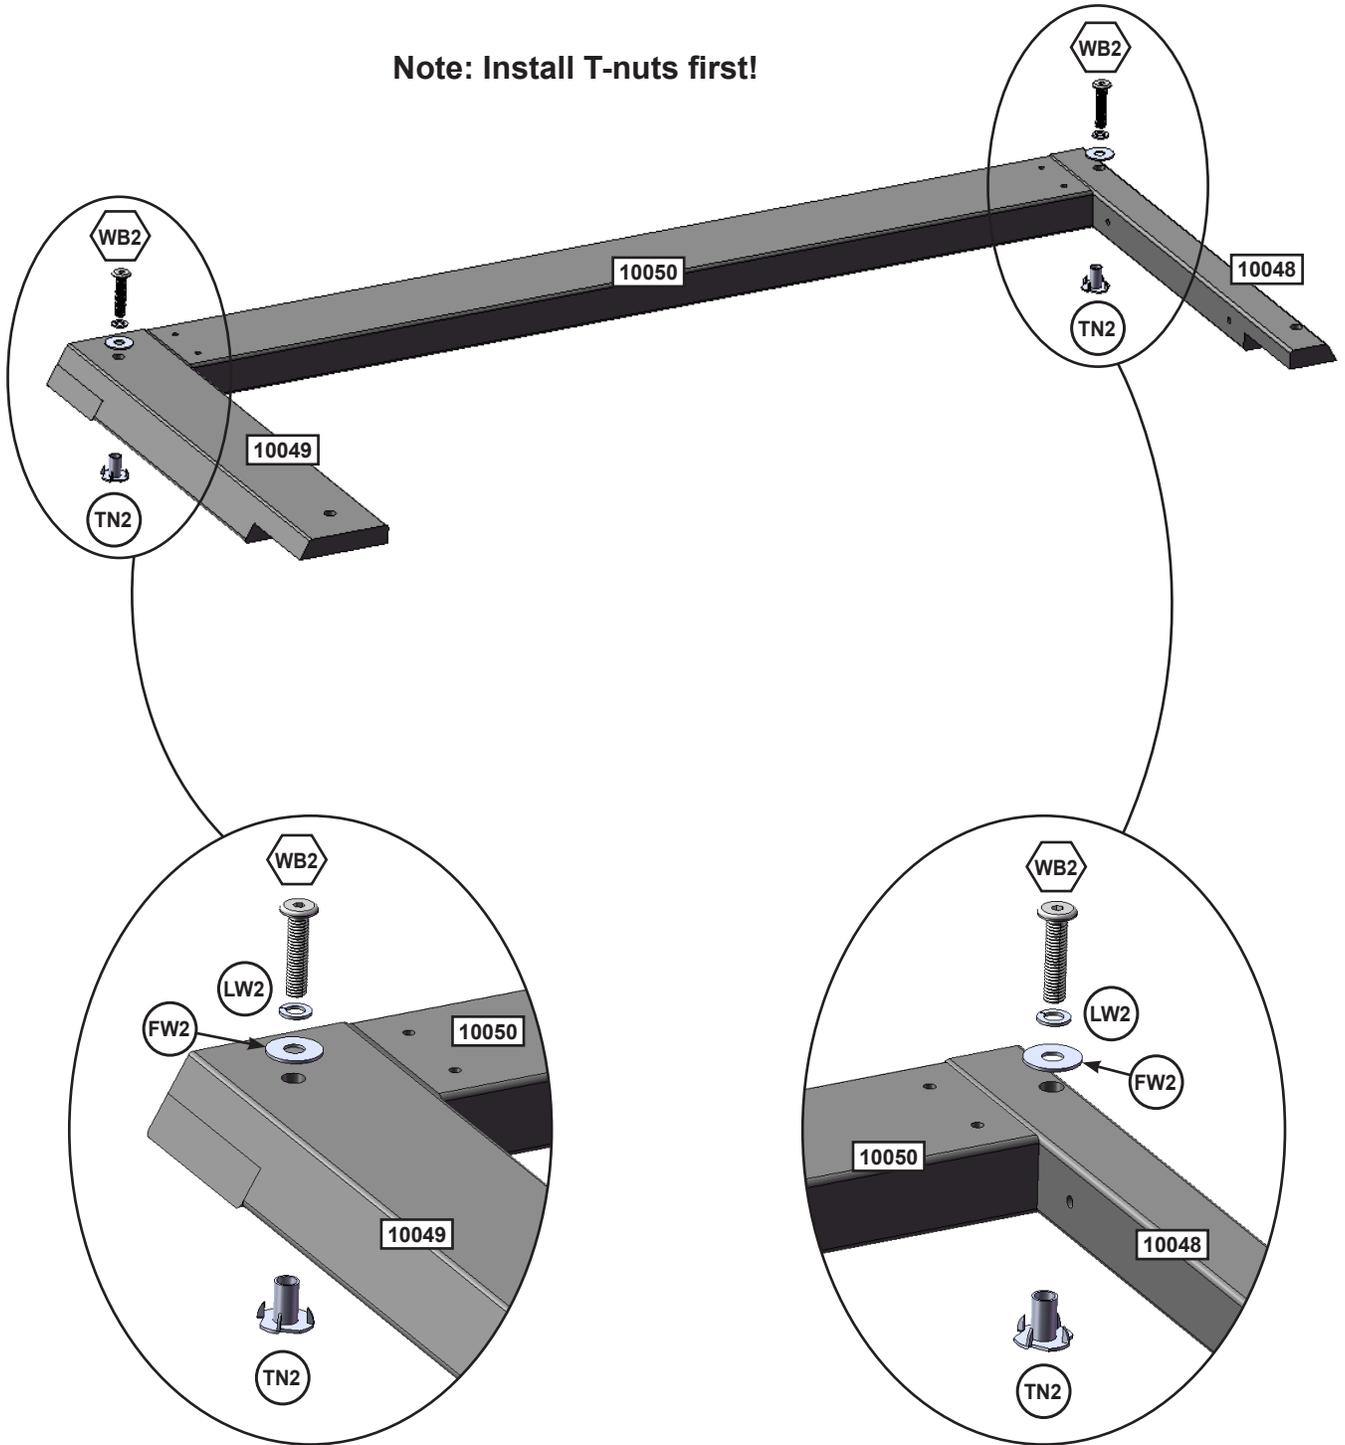

Wood Parts

- 5 x 31.8 x 49 x 406.4 mm (1-1/4 x 1-15/16 x 16")
- 5 x 31.8 x 85.7 x 406.4 mm (1-1/4 x 3-3/8 x 16")
- 5 x 31.8 x 76.2 x 939.8 mm (1-1/4 x 3 x 37")


Hardware

- 10 x 7.9mm x 34.9mm (5/16 x 1-3/8") (FW2, LW2, TN2)

Step 17



Note: Install T-nuts first!

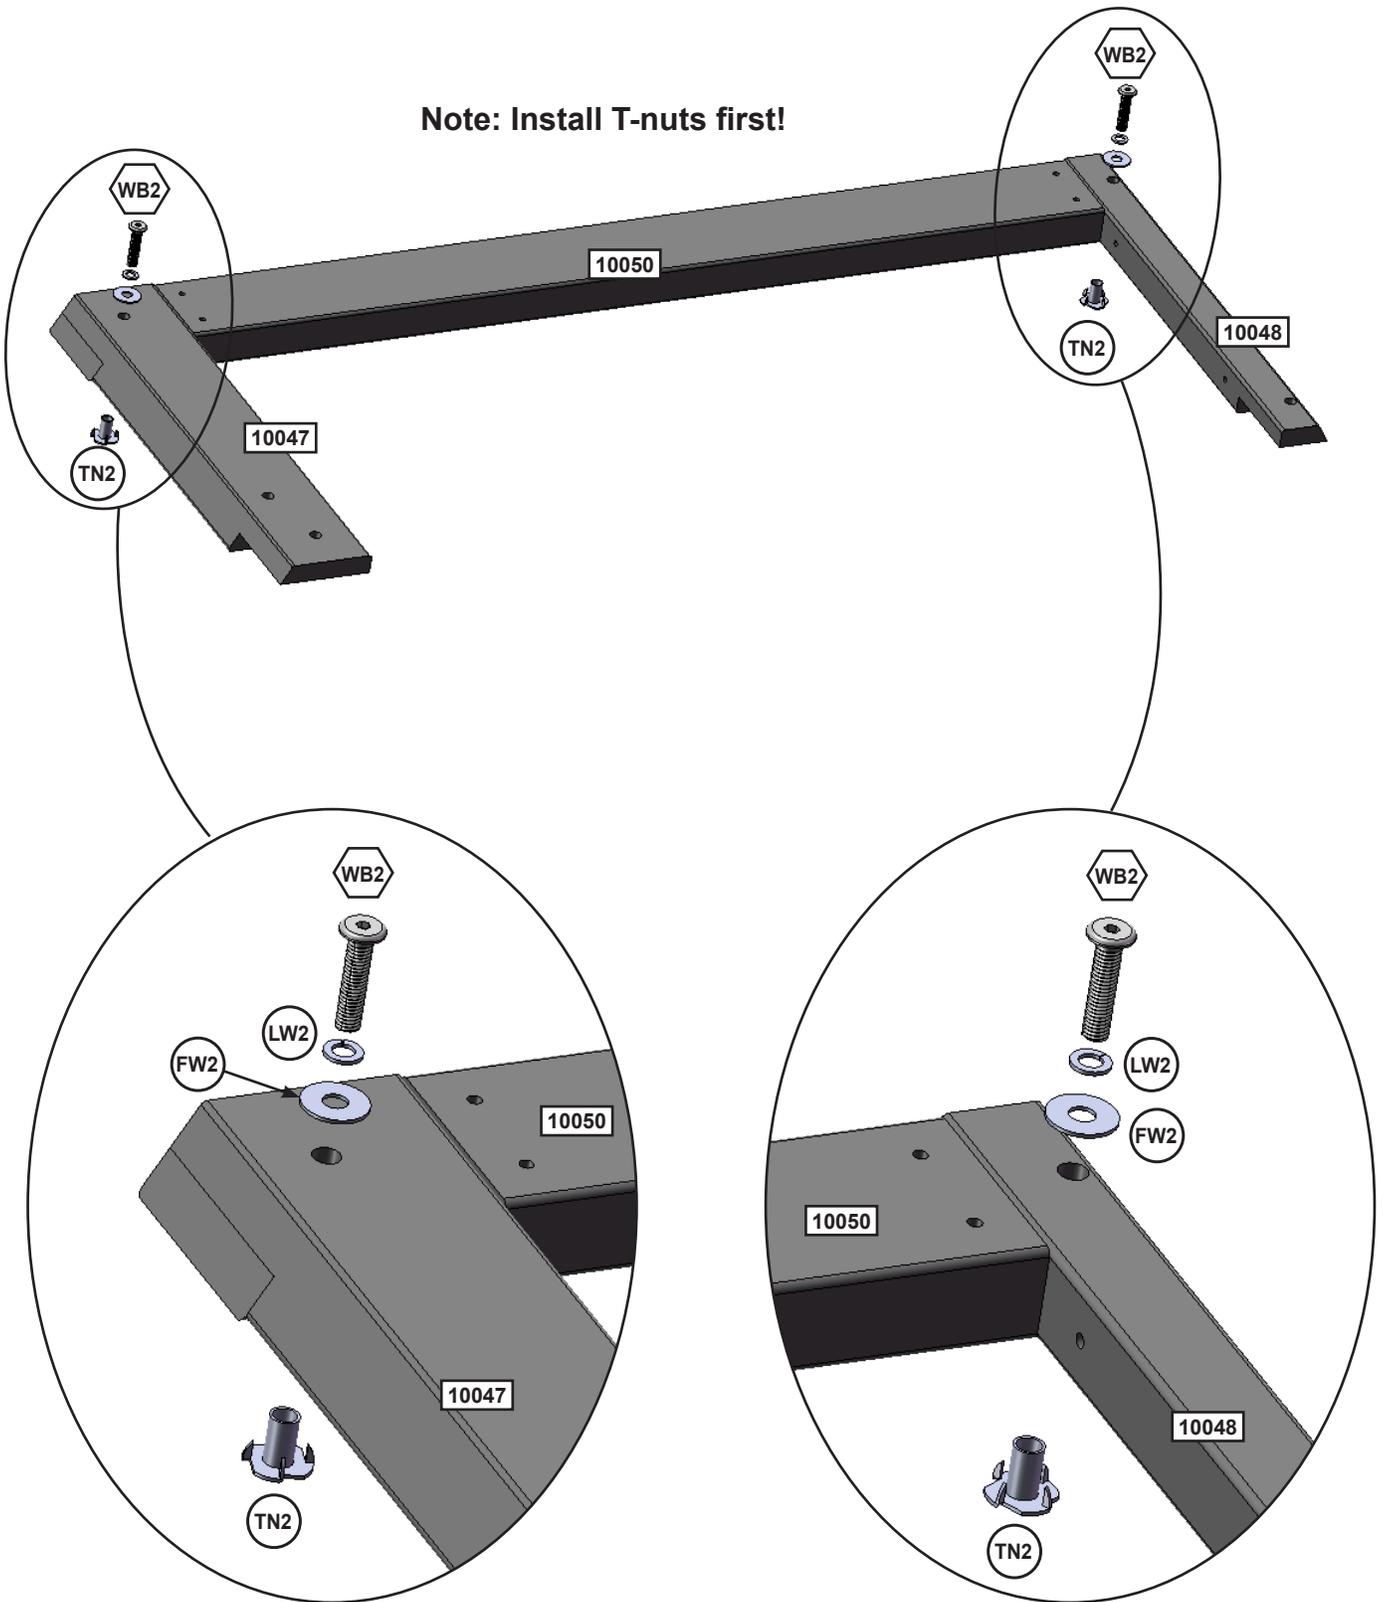


Wood Parts

- 1 x 10047 31.8 x 85.7 x 406.4 mm (1-1/4 x 3-3/8 x 16")
- 1 x 10048 31.8 x 50.8 x 406.4 mm (1-1/4 x 2 x 16")
- 1 x 10050 31.8 x 76.2 x 939.8 mm (1-1/4 x 3 x 37")


Hardware

- 2 x WB2 7.9mm x 34.9mm (5/16 x 1-3/8") (FW2, LW2, TN2)


Step 18

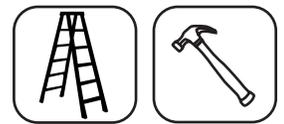

Note: Install T-Nuts first!

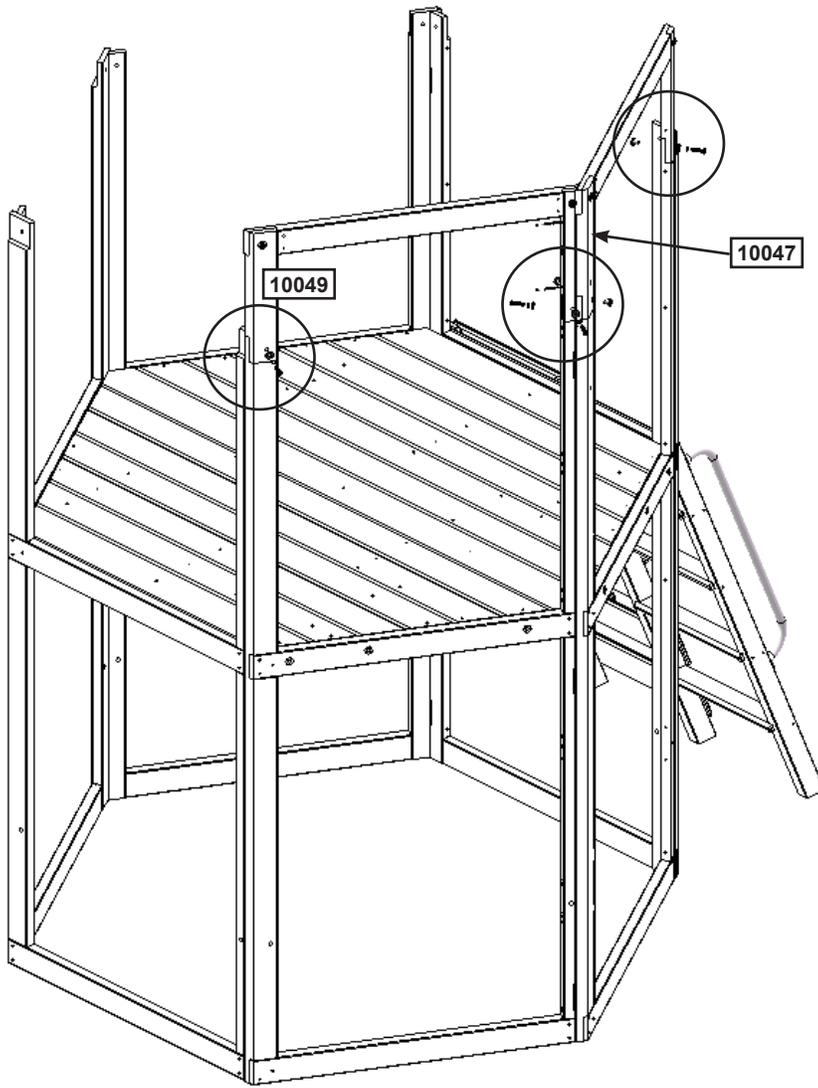

SW Wall

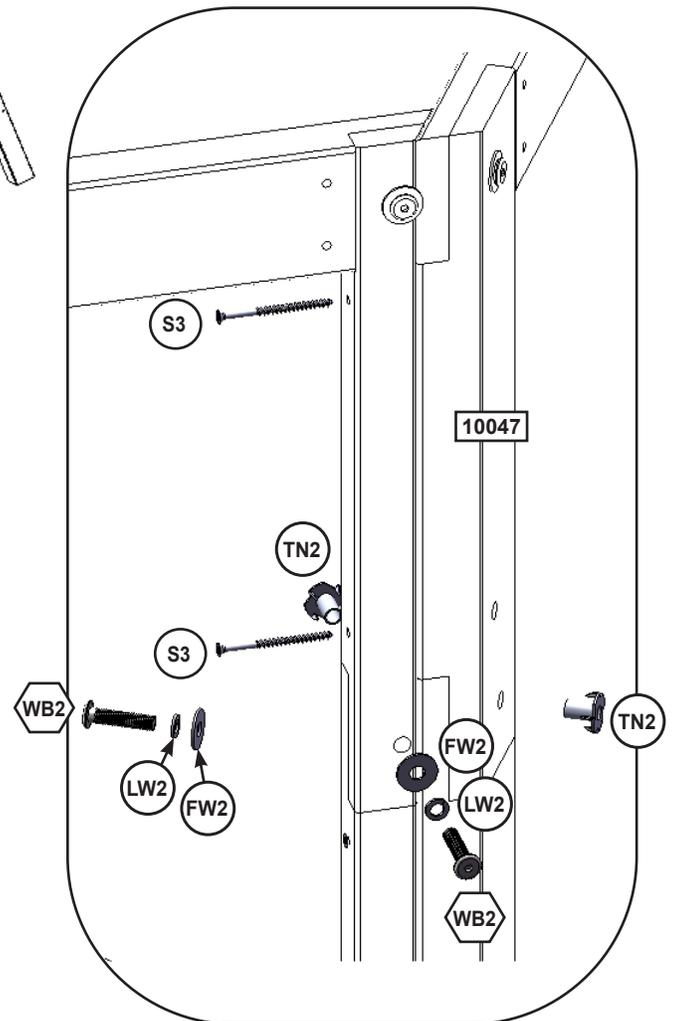


Hardware


4 x  7.9mm x 34.9mm (5/16 x 1-3/8") (FW2, LW2, TN2)

2 x  #8 x 64mm (#8 x 2-1/2")

Step 19

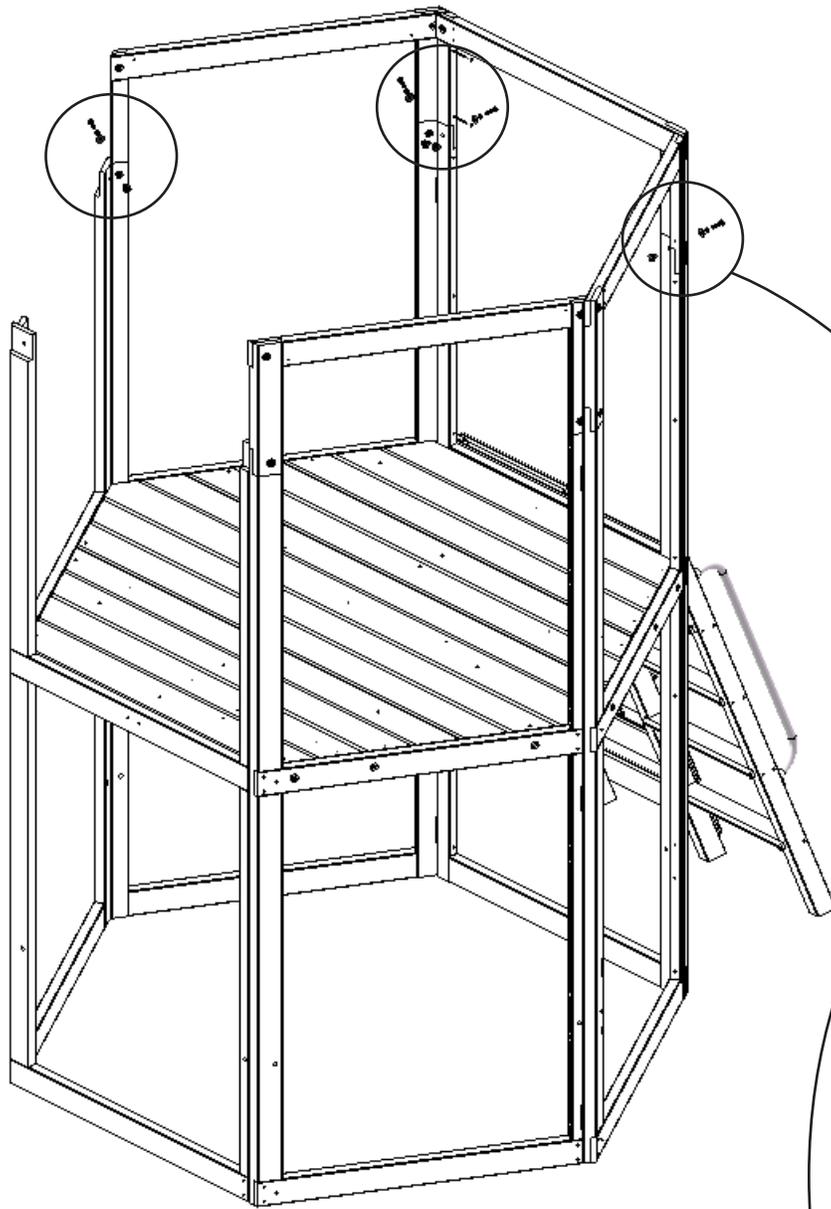

Note: Install T-Nuts first!

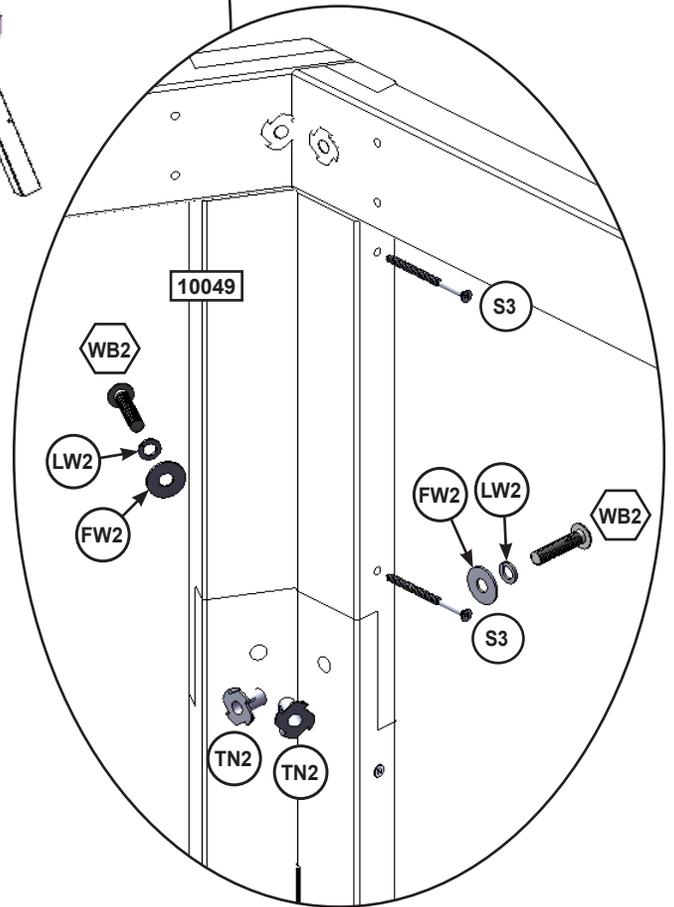

Hardware



4 x 7.9mm x 34.9mm (5/16 x 1-3/8") (FW2, LW2, TN2)

2 x #8 x 64mm (#8 x 2-1/2")

Step 20



Note: Install T-Nuts first!

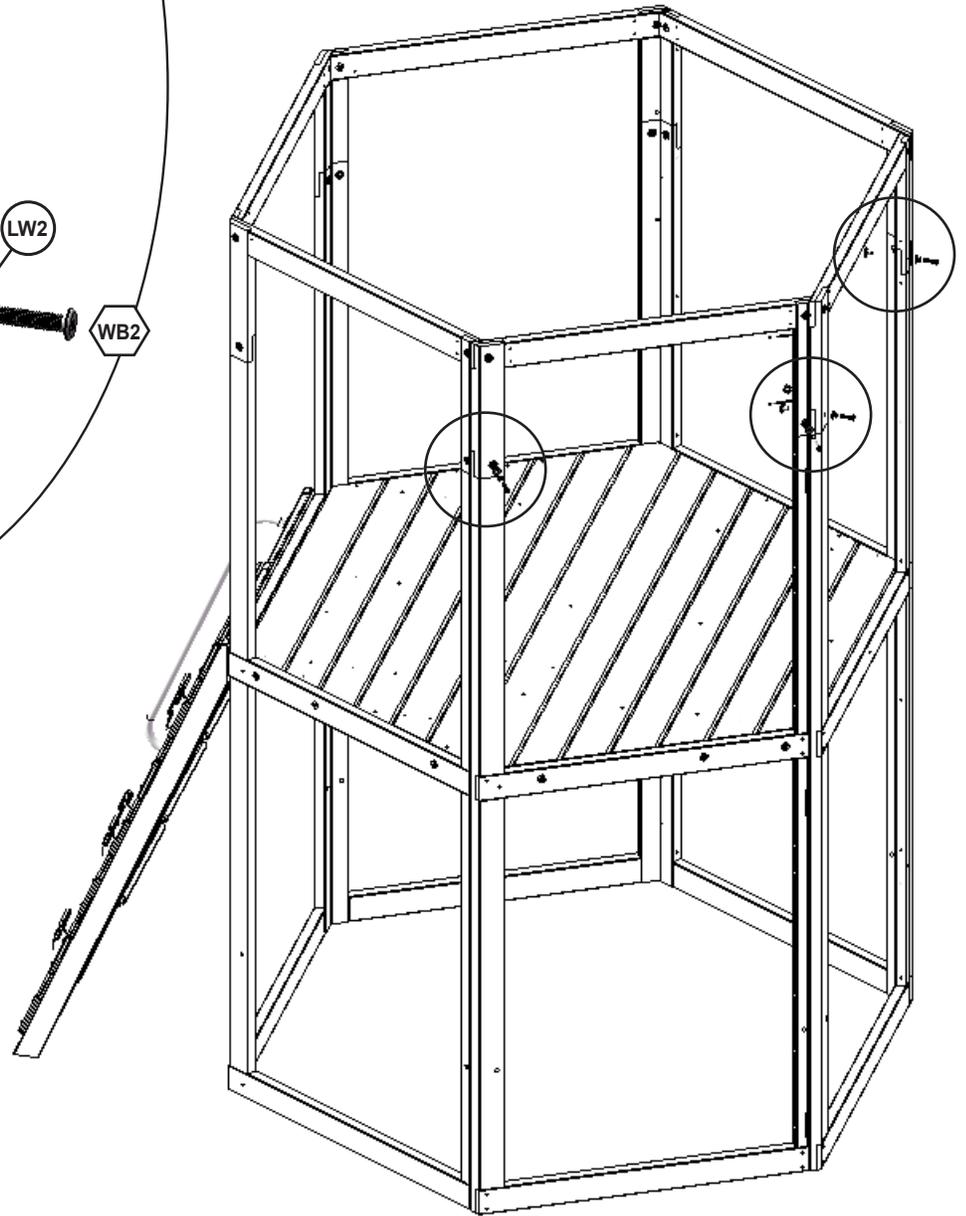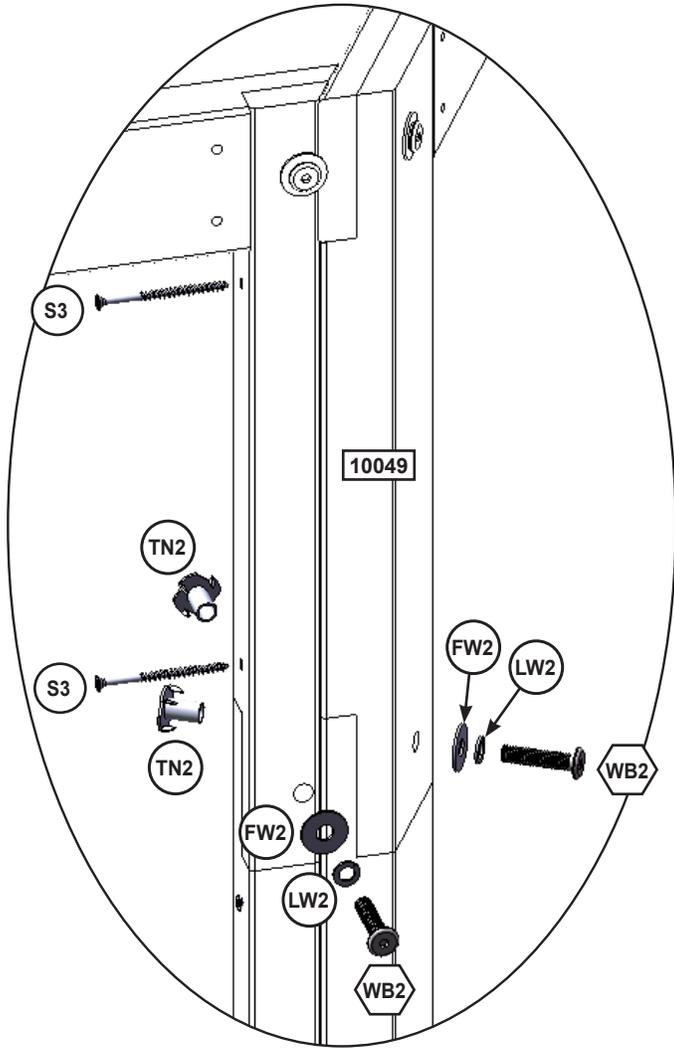


Hardware

4 x  7.9mm x 34.9mm (5/16 x 1-3/8") (FW2, LW2, TN2)

2 x  #8 x 64mm (#8 x 2-1/2")

Step 21


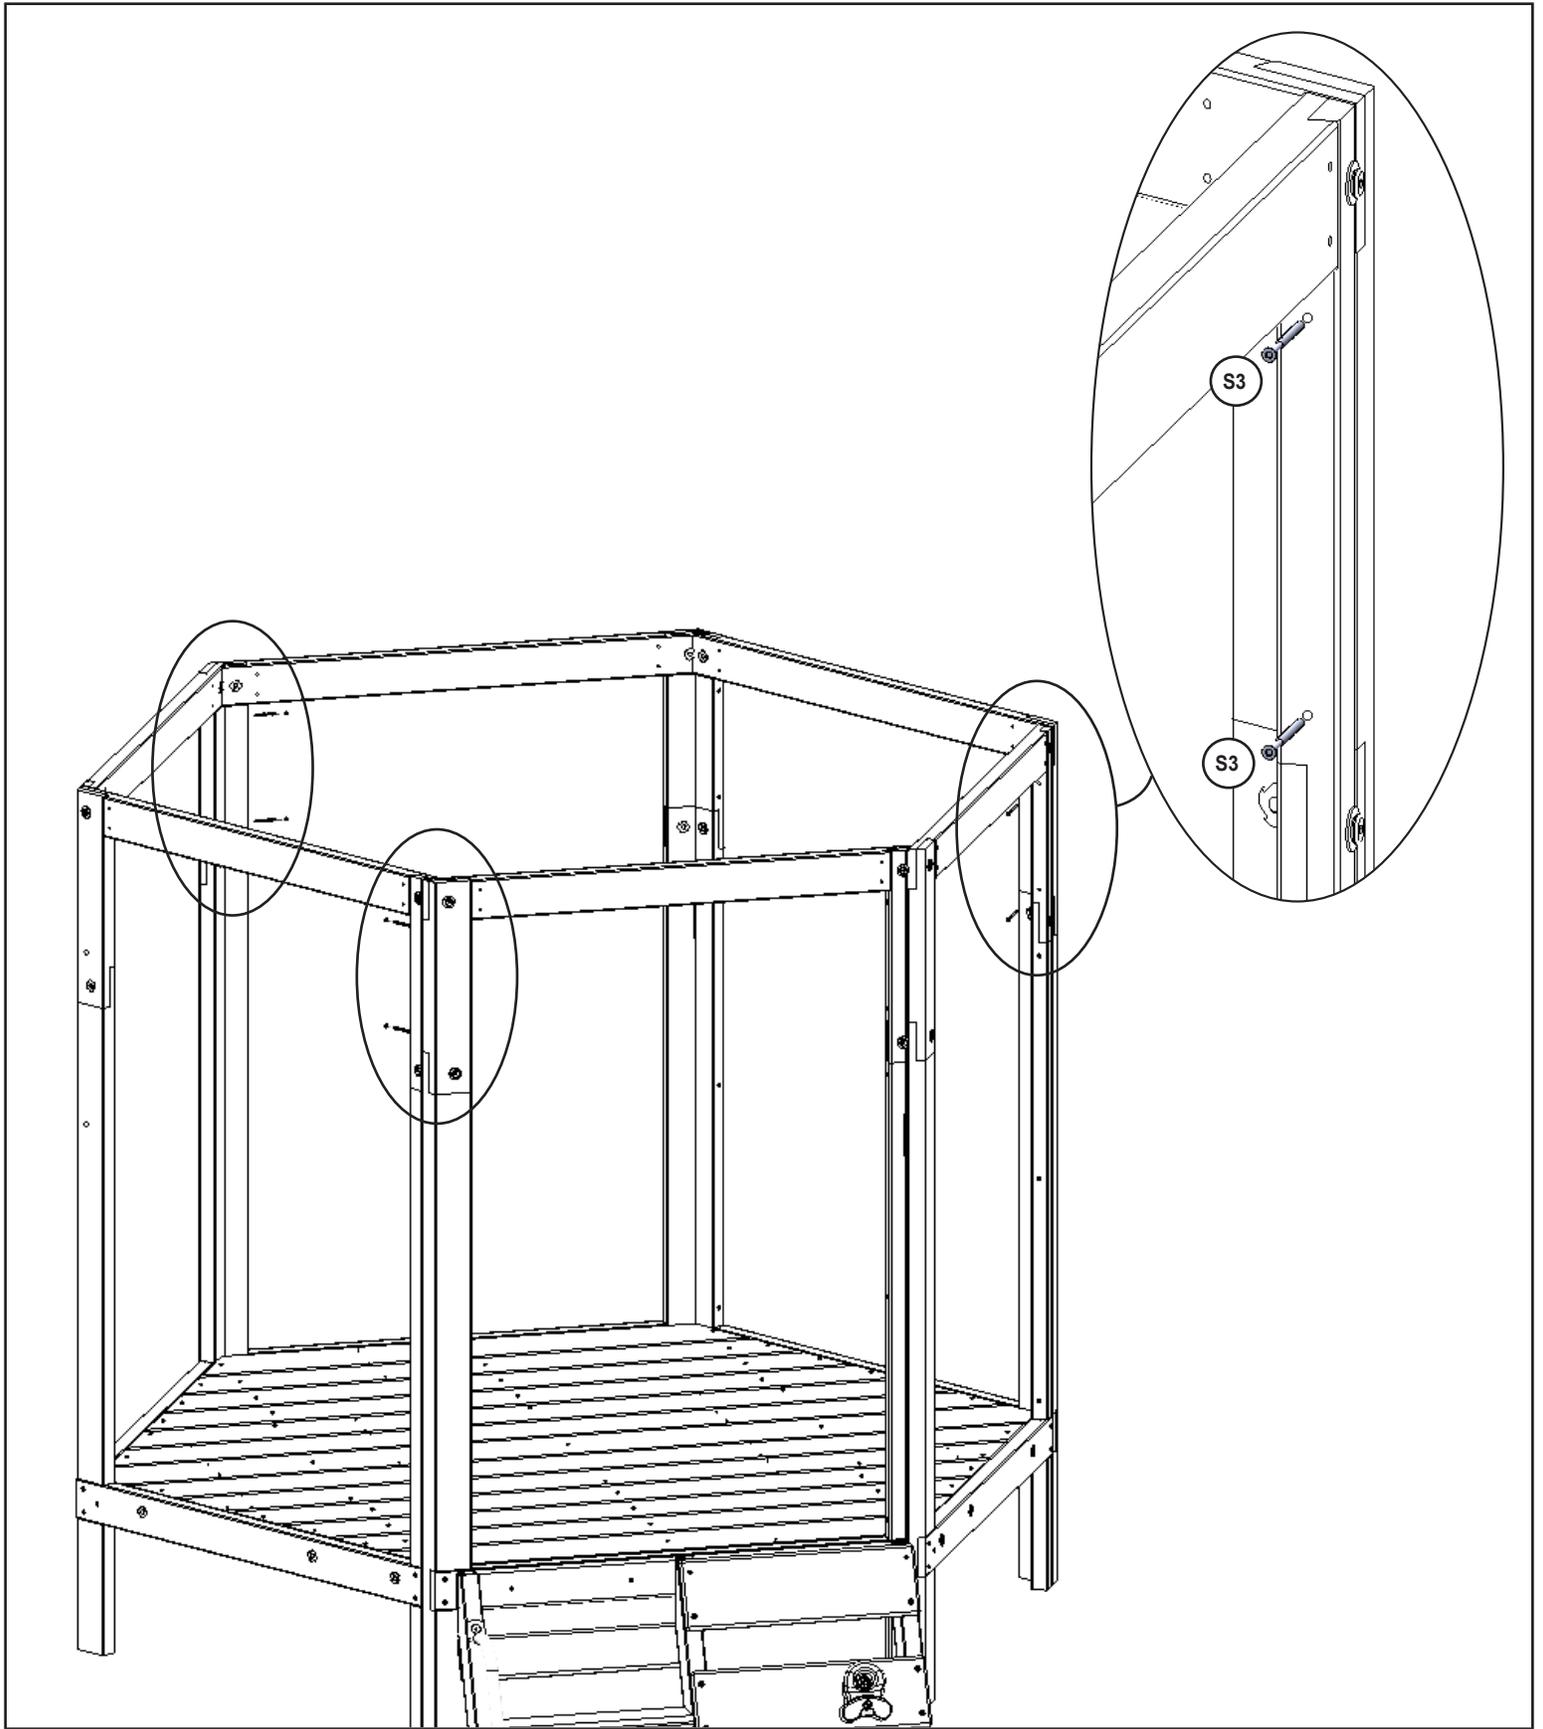


Hardware

6 x (S3) #8 x 64mm (#8 x 2-1/2")

Step 22

Slide Wall Left

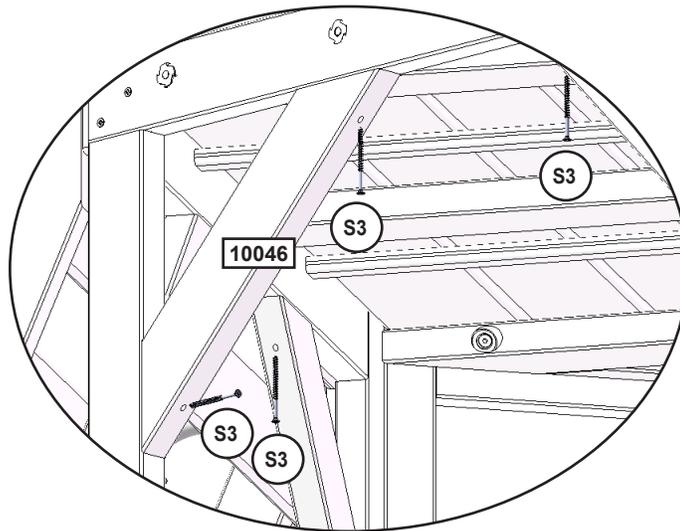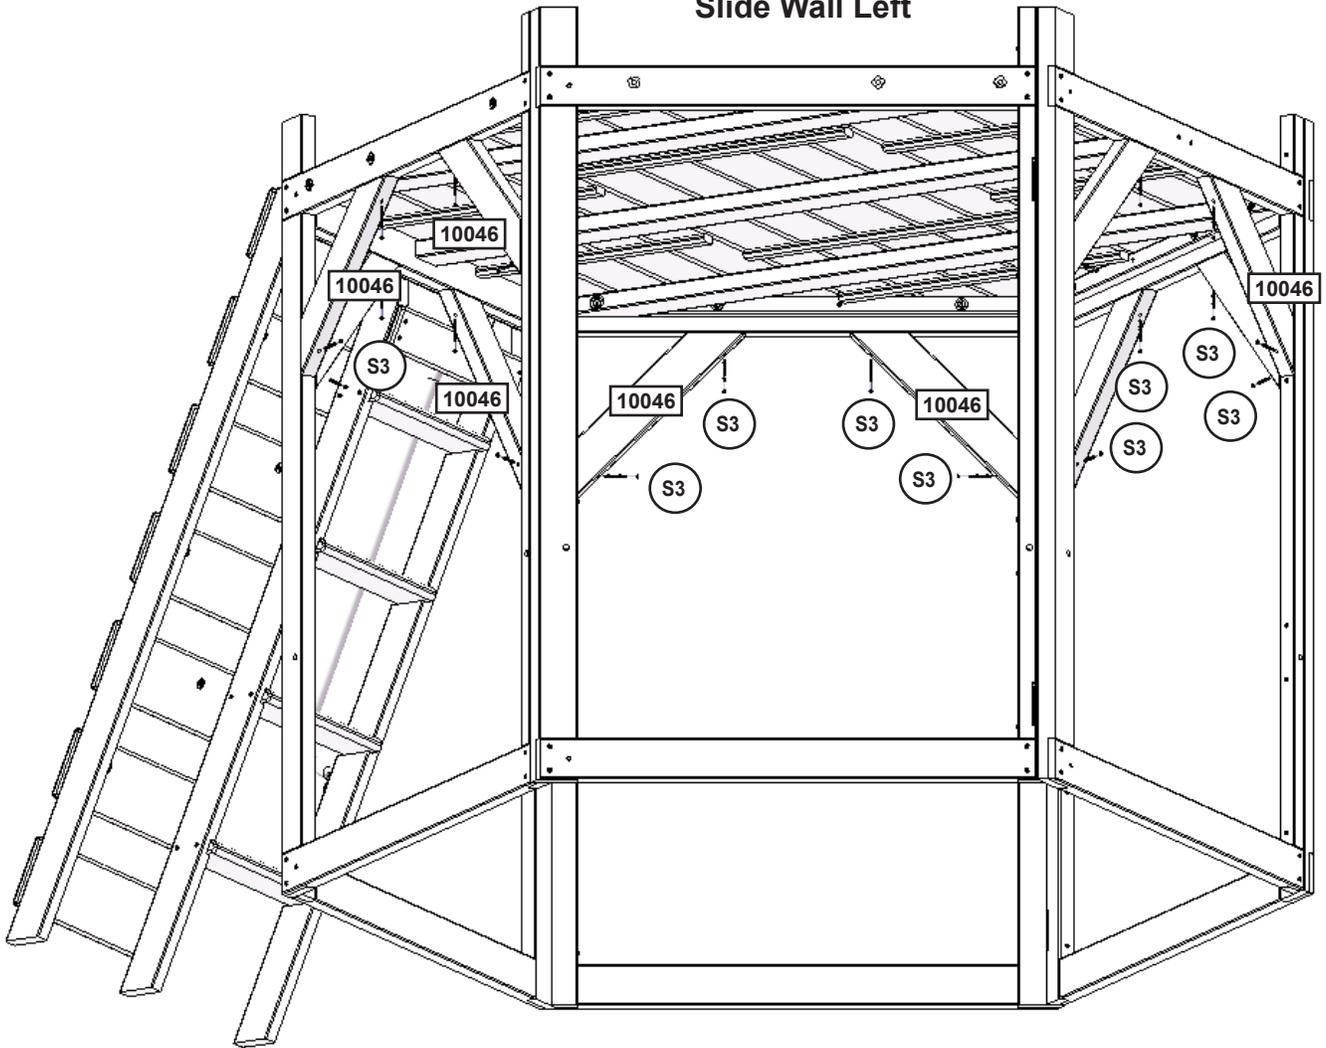



Wood Parts

10 x 10046 31.8 x 76.2 x 431.8 mm (1-1/4 x 3 x 17")

Hardware

20 x S3 #8 x 64mm (#8 x 2-1/2")

Step 23

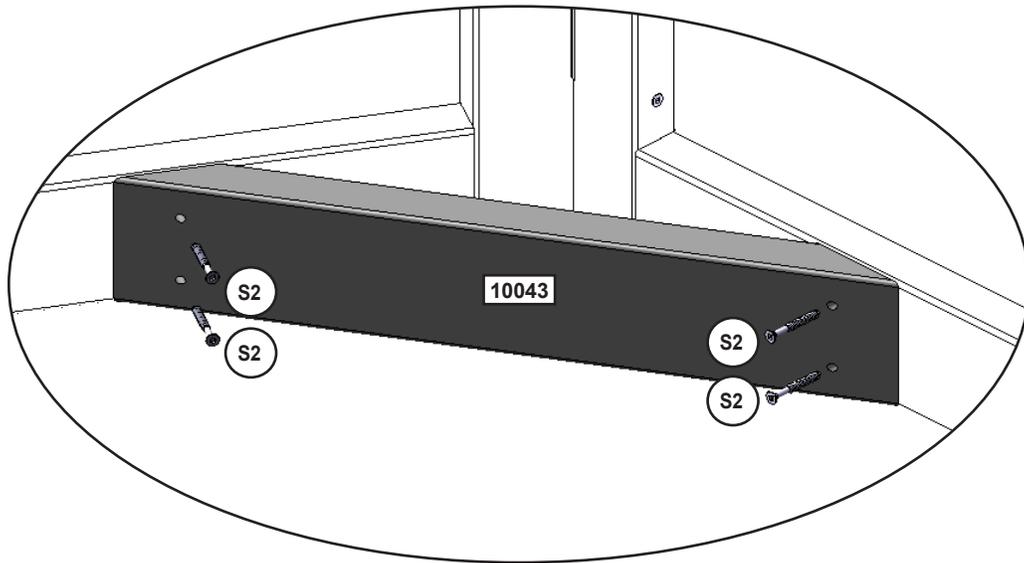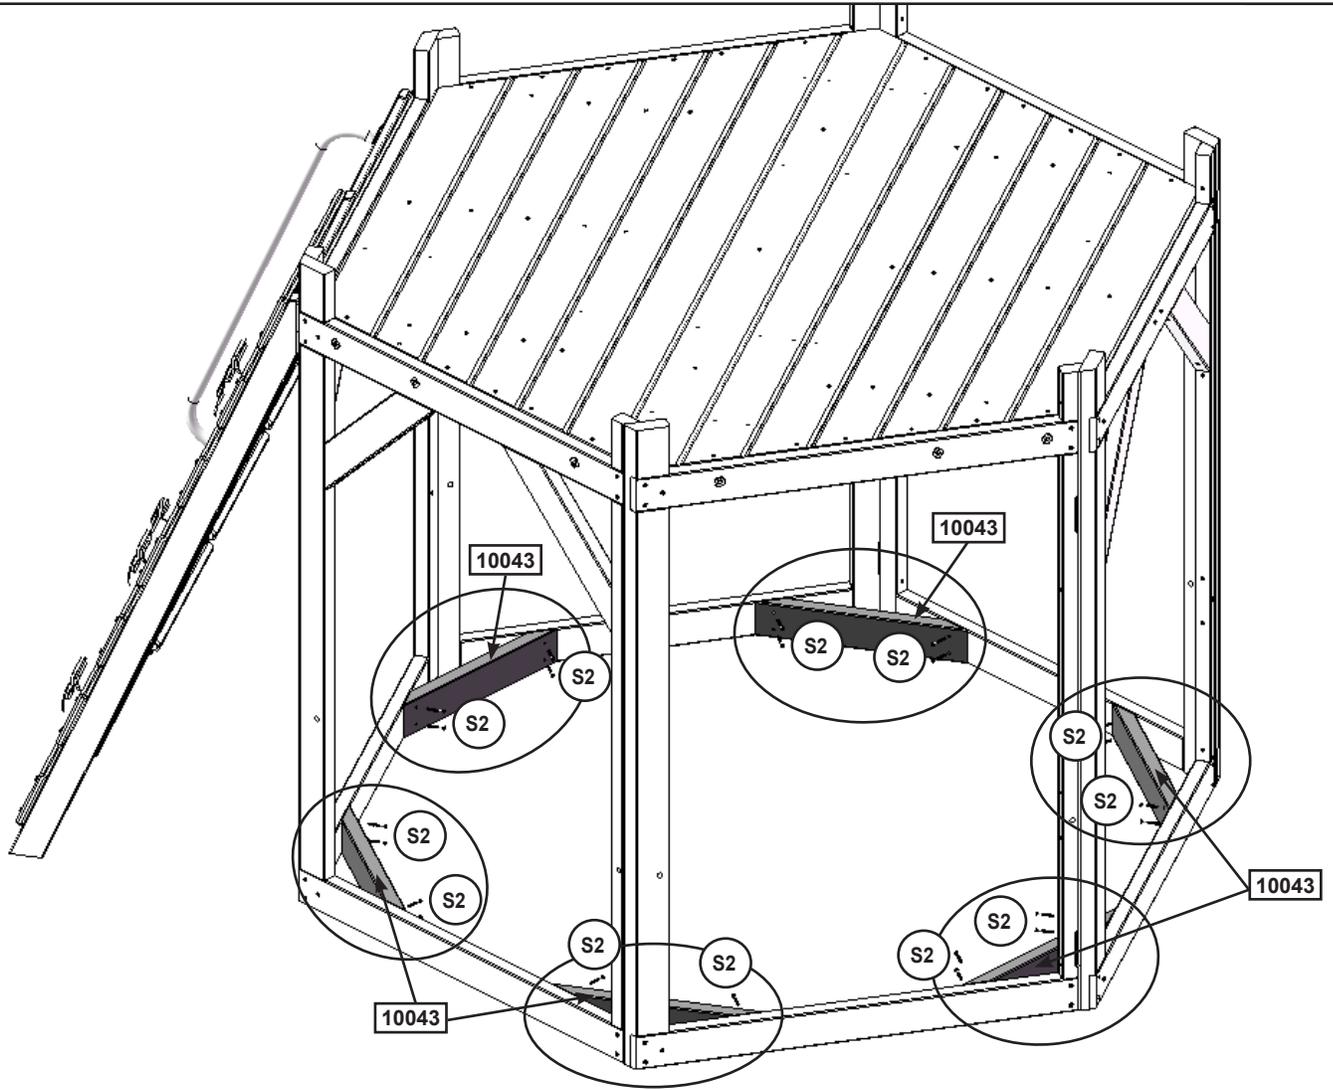



Wood Parts

6 x **10043** 31.8 x 76.2 x 139.7 mm (1-1/4 x 3 x 5-1/2")

Hardware

24 x **S2** #8 x 38.1mm (#8 x 1-1/2")

Step 24

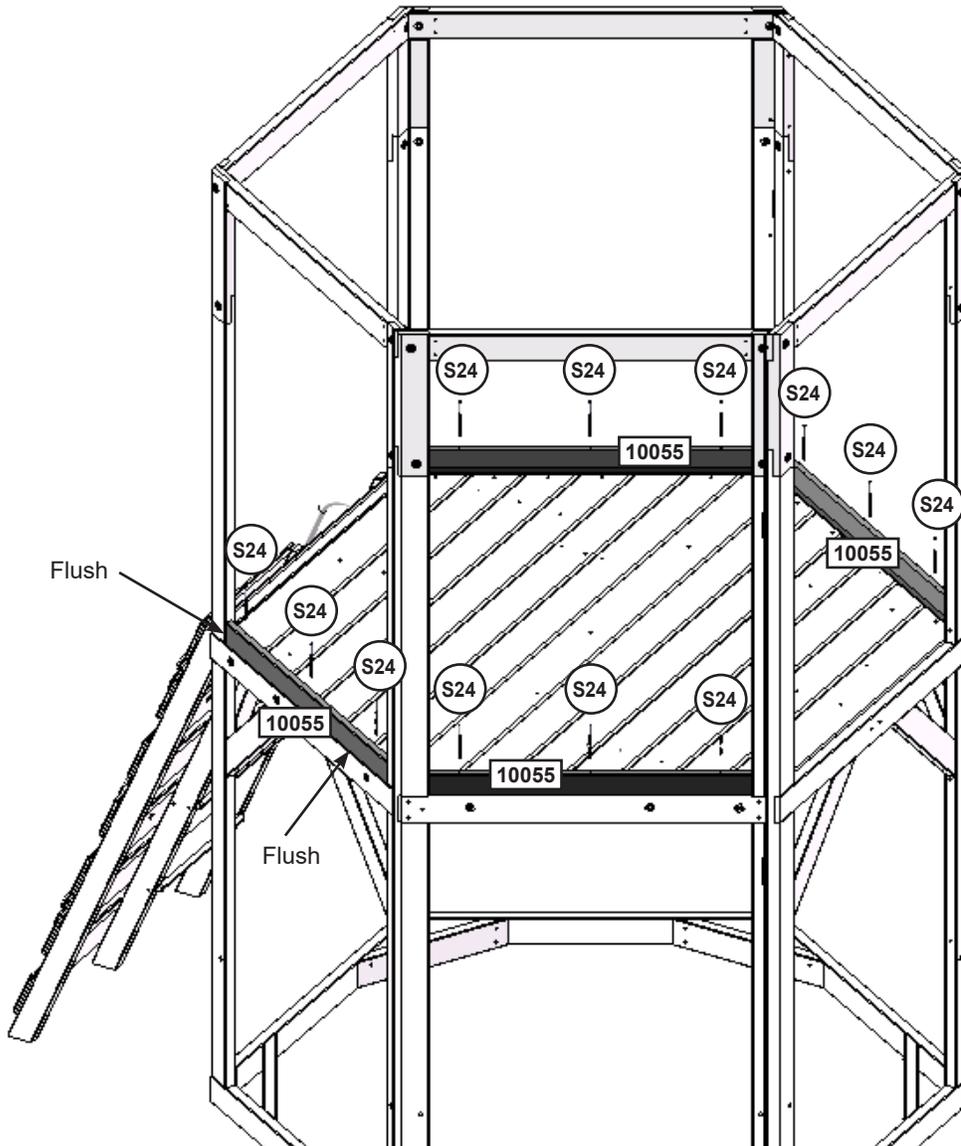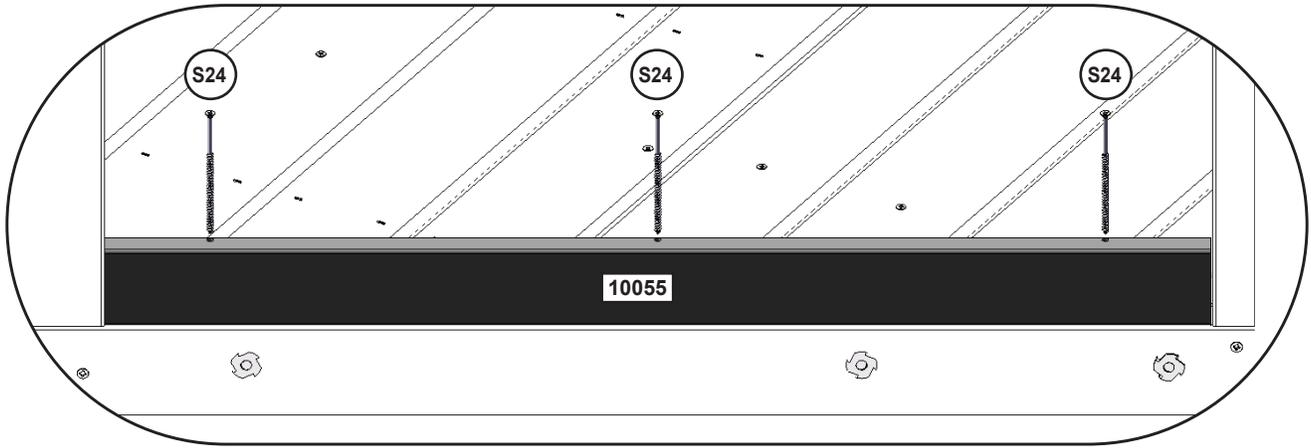

Wood Parts

4 x **10055** 31.8 x 63.5 x 800.0 mm (1-1/4 x 2-1/2 x 31-1/2")



Hardware

12 x **S24** #10 x 101.6mm (#10 x 4")

Step 25



Note: Install T-Nuts first!

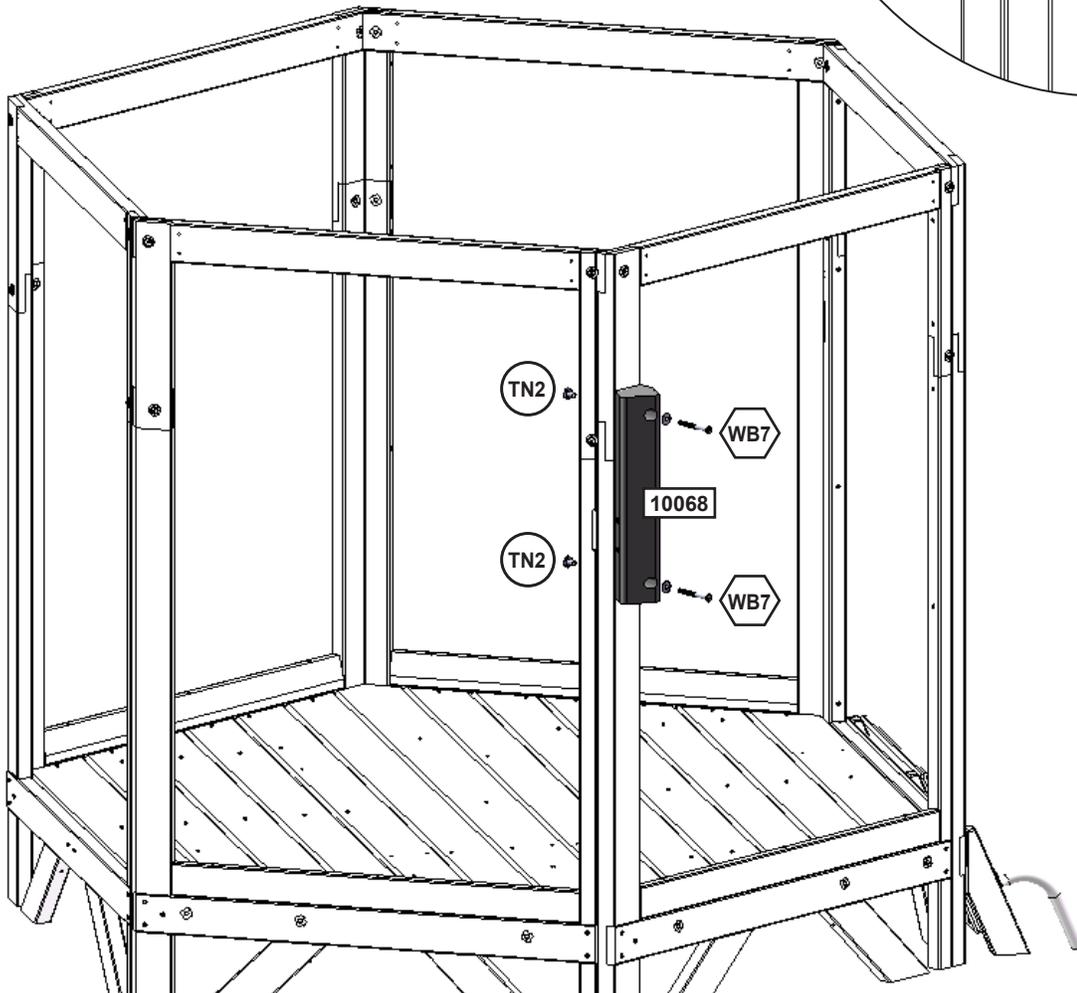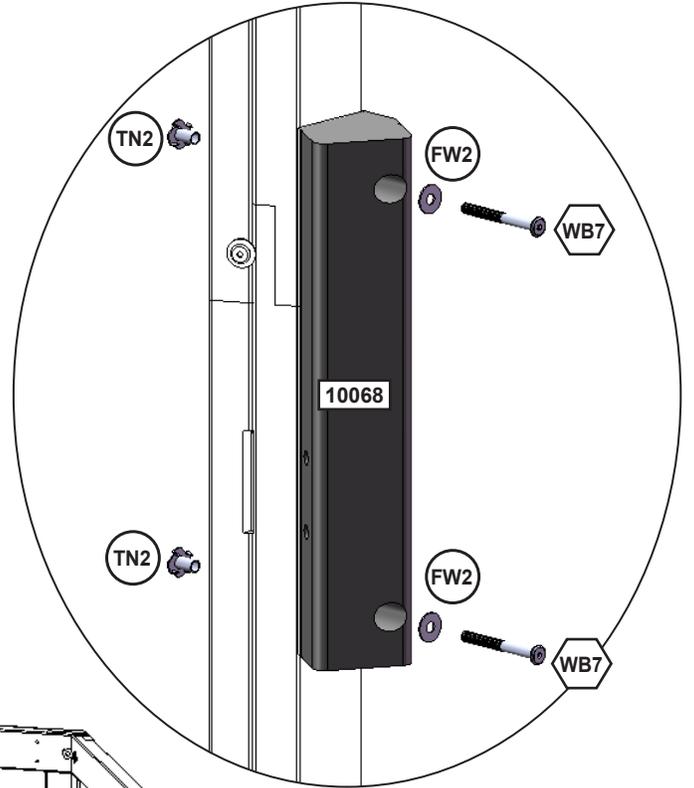


Wood Parts

1 x  76.2 x 85.0 x 406.4 mm (3 x 3-3/8 x 16")


Hardware

2 x  7.9mm x 76.2mm (5/16 x 3") (FW2, TN2)

Step 26

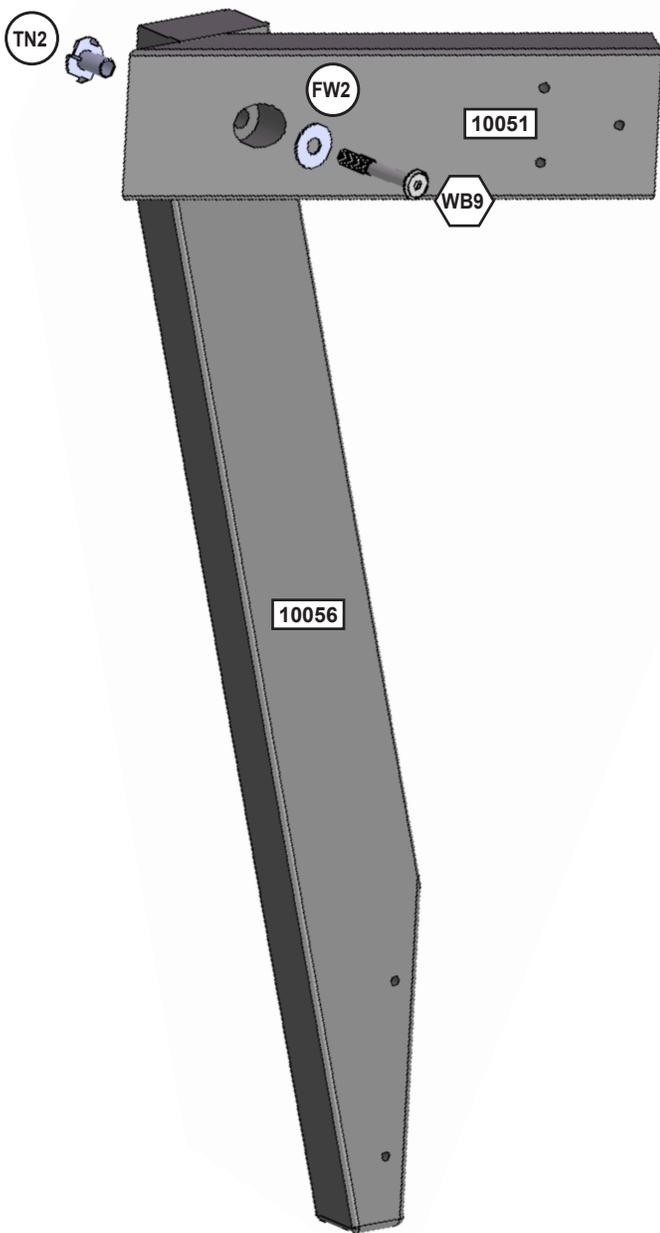

x 2

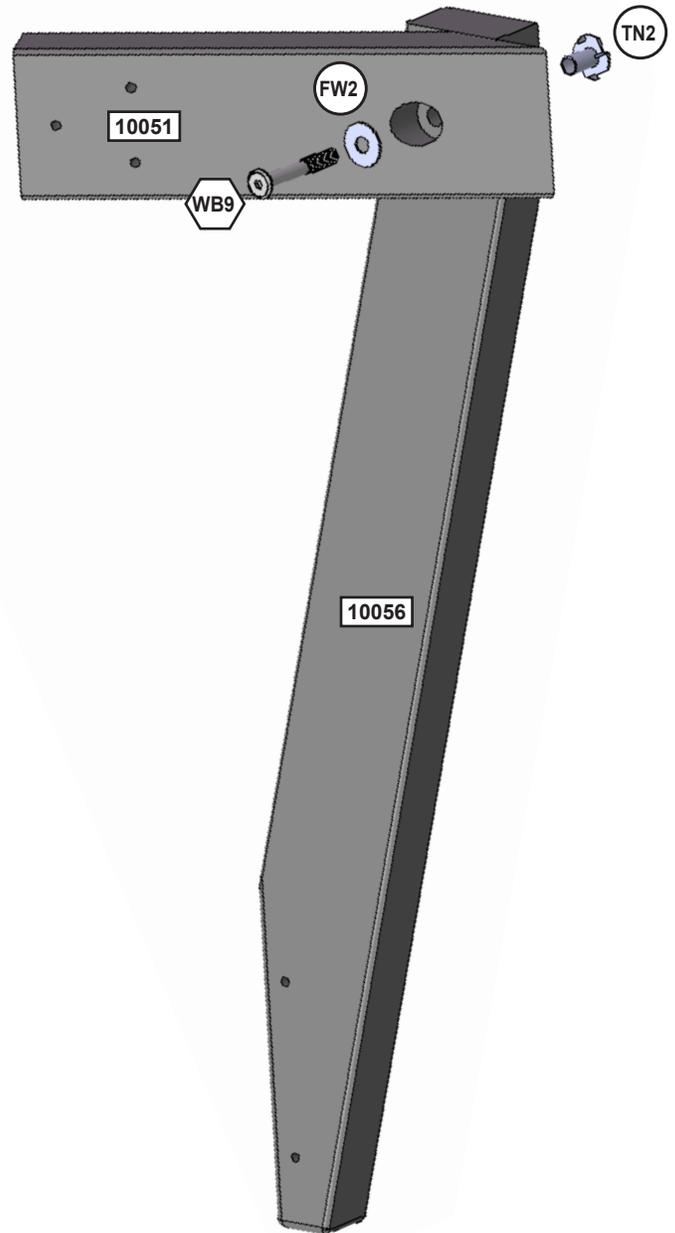

x 2


Wood Parts

- 4 x  31.8 x 76.2 x 263.0 mm (1-1/4 x 3 x 10-3/8")
- 4 x  31.8 x 76.2 x 654.1 mm (1-1/4 x 3 x 25-3/4")

Hardware

- 4 x  7.9 x 54 mm (5/16 x 2-1/8") (FW2, TN2)


Step 27

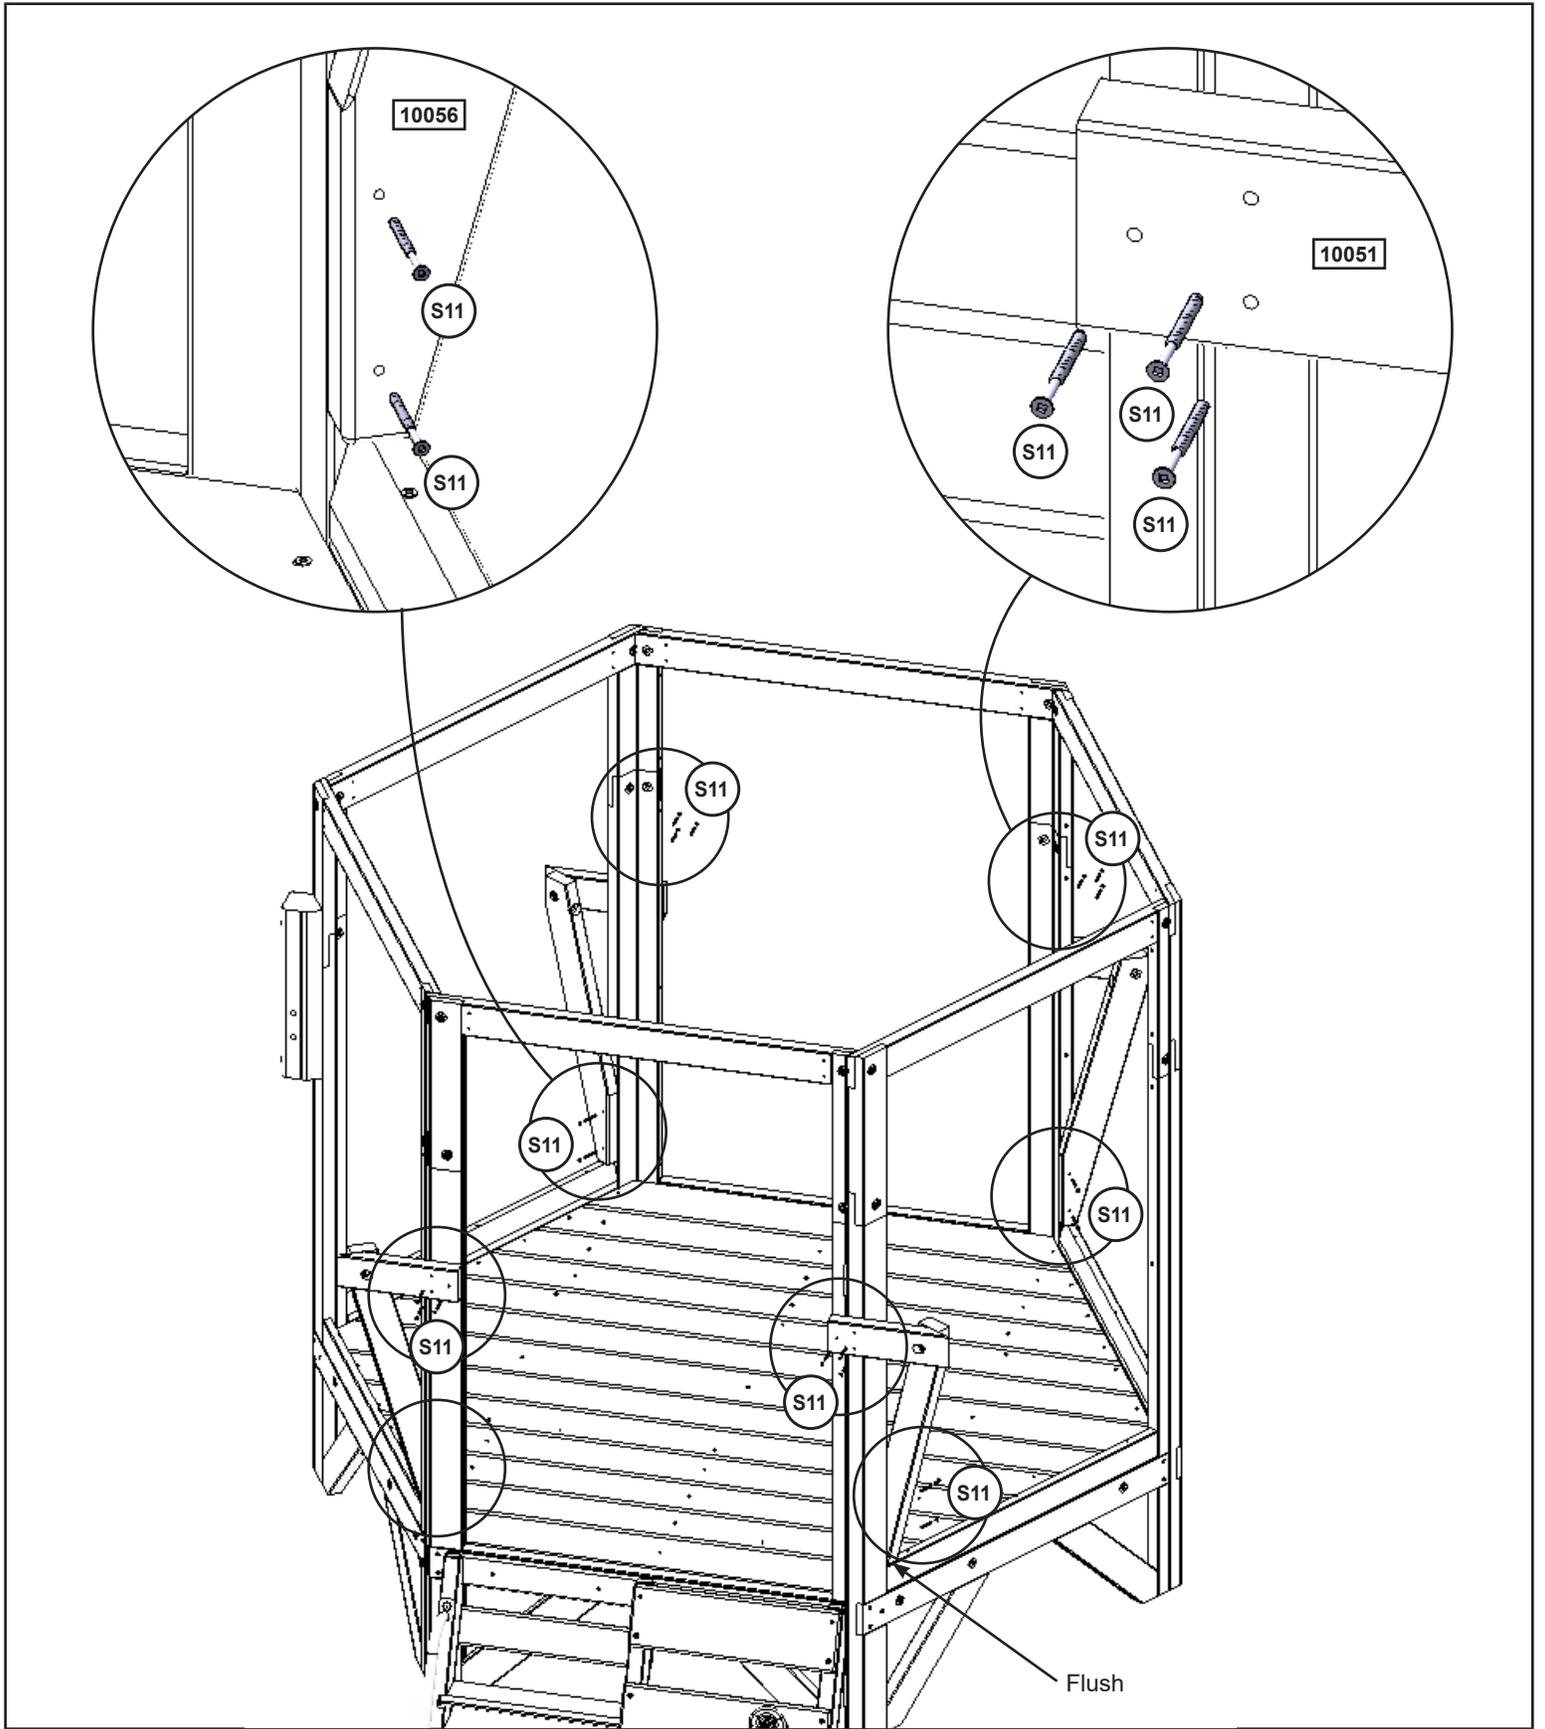

Hardware

20 x  #8 x 50.8 mm (#8 x 2")

Step 28 x 4

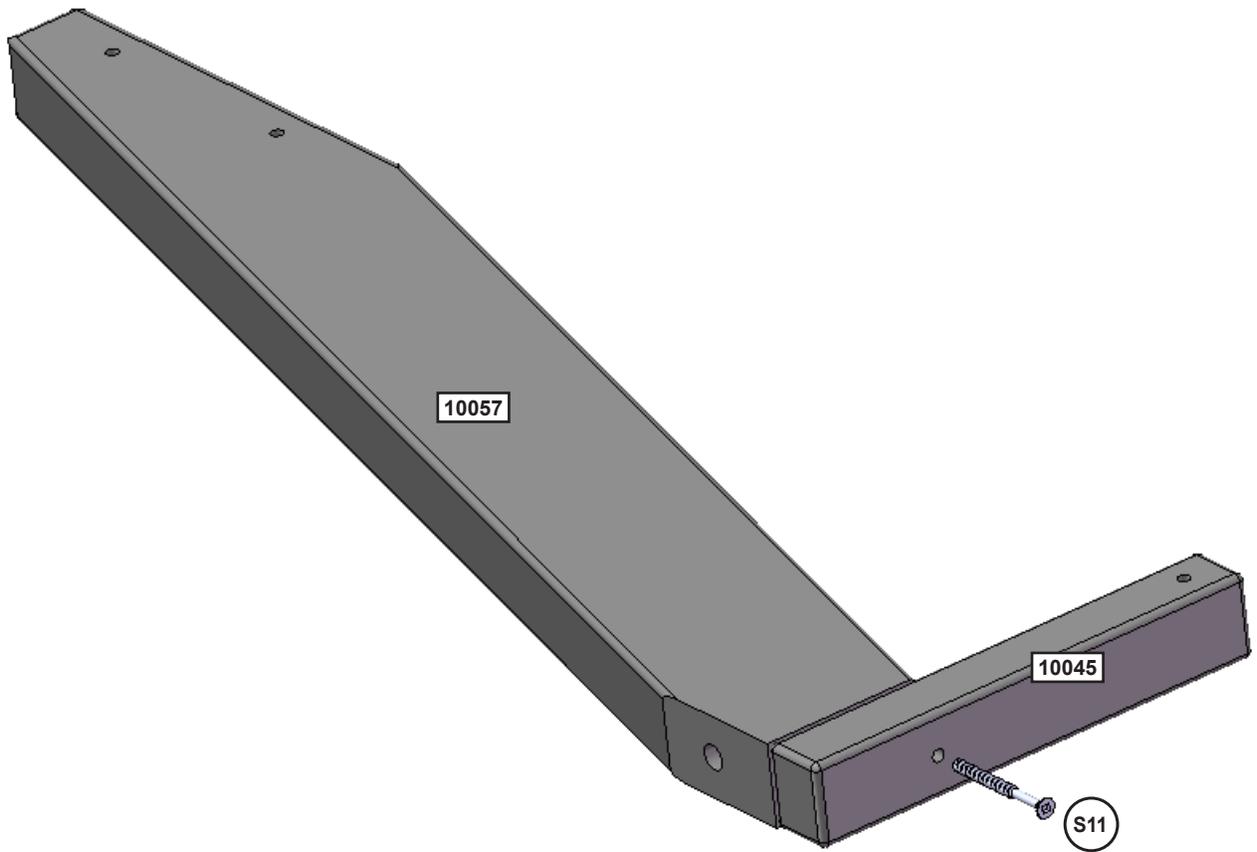


Wood Parts

- 4 x 10045 25.4 x 31.8 x 183.7 mm (1 x 1-1/4 x 7-1/4")
- 4 x 10057 31.8 x 76.2 x 629.3 mm (1-1/4 x 3 x 24-3/4")

Hardware

- 4 x S11 #8 x 50.8 mm (#8 x 2")


Step 29

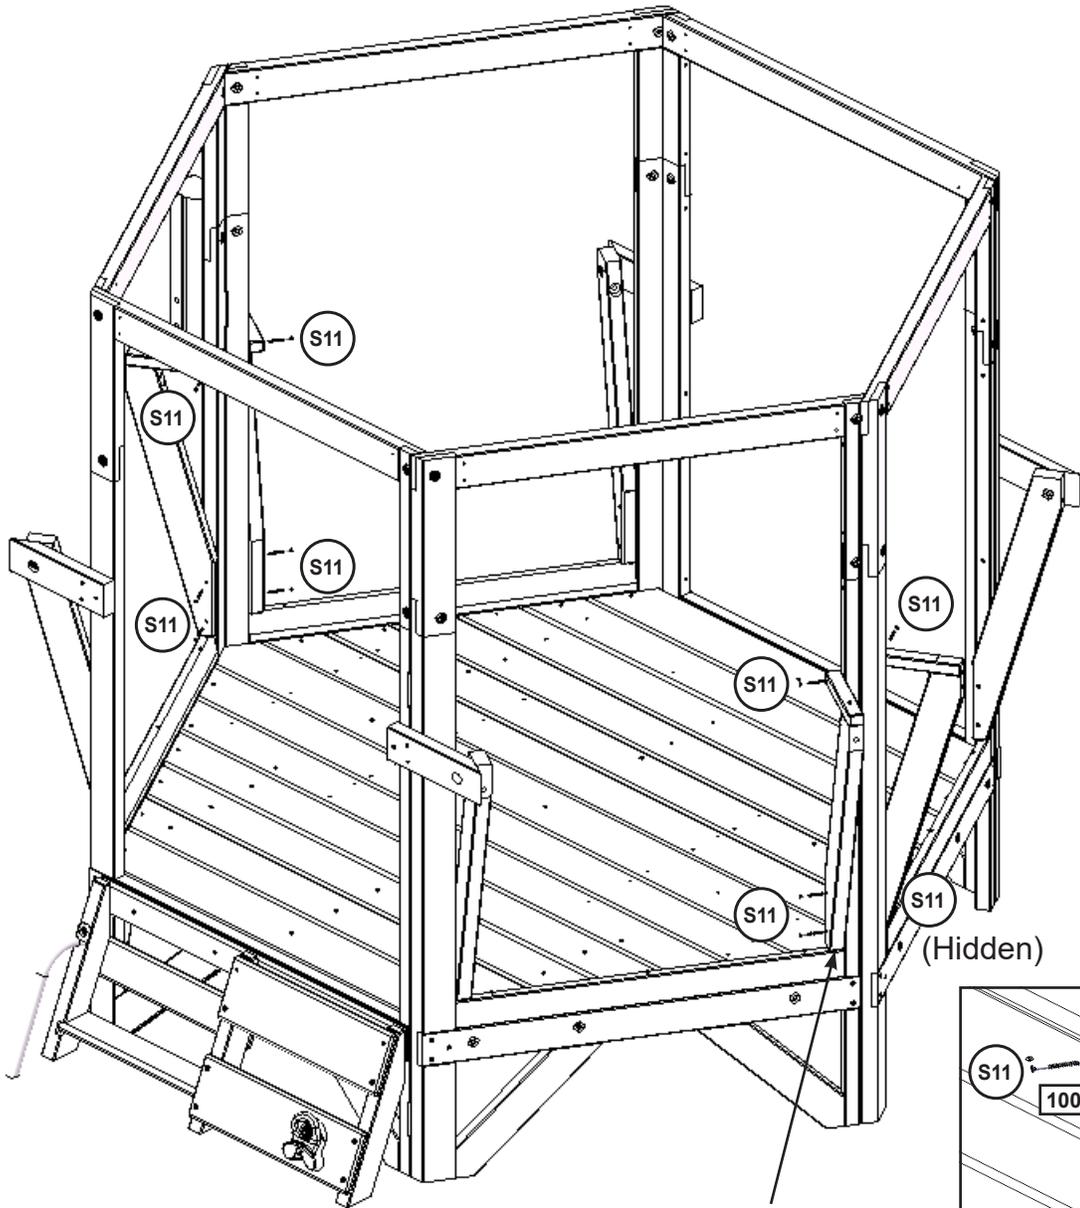

Bottom half of structure removed for clarity.

Flush




(Hidden)

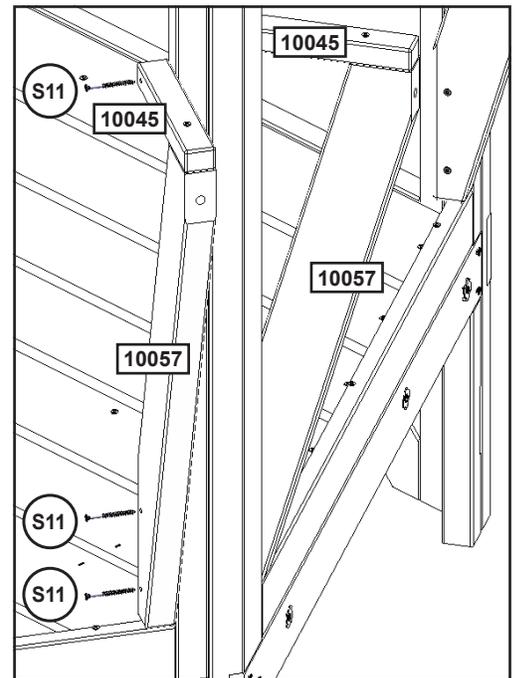

Hardware

12 x  #8 x 50.8 mm (#8 x 2")

Step 30

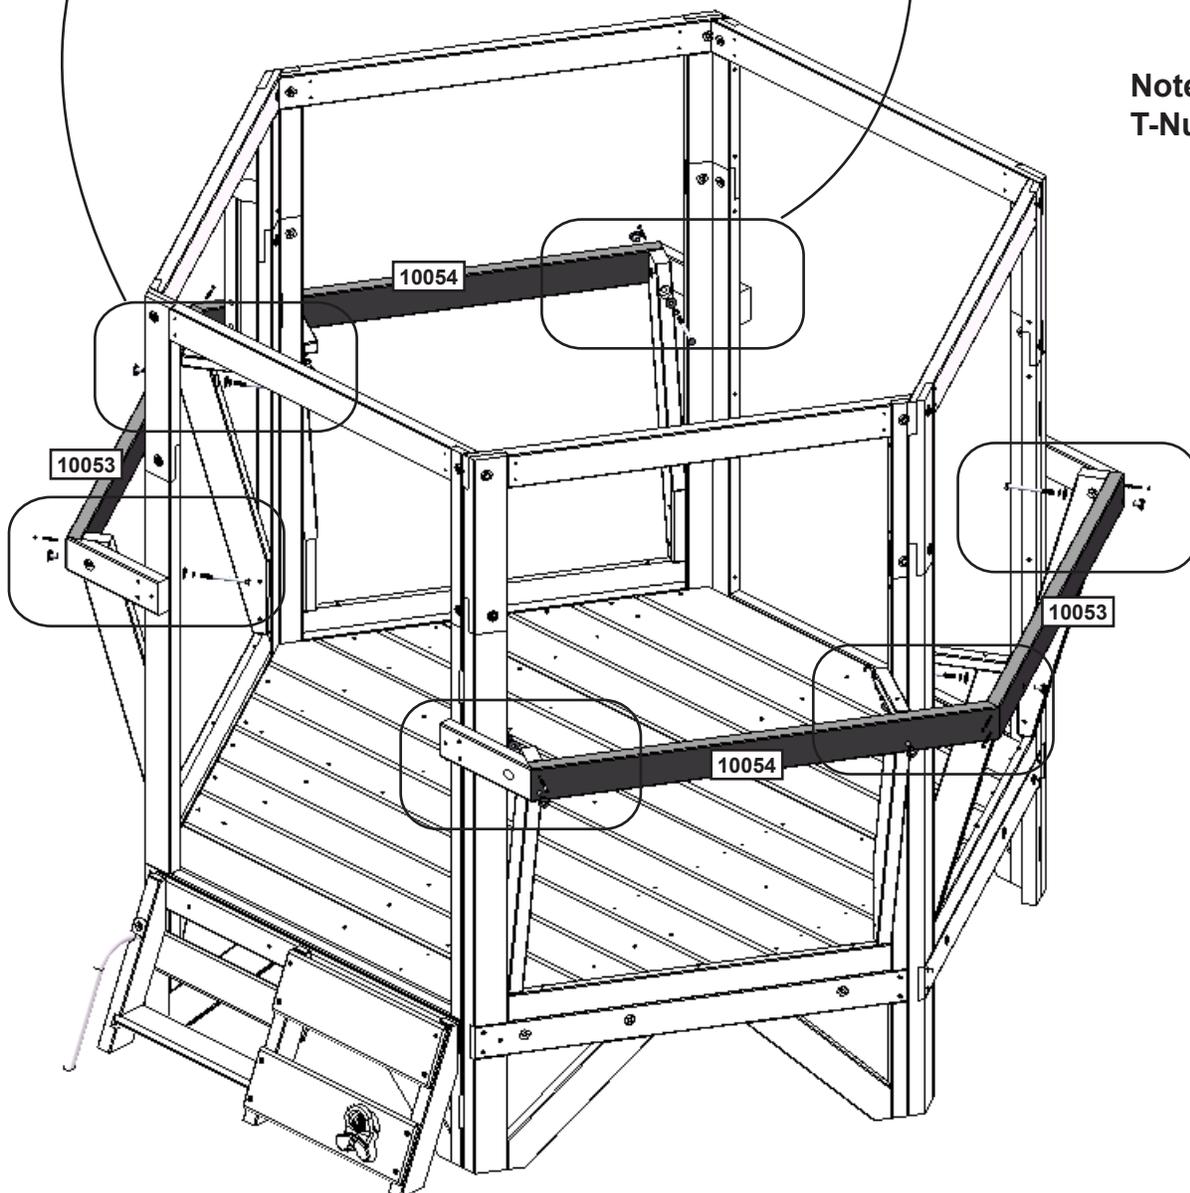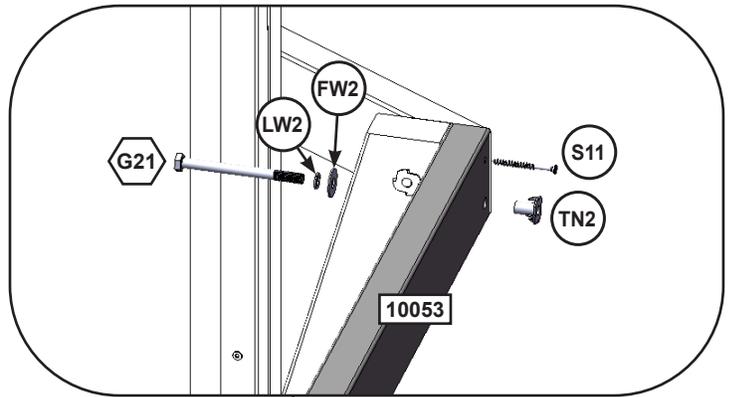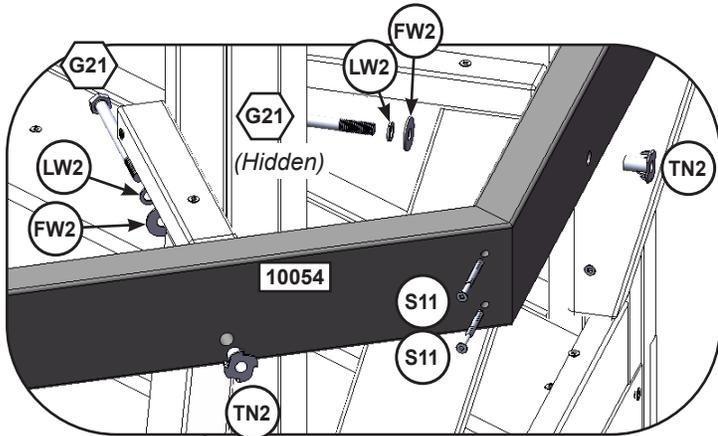

Note: Install T-Nuts first!


Wood Parts

- 2 x **10053** 31.8 x 76.2 x 976.5 mm (1-1/4 x 3 x 38-7/16")
- 2 x **10054** 31.8 x 76.2 x 976.5 mm (1-1/4 x 3 x 38-7/16")


Hardware

- 8 x **G21** 7.9 x 95 mm (5/16 x 3-3/4") (FW2, LW2, TN2)
- 8 x **S11** #8 x 50.8 mm (#8 x 2")

Step 31

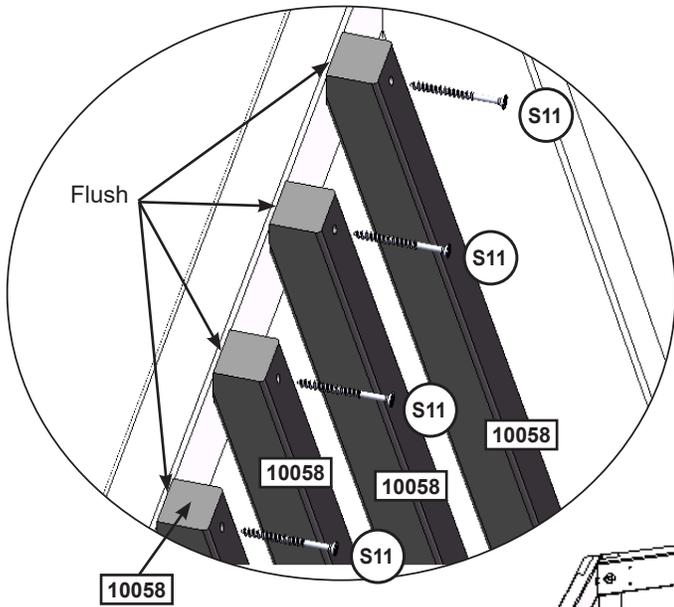

Evenly space

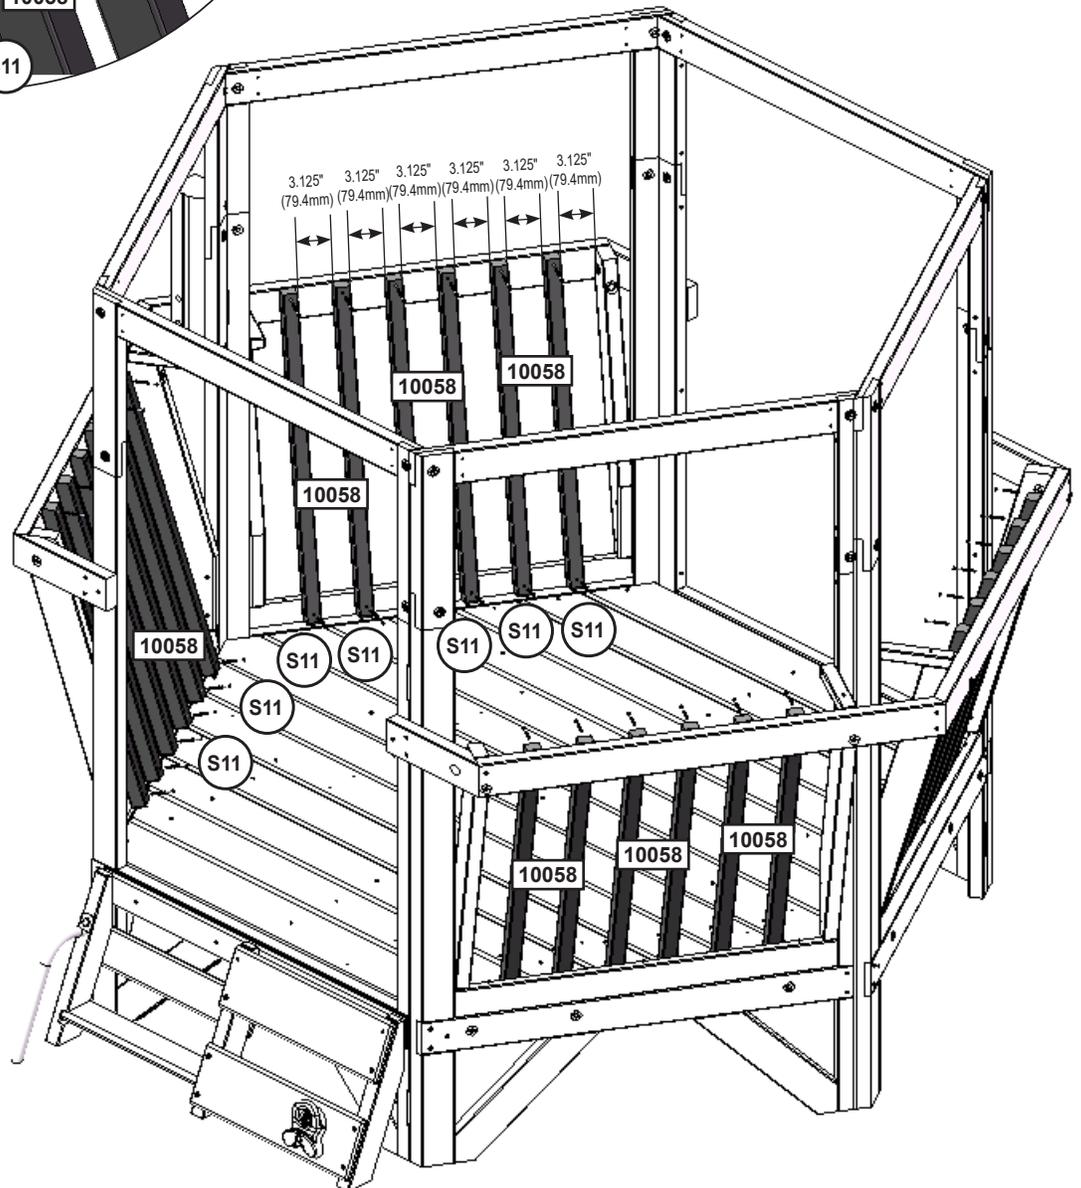


Wood Parts

24 x **10058** 31.8 x 31.8 x 699.1 mm (1-1/4 x 1-1/4 x 27-1/2")


Hardware

48 x **S11** #8 x 50.8 mm (#8 x 2")

Step 32

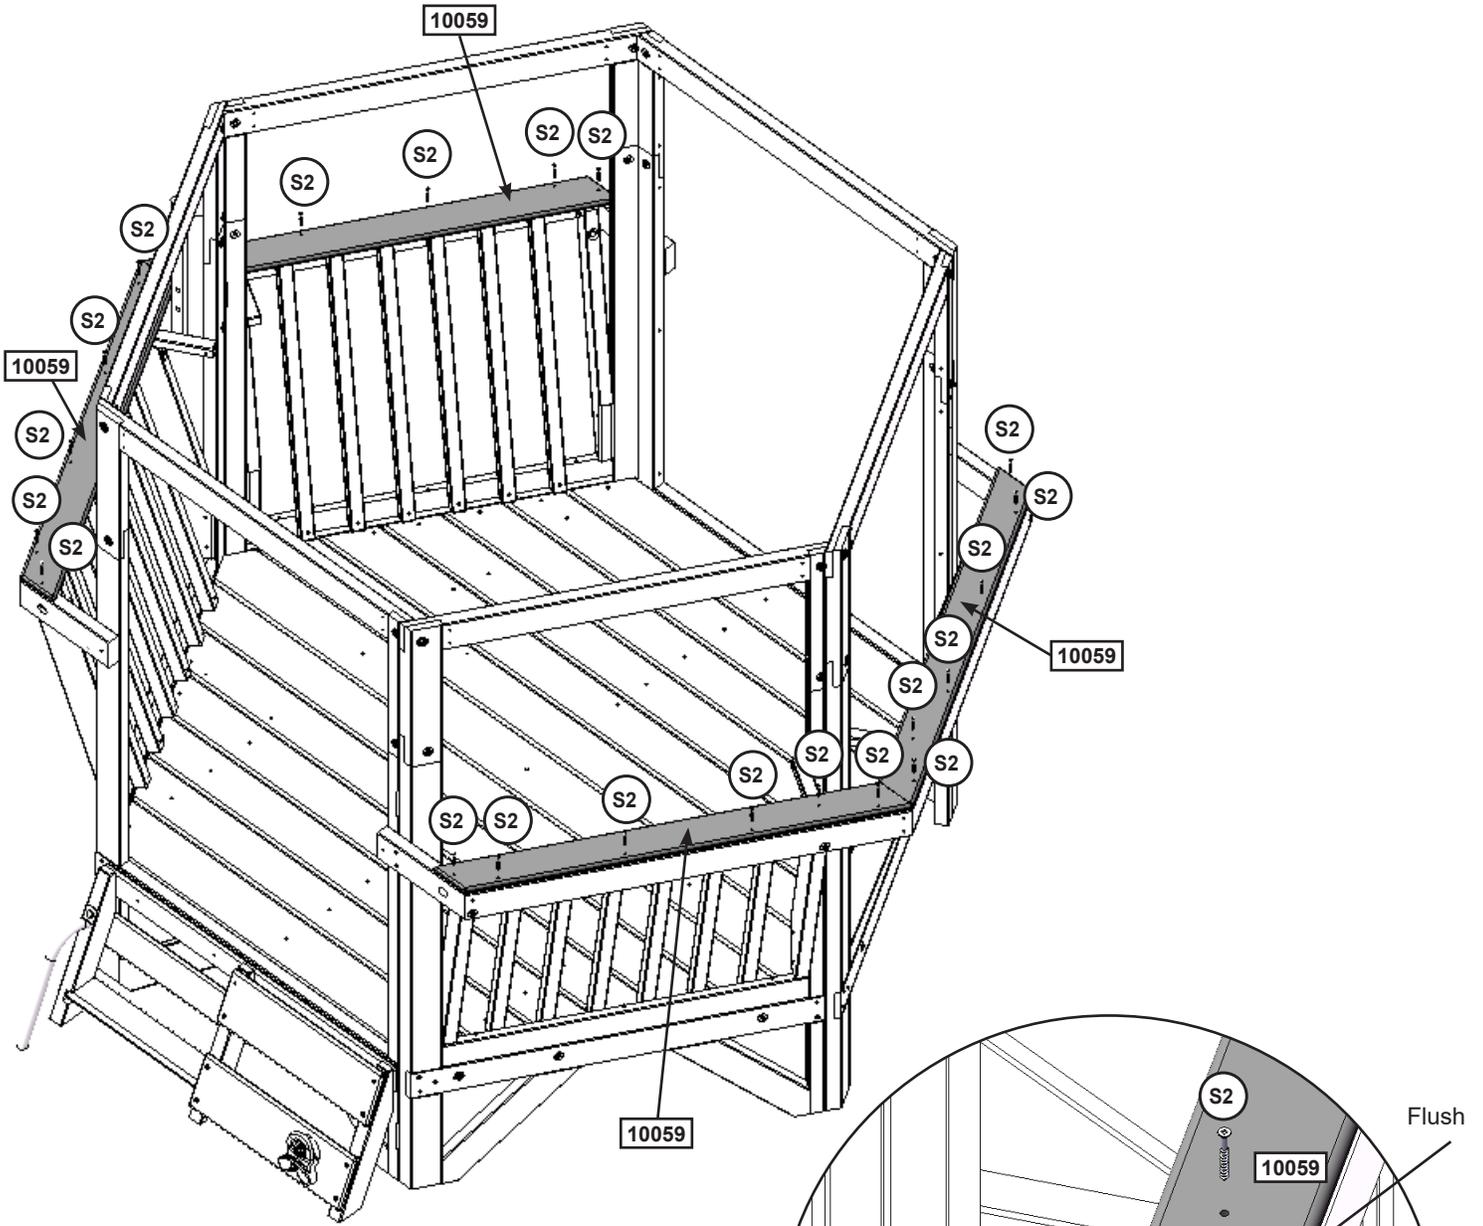

Bottom half of structure removed for clarity.

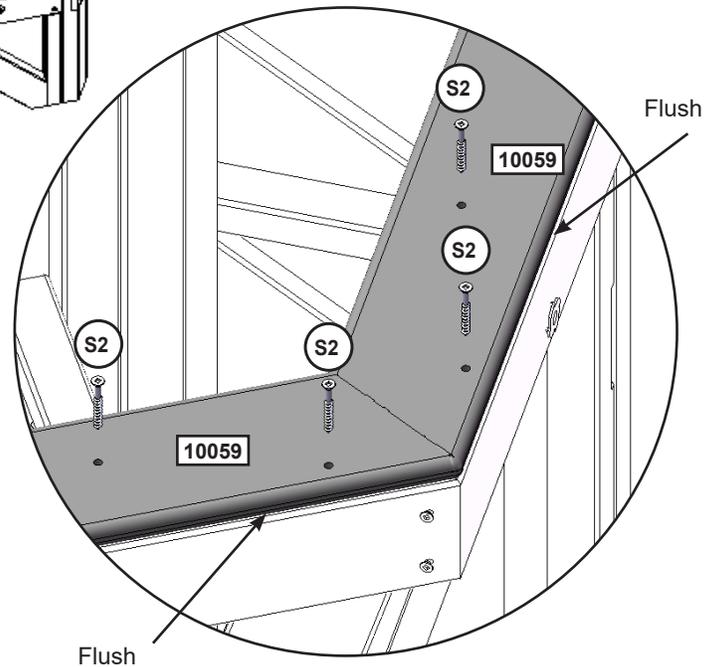


Wood Parts

4 x 10059 15.9 x 88.9 x 1026.8 mm (5/8 x 3-1/2 x 40-7/16")

Hardware

24 x S2 #8 x 38.1mm (#8 x 1-1/2")

Step 33

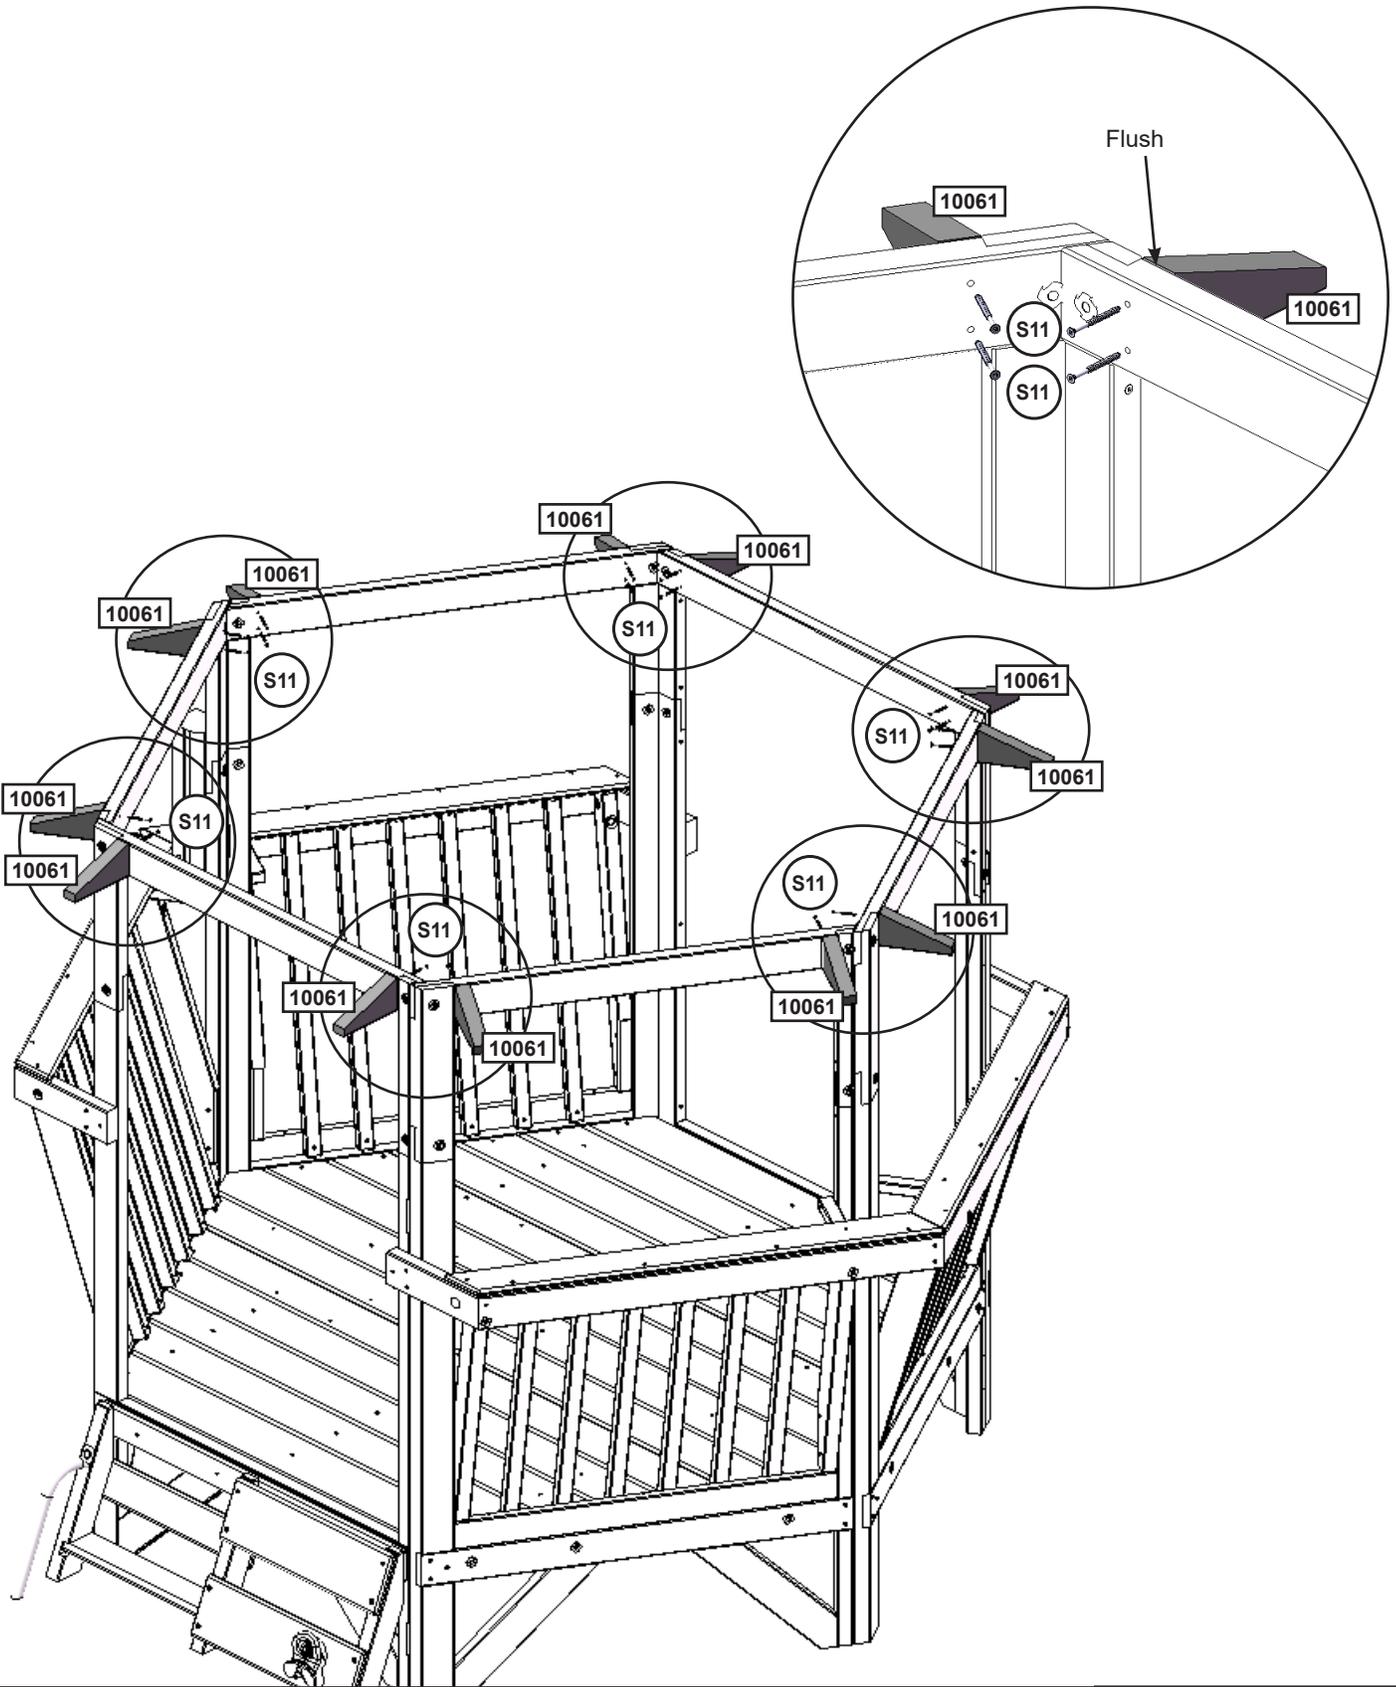

Wood Parts

12 x **10061** 31.8 x 76.2 x 152.4 mm (1-1/4 x 3 x 6")



Hardware

24 x **S11** #8 x 50.8 mm (#8 x 2")

Step 34



View from underneath

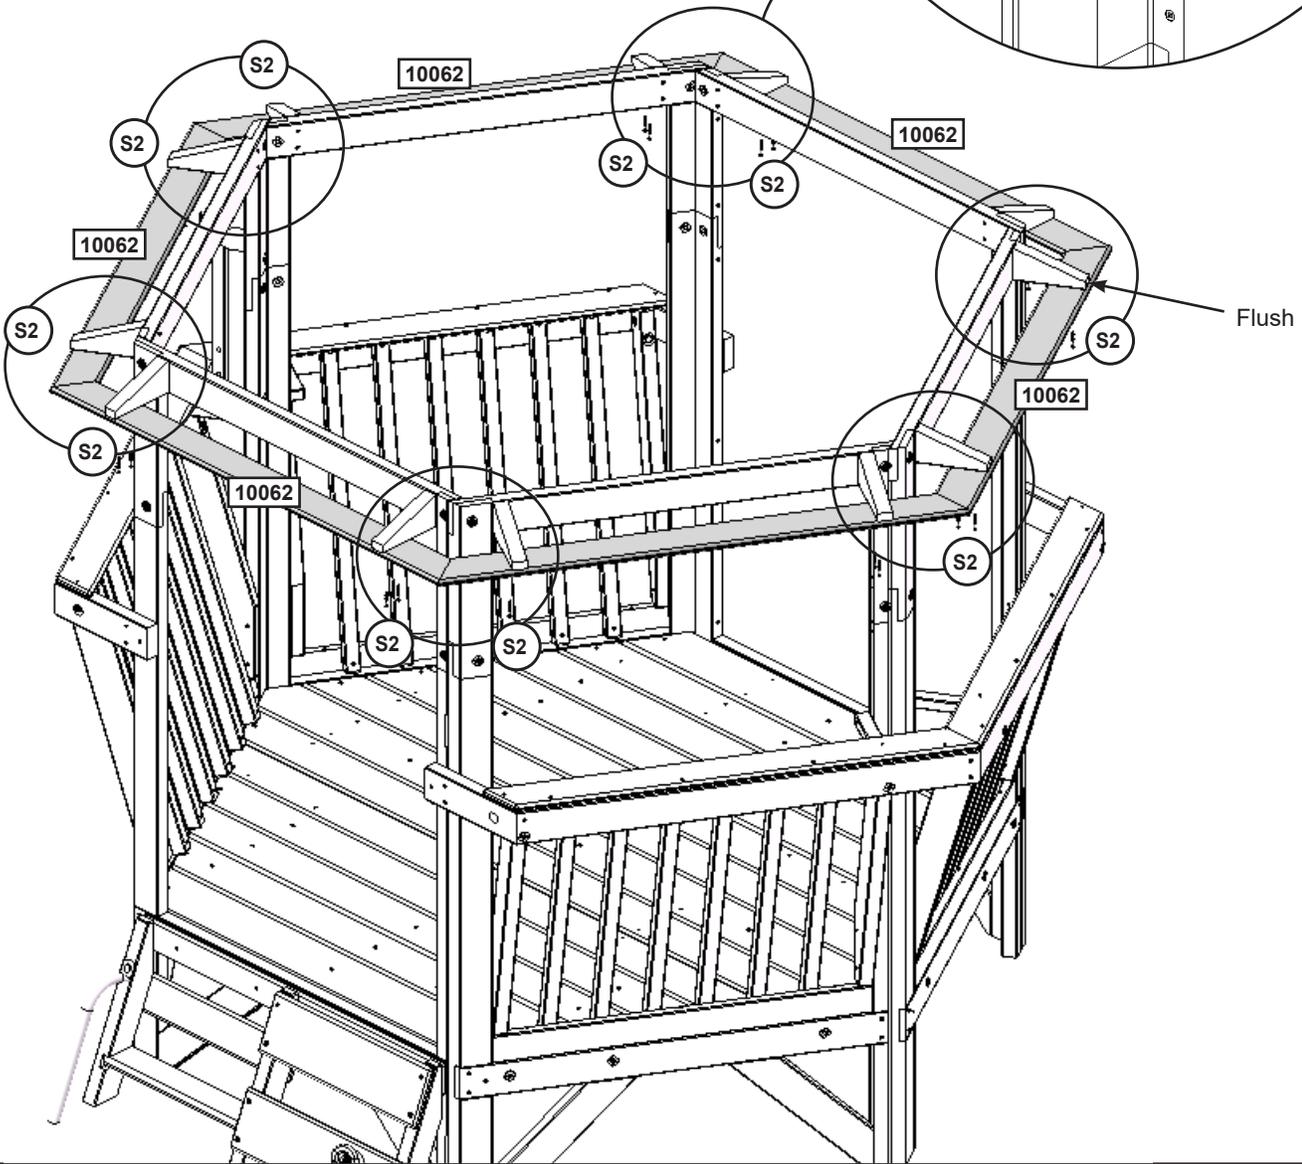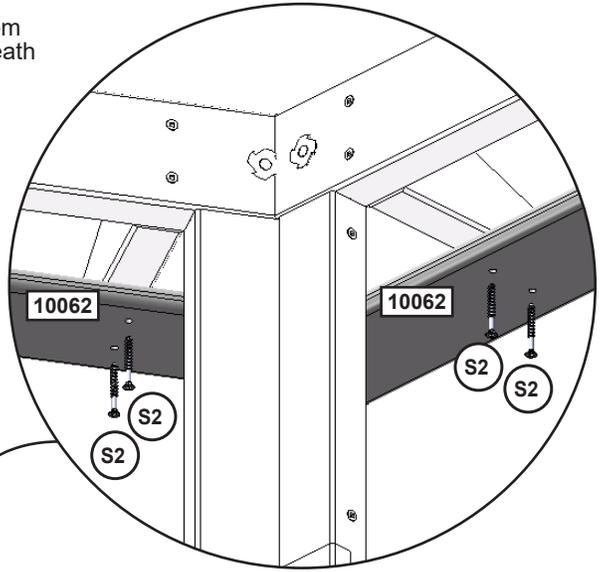


Wood Parts

6 x **10062** 15.9 x 88.9 x 1118.8 mm (5/8 x 3-1/2 x 44-1/16")

Hardware

24 x **S2** #8 x 38.1mm (#8 x 1-1/2")

Step 35

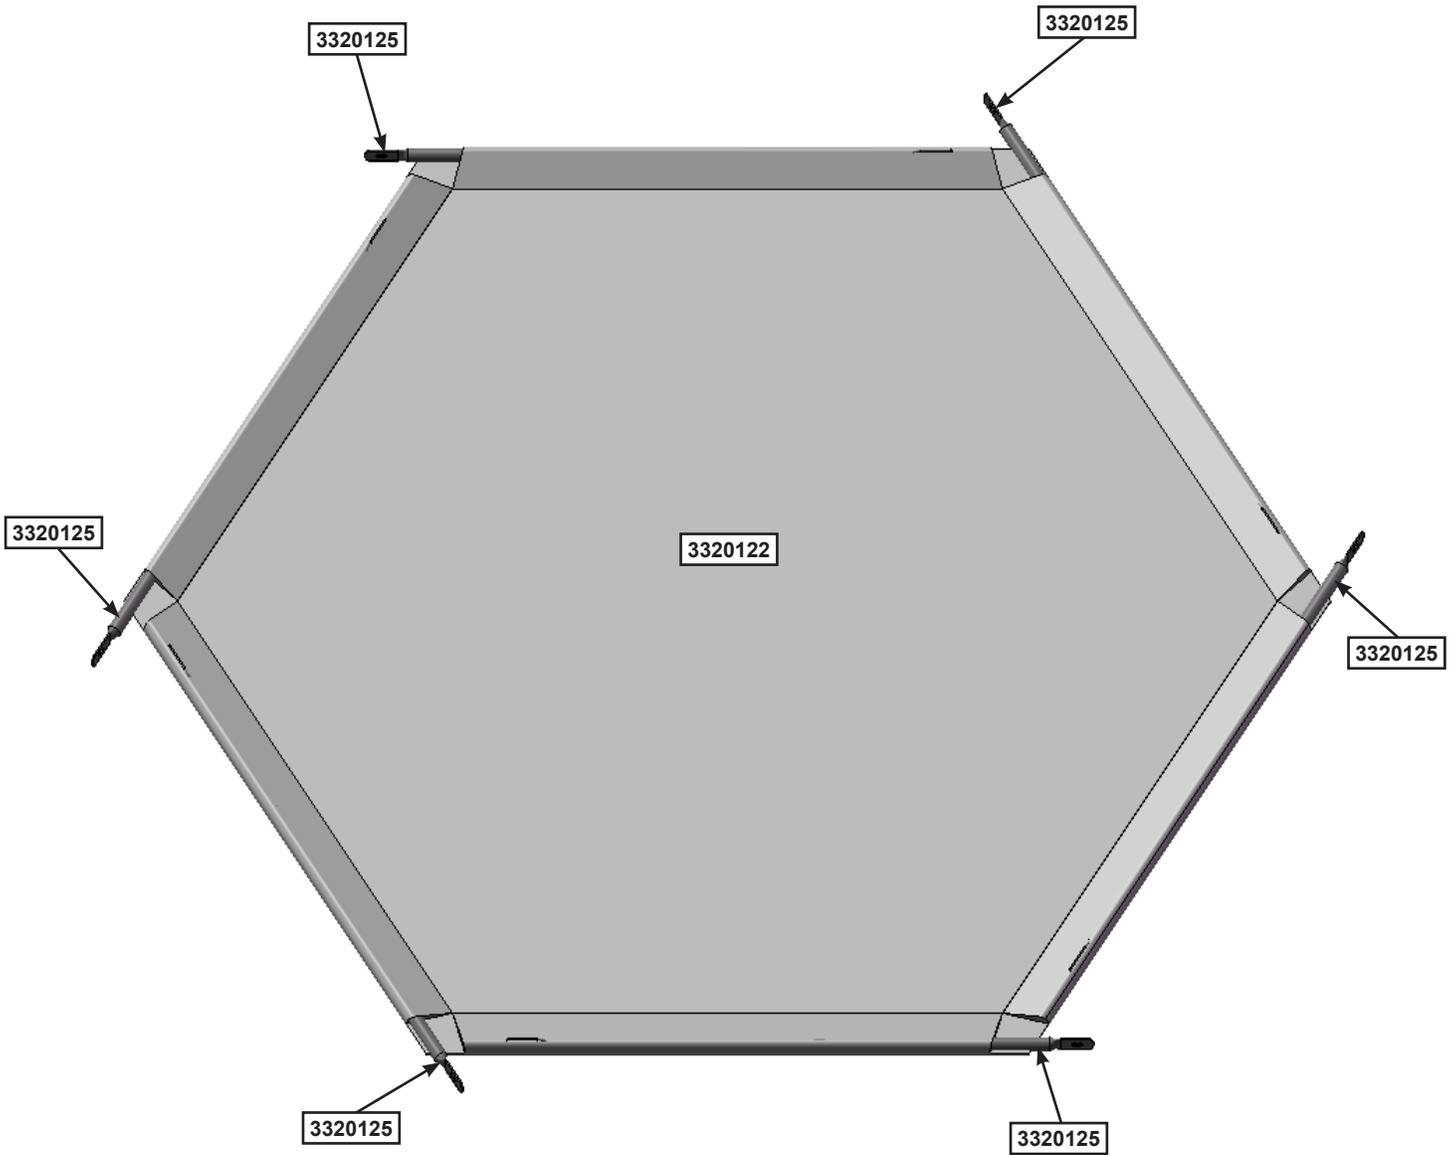


Other Parts

1 x 3320125 (6pk)

1 x 3320122


Step 36

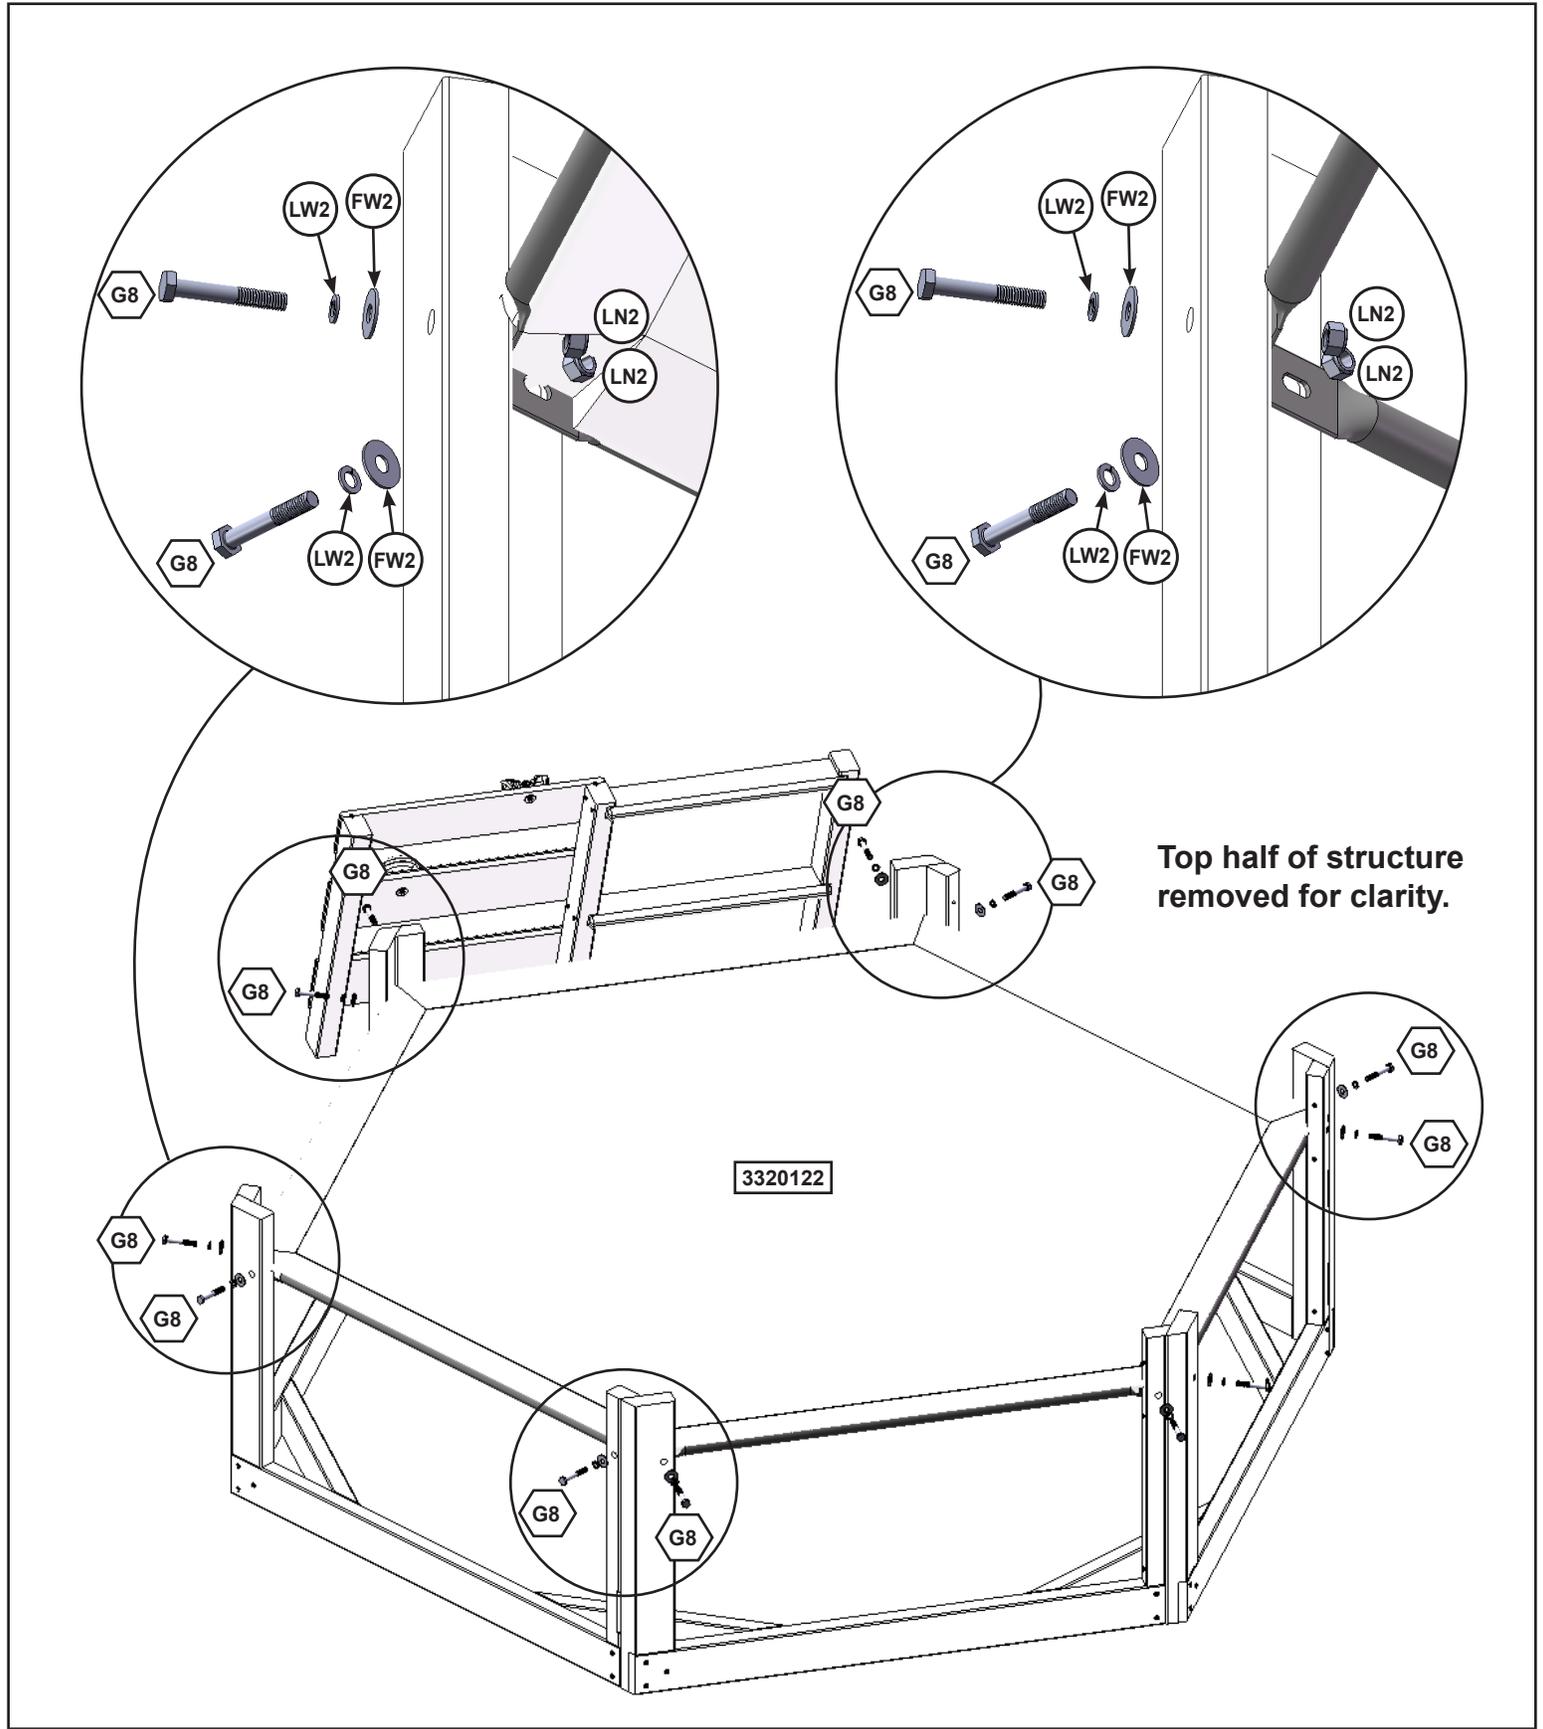


Hardware

12 x  7.9 x 50.8 mm (5/16 x 2") (LW2, FW2, LN2)


Step 37

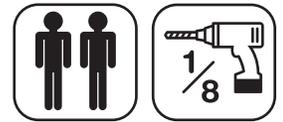

Note: Pre-drill all holes using a 1/8" drill bit before installing the S7 screws.

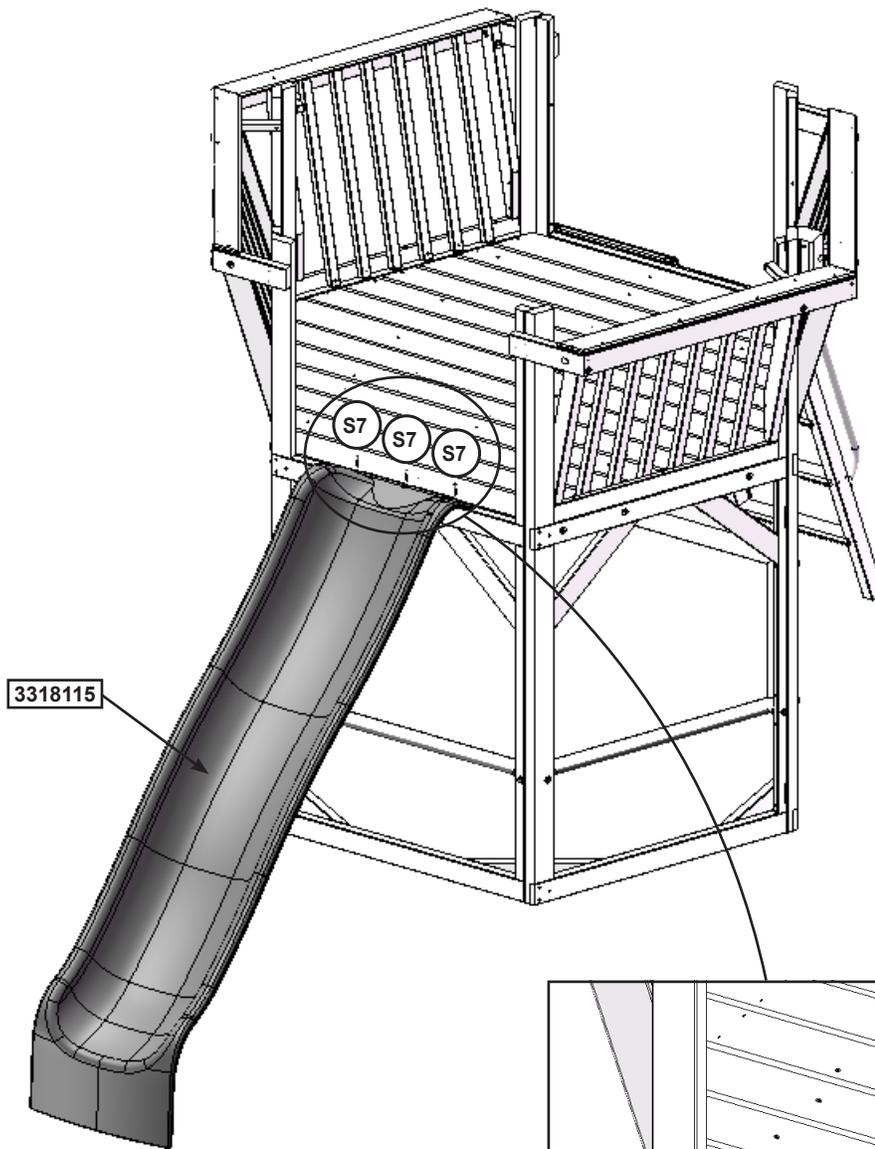

Top half of structure removed for clarity.

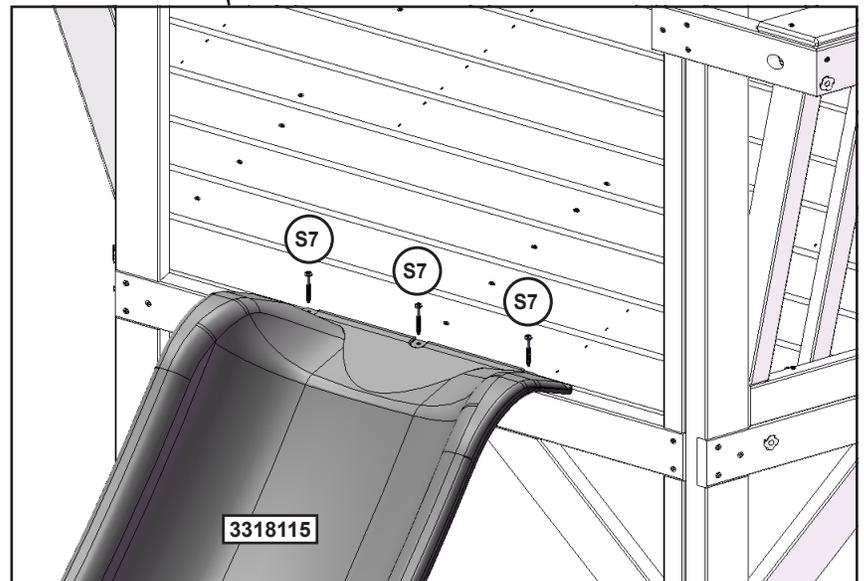

Center Installation

Hardware

3 x #12 x 50.8mm (#12 x 2")

Other Parts


1 x 3318115

Step 38



Note: Install T-Nuts first!

Note: Tighten nut after the following step.

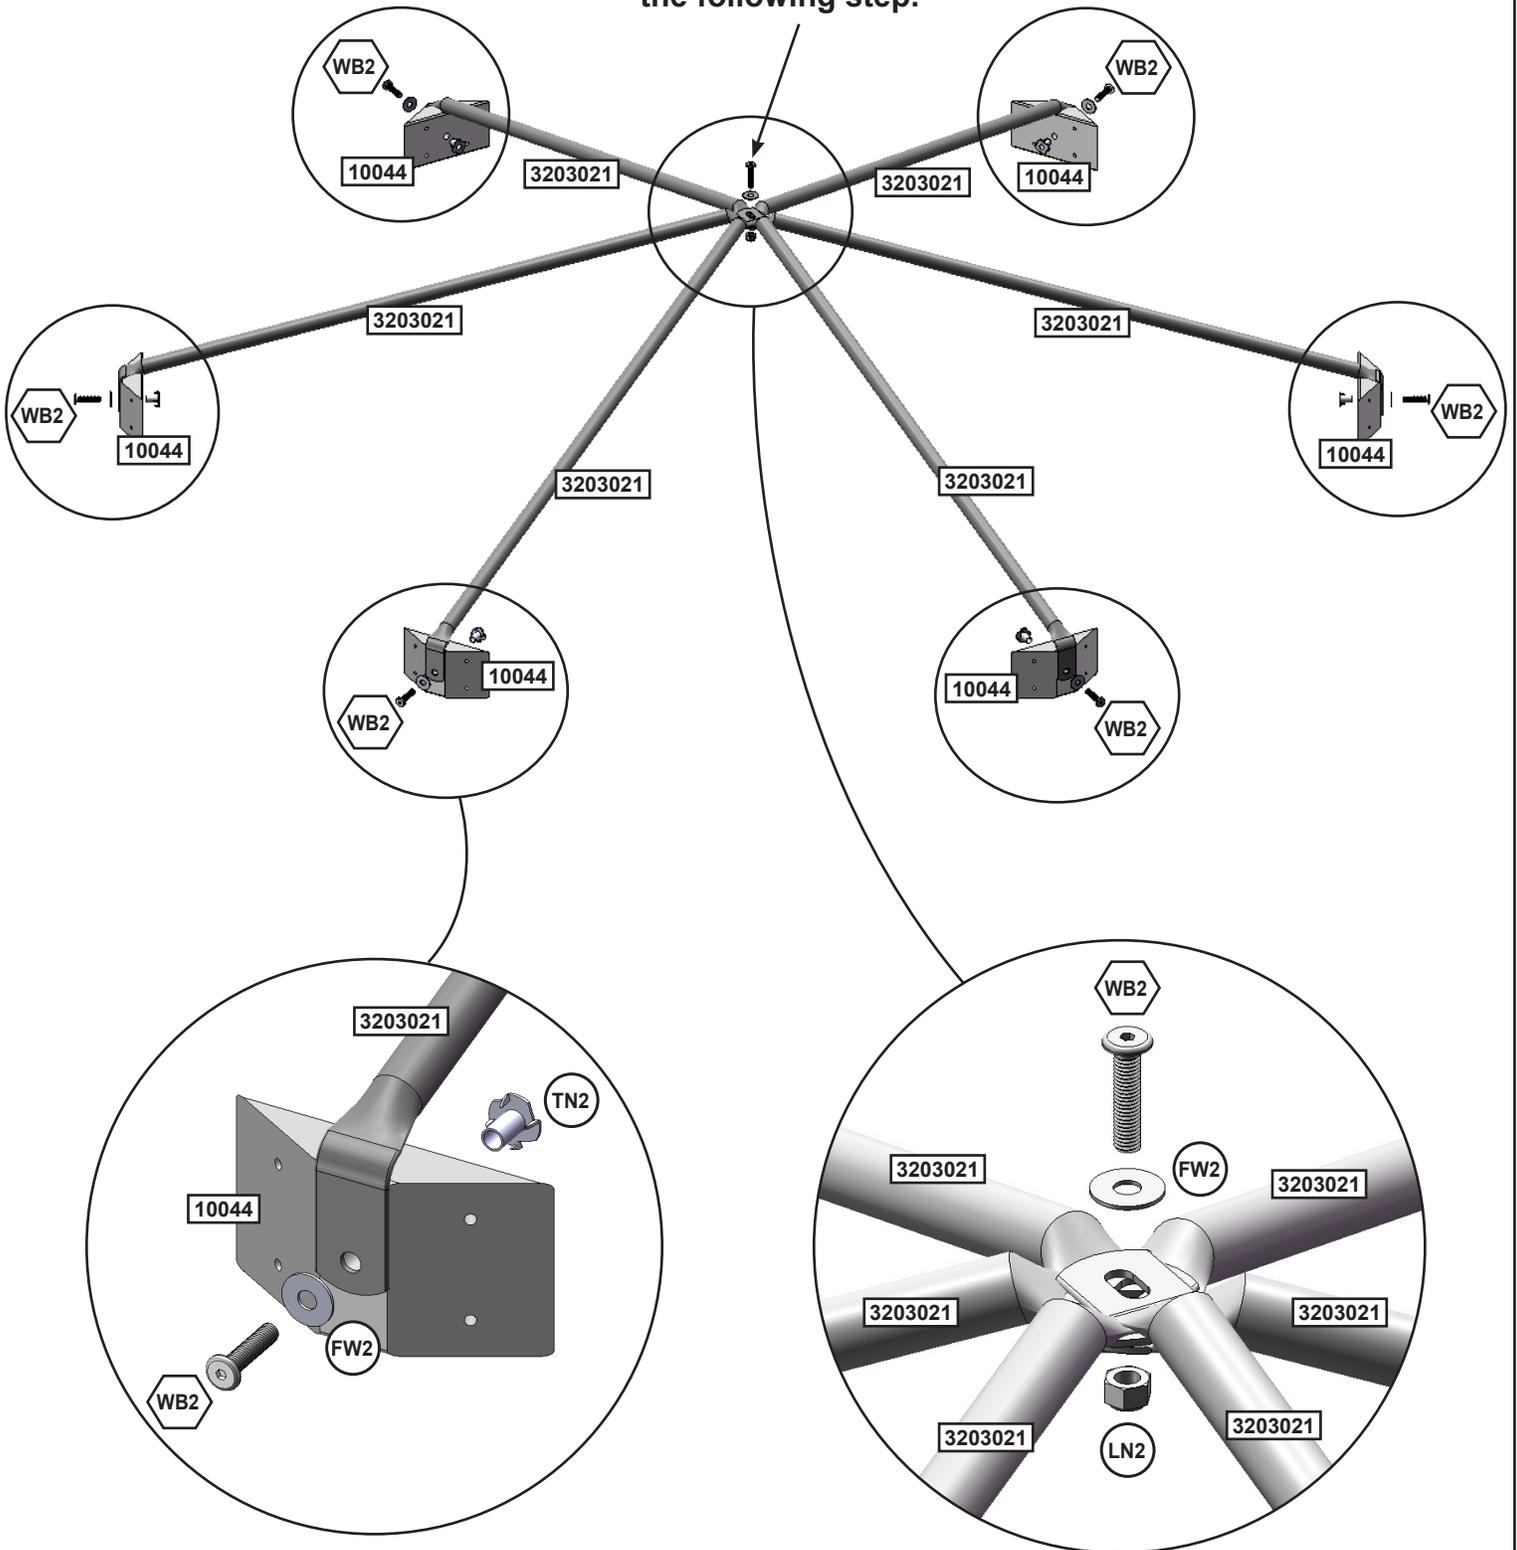

Wood Parts

6 x **10044** 31.8 x 76.2 x 139.7 mm (1-1/4 x 3 x 5-1/2")

Hardware


6 x **WB2** 7.9mm x 34.9mm (5/16 x 1-3/8") (FW2, TN2)

1 x **WB2** 7.9mm x 34.9mm (5/16 x 1-3/8") (FW2, LN2)


Other Parts

1 x **3203021** (6pk)

Step 39

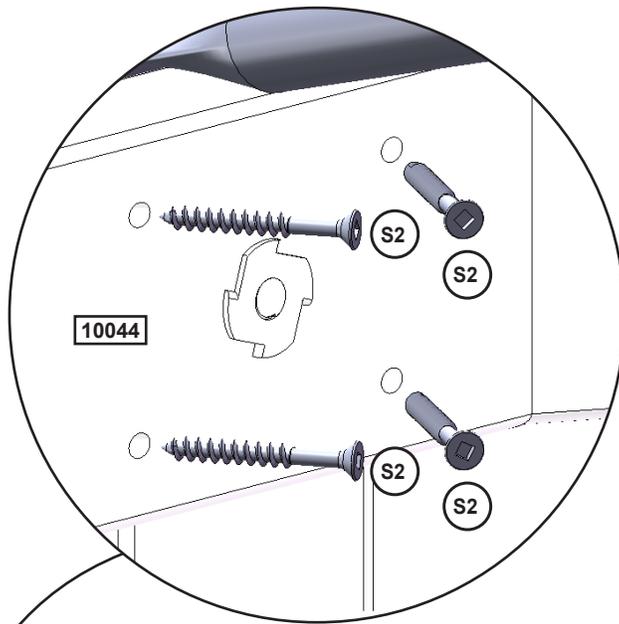



Tighten LN2 at this step.

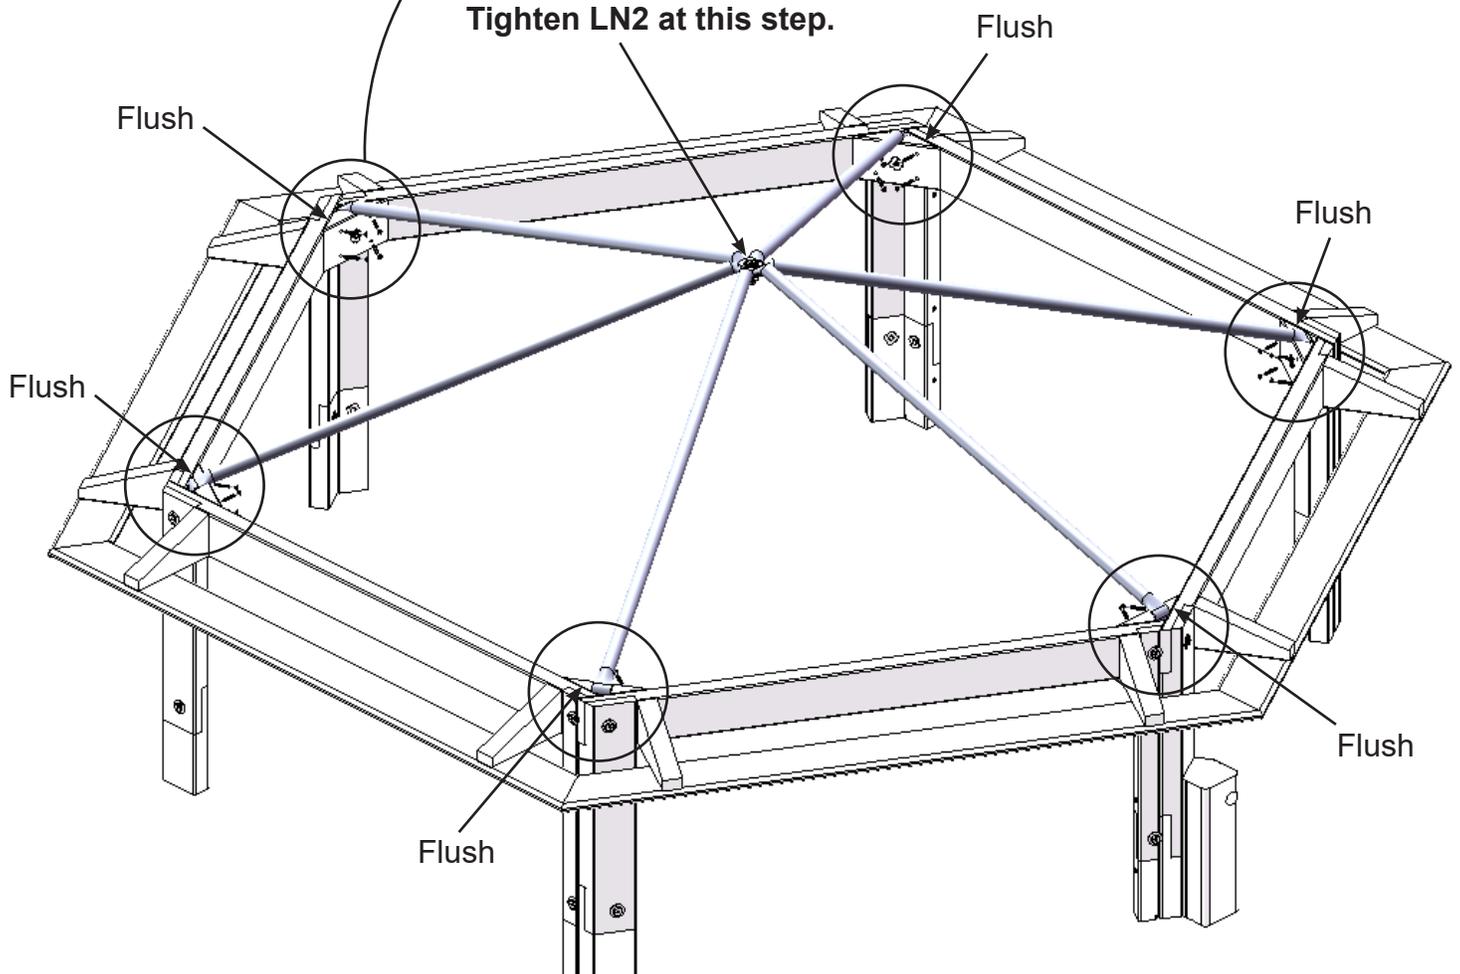

Hardware

24 x  #8 x 38.1mm (#8 x 1-1/2")

Step 40

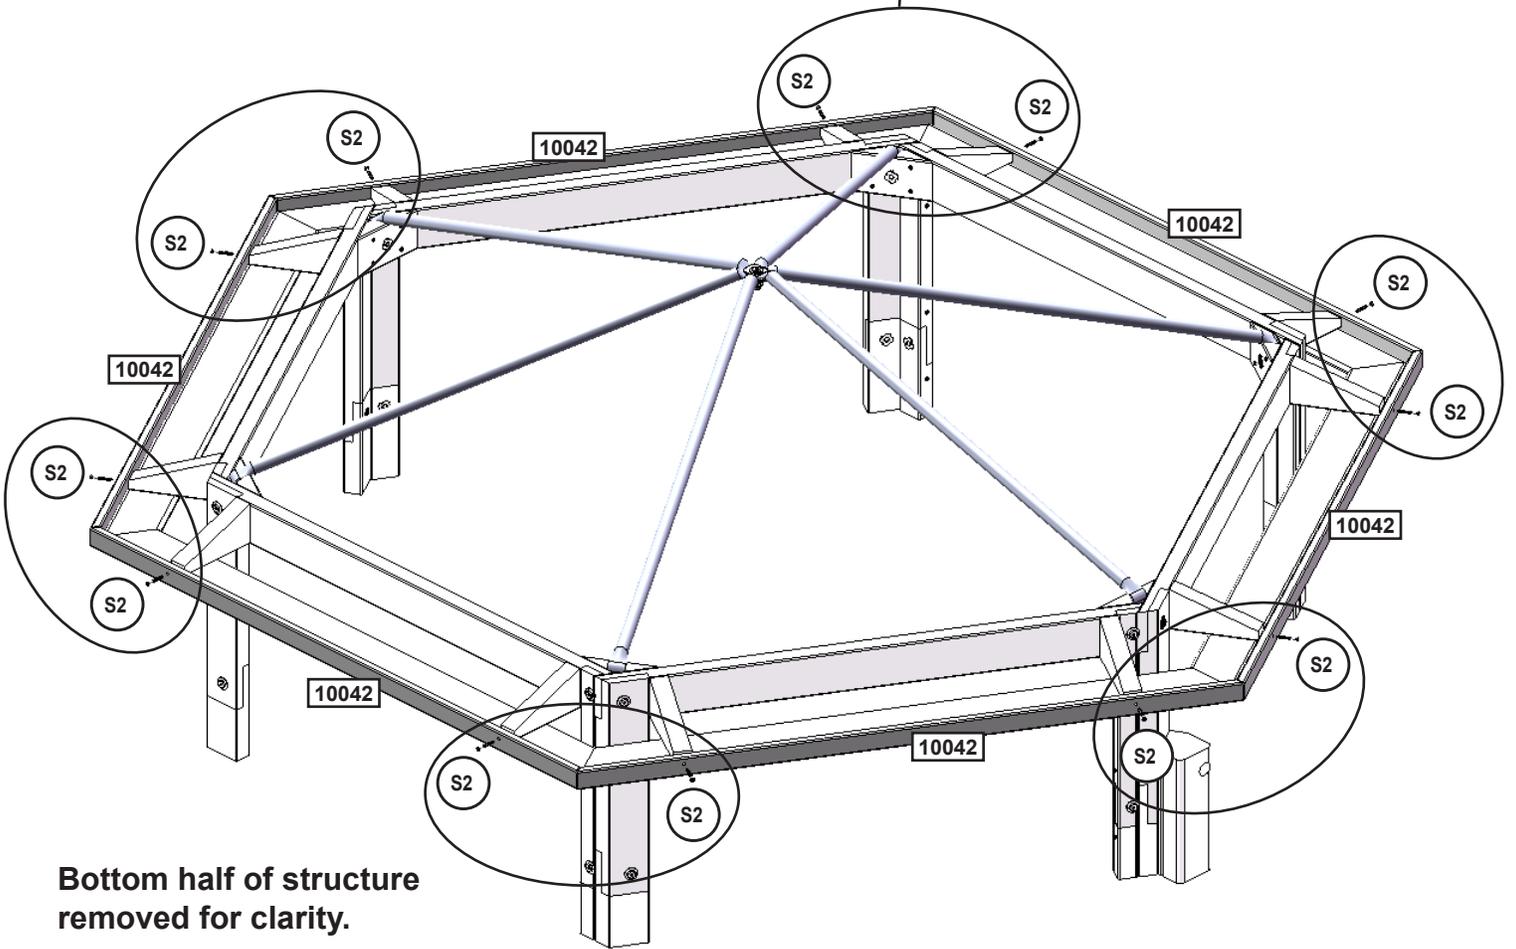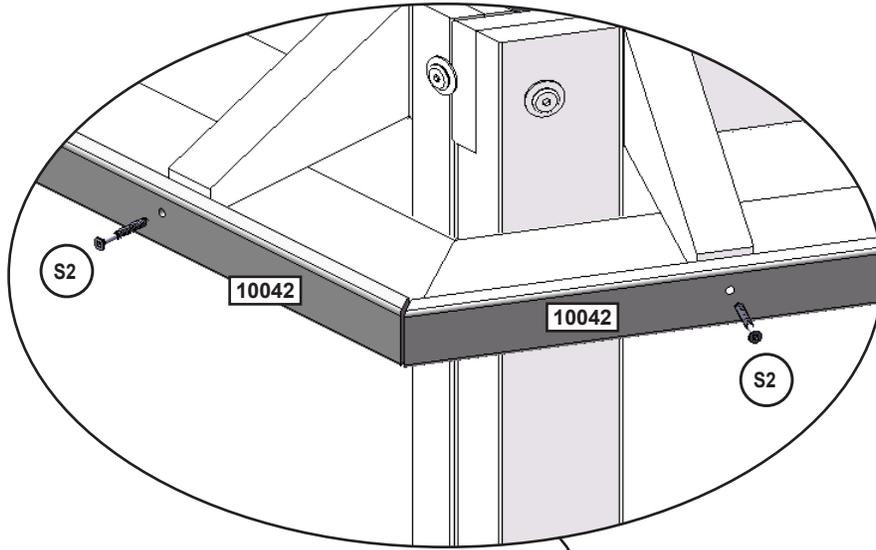

Bottom half of structure removed for clarity.

Wood Parts

6 x 10042 15.9 x 34.9 x 1137.2 mm (5/8 x 1-3/8 x 44-3/4")


Hardware

12 x S2 #8 x 38.1mm (#8 x 1-1/2")

Step 41





Note: Evenly distribute fabric roof.

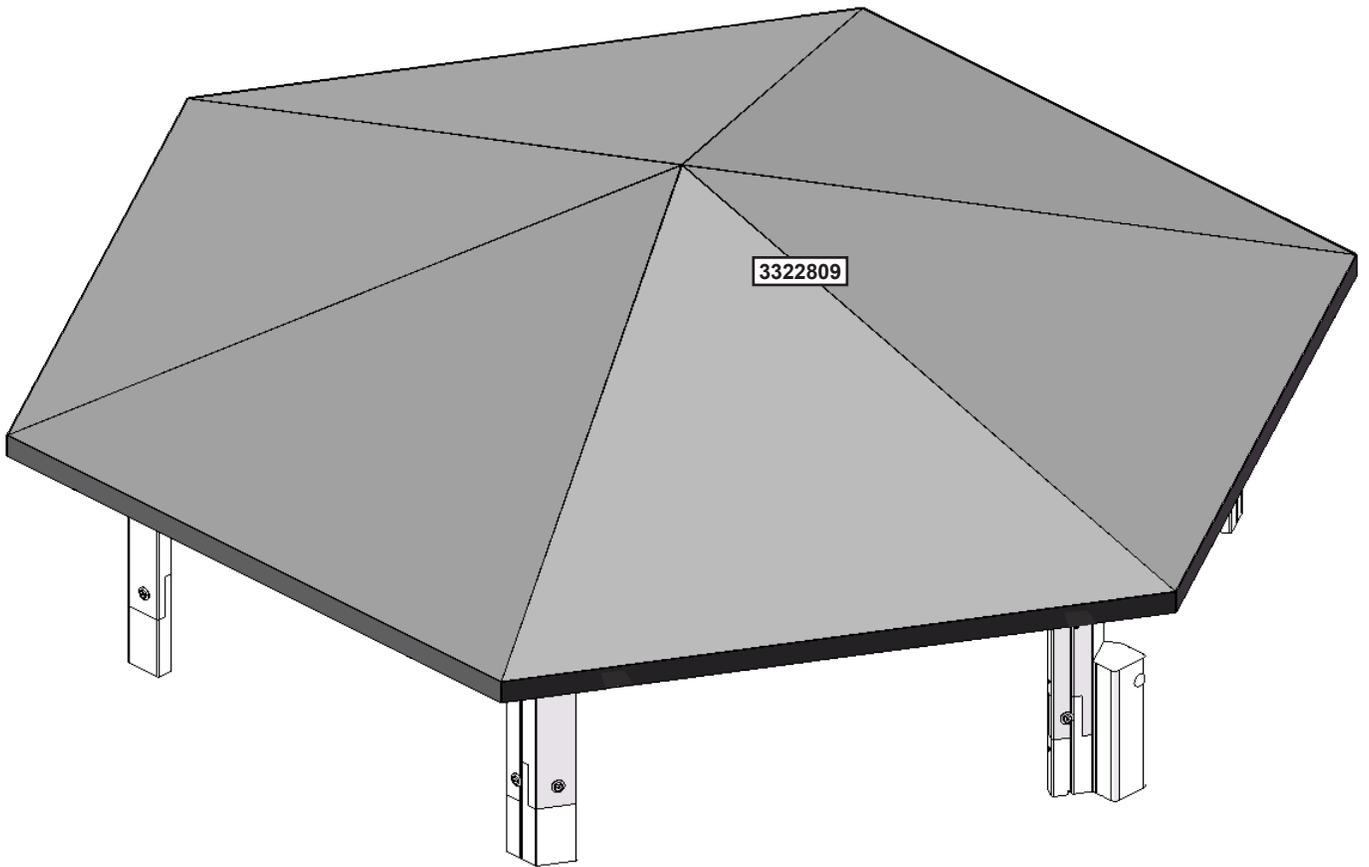

Other Parts

1 x **3322809**






Step 42

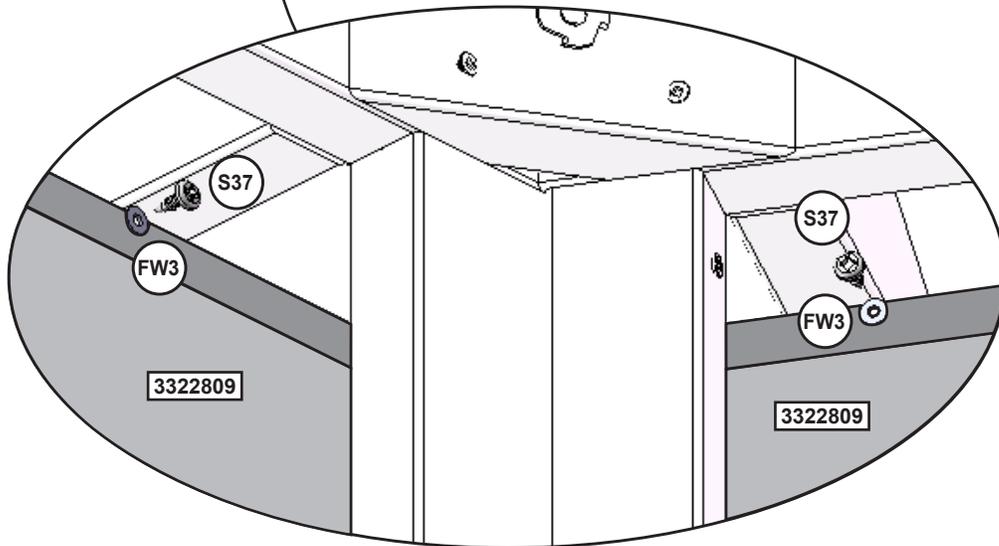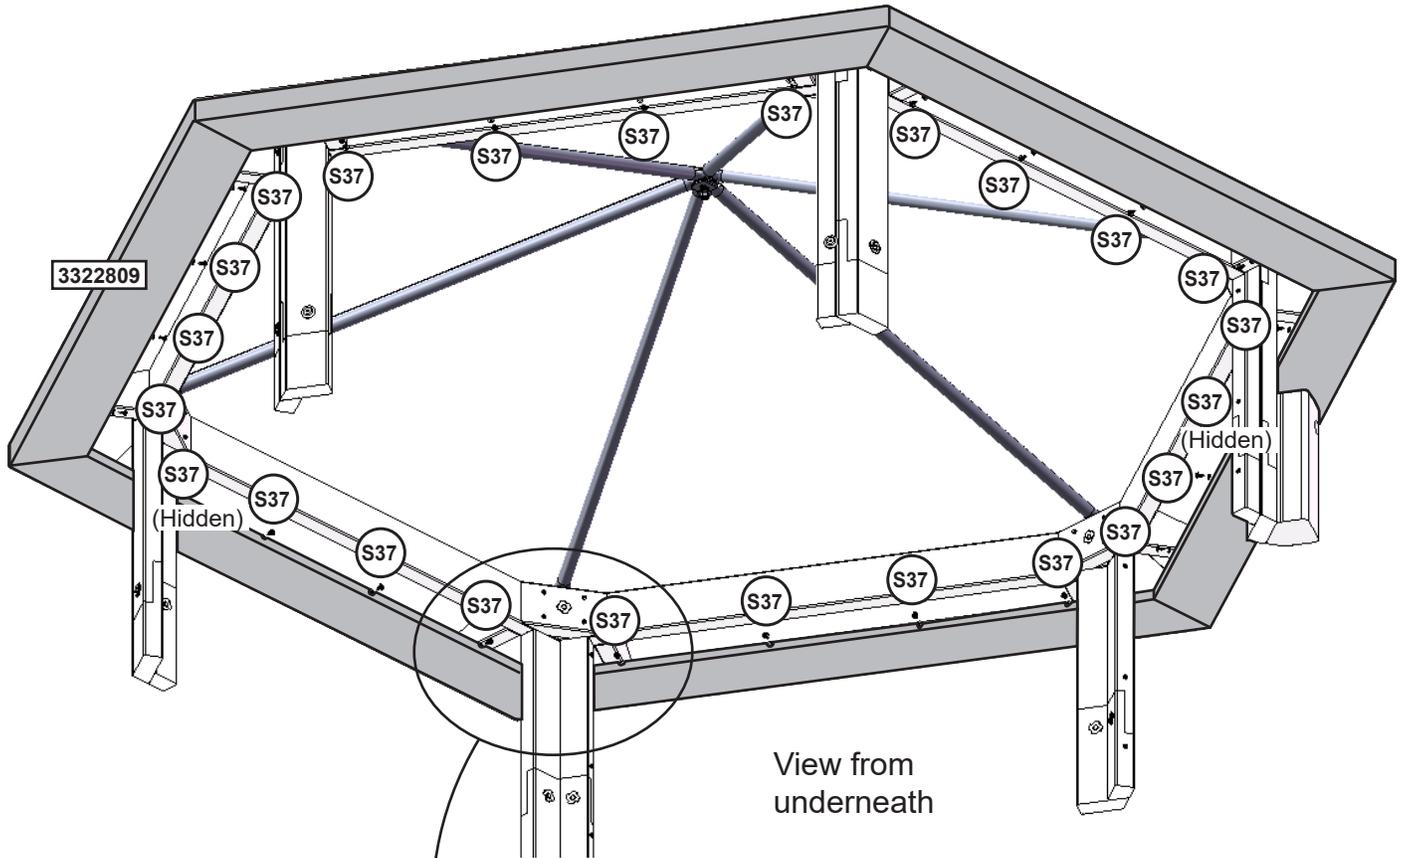

Hardware


24 x  #7 x 15.87mm (#7 x 5/8") (FW3)

Step 43

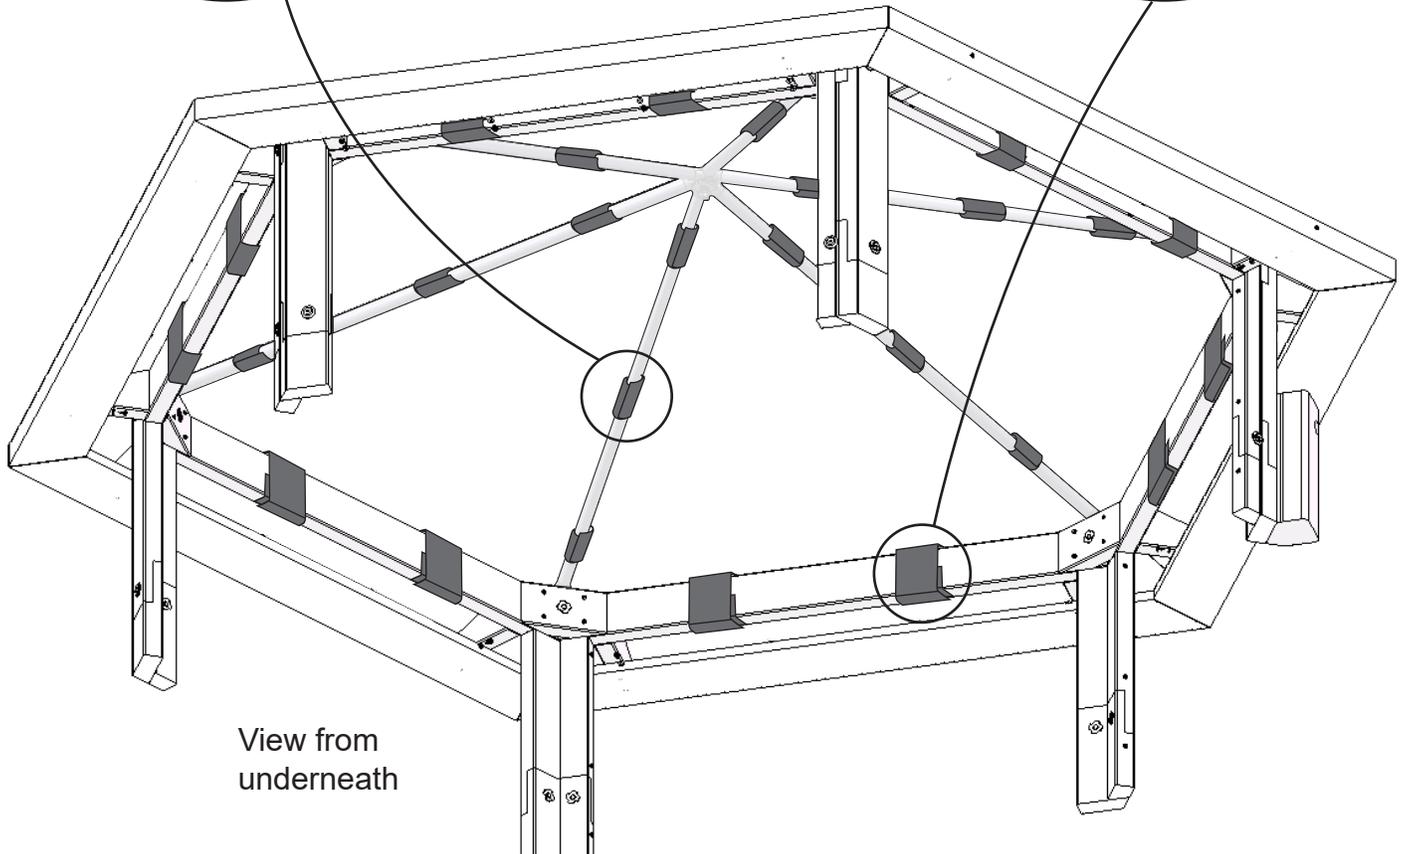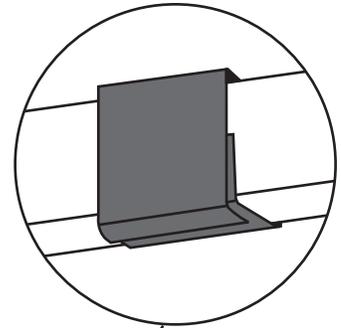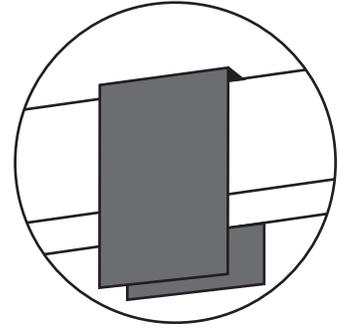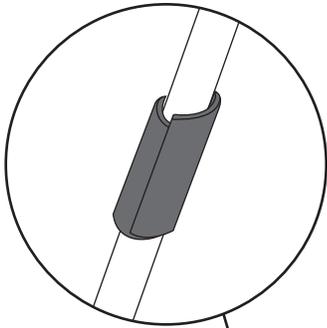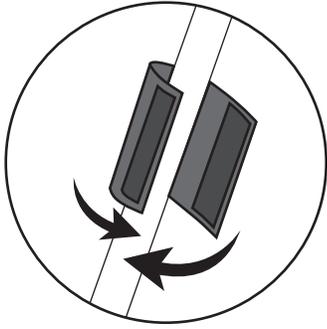


View from underneath

Step 44

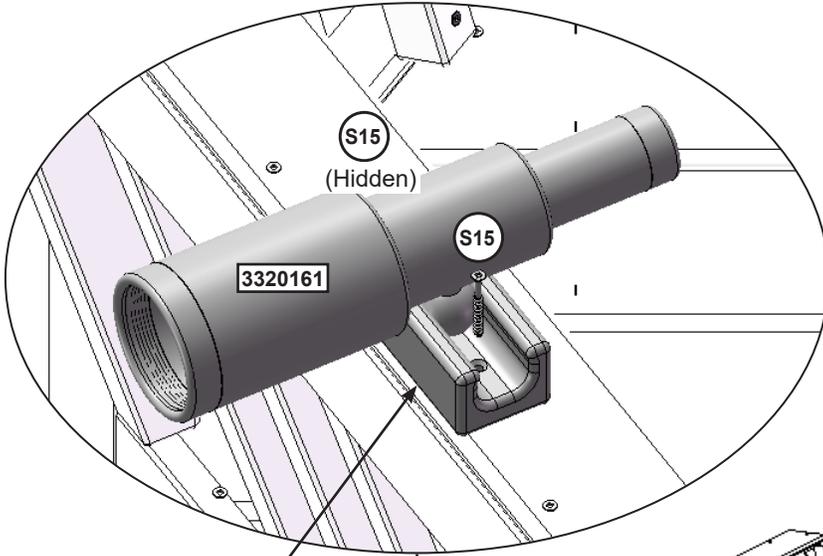

Top half of structure removed for clarity.

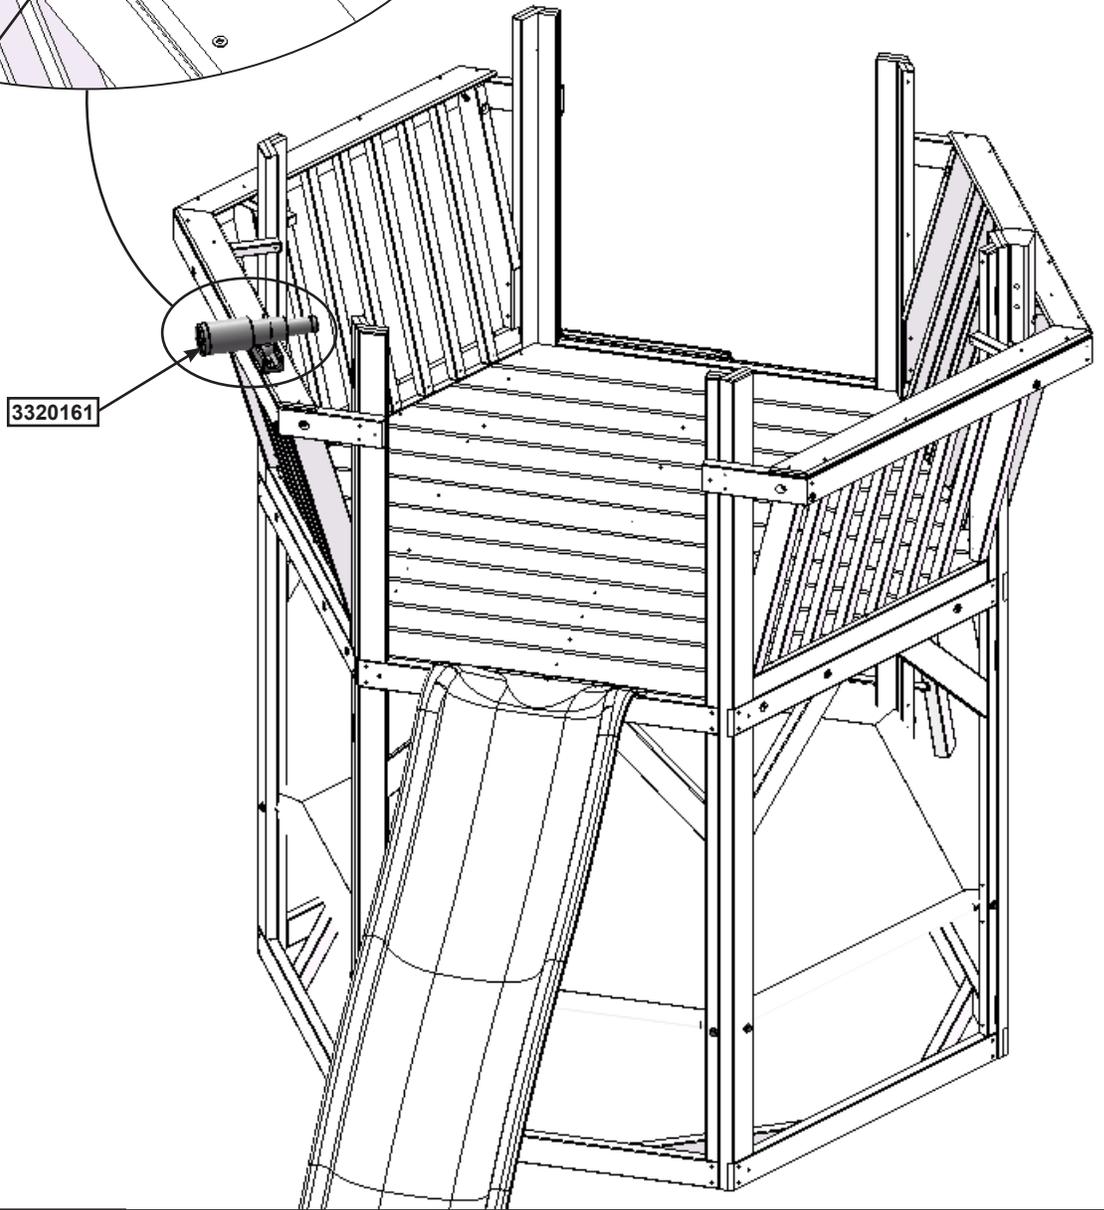


Hardware

2 x (S15) #8 x 44.5mm (#8 x 1-3/4")

Other Parts

1 x 3320161

Step 45

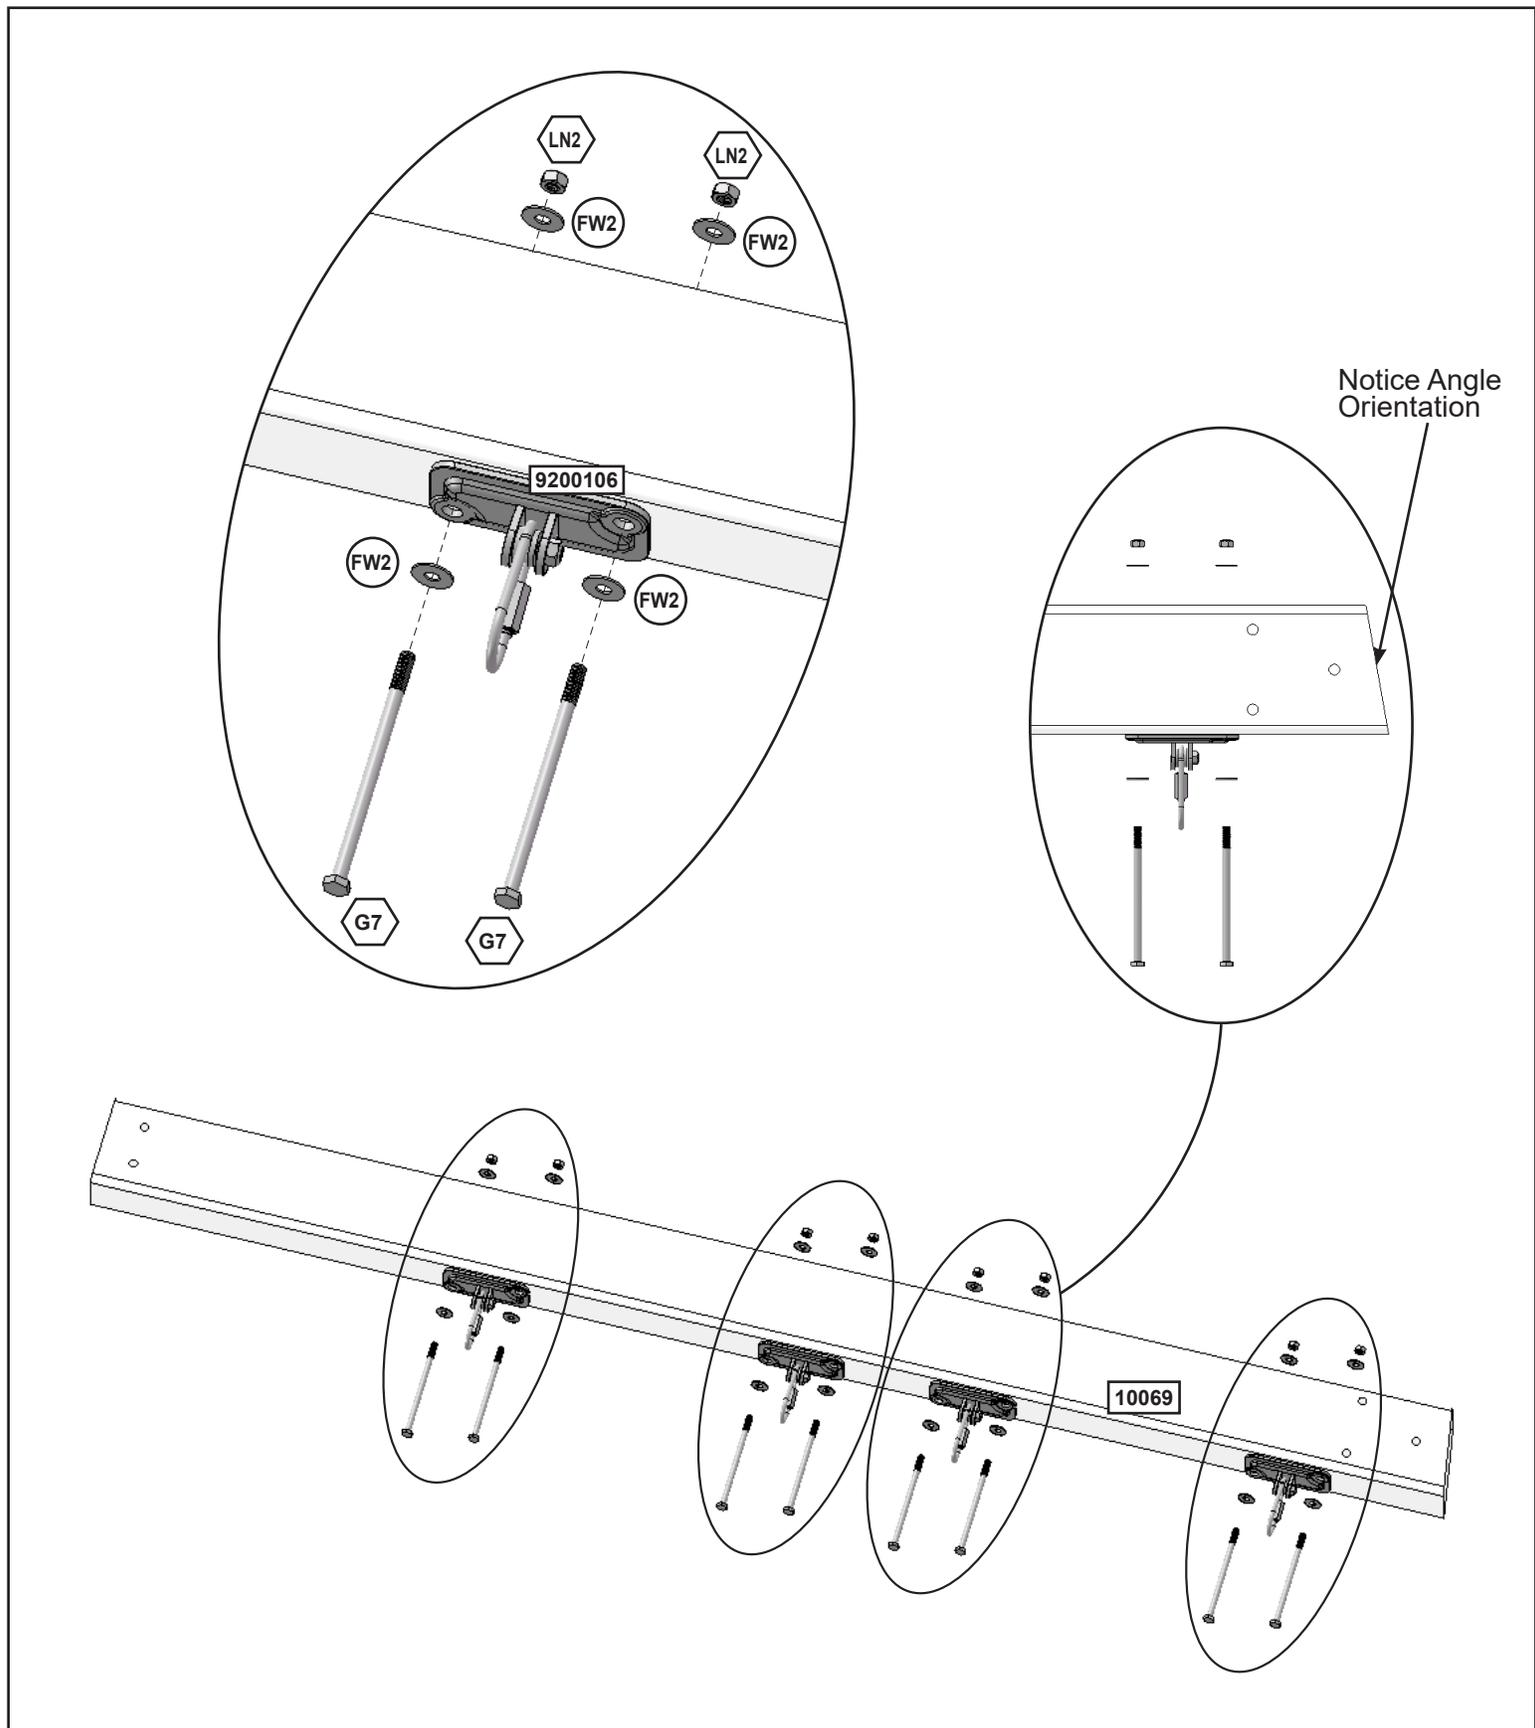

Wood Parts

1 x **10069** 76.2 x 133.4 x 1854.2 mm (3" x 5-1/4" x 73")

Hardware


8 x **G7** 7.9mm x 139.7 mm (5/16 x 5-1/2") (LN2, 2 x FW2)

Other Parts

4 x **9200106**

Step 46

Center plaque on beam and between both swings.

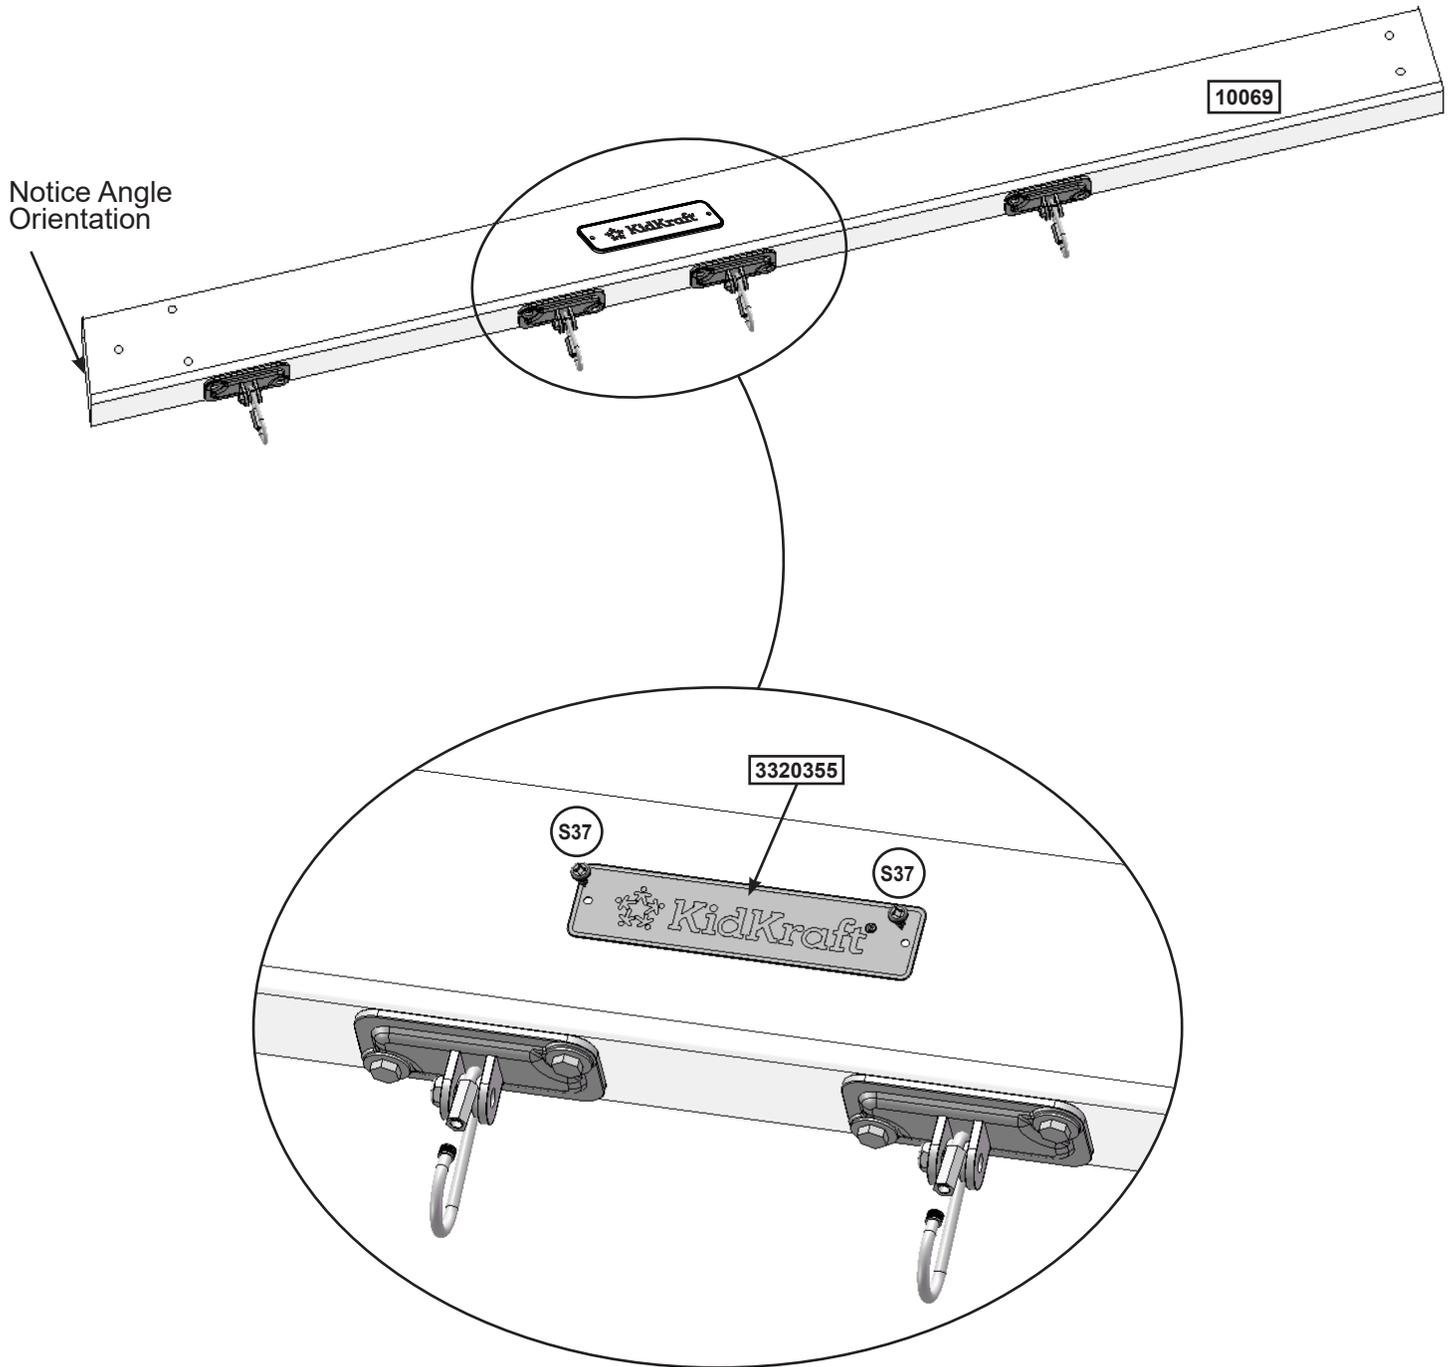




Hardware

2 x S37 #7 x 15.87mm (#7 x 5/8")

Other Parts

1 x 3320355

Step 47

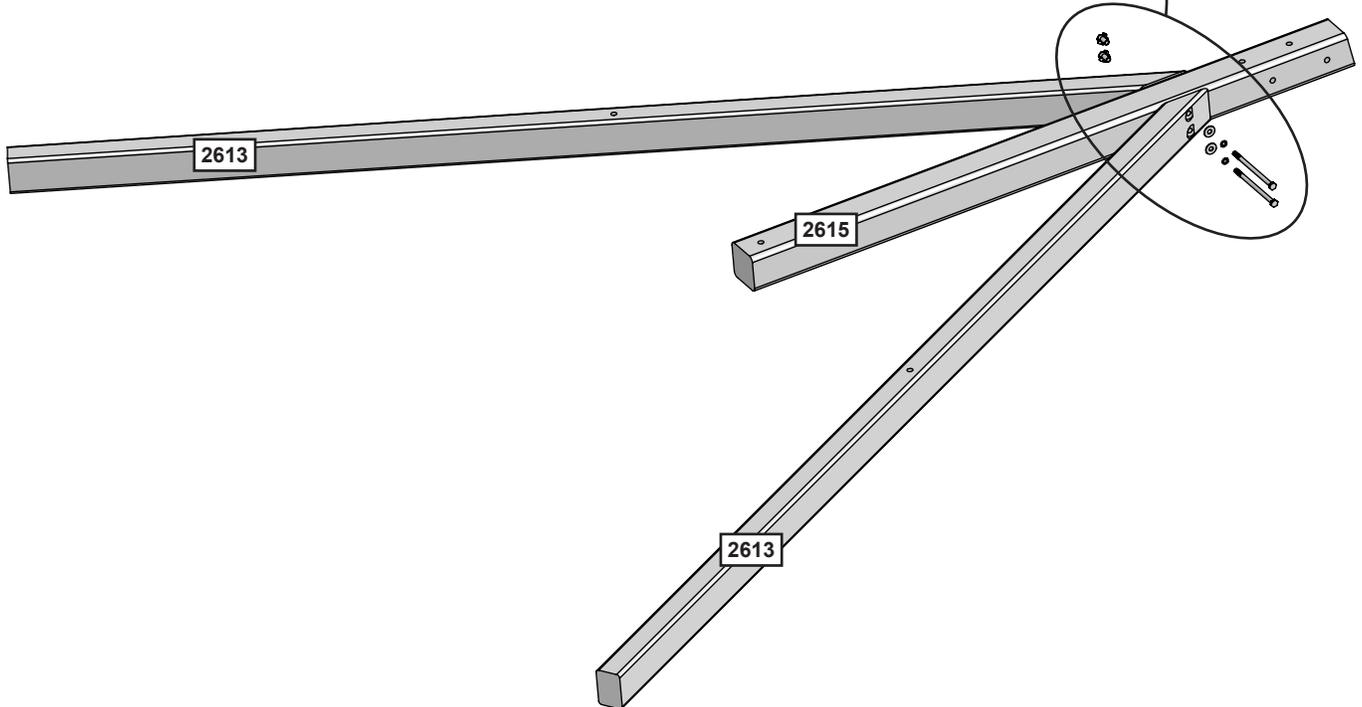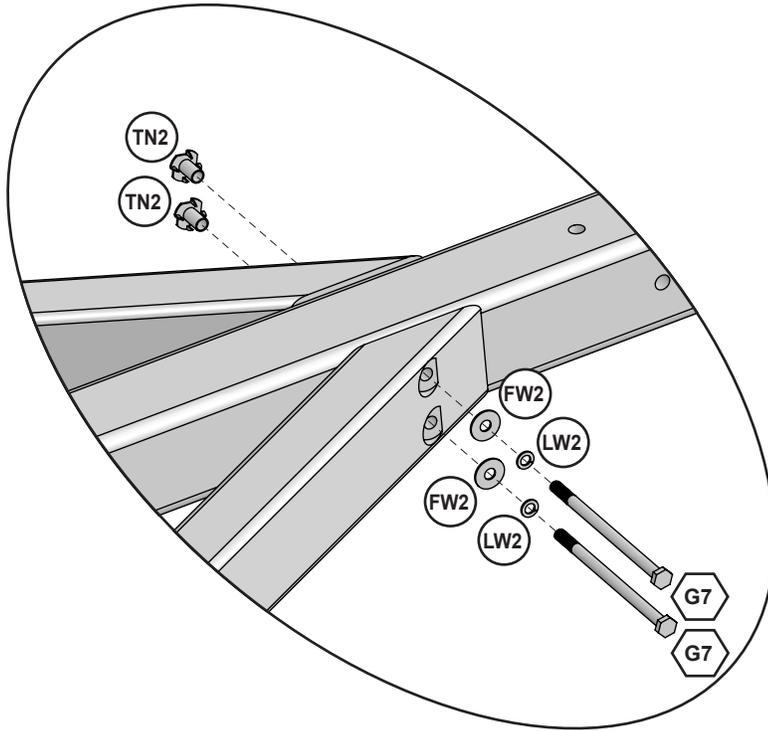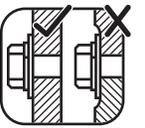


Wood Parts

- 2 x **2613** 50.8 x 76.2 x 2201.9 mm (2 x 3 x 86-11/16")
- 1 x **2615** 76.2 x 76.2 x 1294.3 mm (3 x 3 x 50-15/16")


Hardware

- 2 x **G7** 7.9 x 139.7 mm (5/16 x 5-1/2") (LW2, FW2, TN2)

Step 48

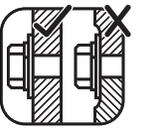

IT IS IMPORTANT THAT THESE BOLTS ARE ATTACHED. THEY WILL MINIMIZE CHECKING OF WOOD.

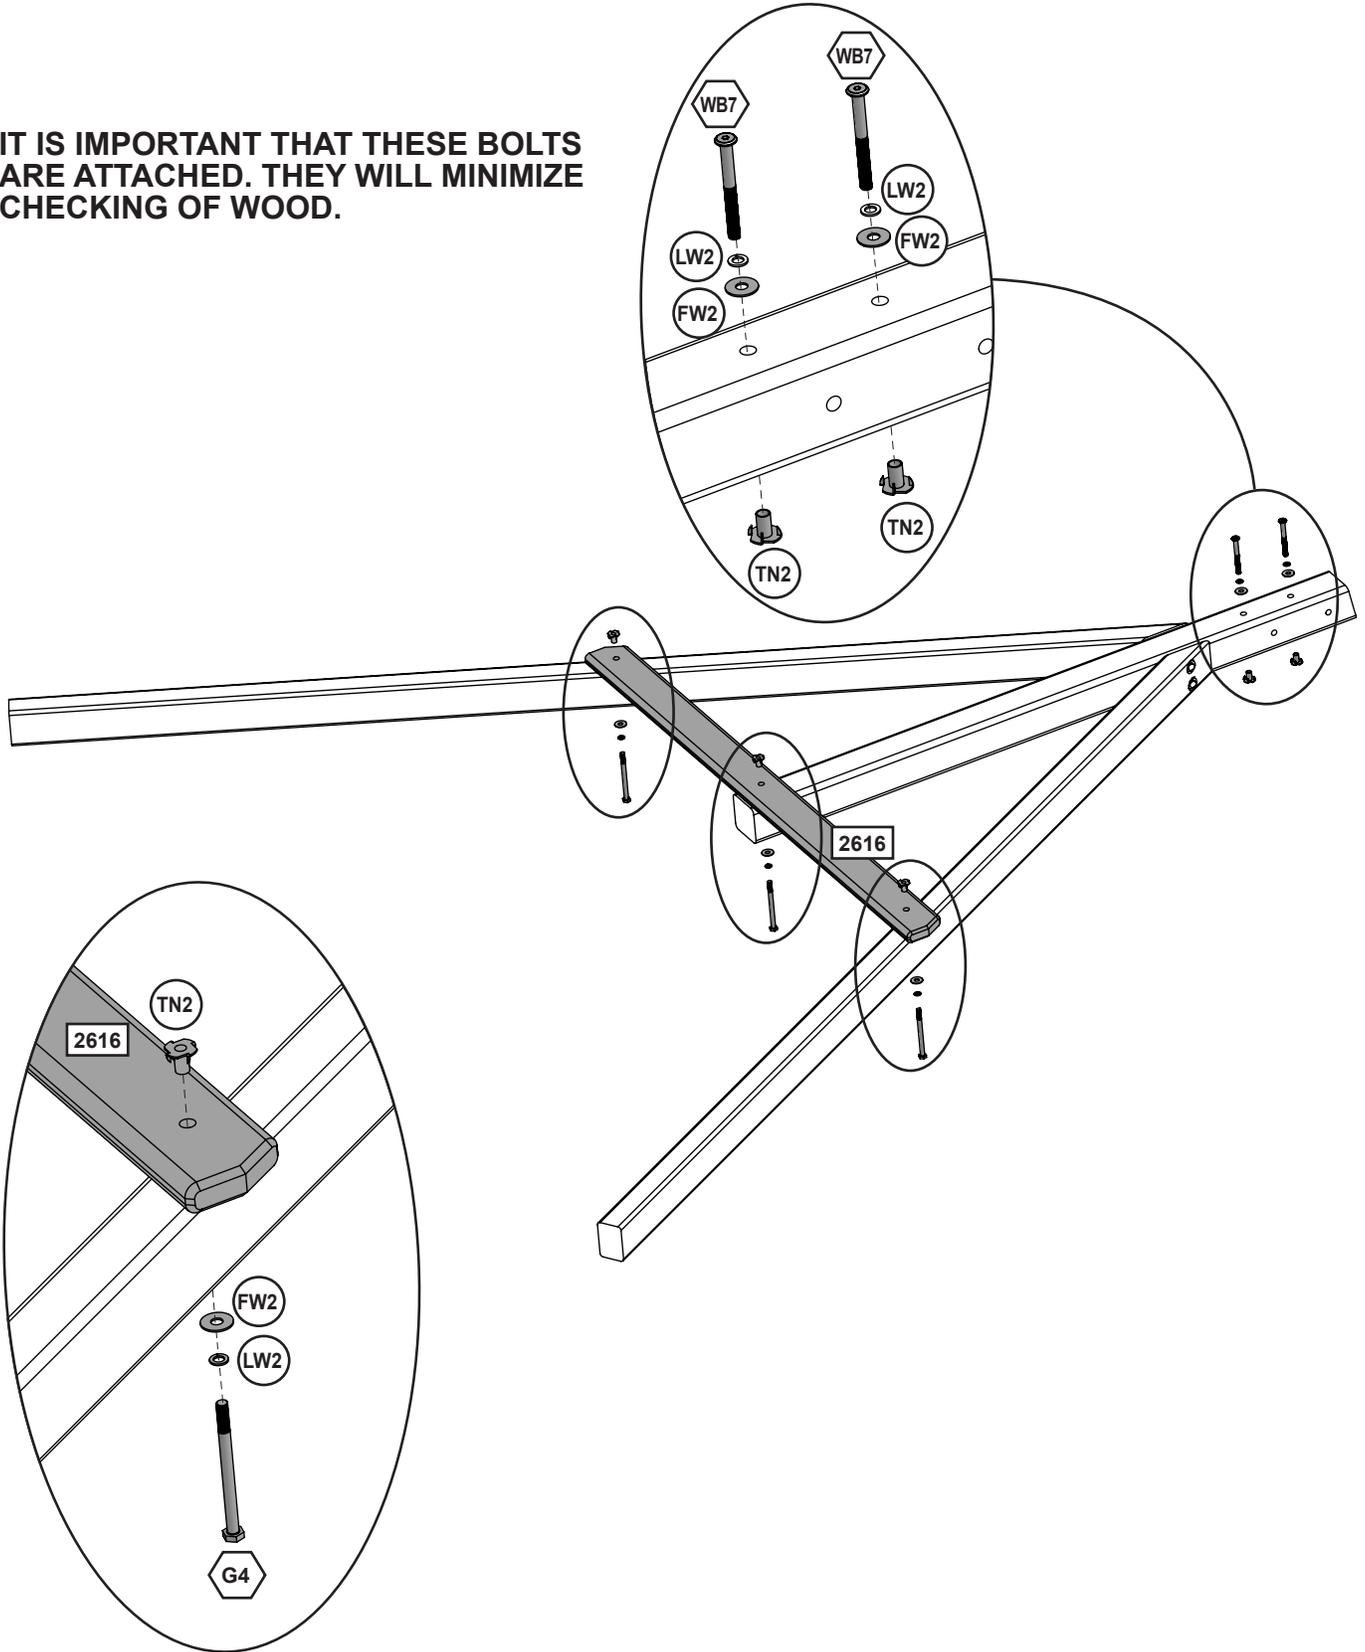

Wood Parts



1 x **2616** 23.8 x 82.6 x 1181.1mm (15/16 x 3-1/4 x 46-1/2")

Hardware

3 x **G4** 7.9mm x 101.6mm (5/16 x 4") (LW2, FW2, TN2)

2 x **WB7** 7.9mm x 76.2mm (5/16 x 3") (LW2, FW2, TN2)

Step 49

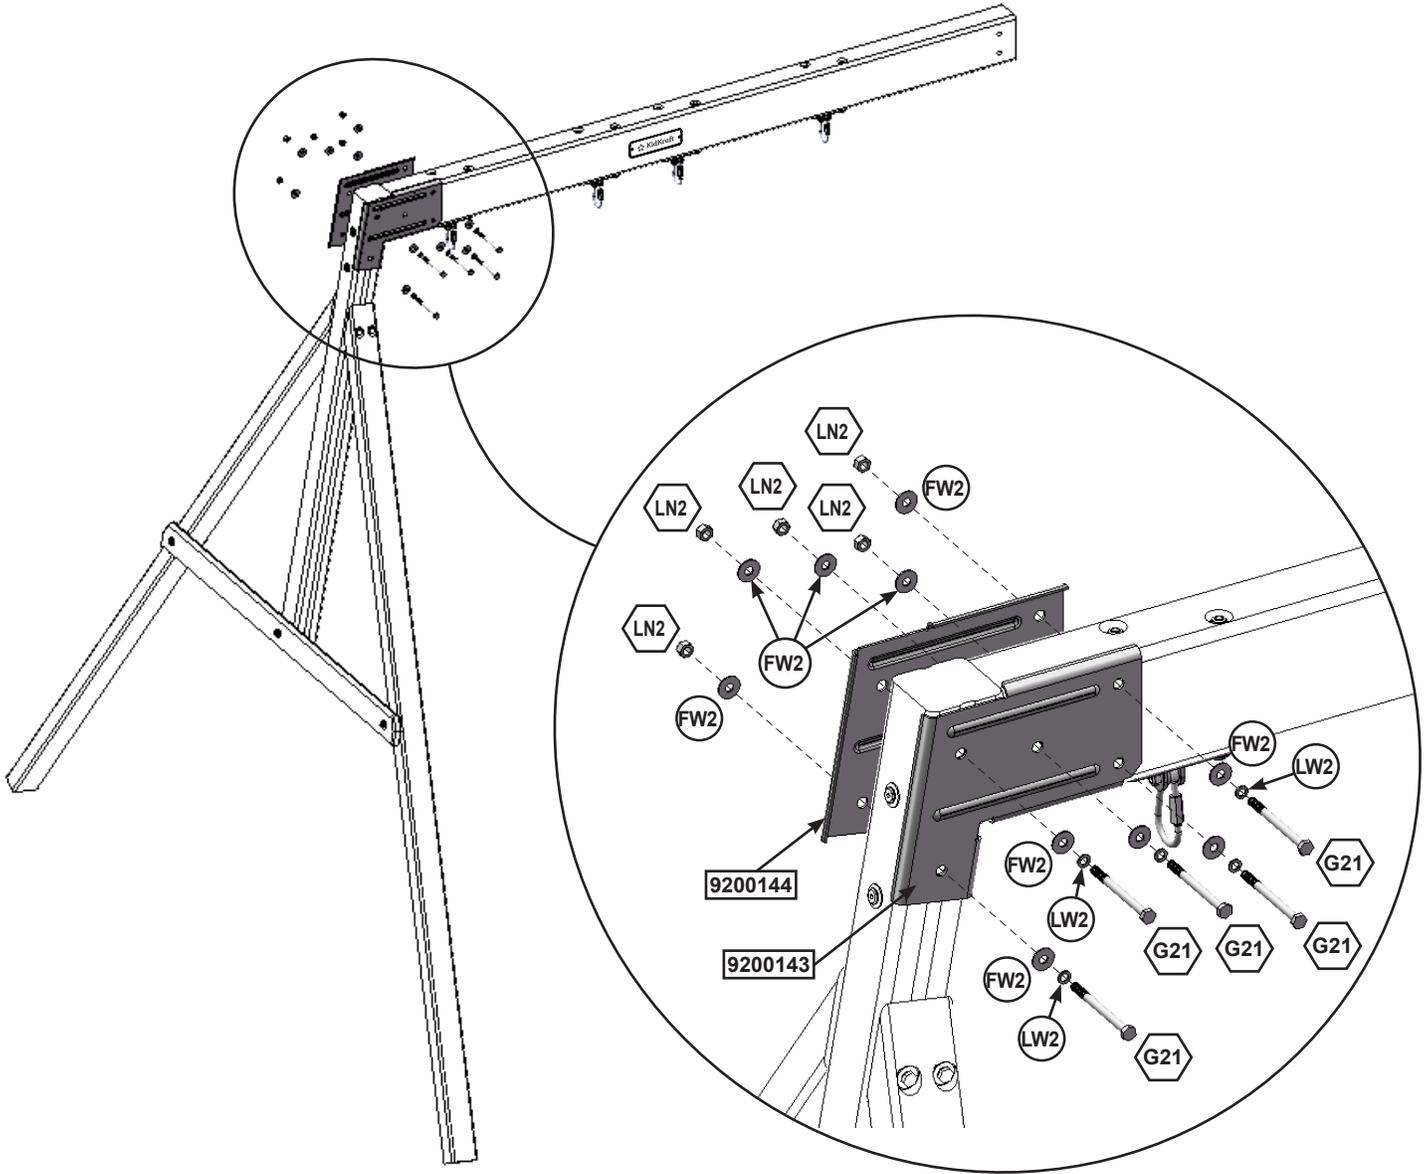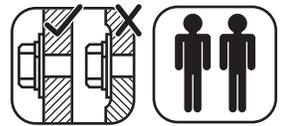

Hardware


5 x 7.9 x 95 mm (5/16 x 3-3/4") (2 x FW2, LW2, LN2)

Other Parts

1 x


1 x

Step 50

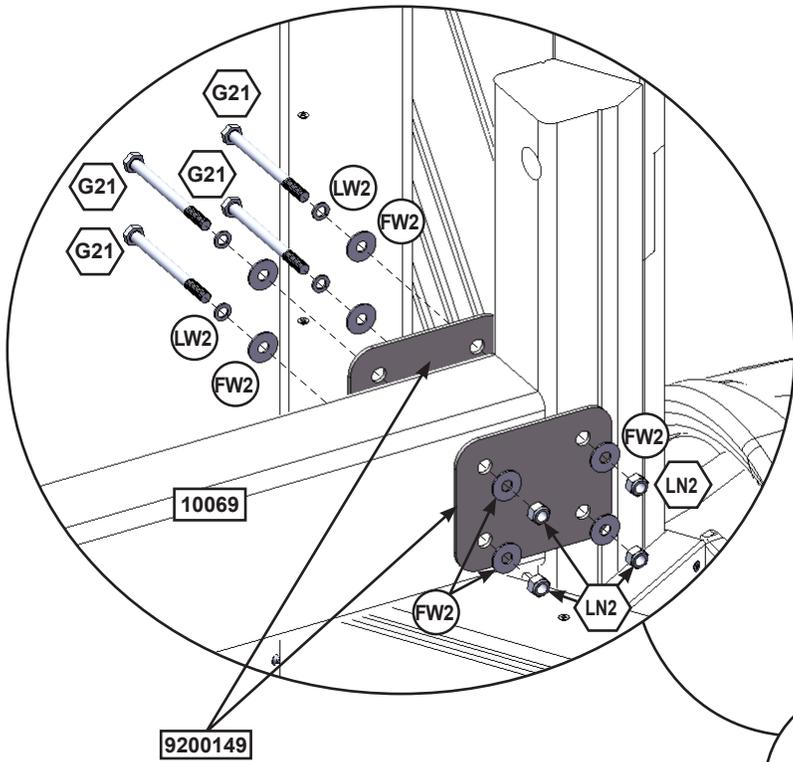

10069

9200149

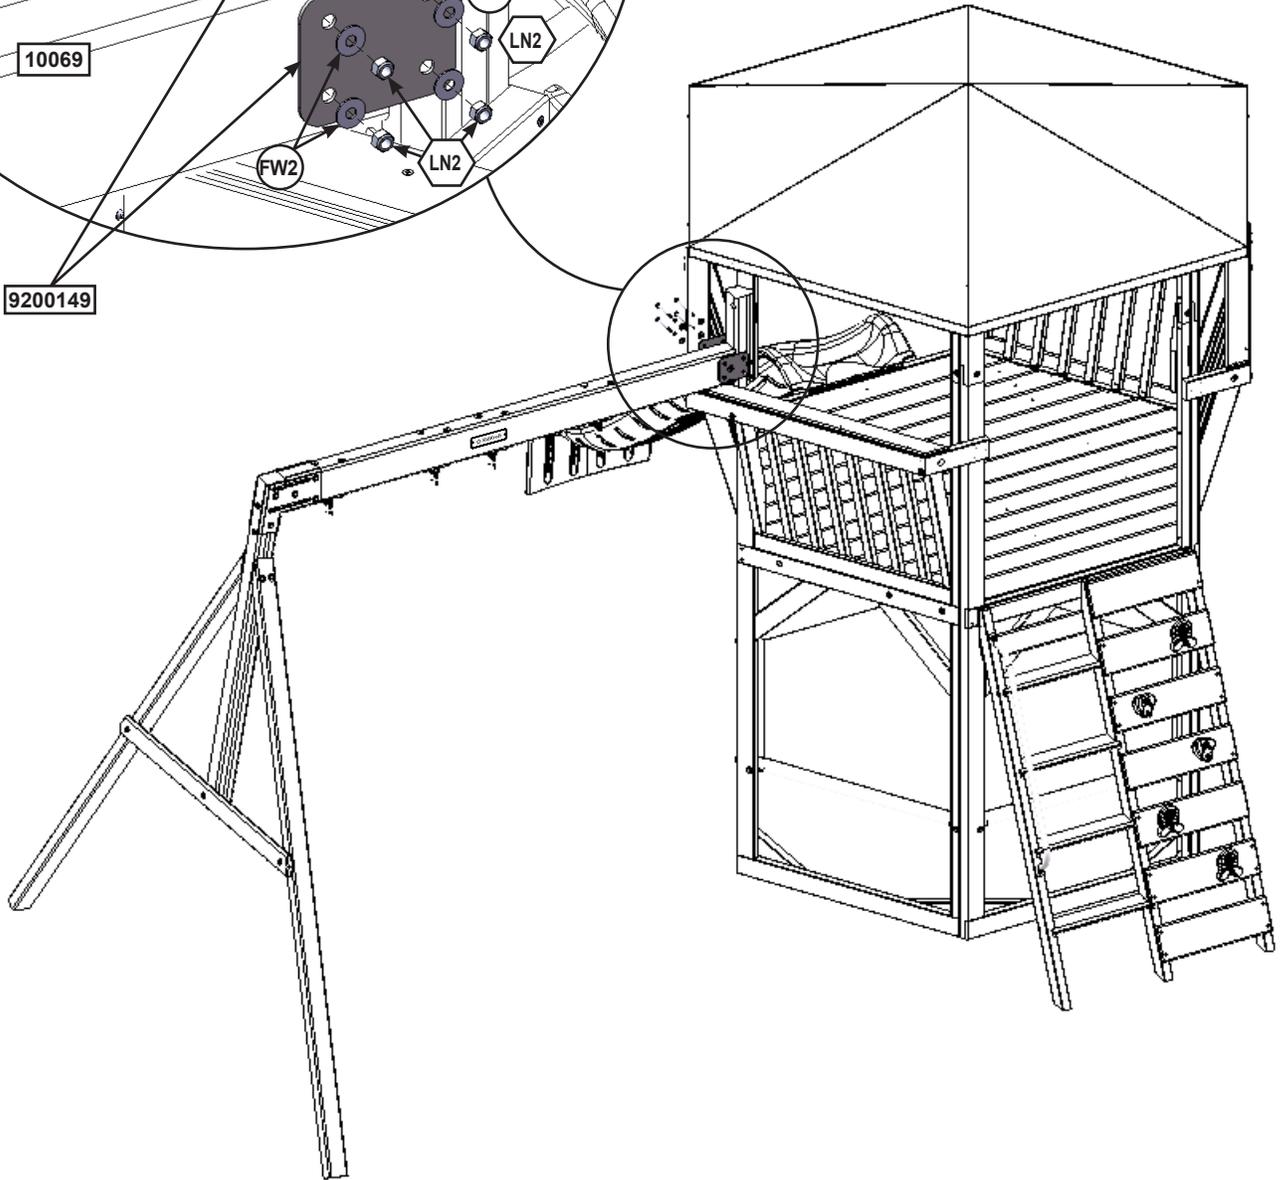



Hardware

4 x  7.9 x 95 mm (5/16 x 3-3/4") (2 x FW2, LW2, LN2)

Other Parts

2 x 

Step 51

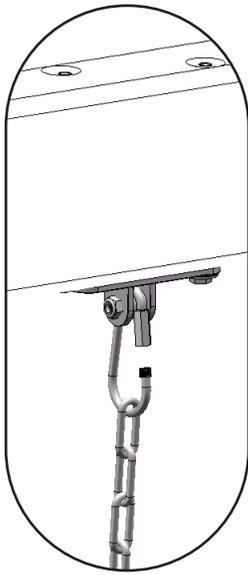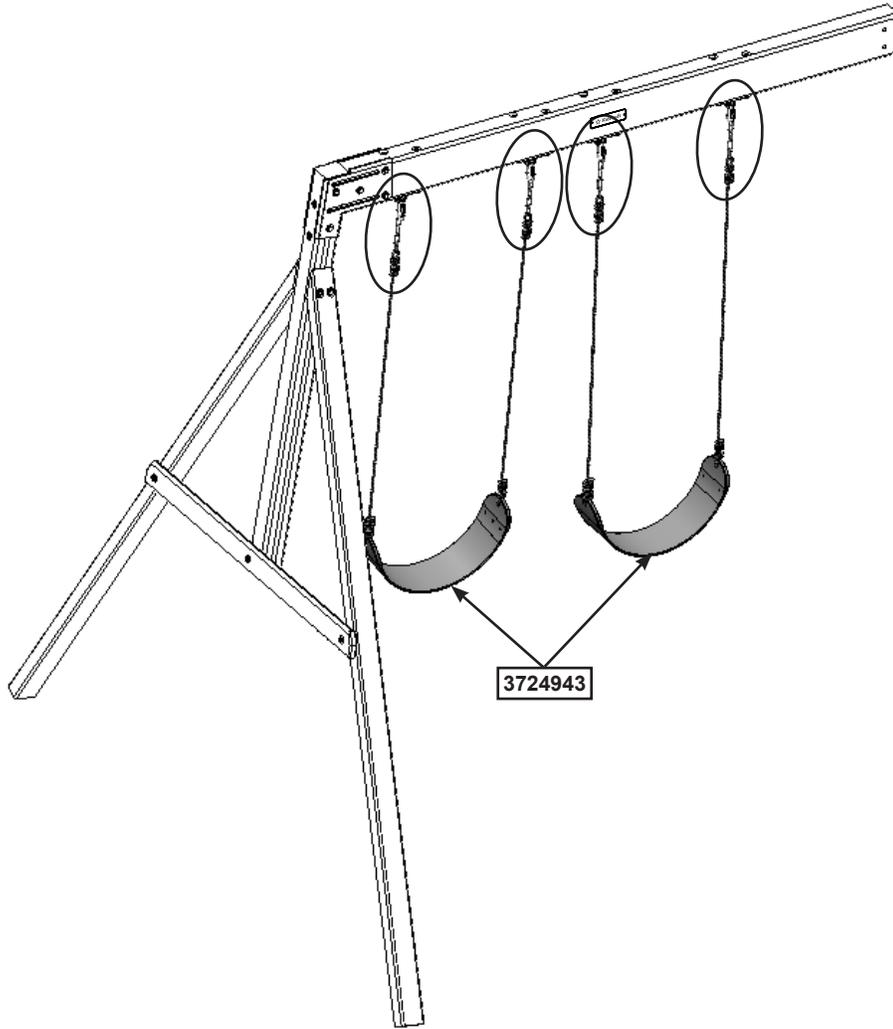


Tighten
Threaded Link
using adjustable
wrench

Caution: Threaded Quick Links must
be installed with the gate completely
down covering the threads and
tighten as instructed.


Other Parts
2 x **3724943**

Step 52

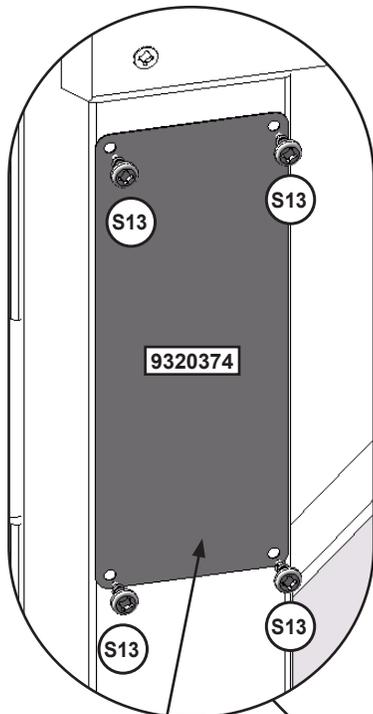

KidKraft I.D. Plaque

Top half of structure removed for clarity.

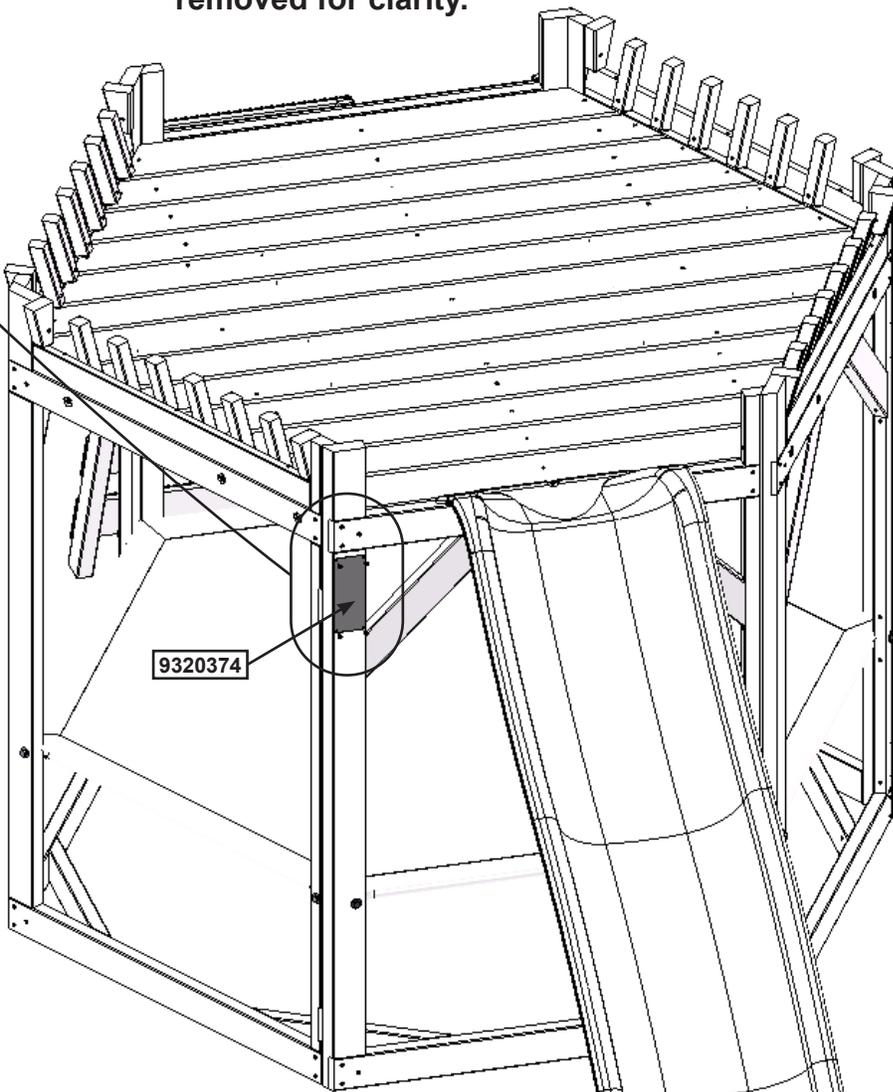

⚠ WARNING
⚠ AVERTISSEMENT

CONTINUOUS ADULT SUPERVISION REQUIRED!

STRANGULATION HAZARDS
Never allow children to play with ropes, clotheslines, pet leashes, cables, chains or cord-like items when using this playset or to attach these items to play-set.
Never allow children to wear loose fitting clothing, ponchos, hoods, scarves, capes, necklaces, or items with draw-strings, cords or ties when using this play-set.
Never allow children to wear bike or sport helmets when using this play-set.
Failure to prohibit these items increases the risk of serious injury and death to children from entanglement and strangulation.

SERIOUS HEAD INJURY HAZARD
Maintain shock absorbing material under and around play-set as recommended in the Installation & Operating Instructions. Installation over concrete, asphalt, dirt, grass, carpet and other hard surfaces creates a risk of serious injury or death from falls to the ground.

SURVEILLANCE CONSTANTE D'ADULTES EST REQUIS!

Risques D'étranglement
Ne jamais laisser les enfants jouer avec des cordes, cordes à frêpe, laines pour animaux, des câbles, des chaînes ou ces type articles pendant de l'utilisation de cet portique de jeu ou à l'attaché de ces éléments à la portique de jeu.
Ne jamais laissez les enfants de porter des vêtements amples, des ponchos, des hottes, des foulards, capes, des colliers ou des articles avec cordes attirent ou les cordons pendant l'utilisation de cet portique de jeu.
Ne jamais laissez les enfants porter un casque de vélo ou de sport quand ils utilisent ce portique de jeu.
Défaut d'interdire ces éléments augmente le risque de blessures graves et de décès des enfants de enchevêtrement et d'étranglement.

RISQUE DE BLESSURES GRAVES DU TÊTE
Maintenir le matériau absorbant les chocs sous et autour de la portique de jeu comme recommandé dans les instructions.
D'installation, installation sur béton, de l'asphalte, sol, de l'herbe, tapis et autres surfaces dure crée un risque de blessure à la tête graves ou la mort causé par tomber à la scl.

THIS PRODUCT IS INTENDED FOR USE BY CHILDREN FROM AGES 3 TO 10, weight limit of 110 lbs. per child. Maximum number of users. Installation & Operating Instructions; other information is available at:
POUR LES ENFANTS DE 3 À 10 ANS D'ÂGE; limite de 110 Livres par enfant. Nombre maximum d'utilisateurs, installation et d'utilisation; d'autres informations sont disponibles sur:

www.kidkraft.com
Contact us at: KidKraft
Dallas, TX 75244 USA
1-800-333-0771

Tracking Number:
Numero de Suivi:

Hardware

4 x  #6 x 15.9 mm (#6 x 5/8")


Other Parts

1 x 


Step 53



MOVE FORT TO FINAL LOCATION PRIOR TO STAKING
FINAL LOCATION MUST BE LEVEL GROUND

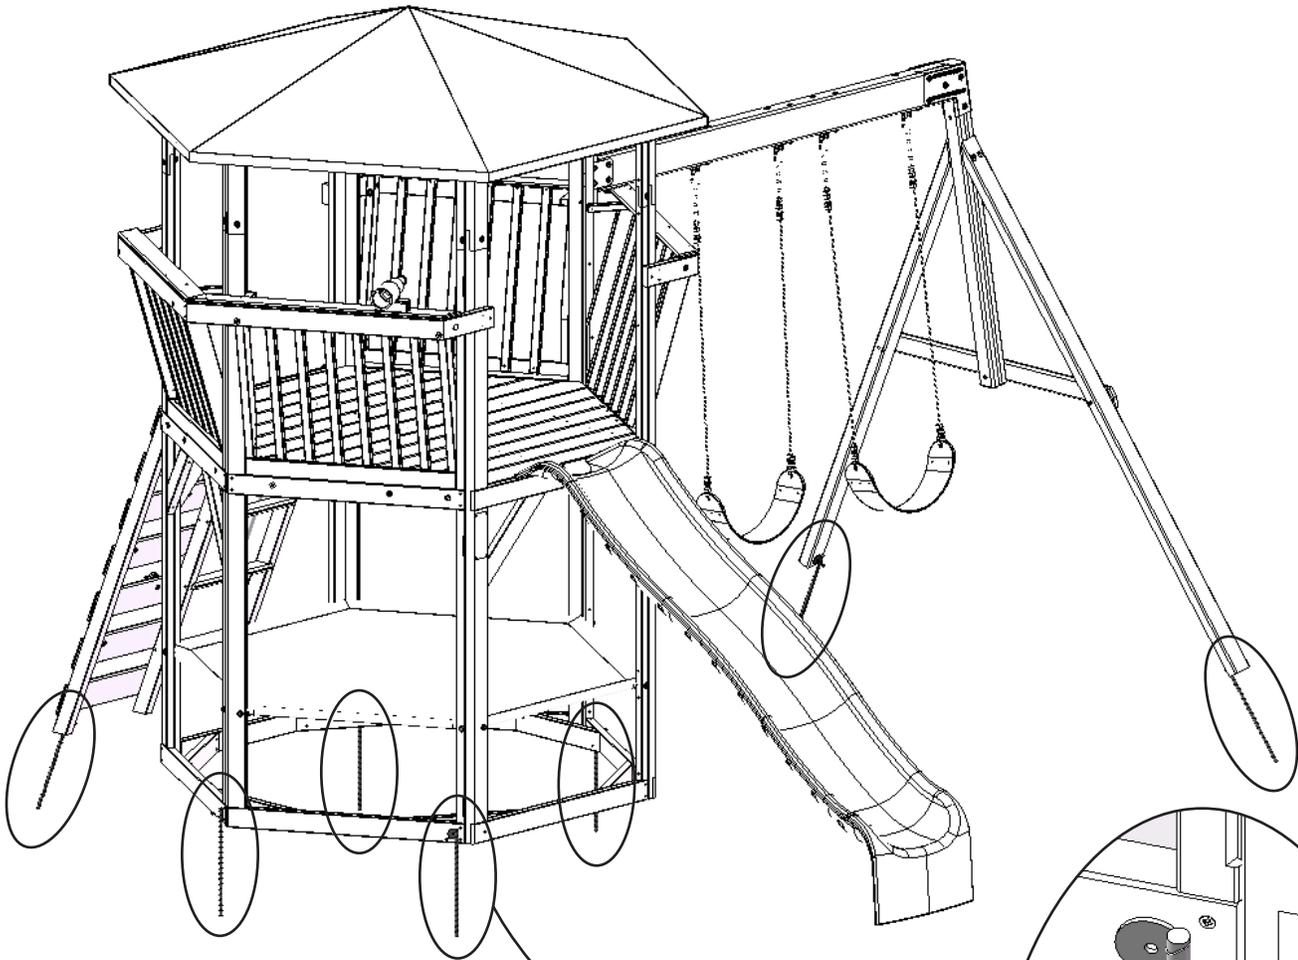

Warning! To prevent tipping and avoid potential injury, stakes must be driven 13"(330mm) into ground. Digging or driving stakes can be dangerous if you do not check first for under-ground wiring, cables or gas lines.

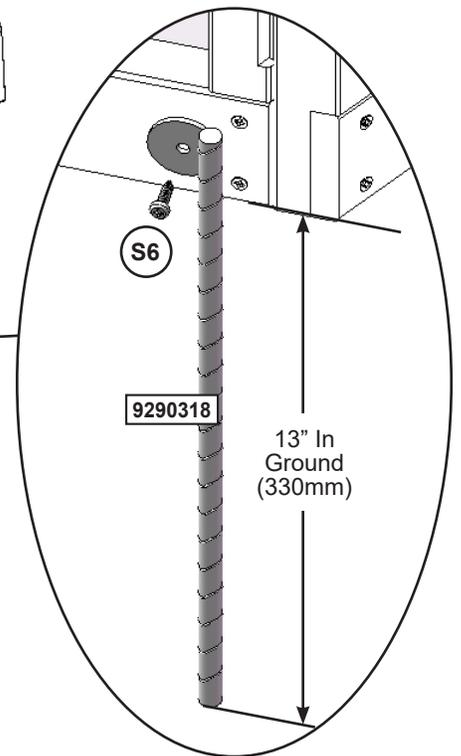

SEE FRONT COVER FOR SAFETY CLEARANCE

Hardware

7 x **S6** #12 x 25.4 mm (#12 x 1")

Other Parts

7 x **9290318**

