




# ACADIAN / NORMANDY / BRUNSWICK

# **FLOOR STORAGE CABINET MODEL # AXCBCACA-01**

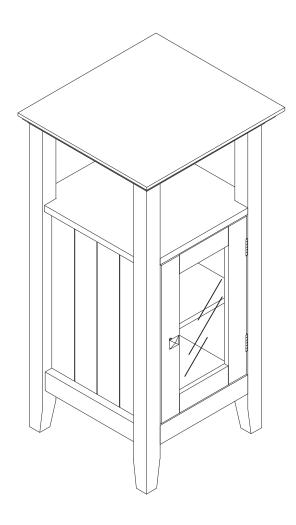







# Questions, problems, assembly help, missing parts?

No need to return the product, we will gladly help and ship your replacement parts free of charge Please call Customer Service at 1-866-518-0120 ext. 262 Monday to Friday between 9 am - 4 pm EST or go to

www.simpli-home.com/parts request

In order to assist you in a timely manner, please have the following information ready:	
Model #	Part Number or Letter
Purchased at	_Date of Purchase

If you wish to return the product, please contact the retailer where the product was purchased.

**IMPORTANT**: Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

## **SAFETY INFORMATION**

Identify all the parts and hardware. Do not discard of the packaging until you have checked that you have all of the parts and hardware required. Hardware package may have spare parts.

**WARNING:** This item contains small parts which can be swallowed by children and pets. Keep children and pets away during assembly. To avoid danger of suffocation, always keep plastic bags away from children and pets. We recommend that you assemble this unit on a carpeted floor to avoid scratches. If using power tools, set the tool to low torque to avoid damage.

May require 2 people for ease of assembly.


## **CARE and MAINTENANCE**

To clean, use a soft or slightly damp cloth, then wipe with a clean, dry cloth. Dust with soft dry cloth.


Do not use ammonia-based cleaning products, as they will damage the finish. Do not leave liquids or damp cloths on this furniture.

To avoid dulling of the finish, do not place furniture in direct sunlight.


Please inspect and tighten all screws or bolts on a regular basis to ensure proper performance and safety of your item.

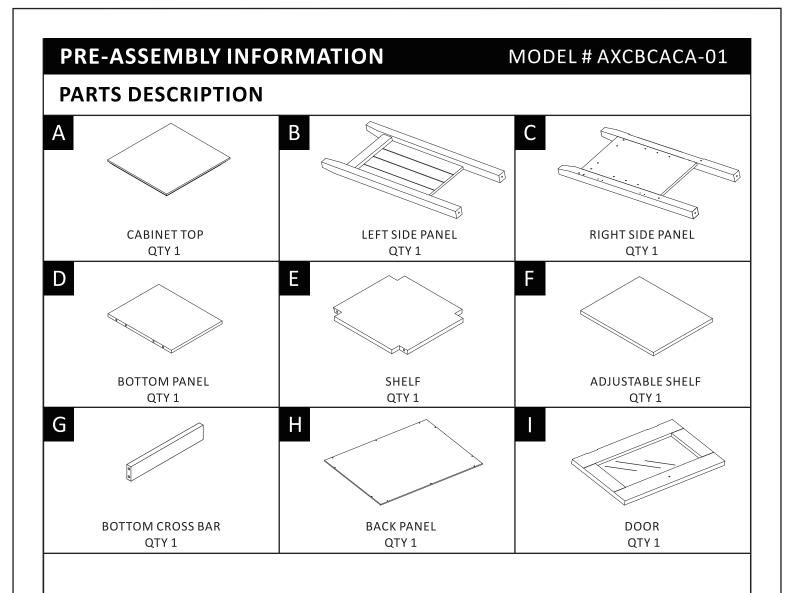


**NEED HELP?** For help with assembly or if you are missing a part, Please call customer service at 1-866-518-0120 ext. 262 (9 am to 4 pm EST)

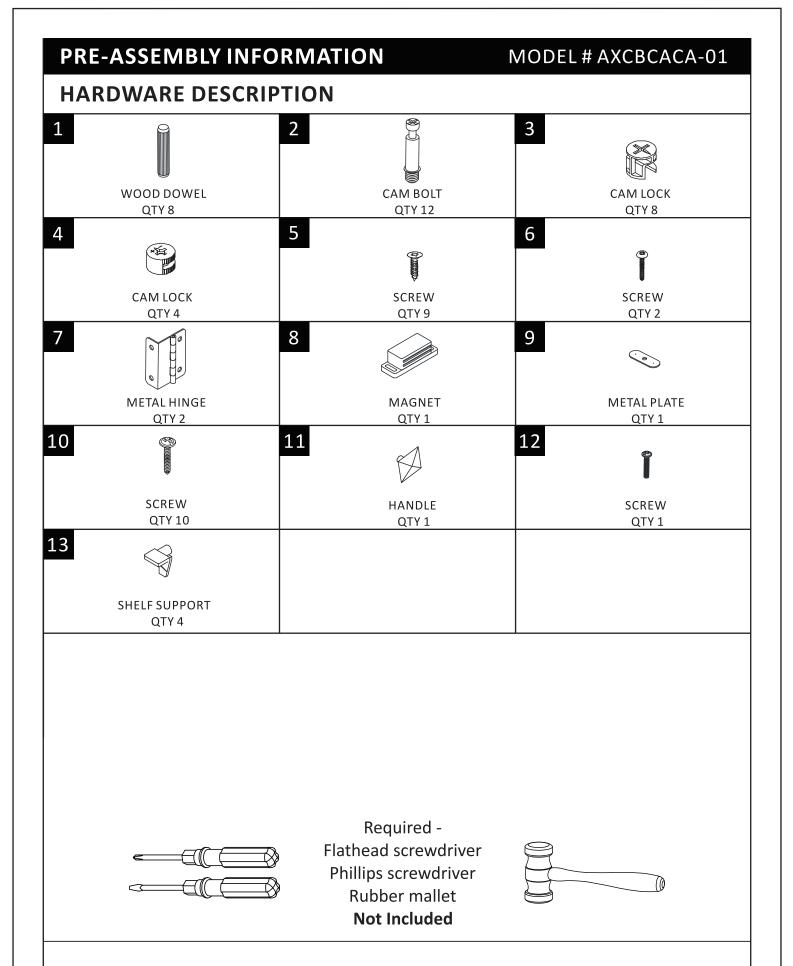

**NEED HELP?** For help with assembly or if you are missing a part, Please call customer service at 1-866-518-0120 ext. 262 (9 am to 4 pm EST)

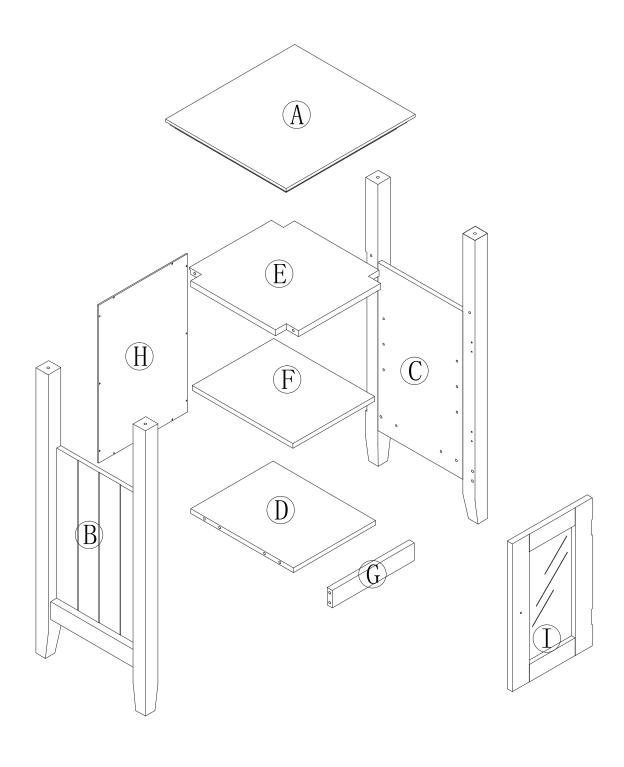


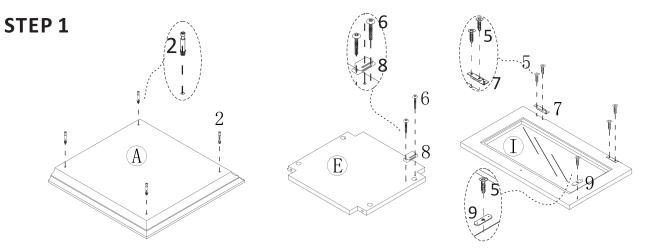

#### Assembling the Cabinet Top, Shelf and Door

- 1. Lay down the cabinet top (A) and screw four cam bolts (2) into the pre-drilled holes using a Phillips screwdriver.
- 2. Attach the magnet (8) to the shelf (E) by inserting two screws (6) through the holes on the magnet (8). Tighten using a Phillips screwdriver.
- 3. Lay down the door (I) and attach two metal hinges (7) to the door (I) by inserting four screws (5) through the holes on the metal hinges (7) and tighten using a Phillips screwdriver.
- 4. Attach the metal plate (9) to the door (I) by inserting one screw (5) through the hole on the metal plate (9) and tighten using a Phillips screwdriver.




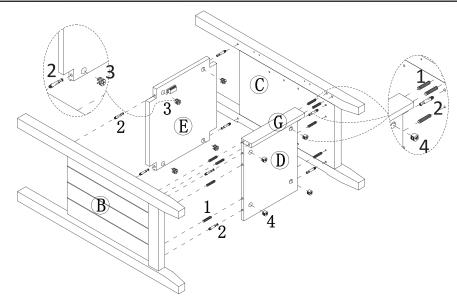

# Assembling the Left Side Panel, Right Side Panel, Shelf, Bottom Panel and Bottom Cross Bar

- 1. Lay down the left side panel (B) and screw four cam bolts (2) into the pre-drilled holes using a Phillips screwdriver.
- 2. Lay down the right side panel (C) and screw four cam bolts (2) into the pre-drilled holes using a Phillips screwdriver.
- 3. Insert two cam locks (3) into the cam lock holes on shelf (E) and rotate clockwise to secure cam bolts are in place using a Phillips screwdriver.
- 4. Attach bottom cross bar (G) to left side panel (B) by inserting two wood dowels (1) into dowel holes on bottom cross bar (G).
- 5. Attach bottom panel (D) to left side panel (B) by inserting two wood dowels (1) into dowel holes on bottom panel (D).
- 6. Insert two cam locks (4) into cam lock holes on bottom panel (D) and rotate clockwise to secure cam bolts are in place using a Phillips screwdriver.
- 7. Insert two wood dowels (1) into dowel holes on the bottom cross bar (G) and insert two wood dowels (1) into dowel holes on the bottom panel (D).
- 8. Attach the right side panel (C) to the shelf(E) and bottom panel (D) by inserting two cam locks (3) and two cam locks (4) into cam lock hole in the shelf (E) and bottom panel (D) respectively. Rotate clockwise to secure cam bolts are in place using a Phillips screwdriver.


### STEP 3

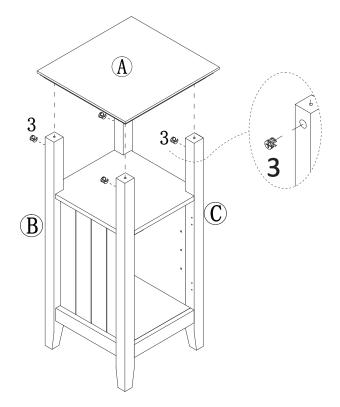

### **Assembling Cabinet Top**

1. Attach the cabinet top (A) to left side panel (B) and right side panel (C) by inserting four cam locks (3) into cam lock holes on the left side panel (B) and right side panel (C) and rotate clockwise to secure the cam bolts are in place using a Phillips screwdriver.


#### STEP 4

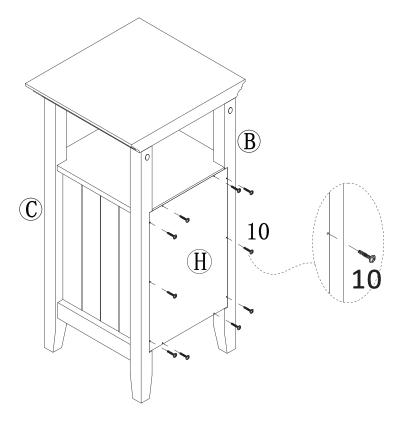

### **Assembling Back Panel**

1. Attach the back panel (H) to pre-assembled cabinet by inserting ten screws (10) through the holes on back panel.


#### STEP 5

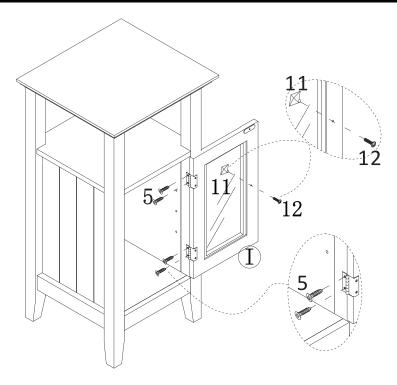

### **Assembling the Door**

- 1. Attach the door (I) to the right side panel (C) by inserting four screws (5) through the holes on the door hinges and tighten.
- 2. Attach the handle (11) to the door (I) and insert one screw (12) through hole on the door and tighten to handle (11) using a Phillips screwdriver.

#### STEP 6

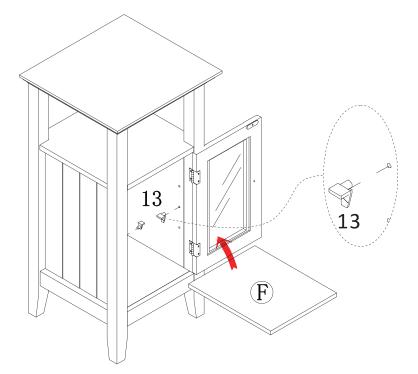

## Assembling the Adjustable Shelf

- 1. Insert four shelf supports (13) into holes in the cabinet on both side panels (B) and (C) at the same level.
- 2. Insert the adjustable shelf (F) into the cabinet on the top of the shelf supports.





### **WARRANTY**

Thank you for purchasing a **Simpli Home – Wyndenhall – Brooklyn + Max** product. These products have been made to demanding, high-quality standards and are guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase. This warranty does not affect your statutory rights.

In case of any malfunction of your product (failure, missing parts, etc.) please contact us at our toll free service line at 1-866-518-0120 ext. 262 from 9 am to 4 pm, Monday to Friday, Eastern Standard Time or by email at <a href="mailto:customerservice@simpli-home.com">customerservice@simpli-home.com</a>

We reserve the right to repair or replace the defective product, at its discretion.

This product is guaranteed for 12 months if used for normal purposes. Any warranty is invalid if the product has been overloaded or subject to neglect, improper use or an attempted repair by other than an authorized agent. Heavy-duty or daily professional/commercial usage are not guaranteed.

Due to continuous product improvement, we reserve the right to change the product specifications without prior notice.