



Purchase Date: \_\_\_/\_\_\_/\_\_\_ Order/Customer Reference #: \_\_\_\_\_

Thank you for choosing Sunnydaze Decor. We stand behind our brand and the quality of the items we sell. Replacement parts or products will be sent at our discretion within the 1-year warranty period. Proof of purchase, with the date of purchase as well as photos of the merchandise defect, must be provided. Photos are used to determine the cause of defects and for future quality control. Register your warranty at <https://tiny.cc/SunnydazeWarranty> If you have any questions, comments or concerns, feel free to contact us by phone at 833-982-1977, by email: [customerservice@sunnydazedecor.com](mailto:customerservice@sunnydazedecor.com), or via our contact us page at <https://tiny.cc/SunnydazeContact>

# DECORATIVE WOODEN WAGON WHEEL

**NOTE:** Wood is a natural product. Some checking (splits in the wood) is a normal feature of natural wood products. Checking is part of what gives wooden decor a truly rustic appearance.

## General Use & Care

**EXPOSURE:** Over time, sunlight and weather elements may degrade and change the color of the finish and the wood. Avoid placing in locations with standing water; absorbing too much water may damage the structure.

**CLEANING:** Identify the direction of the woodgrain and wipe dust and debris using a soft, dry cloth. Never use harsh chemical or abrasive materials to clean the item.

**WINTER CARE & STORAGE:** Protect this item from inclement weather, especially ice and snow. Move it to an indoor location that is cool and dry. Covering while in storage is recommended to help prevent dust build-up.



## SAFETY STATEMENTS & WARNINGS



- For decorative purposes only.
- Store indoors during inclement weather and freezing temperatures.
- Do not use harsh chemicals or abrasive materials to clean this item.

**Any modification to the product or failure to follow recommended care will void the product warranty.**