
 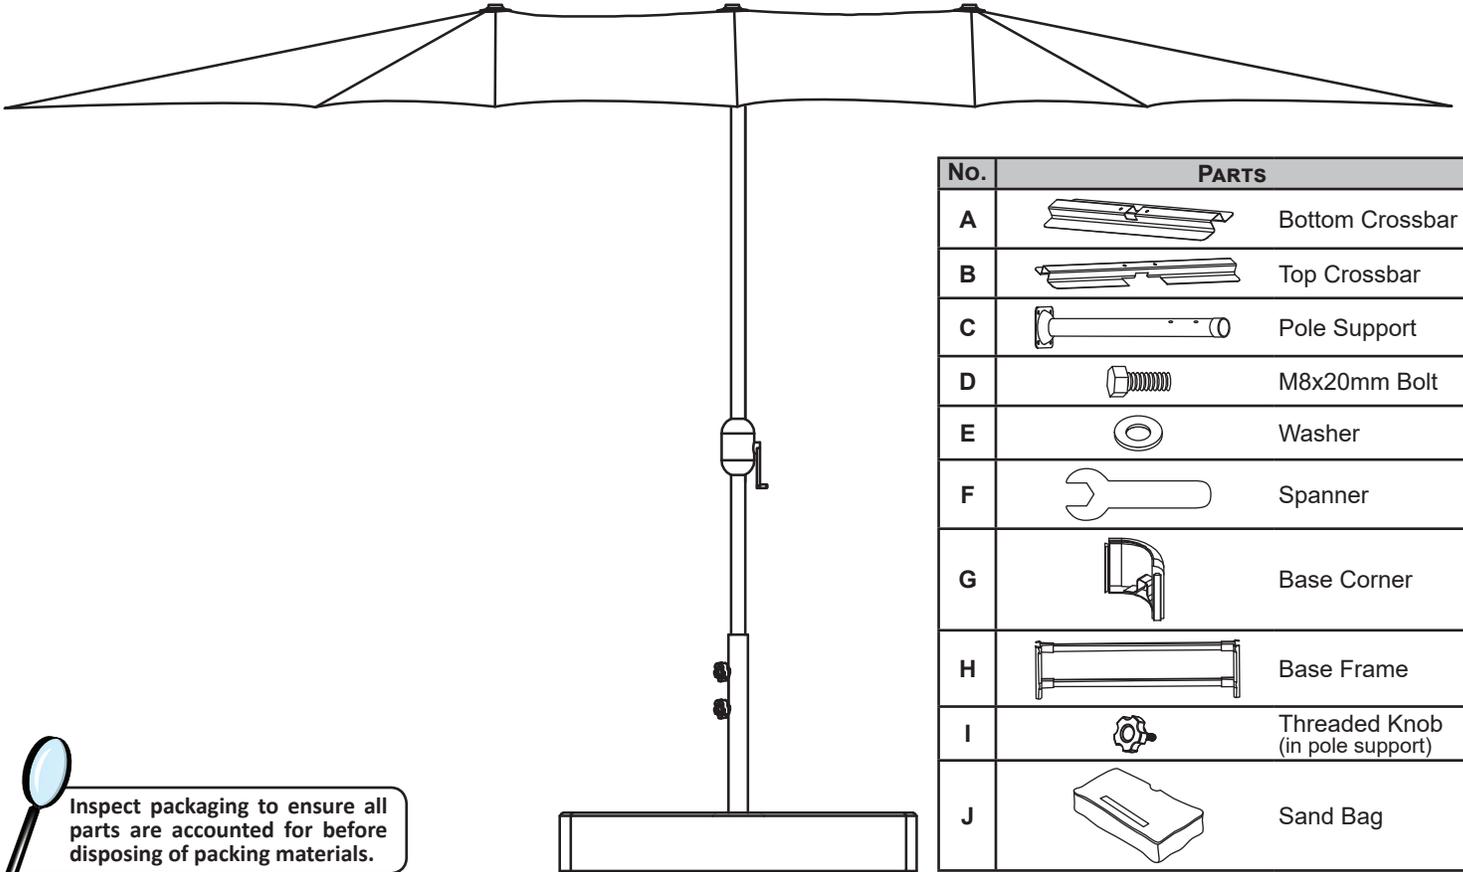

 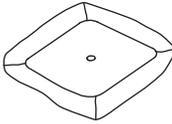


DOUBLE-SIDED PATIO UMBRELLA WITH BASE



 Inspect packaging to ensure all parts are accounted for before disposing of packing materials.

NO.	PARTS		QTY.
A		Bottom Crossbar	1
B		Top Crossbar	1
C		Pole Support	1
D		M8x20mm Bolt	4
E		Washer	4
F		Spanner	1
G		Base Corner	4
H		Base Frame	4
I		Threaded Knob (in pole support)	2
J		Sand Bag	2
K		Base Cover	1
L		Umbrella	1
M		Pole	1

WARNING

CHOKING HAZARD — This item contains small parts that can be swallowed. Keep children away during assembly.

HELPFUL HINT

Sunnydaze Decor advises reading this manual fully, and assembling the umbrella soon after purchase. Check that all parts are accounted for and familiarize yourself with the assembly before beginning.

Save this manual for future reference.

BEFORE YOU BEGIN...

- The base of this umbrella must be weighted for stability. Minimum total weight required: 150 lbs.
- Read and understand this manual before assembling and using the product.
- Do not discard any of the packaging until all components and fittings have been accounted for. When discarding packaging, take care and consideration for others and the environment.
- When assembling this umbrella, be aware of the safety of yourself and others.
- Because of the size of this umbrella, assembling it in the area intended for use is recommended.
- Assemble this umbrella on a clean, flat and level surface, e.g., the cardboard packaging.
- Assemble all parts loosely, by hand, before tightening any bolts or fixings.



IMPORTANT SAFETY INFORMATION



- Keep plastic bags away from children or animals.
- Keep fittings and small parts out of reach of children and animals.
- Do not place components directly onto patios or other abrasive surfaces where they may become damaged.
- Do not use power tools such as a drill, as this may damage the frame or fittings.
- Do not use the umbrella if any parts are missing or broken.
- Do not use the umbrella until all the bolts are securely tightened. Do not overtighten.
- Do not modify or alter the umbrella or base in any way as doing so will void the product warranty.
- Do not climb or stand on any part of the umbrella.
- Do not allow children to play on or around the umbrella.
- Please ensure that visitors are aware of the correct use and operation.
- Do not use your umbrella during inclement weather, including but not limited to, windy conditions, during thunderstorms, heavy rains, or during freezing temperatures.
- Do not leave your umbrella unattended while it is in the raised position.
- Always close the umbrella and secure the sewn-on straps when not in use.
- The stand and weights must always be used, even when the umbrella is used with a table that is equipped with an umbrella hole.
- The umbrella canopy does not provide complete protection from the sun or UV light.


HOW TO... use your double-sided umbrella

- Always use on a firm, flat and level surface.
- Always ensure that the umbrella is set up in its intended position and the metal pin is engaged prior to use.
- This umbrella is designed for private and domestic use only.
- Do not use this product near heat sources such as barbecues, fire pits, candles, torches, lanterns or heaters.
- Care must be taken when opening or closing the umbrella to prevent fingers and clothing from being pinched or trapped.
- Always ensure that the base is securely fixed and weighted before use.

ASSEMBLY

STEP 1


A: 1
B: 1

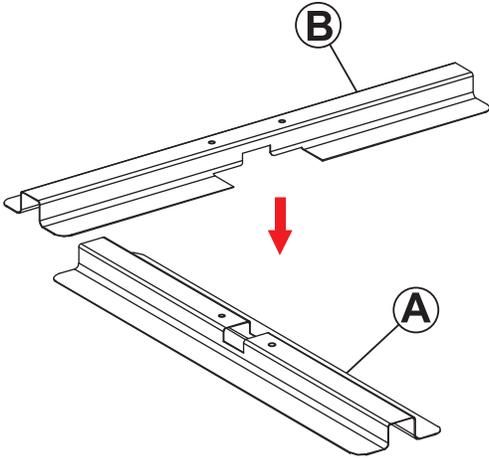

Place Top Crossbar (B) onto Bottom Crossbar (A).

STEP 2


C: 1
D: 4
E: 4
F: 1

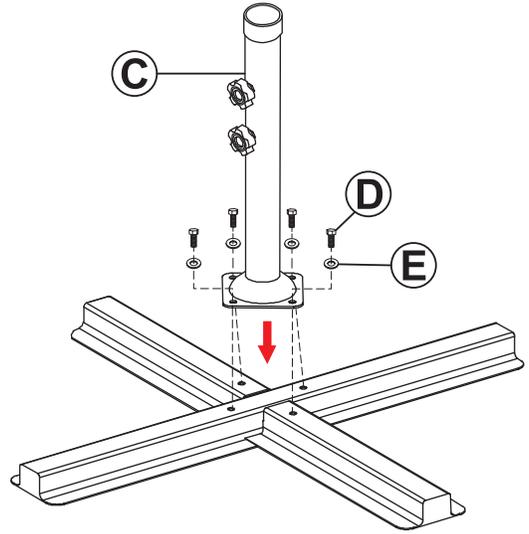

Securely fasten Pole Support (C) to the crossbars using four Washers (E) and Bolts (D), as shown.

STEP 3


G: 4

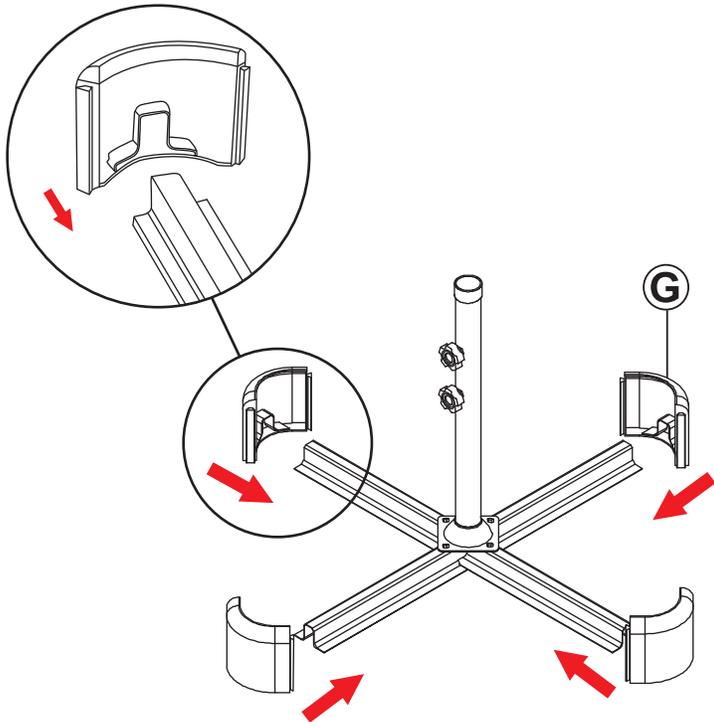

Attach four Base Corners (G) to the legs, as shown.

STEP 4

H: 4

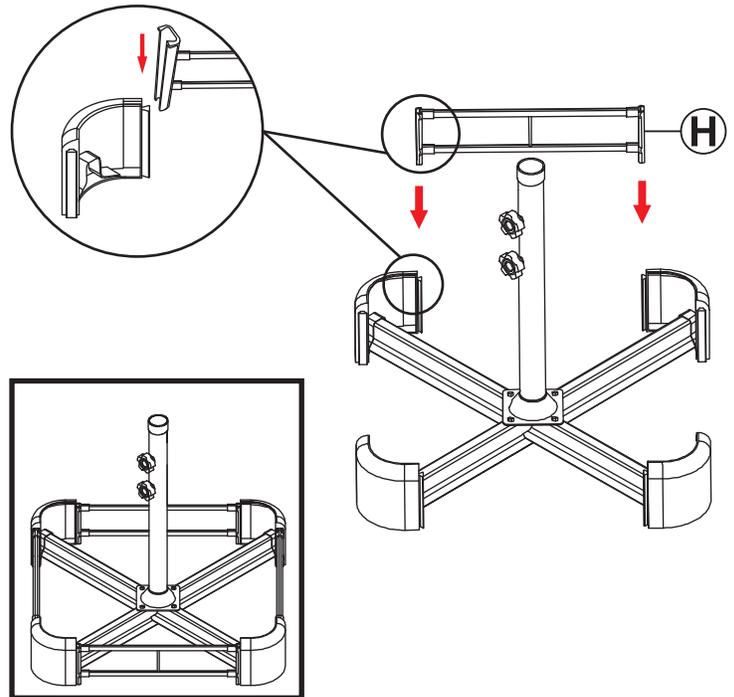


Slide four Base Frames (H) between the base corners, as shown.

STEP 5

J: 2


For proper stability of the umbrella, both sand bags must be completely filled. The recommended minimum weight is a total of 150 pounds.

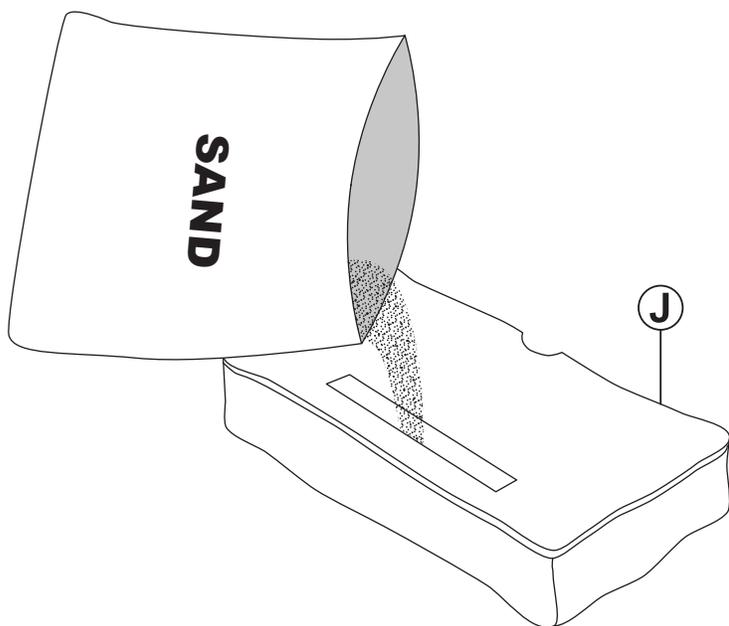


Fill two Sand Bags (J) with sand. Press the hook and loop fasteners together to close the bag.

STEP 6

K: 1

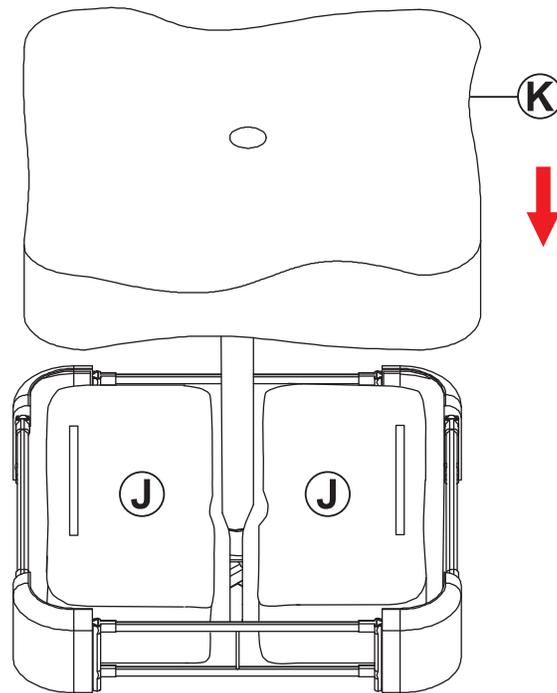

Place the sand bags inside the umbrella base and slide Base Cover (K) over the pole support, onto the base.

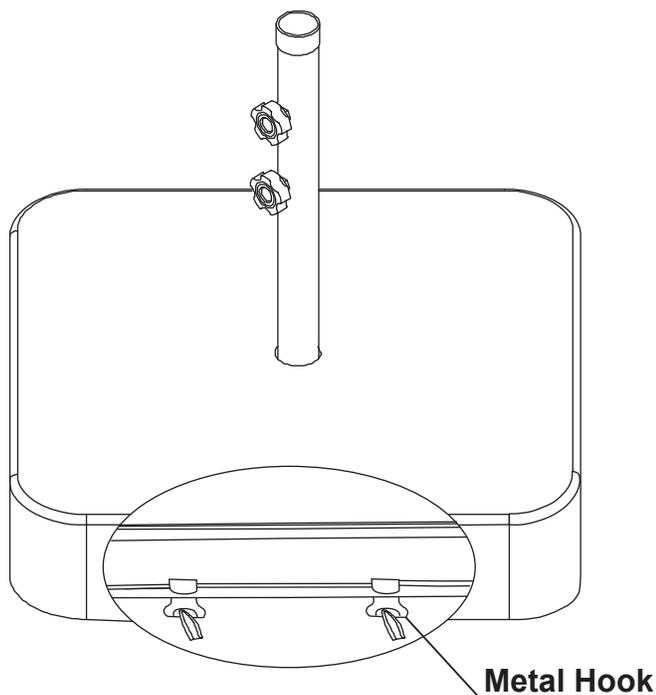
STEP 7

Locate the metal hooks on the base cover and secure them to the base frame, as shown.

STEP 8


L: 1

M: 1

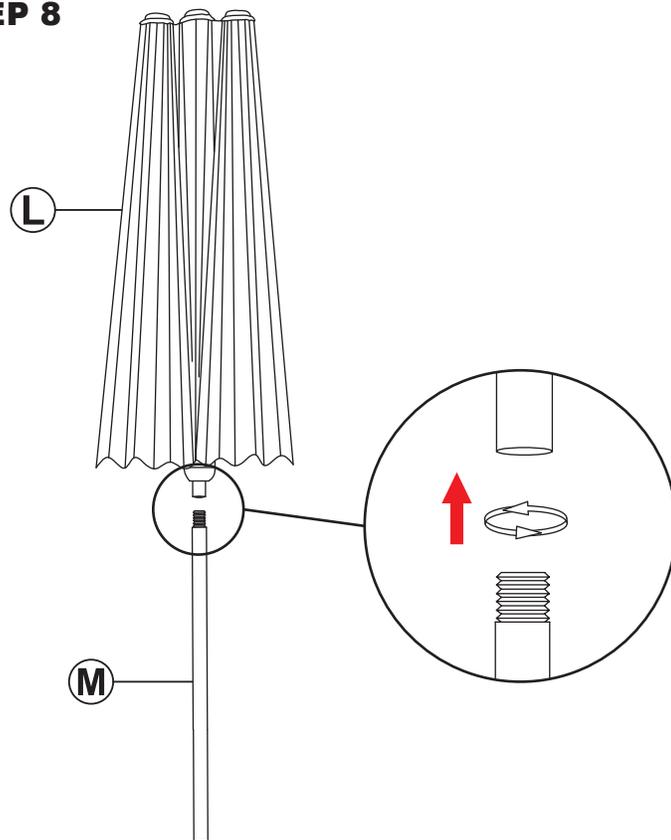

Twist Pole (M) clockwise into the bottom of Umbrella (L) until they are fully engaged.


STEP 9

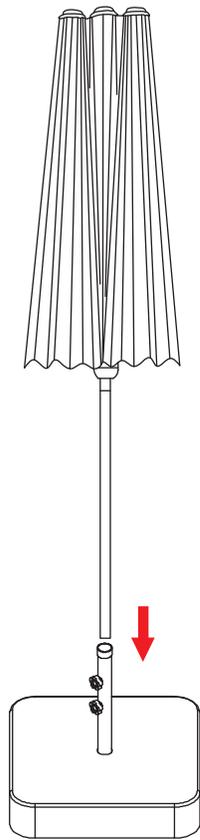

Insert the umbrella into the pole support.


STEP 10

I: 2

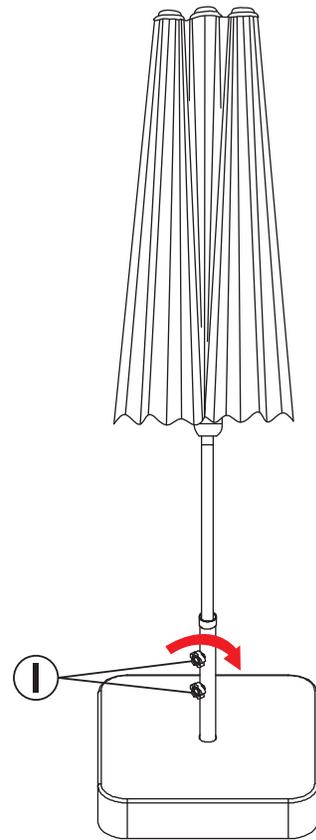

Tighten Threaded Knobs (I) to secure the umbrella.

STEP 11

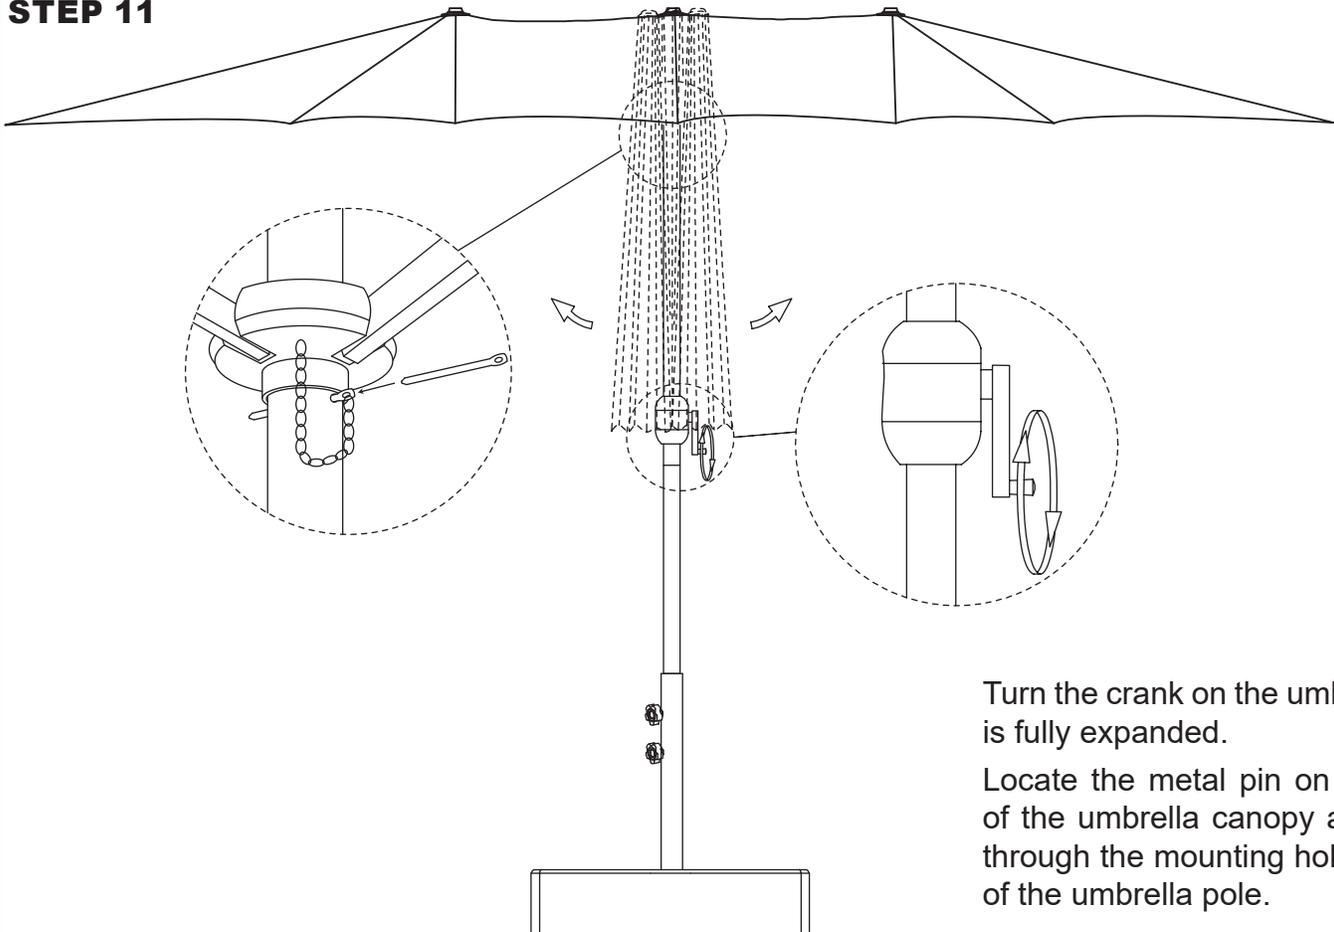

Turn the crank on the umbrella until it is fully expanded.

Locate the metal pin on the bottom of the umbrella canopy and insert it through the mounting hole at the top of the umbrella pole.

Cleaning & Maintenance

 DO NOT USE BLEACH

 DO NOT USE A PRESSURE WASHER

BASIC CARE

All fabrics will eventually fade from sun exposure. However, it is possible to maintain an umbrella's color for years to come by covering it with an umbrella cover and storing it indoors when not in use.

Always close the umbrella when not in use. Secure the sewn-on ties to prevent uplift

Do not use bleach, solvents or abrasive cleaners on this product.

Before putting into storage or covering, ensure the entire unit is clean and fully dry. Moisture may cause mold and mildew growth on the canopy fabric and may cause the frame to rust.

During adverse weather conditions and winter, store your offset umbrella inside under a suitable cover.

METAL FRAME

Wipe the frame down using a soft cloth, warm water and mild soap; rinse thoroughly and dry.

If the painted finish should become chipped or scratched exposing bare metal, clean the surface thoroughly and treat with a suitable touch-up paint.

Periodically use a suitable lubricant or water displacer on bolts and joints and check the frame for water build-up and empty if present.

Periodically check the tightness of any bolts or fixings — re-tighten hardware as required.

CANOPY FABRIC

Brush or vacuum loose dust, dirt and debris from the canopy. To clean the fabric, use a weak solution of warm water and washing powder or laundry detergent. Rinse fabric thoroughly and allow to air dry thoroughly. Always test cleaning solutions on a small area first to ensure suitability. Do not use bleach, acid, solvents or abrasive cleaners on the fabric.

WARNING: THE ONE-YEAR WARRANTY DOES NOT COVER DAMAGES OR DEFECTS CAUSED BY THE APPLICATION OF CHEMICAL TREATMENTS, PROTECTIVE COATINGS, OR TOUCH-UP PAINT.

Troubleshooting

Canopy will not open?

Inspect the ribs beneath the canopy to ensure they are not crossed. Carefully, and gently uncross the ribs and the canopy should open as intended by turning the crank.

Umbrella seems unstable?

The base of the umbrella must be weighted down at all times. Using the umbrella without weights can result in serious injury and/or property damage.

Any modification to the product or failure to follow recommended care will void the product warranty.

WARNING!

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.