
exhart

KINETIC SPINNER WIND CHIME


Assembly Instructions

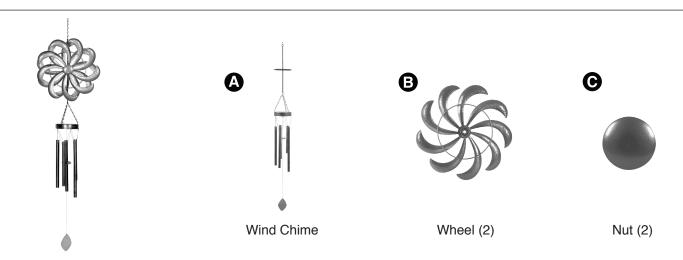


Step 1:

Attach wheel (B) to wind chime (A) by inserting wheel into the side pole.


Note: Wheel should face-out on wind chime.

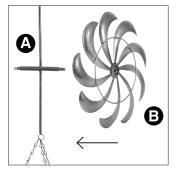

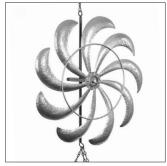

Step 2:

Screw on nut (C) into wind chime (A) (the result of step 1) by turning it to the right until it is firmly tightened.

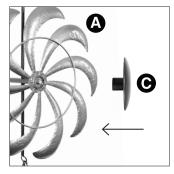




Step 3:

Attach wheel (B) to wind chime (A) by inserting wheel into the other side of pole.


Note: Wheel should face-out on wind chime.

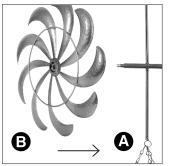




Step 4:

Screw on nut (C) into wind chime (A) (the result of step 3) by turning it to the right until it is firmly tightened.

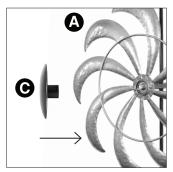

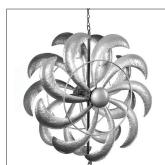

When everything is assembled, hang it on your patio, porch, tree, or anywhere you wish.

