
SIMPL'HOME

Acadian / Normandy / Brunswick

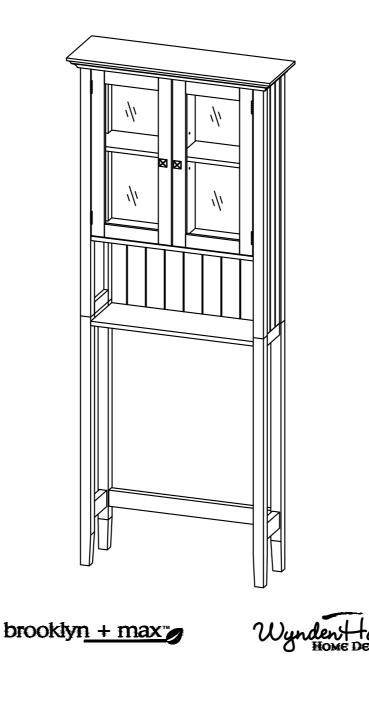



SIMPL'HOME



It's time to register your product warranty.

It's quick and easy. And you'll be happy you did.



- ✓ Activate your **1-year** warranty
- ✓ Automatic entry to win a \$500 gift certificate
- ✓ Earn instant rewards and save



simpli-home.com/product-registration

SIMPL'HOME

Review your product and collect rewards!

Thank you for your purchase! We hope you enjoy it. We'd love your feedback. Please share a review and get instant rewards!





simpli-home.com/product-review



Share photos and get your cash back!



Send us images or share them on social and qualify for instant rewards. You may even receive store credit on your entire purchase!







simpli-home.com/share-images

SIMPLHOME

For Fastest Customer Service:



- 1. Open your phone's camera.
- 2. Point your phone's camera at the QR code to scan.
- 3. Click on the pop up.
- 4. You'll be taken to our customer service page.
- 5. Fill the form with your order information and issue.
- 6. Submit form.
- 7. A customer service associate will contact you.

Other ways to contact us...



Email Us customerservice@simpli-home.com



Visit Us Visit our site directly at

www.simpli-home.com



Call Us

1-866-518-0120 Monday to Friday 9am to 5pm EST

*If you've purchased from a retailer and you wish to return the product, please contact the retailer directly.

IMPORTANT : Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

Safety Information

This furniture is designed for indoor use.

CAUTION: Injuries and damage can occur from furniture tip over if product is not properly anchored to the wall. Use the Furniture Anti-Tipping Restraint provided with the product. Consult our assembly instructions for help.

If the Furniture Anti-Tipping Restraint kit is not in the box, please contact our customer service department in order to obtain another kit before using the furniture.

Identify all the parts and hardware. Do not discard of the packaging until you have checked that you have all of the parts and hardware required. Hardware package may have spare parts.

WARNING: This item contains small parts which can be swallowed by children and pets. Keep children and pets away during assembly. To avoid danger of suffocation, always keep plastic bags away from children and pets. We recommend that you assemble this unit on a carpeted floor to avoid scratches. If using power tools, set the tool to low torque to avoid damage.


May require 2 people for ease of assembly.


Care & Maintenance

To clean, use a soft or slightly damp cloth, then wipe with a clean, dry cloth. Dust with a soft dry cloth.

Do not use ammonia-based cleaning products, as they will damage the finish. Do not leave liquids or damp cloths on this furniture.

To avoid dulling of the finish, do not place this furniture in direct sunlight. Please inspect and tighten all screws or bolts on a regular basis to ensure proper performance and safety of your item.

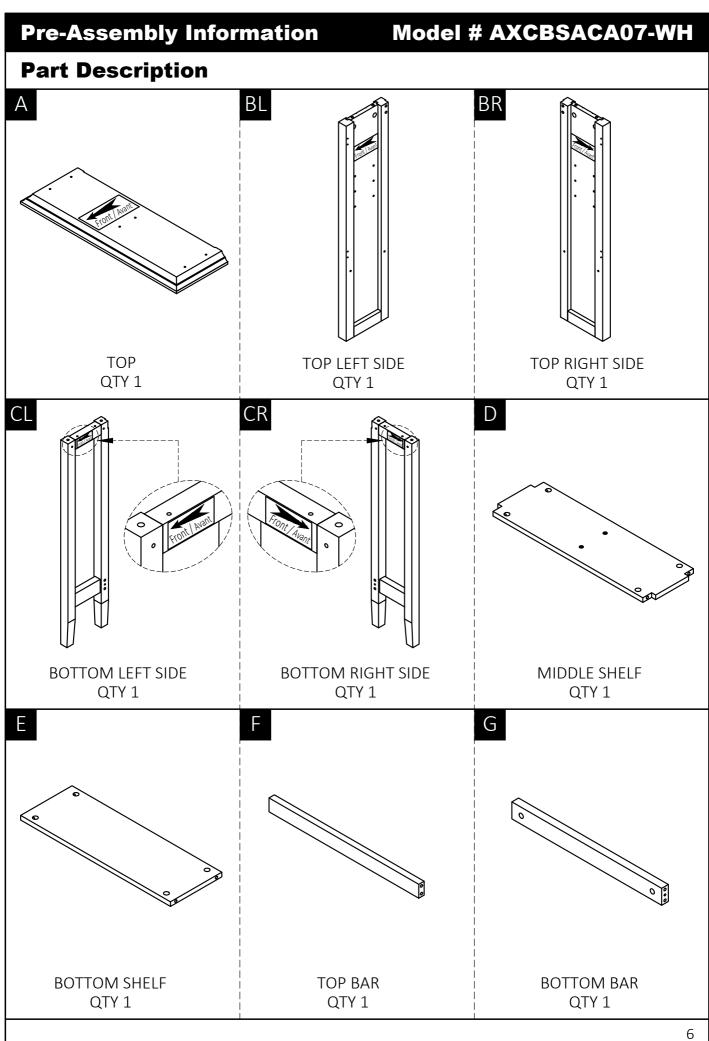


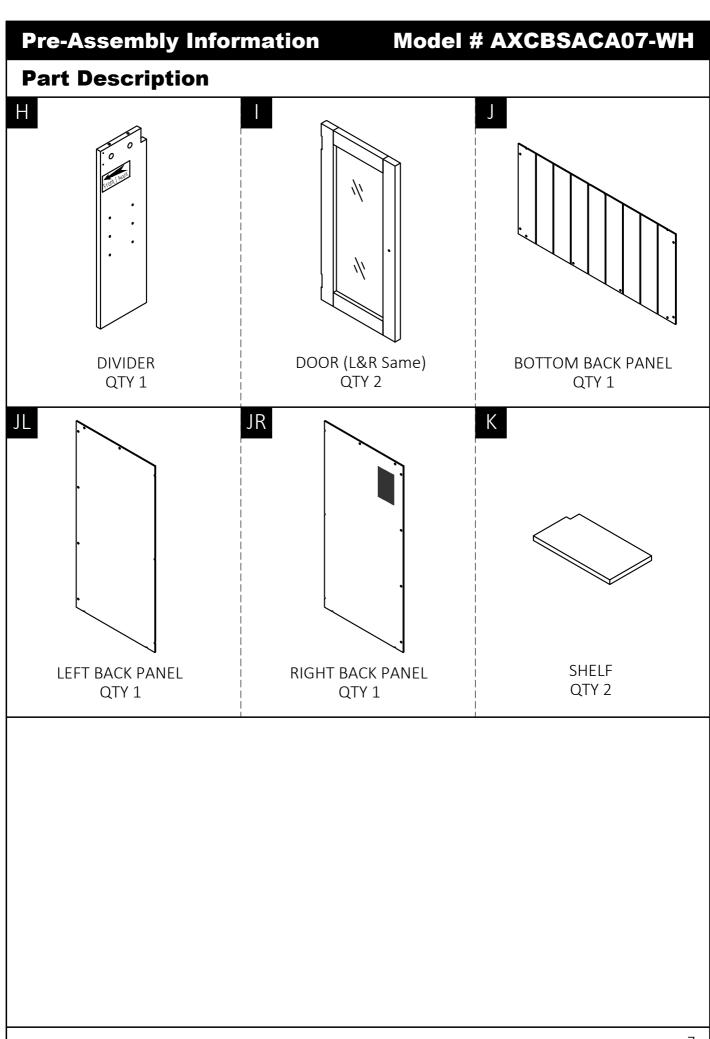




Hardware Description 3 1 2 4 0 CAM LOCK PIN WOOD DOWEL CAM LOCK Ø8 X 30mm HINGE MAGNET AND PLATE QTY 16 SETS QTY 4 QTY 2 SETS **QTY 13** 5 7 8 6 ଚ 6 0 6 HANDLE PHILLIPS SCREW SHELF SUPPORT BRACKET M4 X 25 mm M4 X 50mm QTY 8 QTY 2 QTY 2 SETS QTY 6 9 10 11 12 M4 X 25mm - QTY 2 (1 is extra) а. b. 🖗 M4 X 15mm - QTY 1 M4 X 25mm - QTY 1 C. 1010010 PHILLIPS SCREW PHILLIPS SCREW PHILLIPS SCREW **ROUND HEAD** FURNITURE TIP M4 X 15mm M3 X 15mm M4 X 15mm **OVER RESTRAINT** QTY 8 **QTY 24 QTY 27** QTY 2 SETS Required -Flathead screwdriver Phillips screwdriver (0 Rubber mallet Not Included

Components - Key Diagram

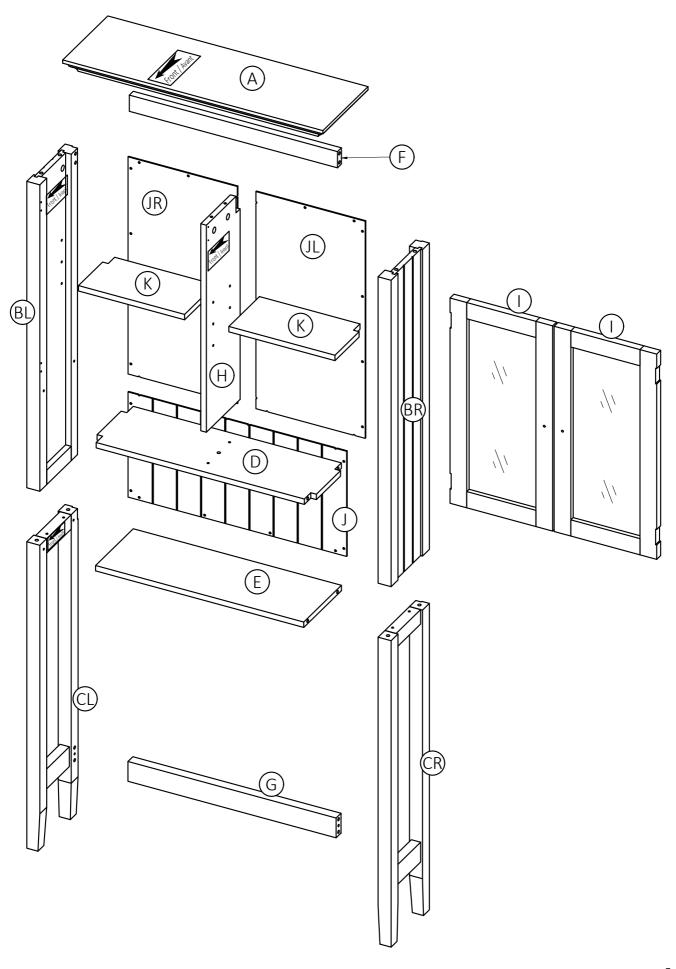


Model # AXCBSACA07-WH

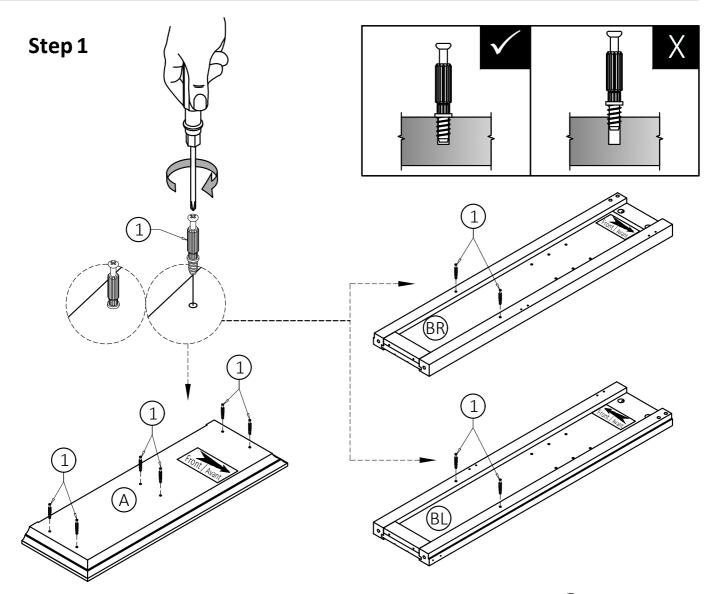


- 1. Attach Cam Lock Pins 1 into pre-drilled holes on each part (A), (BL), (BR).
- 2. Use Phillips screwdriver to secure Cam Lock Pins. Do not over-tighten.

- 3. Insert Dowels (2) into guide holes on parts (F), (H).
- 4. Use rubber mallet to tap Dowels (2) into bottom of holes securely. 1/2 length of Dowels should be exposed.

Model # AXCBSACA07-WH

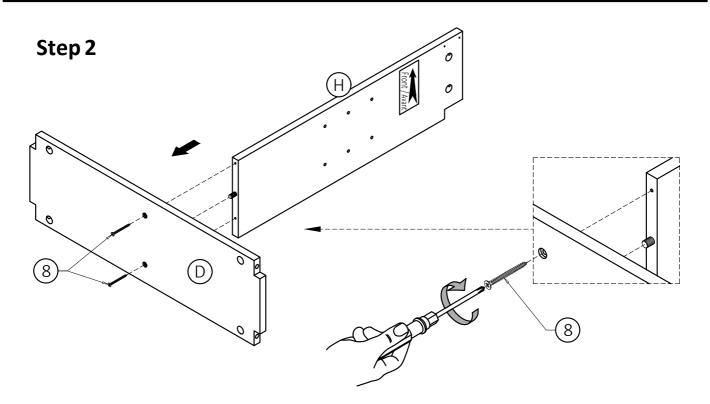


- 1. Align Wood Dowels with guide holes and attach Divder \bigoplus to Middle Shelf \bigoplus .
- 2. Use two Phillips Screws (8) to attach Middle Shelf (1) through guide holes from Middle Shelf (1) to pre-drilled holes of Divider (1).
- 3. Use Phillips screwdriver to secure Screws. Do not over-tighten.

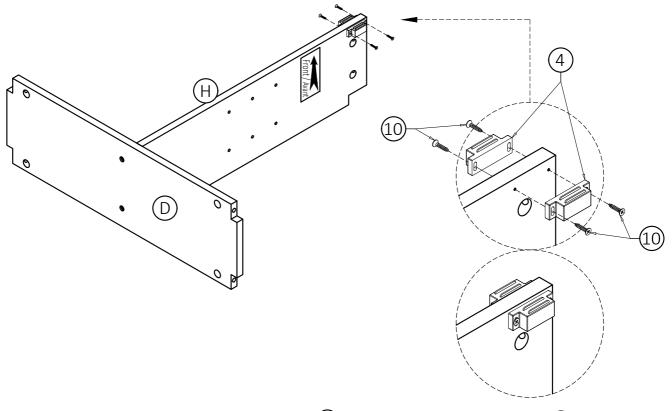


4. Attach Magnets ④ using Phillips Screws ① into pre-drilled holes Divider ⊕.
5. Use Phillips screwdriver to secure screws. Do not over-tighten.

Model # AXCBSACA07-WH




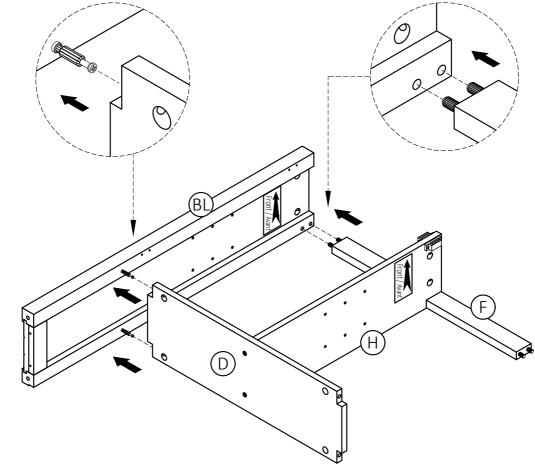


1. Align Wood Dowels with guide holes on part (D) and attach part (F) to Left Side (B). 2. Align Cam Lock Pins with guide holes on part (D) and attach part (D) to Left Side (B).

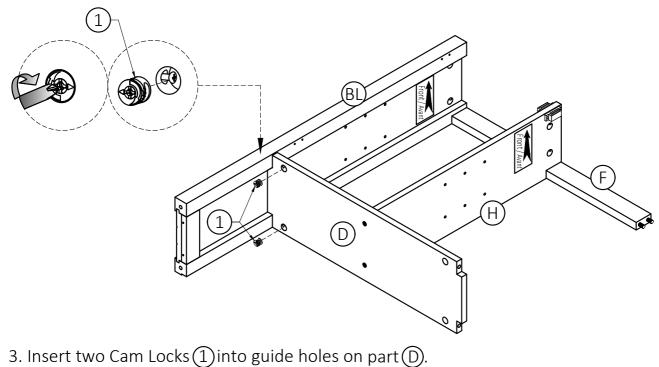


4. Use Phillips screwdriver to secure Cam Locks.

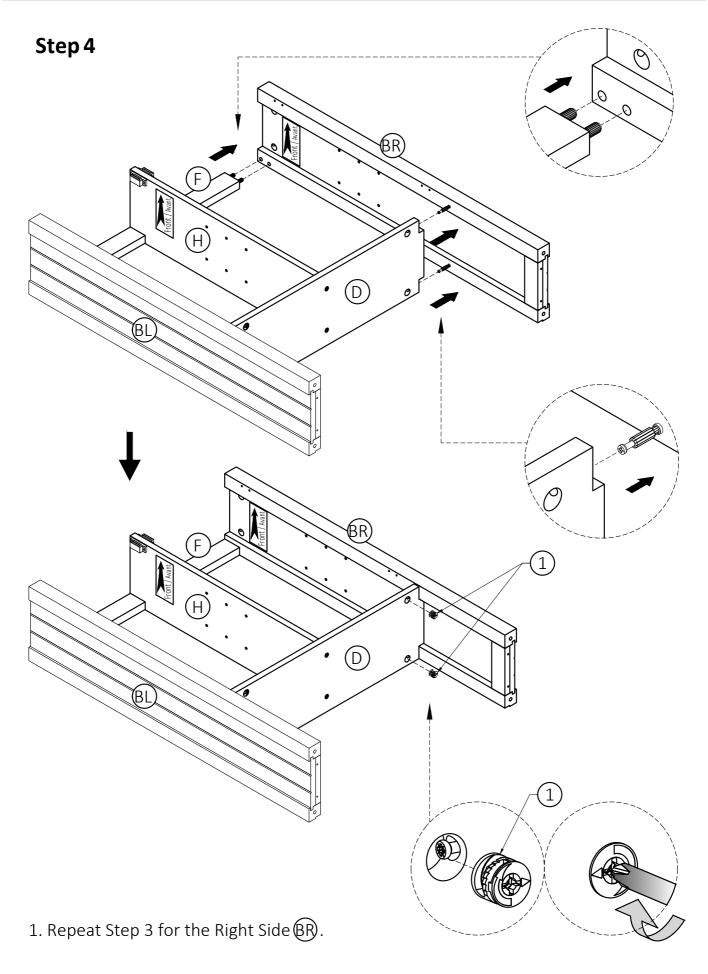


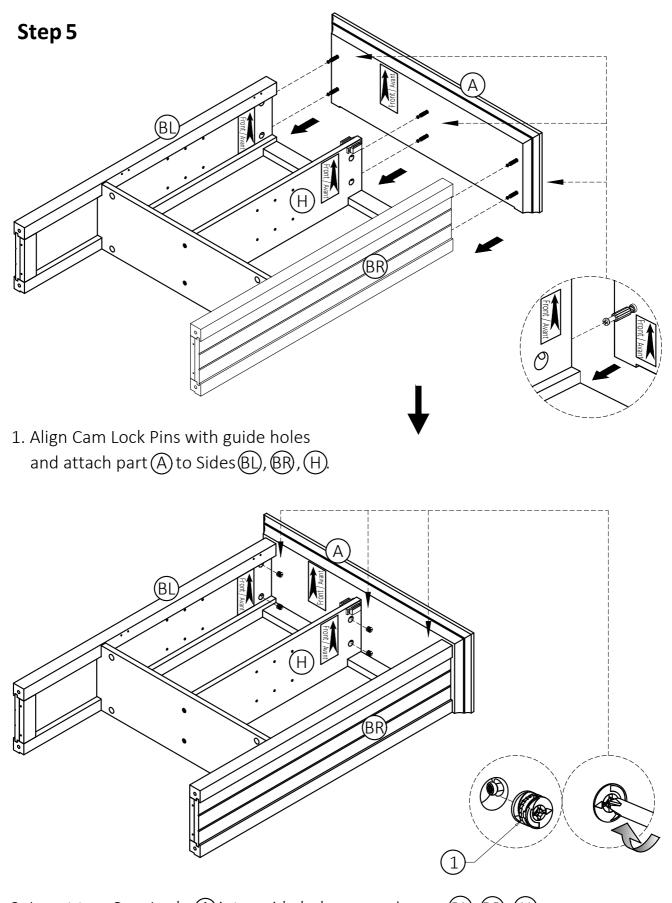

Insert two Cam Locks ① into guide holes on each part BL, BR, H.
 Use Phillips screwdriver to secure Cam Locks.

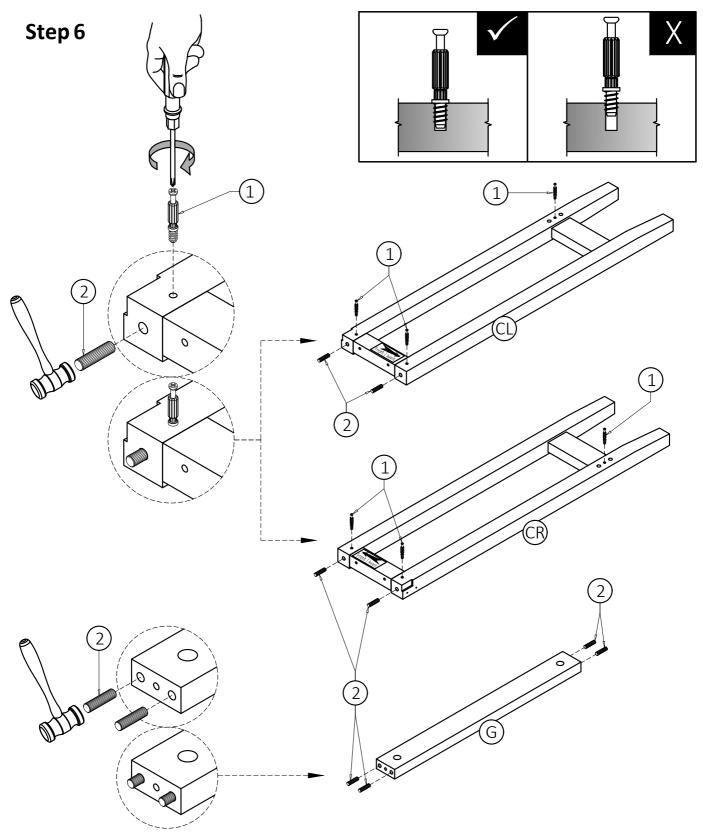



- 1. Attach three Cam Lock Pins (1) into pre-drilled holes on each part (CL), (CR).
- 2. Use Phillips screwdriver to secure Cam Lock Pins. Do not over-tighten.
- Insert Dowels (2) into guide holes on parts (G), (CL), (CR).
 Use rubber mallet to tap Dowels (2) into bottom of holes securely. 1/2 length of Dowels should be exposed.

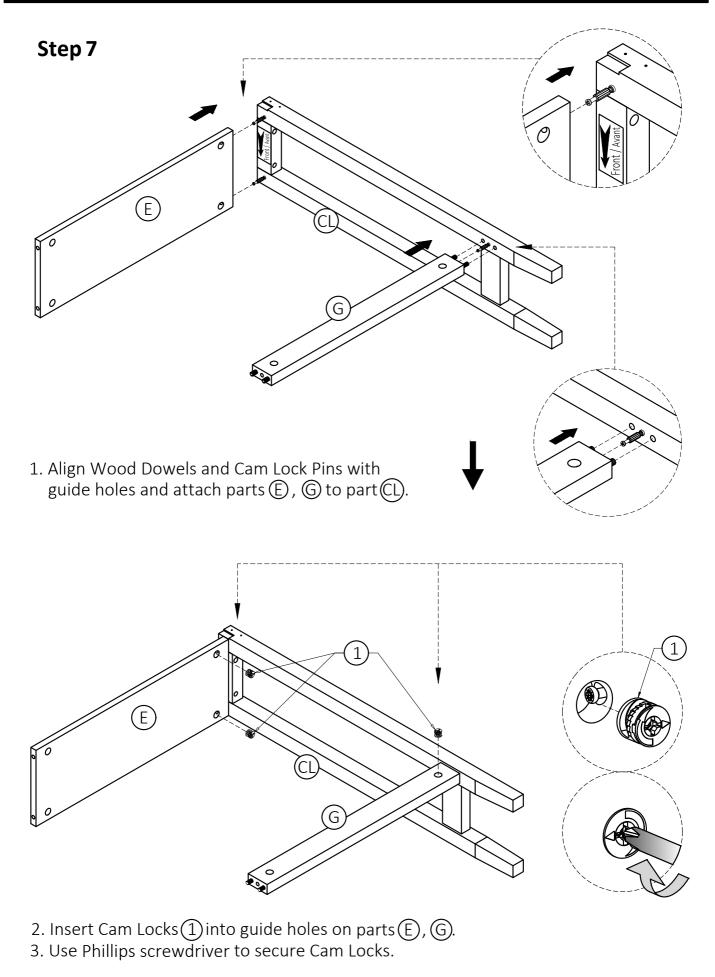


Model # AXCBSACA07-WH

Step 8

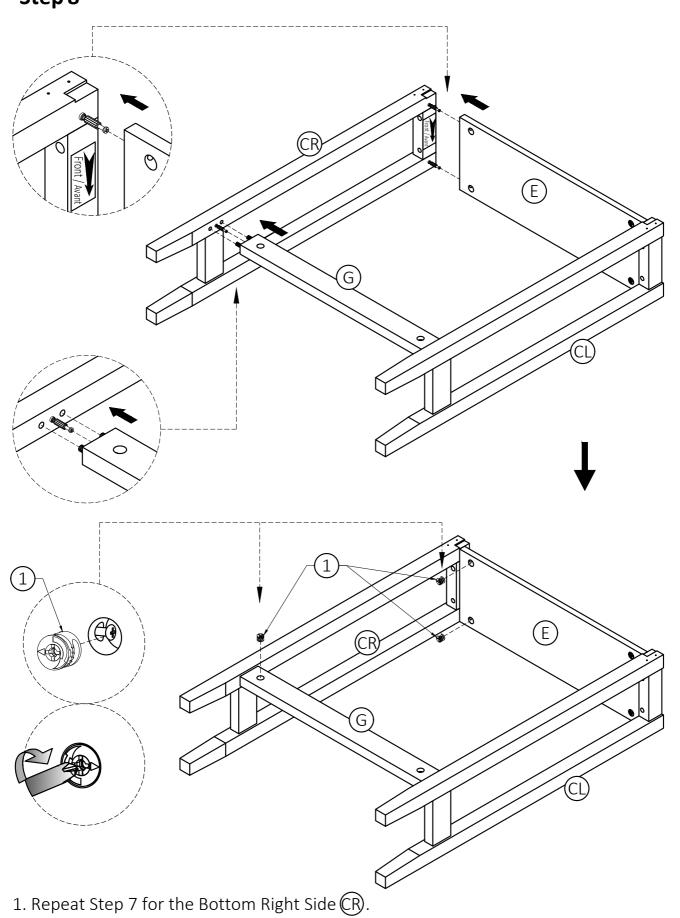

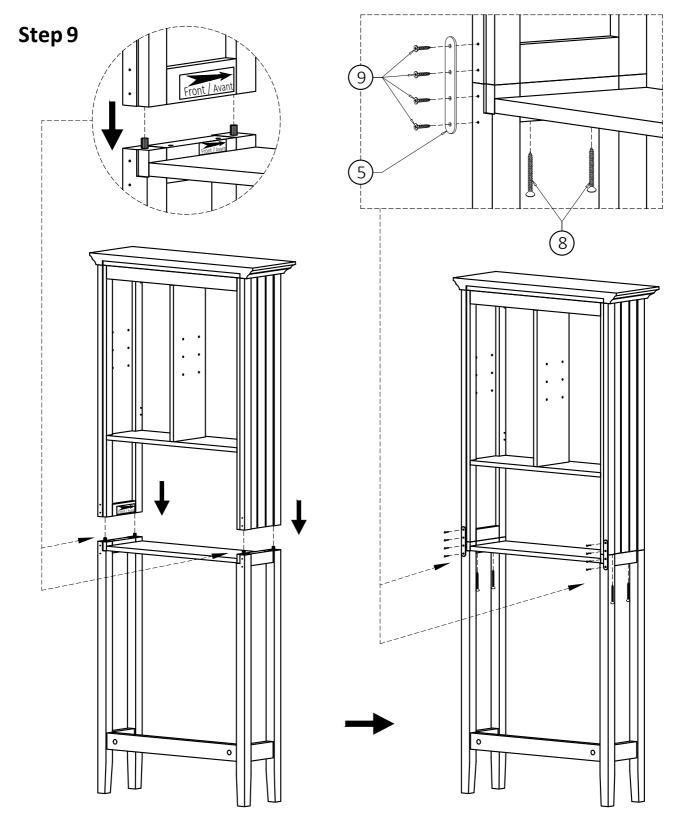


- 1. Align Wood Dowels with guide holes on top fame and attach top frame to bottom frame.
- 2. Use four Phillips Screws (8) into guide holes on bottom fame .
- 3. Attach Bracket (5) using Phillips Screws (9) into pre-drilled holes on top frame and bottom frame.
- 4. Use Phillips screwdriver to secure Screws. Do not over-tighten.

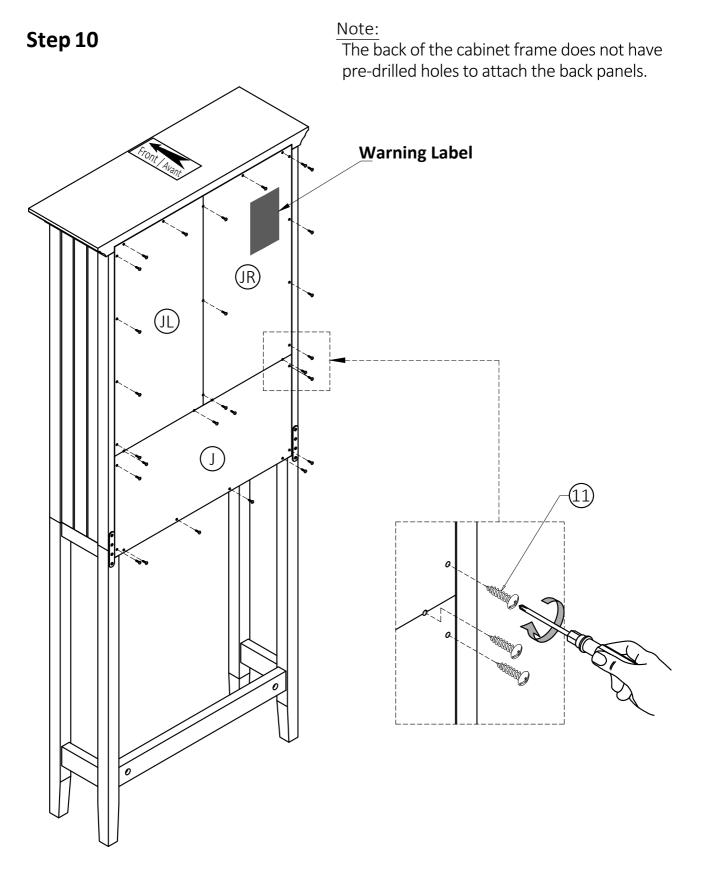

- 1. Attach the Back Panels (), (I), (IR) to back frame using Phillips Screws Round Head (1) through guide holes from Back Panels.
- 2. Use Phillips Screwdriver to tighten screws. Do not over-tighten.


Model # AXCBSACA07-WH

Step 11

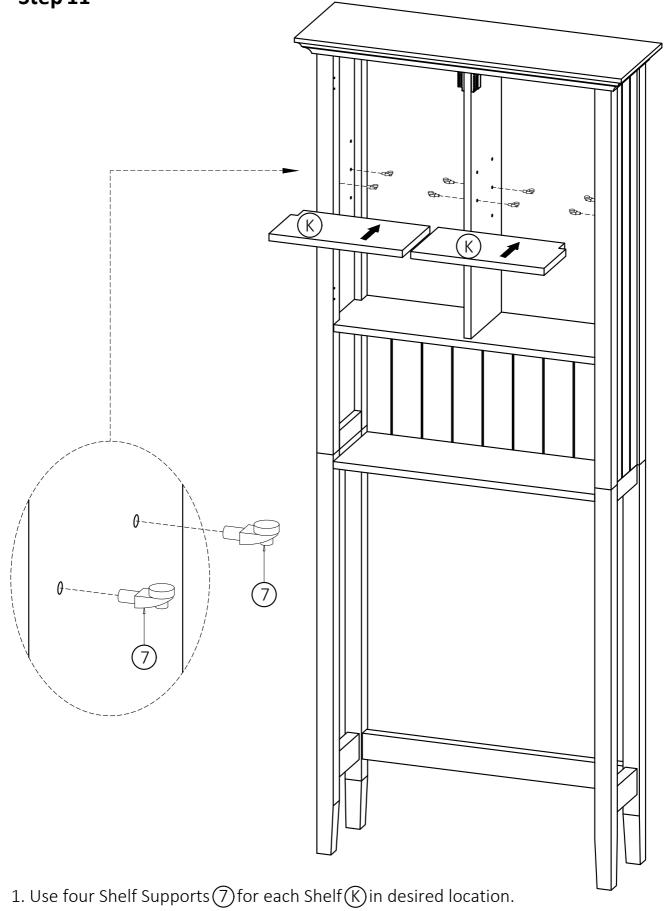


Model # AXCBSACA07-WH

Step 12

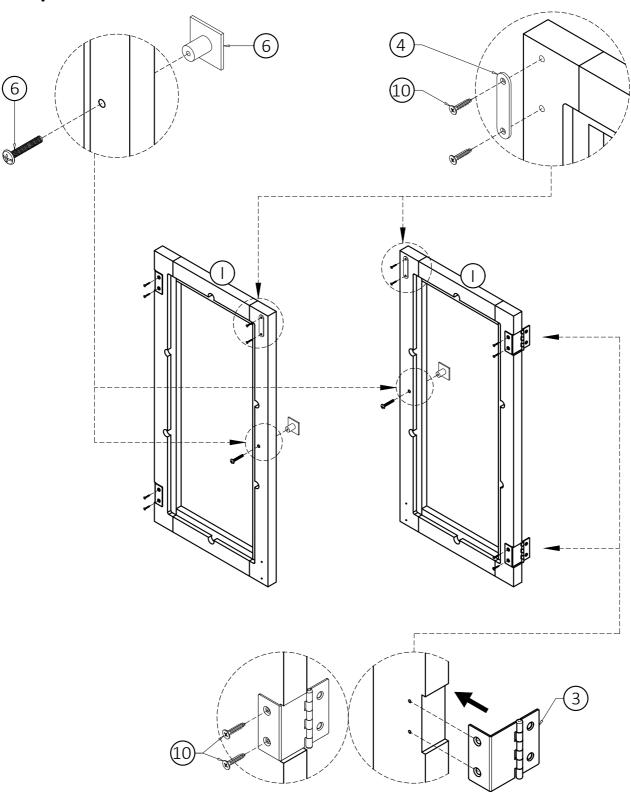


- 1. Attach Hinges (3) to Doors () using Phillips Screws () into pre-drilled holes on Doors ().
- 2. Attach Magnet Plates (4) to top corner of Doors (1) using Phillips Screws (1) into pre-drilled holes on Doors (1).
- 3. Use Phillips screwdriver to attach Handle 6 to Doors ().

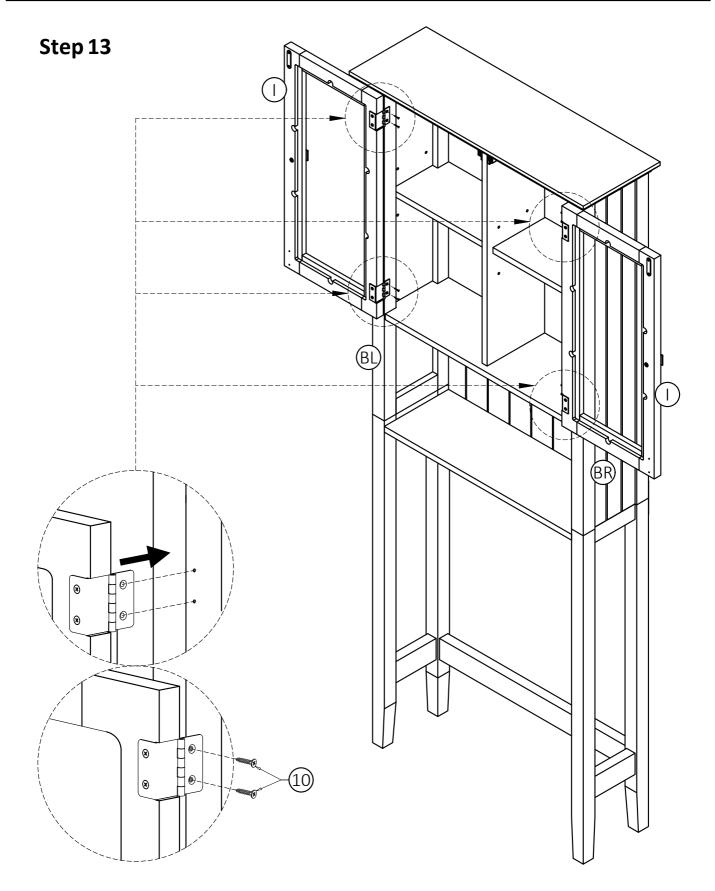

- Attach Hinges on Doors 1 to Sides BL, BR using Phillips Screws 10 into pre-drilled holes on Sides BL, BR.
 Use Phillips screwdriver to secure screws. Do not over-tighten.


Furniture Tip Over Restraint Assembly

Serious or fatal crushing injuries can occur from furniture tip-over. If the furniture tip over restraint kit is not in the box, please contact our customer service department in order to obtain another kit before using the furniture.

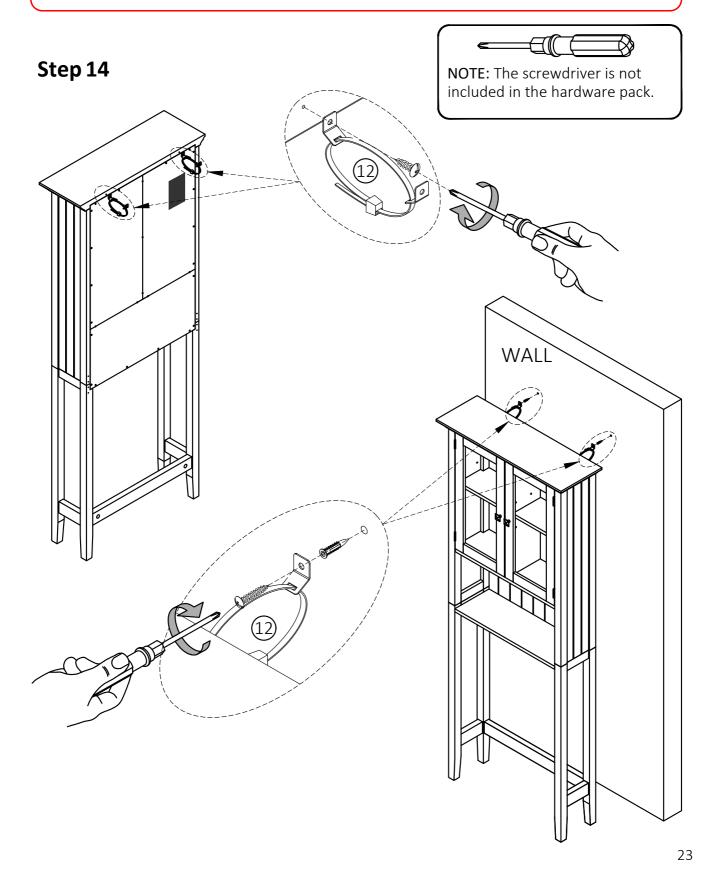


Furniture Anti-Tipping Restraint Instructions

 
1. Attach one of the mounting brackets securely to the back edge of the furniture. Use the shorter screw.



 2. Determine where furniture is to be placed and mark location on the wall for mounting bracket screw hole approximately 2 inches below the bracket mounted to the furniture.



- 3. Drill a 3/16 inch hole in the wall. Press the plastic anchor into the hole and gently tap until the flange on the anchor is against the wall surface.
- 4. Position the bracket over the anchor and use the longer screw to securely attach the bracket to the wall.
- 5. Place the furniture so the back edge is in line with the bracket on the wall.
- 6. Lace an end of the nylon zip-tie strap down through each bracket. Bring both ends together and slide the smooth side upright through the square-shaped end and pull through to create the "locked" position.
- 7. Check to make sure the strap is securely laced and locked to the brackets.

 

- **DO NOT** put a TV or other heavy objects on top of furniture not intended for use with a TV
- **DO NOT** place heavy objects in top drawers or on top shelves
- **DO NOT** let children climb or hang on drawers, doors or shelves