

Purchase Date:	/ /	Order/Customer Reference	Number


Thank you for choosing Sunnydaze Decor. We stand behind our brand and the quality of the items we sell. Replacement parts or products will be sent at our discretion within the 1-year warranty period. Proof of purchase, with the date of purchase as well as photos of the merchandise defect, must be provided. Photos are used to determine the cause of defects and for future quality control. Register your warranty at https://tiny.cc/SunnydazeWarranty If you have any questions, comments or concerns, feel free to contact us by phone at 833-982-1977, by email:

customerservice@sunnydazedecor.com, or via our contact us page at https://tiny.cc/SunnydazeContact


DOUBLE EGG CHAIR GLIDERDL-912

Review all assembly and care information before using this product. Save this manual for future reference.

Assemble components on a soft, clean surface to avoid damaging the finish.

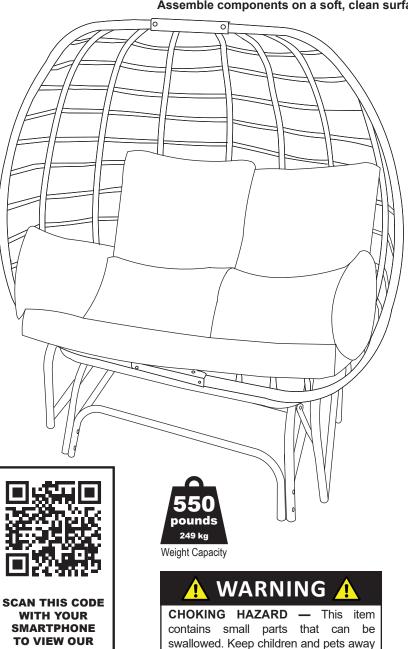

during assembly.

 


No.	P/	ARTS	QTY.
A		Egg Chair	1
В) ()	M6x18mm Bolt Set	5
С		M6x45mm Bolt Set	12
D		M8x60mm Bolt Set	4
E		Side Leg	2
F		Leg Support	2
G		M6x60mm Bolt Set	8
н		Seat Frame	1
ı		Glider Frame	2
М		Bracket	2
N		Glider Frame Bar	1
Q		Seat Cushion Set	1
R		Throw Pillow	2

INCLUDED TOOLS		
	Hex Key	
	Spanner	


≜WARNING!

ASSEMBLY VIDEO

 
Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.



IMPORTANT: Lock nuts must be installed with the nylon insert on the outside. Hand-tighten the nut until you feel resistance, which is caused by the nylon insert. Tools are required to fully tighten lock nuts, failure to properly tighten the lock nuts may result in product malfunction or personal injury.

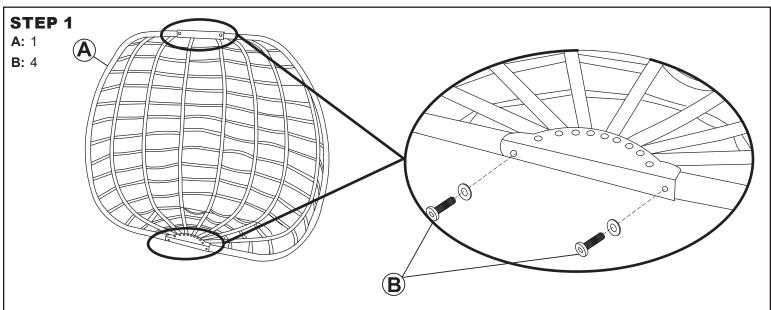

 Unfold Egg Chair (A) and secure it using two M6x18mm Bolt Sets (B), as shown.



F: 2 **G**: 8


Align one Leg Support (F)


with the front sides of two Side Legs (E) and loosely secure using four M6x60mm Bolt Sets (G).

Repeat to secure the remaining leg support to the back of the side legs.


STEP 3


IMPORTANT: Ensure the front and back of the glider frames are assembled in the D: 4 correct direction. **H**: 1

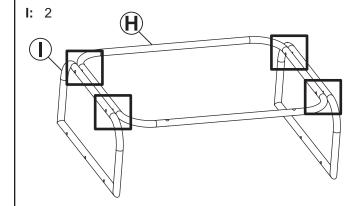


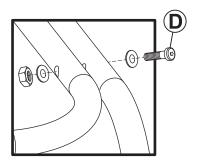

Loosely secure two Glider Frames (I) to Seat Frame (H) using four M8x60mm Bolt Sets (D).

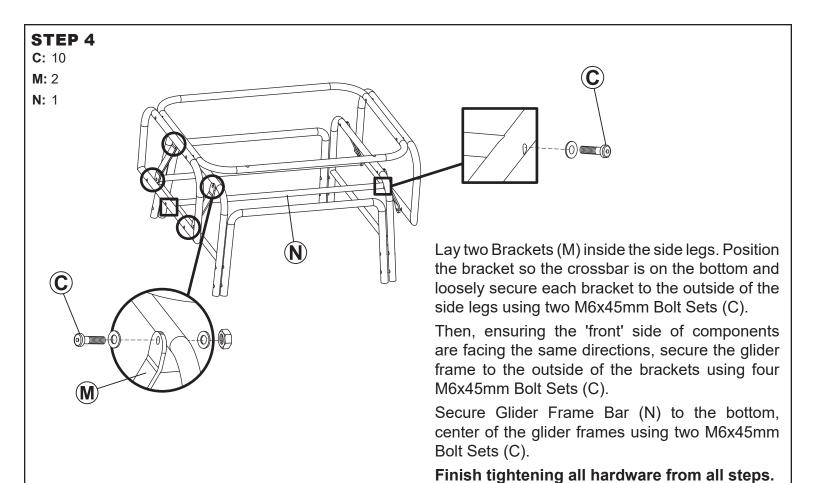

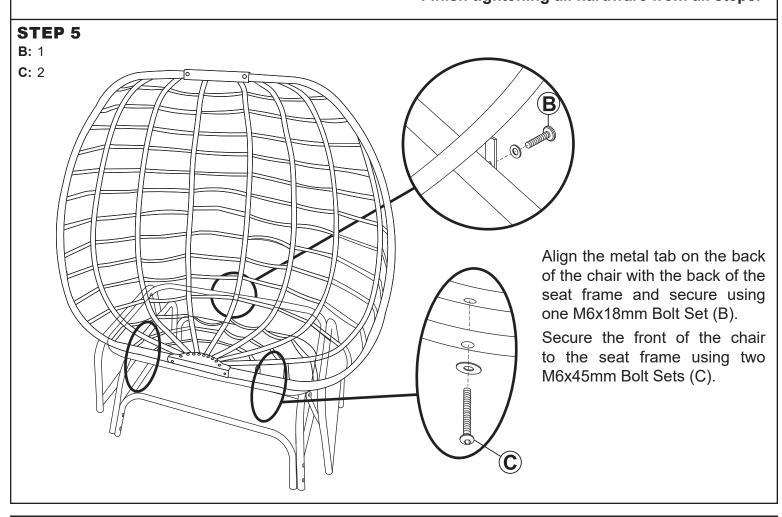

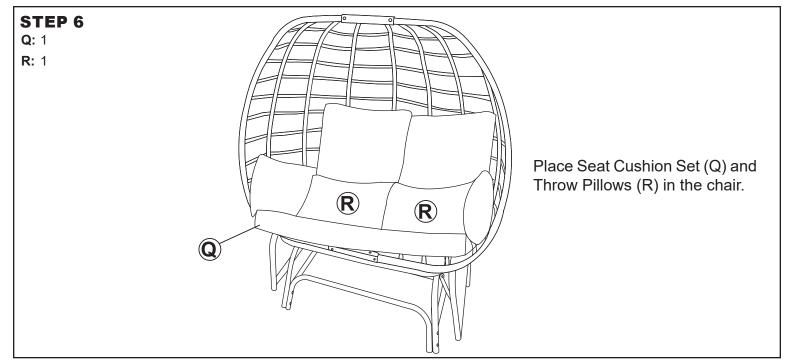

Care & Maintenance

SAFE USE: Do not stand on the chair. Only use on a flat, level surface.

INSPECT: Check unit for damage before each use; do not use the chair if any components are broken. Periodically check hardware and tighten as necessary.

SUN EXPOSURE: All fabrics will eventually fade from sun exposure. Maintain fabric color and integrity by storing the cushion and pillows indoors when not in use.

WINTER CARE & STORAGE: Maintain the appearance and prevent damage by storing this item indoors when not in use. Store indoors during winter and inclement weather. A cool, dry location is recommended to prevent damage. Covering with a breathable cover while in storage helps prevent dust build-up. Ensure cushions are completely dry before storing as moisture promotes mold and mildew growth.

WARNING: THE ONE-YEAR WARRANTY DOES NOT COVER DAMAGES OR DEFECTS CAUSED BY THE APPLICATION OF CHEMICAL TREATMENTS, PROTECTIVE COATINGS, TOUCH-UP PAINT, OR CLEANING PRODUCTS.

▲ SAFETY STATEMENTS & WARNINGS **▲**

- Do not exceed the weight capacity.
- · Never stand, or climb on the chair.
- Inspect item before use to ensure components are not damaged and hardware is securely fastened.
- Keep furniture a safe distance from heat sources such as, but not limited to, fire pits, patio heaters, and grills.
- Do not allow children to use this product without adult supervision.
- Do not use harsh chemicals, abrasive materials or a pressure washer to clean the furniture.

Any modification to the product or failure to follow recommended care will void the product warranty.

If you experience issues with assembly or the product was damaged during shipping, please contact our customer service team through one of the methods mentioned at the top of page 1.

Please have the item number and order information ready to expedite response time.

♠WARNING:

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.