

88 5003 501


Queen Headboard

IMPORTANT NOTE


Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occurring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

Home
Styles

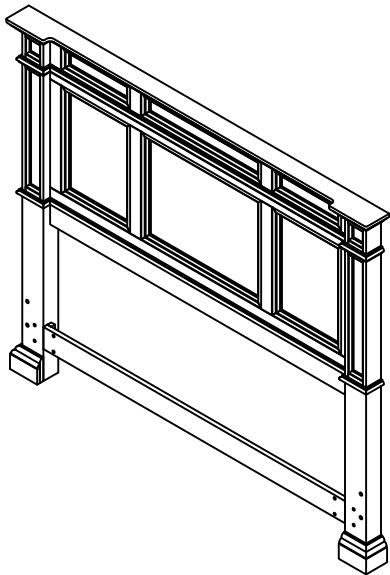


Part List

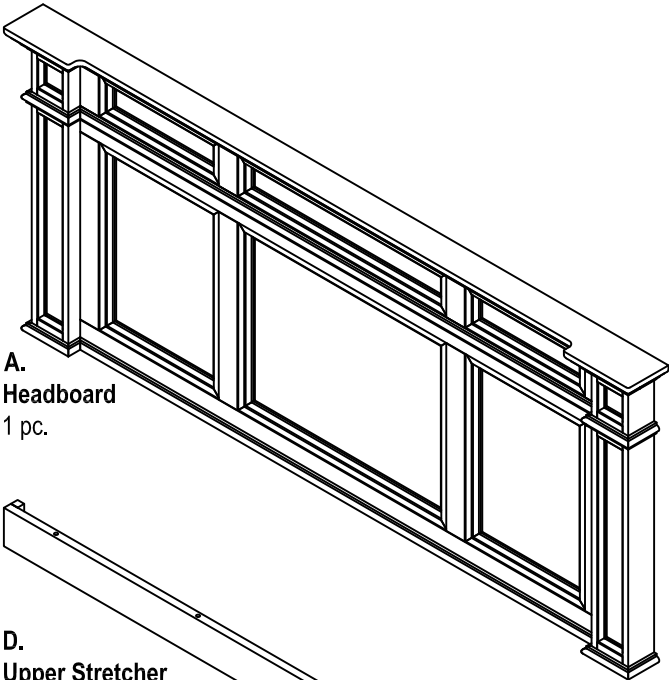


A.
Headboard
1 pc.



 
D.
Upper Stretcher
1 pc.



 B.
Leg
1 pc.




C.
Leg
1 pc.

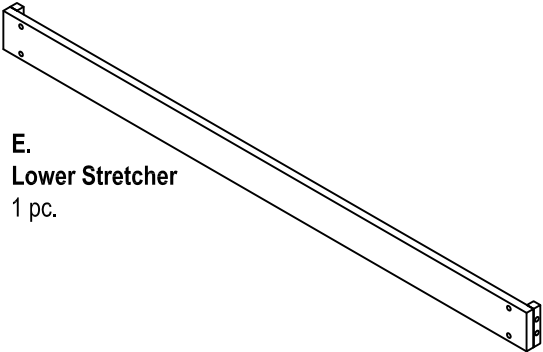

E.
Lower Stretcher
1 pc.

Hardware List

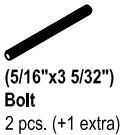

(5/16"x3 5/32")
Bolt
2 pcs. (+1 extra)



(M6x40)
Head Cap Bolt
8 pcs. (+1 extra)



 
Cam Lock Screw
4 pcs. (+1 extra)




Cam Lock
4 pcs. (+1 extra)



Flat Washer
8 pcs. (+1 extra)



Square Washer
2 pcs. (+1 extra)

 

Nut
2 pcs. (+1 extra)



Key Wrench
1 pc.



Allen Key
1 pc.



Small Allen Key
1 pc.

Tools Required For Assembly : Phillips screwdriver

Home Styles Consumer Assistance: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319

Assembly Instructions 2/3


IMPORTANT

- * Do not tighten up all the bolts until each part is properly assembled.
- * You should keep Allen Key and Wrench in a safe place as you may need to tighten up the Head Cap Bolts and Nuts in the future.
- * Use a soft cloth between these parts and the floor.

STEP 1

Attach Legs (B) and (C) to Upper and Lower Stretchers (D) and (E) with Head Cap Bolts and Flat Washers.

Turn Head Cap Bolts clockwise using Allen Key.
(See Figure 1)


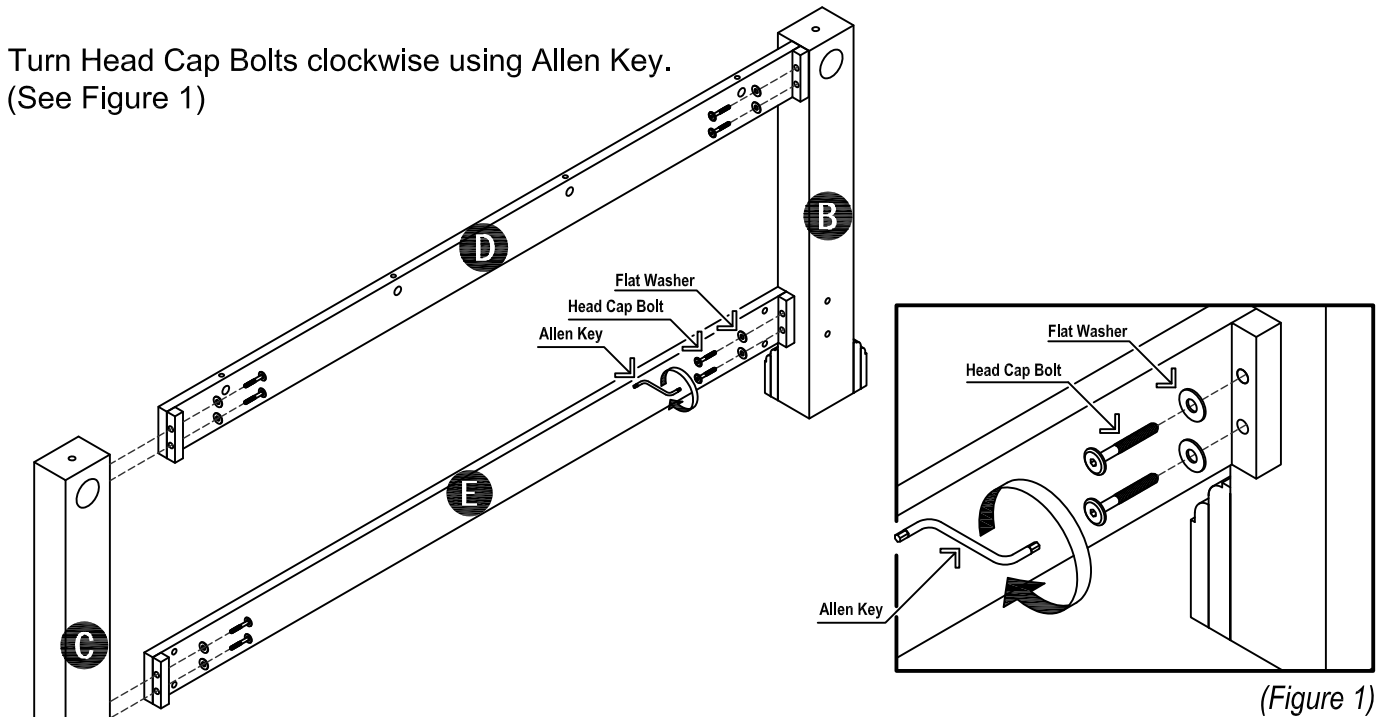


STEP 2


Attach Cam Lock Screws and Bolts to Headboard (A).

STEP 3

Attach Headboard (A) to unit with Square Washers, Nuts and Cam Locks. Tighten all the Nuts with Wrench.
(See Figures 2 and 3)

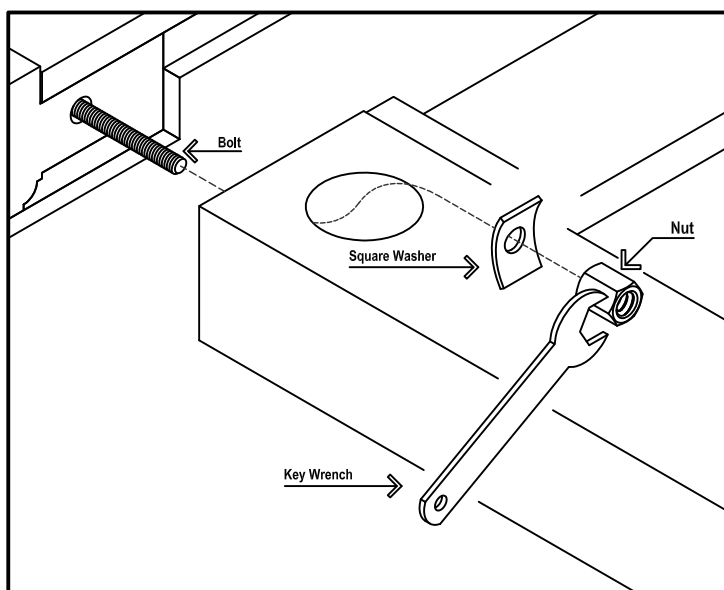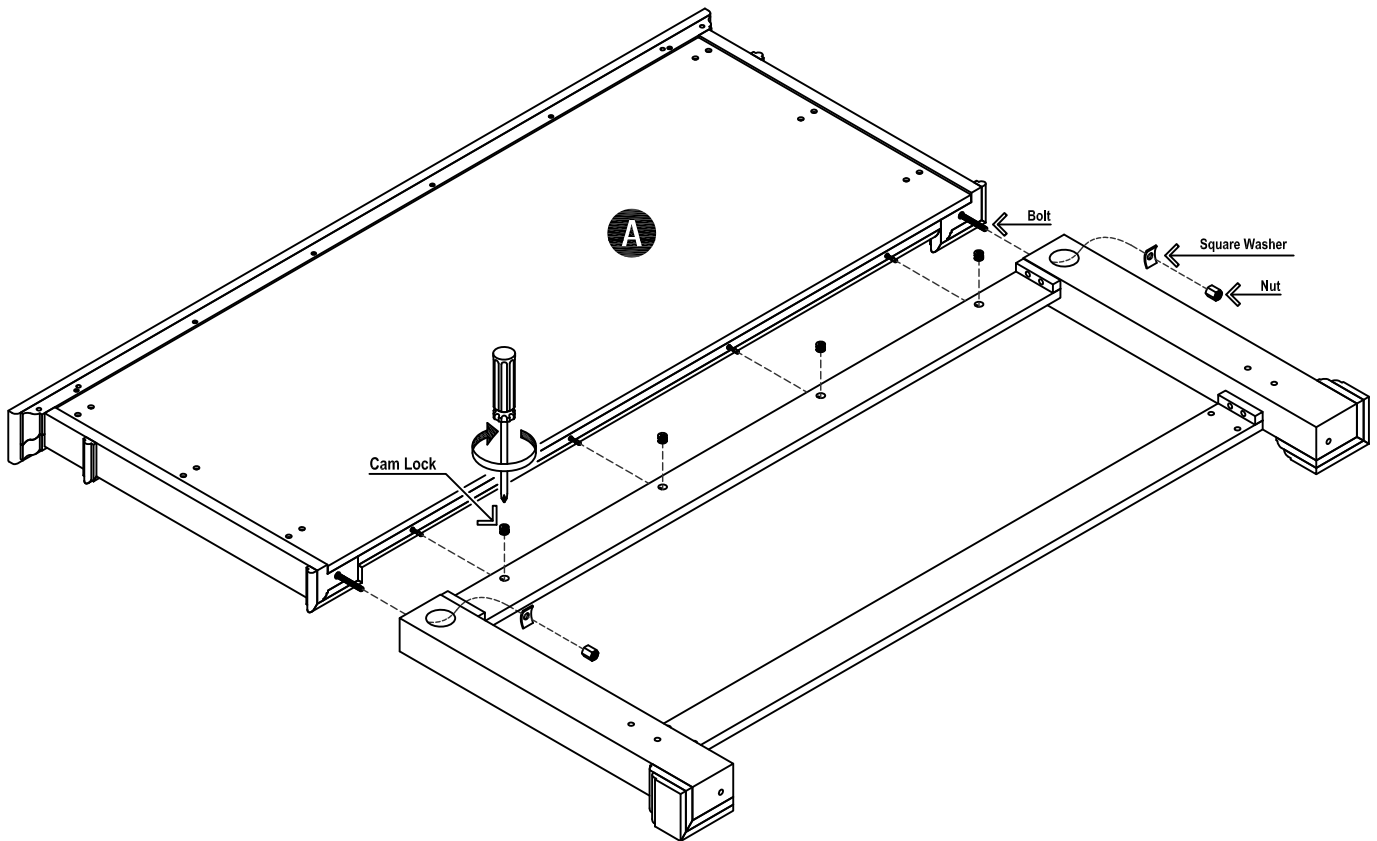

(Figure 2)

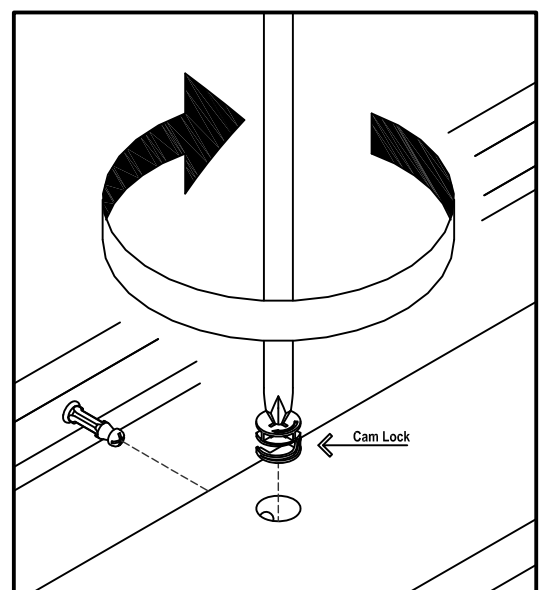

(Figure 3)

VERY IMPORTANT !!

CARE INSTRUCTIONS

NEVER

USE GLASS CLEANERS ON FINISHED FURNITURE. AMMONIA WILL CHEMICALLY ATTACK THE FINISH.

NEVER

ALLOW LIQUIDS OF ANY KIND TO REMAIN ON THE FURNITURE. ABSORPTION CAUSES PART TO WARP AND SPLIT AND FINISHES TO DELAMINATE.

DO NOT
WRITE
DIRECTLY
ON
SURFACE.



**PREVENT
MARKING**

DO NOT
PLACE IN
DIRECT
SUNLIGHT.



**PREVENT
FADING**

DO NOT USE
COMMERCIAL
WAXES AND
POLISHES.



**PREVENT
YELLOWING**

DO NOT
PLACE HOT
OBJECTS
ON SURFACE.



**PREVENT
FINISH DAMAGE**

DO NOT
USE
RUBBER
BASED
PLACE MATS.



**PREVENT
DISCOLORING**

TO CLEAN

USE A SOFT CLOTH MOISTENED IN LUKEWARM SOAP AND WATER, THEN BUFF WITH A DRY CLEAN CLOTH.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If this product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

www.homestyles-furniture.com/customer_service

Home Styles Consumer Assistance: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319