homestyles[®]

88 5531 752 Closet Wall Drawer Unit


IMPORTANT


Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.



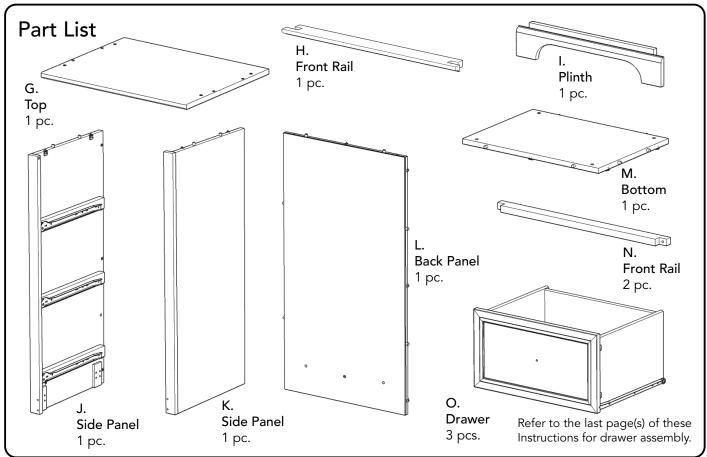

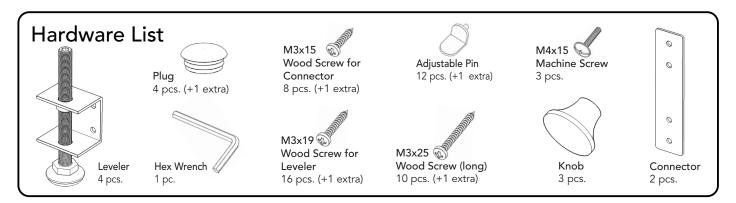


Carton 88 5531 751 is also needed for assembly.

Tool(s) required for assembly: Phillips screwdriver, Level, Drill (8 volts or less), 3/8" Drill Bit


Assembly Instructions 2/8

IMPORTANT


- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Do not tighten all the bolts until each part is properly assembled.
- The unit must be level to work properly. Use the included adjustable levelers to level.
- Keep Hex Wrench in a safe place as the bolts may need to be tightened up in the future.

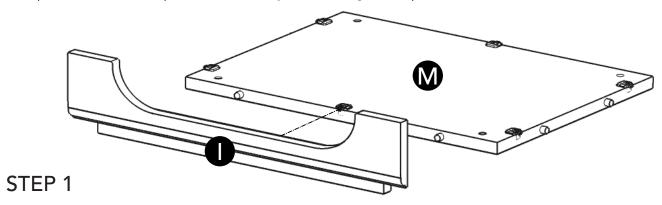


Attach Plinth (I) to Bottom (M), then flip the lock. (See Figure 1)

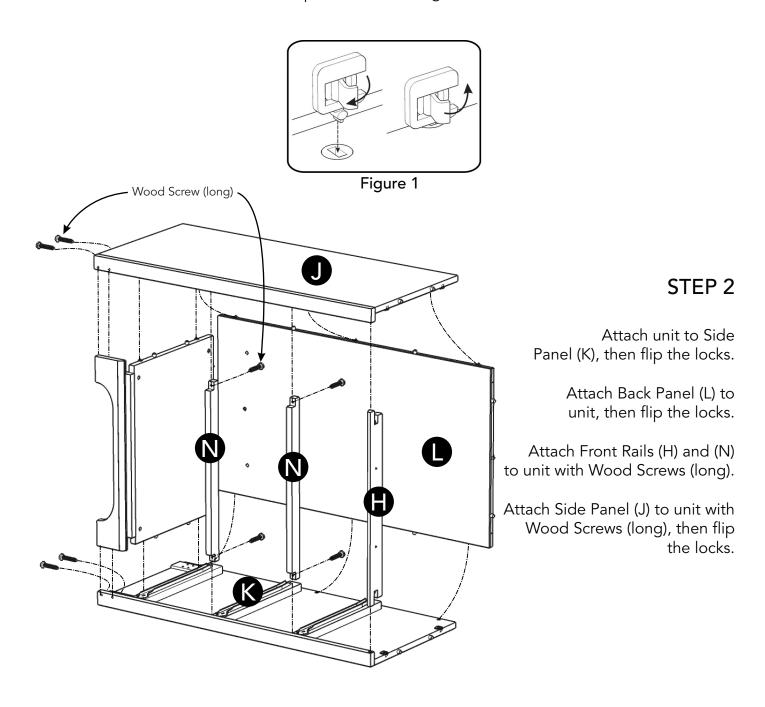


Assembly Instructions 3/8

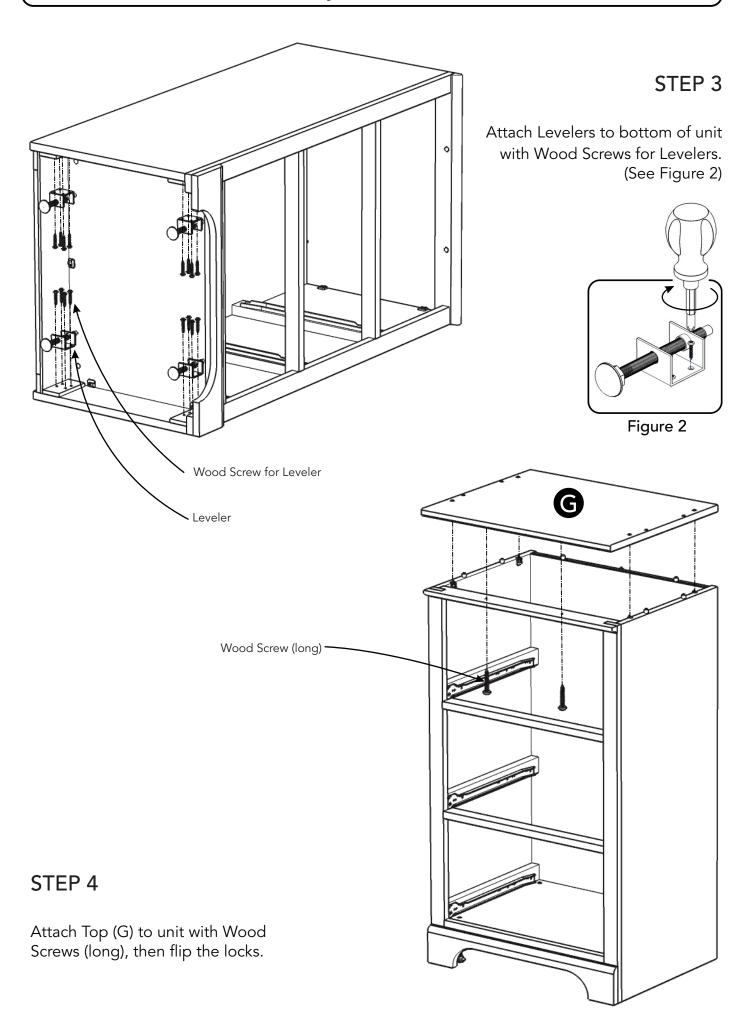

Assembly Instructions 4/8

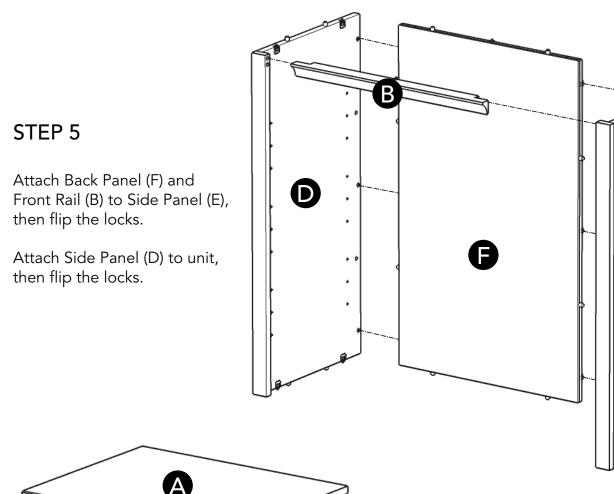


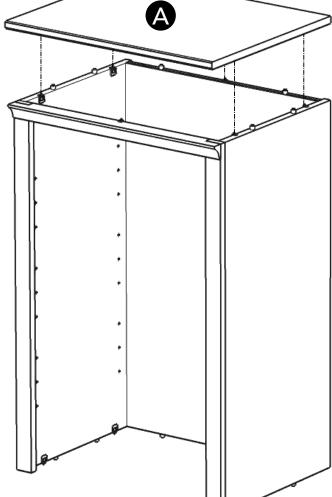

STEP 6

Attach Top (A) to unit, then flip the locks.

Assembly Instructions 5/8

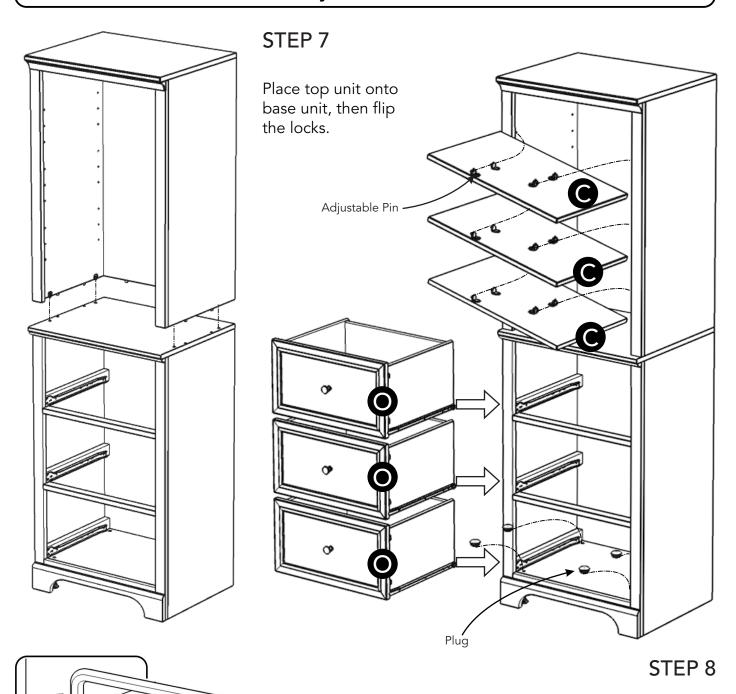

Place unit at desired location.

Note: If assembling multiple Closet Wall Units together, place all units at desired location.

Figure 3 Level the unit(s) by adjust

Level the unit(s) by adjusting the adjustable levelers on the bottom of unit(s). (See Figure 3)

Note: Unit(s) must be level to proceed.

Cover all holes with Plugs. (See Figure 4)

Insert the Adjustable Pins into the side panels at the desired level and place Shelves (C) into position.

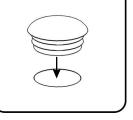


Figure 4

Assembly Instructions 6/8

IMPORTANT

• To help reduce the risk of the unit tipping over, the Tipover Restraint must be installed following these instructions exactly.

STEP 9

Drill a 3/8" hole in wall in-line with the pre-drilled hole at top of unit.

Move unit.

Insert Anchor into the wall hole and attach Bracket with Wall Screw.


Attach Bracket at pre-drilled hole at top of unit with Wood Screw.


Move unit back into place.


If assembling multiple Closet Wall Units together, go to and complete Step 10 now, then return to and complete Step 9.

Slide Tipover Restraint through Bracket on wall and Bracket on unit. (See Figure 5)


Put tie end of Tipover Restraint into lock end of Tipover Restraint and pull until tight.

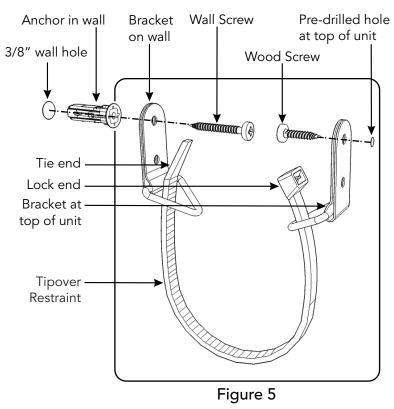

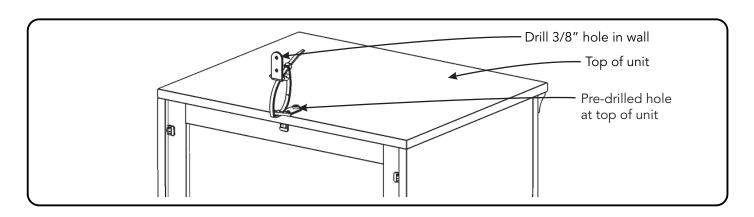

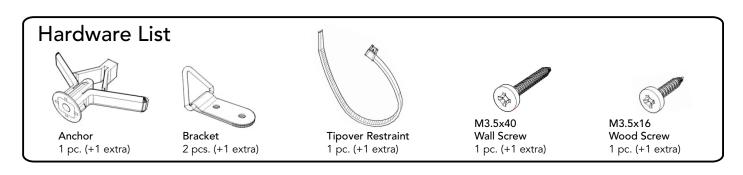

Assembly Instructions 7/8

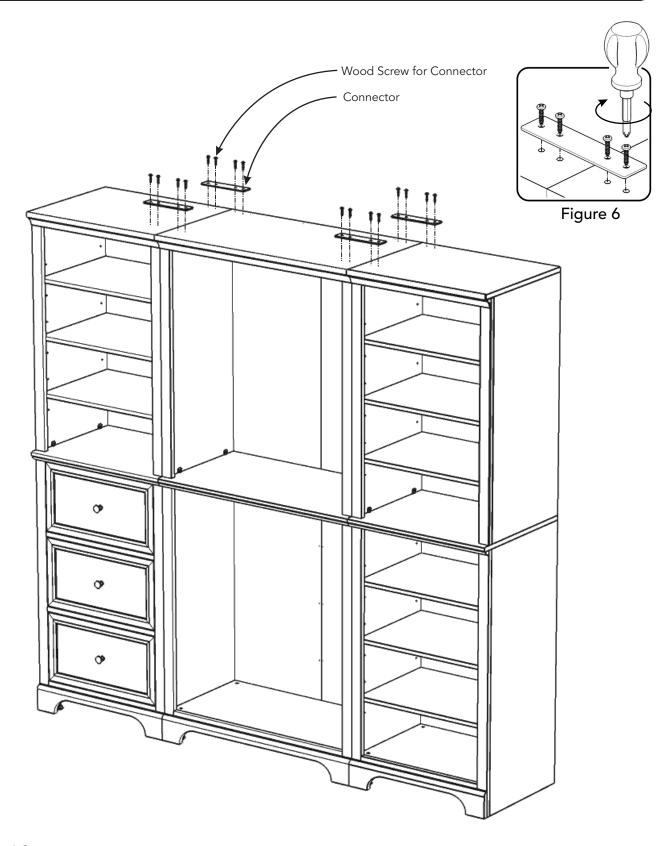

STEP 10


Note: If assembling multiple Closet Wall Units together, complete Step 10.

Attach the top of units together using Connector and Wood Screw for Connectors into the pre-drilled holes. (See Figure 6)


Return to and complete Step 9.

Assembly Instructions 8/8

Drawer (O)

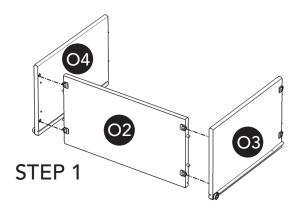

Attach O2 to O3 and O4, then flip the locks. (See Figure A)

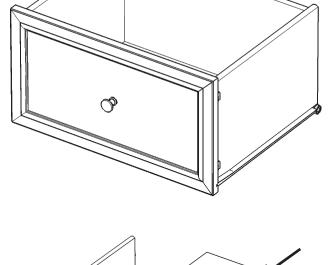



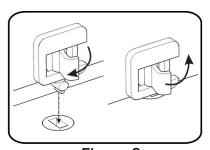


Figure 2

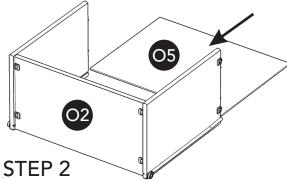

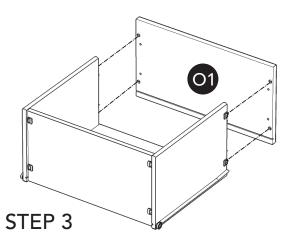



Attach O1 to unit, then flip the locks.

Slide O5 into the grooves in O3 and O4. Be sure to push O5 all the way forward so it meets O2.

STEP 4

Attach Knob with machine screw.

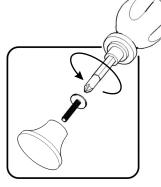

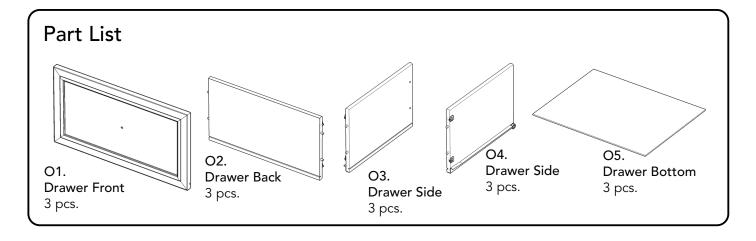

CARE INSTRUCTIONS

NEVER

allow liquids to remain on furniture. Absorption causes parts to warp and split and finishes to delaminate.

NEVER

use glass cleaners on finished furniture. Ammonia chemically attacks the finish.



Do not use power tools above 8 volts to assemble.

PREVENT

CRACKING



Do not place in direct sunlight.

PREVENT

FADING



Do not write directly on surface.

PREVENT

MARKING



Do not place hot objects on surface.

PREVENT
FINISH DAMAGE

Do not use rubber based placemats.

PREVENT

DISCOLORING



Do not use commercial waxes and polishes.

PREVENT

YELLOWING

CLEAN

with a soft cloth moistened in lukewarm soap and water. Buff with a dry clean cloth.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

www.homestyles-furniture.com/customer-service/replacement-parts

Home Styles Customer Service: www.homestyles-furniture.com, servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319