


SHIMANO

ANTARES

ANT101HGB

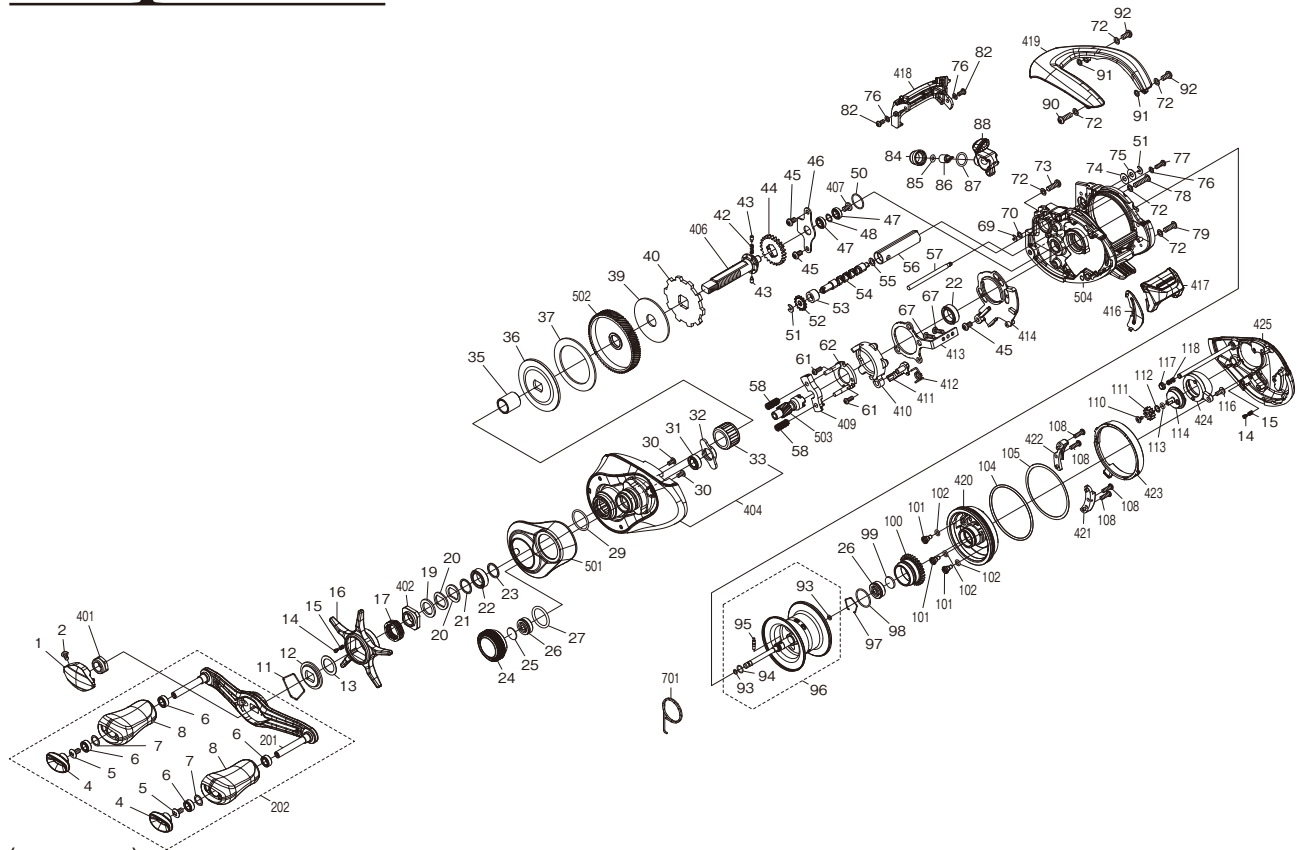

(51RL774A31X)

#	Part No.	BNT No.	Description	#	Part No.	BNT No.	Description	#	Part No.	BNT No.	Description
1	14744		Handle Nut Plate	51	105NC	1672	E Lock	105	147W2		Washer
2	10RNG	6294	Screw	52	146L2		Idle Gear C	108	10E69	6352	Screw
4	1472W		Handle Knob Seal	53	13ZTS		Bushing	110	10PRT	4982	Screw
5	103E9	4116	Screw	54	13ZTK		Worm Shaft	111	14857		BR Dial Gear
6	104VX	4187	Ball Bearing	55	10GHF	6348	Washer	112	10SEJ	6903	Washer
7	104FH	6555	Washer	56	10NFW	5111	Level Wind Guard	113	10FMT	4984	O Ring
8	1472U		Handle Knob	57	1480G		Stabilizer Bar	114	14A0P		BR Dial Assembly
11	10KXV	2120	Click Plate Retainer	58	13T1T	7309	Yoke Spring	116	10MPS	6353	Screw
12	10J1Y	4787	Star Drag Click Plate	61	101CN	6845	Screw	117	10RLZ	6200	Damper Guide
13	148TE		Washer	62	144P7		Clutch Cam Retainer	118	148AW		Damper Spring
14	10B27	4938	Click Pin	67	1055A	5126	Screw	201	14A0E		Handle Shank Assembly
15	10988	4939	Click Spring	69	105NB	2717	E Lock	202	14A0R		Handle Assembly
16	146LH		Star Drag	70	10GA7	6851	Washer	401	13V3H		Handle Nut
17	10A71	4699	Star Drag Spring	72	13PKW		Washer	402	10A0C	4761	Star Drag Nut
19	10J1N	2127	Star Drag Spacer	73	10SJV		Screw	404	14A0U		A Side Plate Assembly
20	10D60	15	Drag Spring Washer	74	10E7G	7007	Washer	406	13ULL	7228	Drive Shaft
21	105PW	2128	Bearing Washer	75	13PK5		Washer	407	10DR5	6891	Screw
22	10EX8	3927	Ball Bearing	76	13PKU		Washer	409	13T1U	7341	Yoke
23	13ZXU		Washer	77	10LVL	4734	Screw	410	10SKS	6606	Clutch Cam
24	146LD		Cast Control Cap	78	10RL4	6180	Screw	411	105ZV	4672	Clutch Pawl
25	1057Q	2730	Spacer B	79	101GQ	5799	Screw	412	14026	7377	Clutch Pawl Spring
26	10S37	5806	Ball Bearing	82	10U0S	6037	Screw	413	13TD6		Clutch Plate
27	10LA9	5098	O Ring	84	10FJB	4874	Pawl Cap	414	146LZ		Clutch Guard
29	1027V	5857	O Ring	85	10CFV	4731	Washer	416	146LW		Clutch Bar Guide
30	1055J	5100	Screw	86	10211	5892	Line Guide Pawl	417	14A0W		Clutch Bar Assembly
31	105BP	4194	Ball Bearing	87	108WQ	4729	O Ring	418	146LS		Level Wind Protector
32	144NV		Retainer	88	14A0L		Line Guide Pawl Holder Assembly	419	146LM		Thumb Rest
33	1005E	5780	Roller Clutch Bearing	90	13JXC		Screw	420	14A0X		Dial Case Assembly
35	14016		Roller Clutch Inner Tube	91	1484Y		Washer	421	146LQ		Brake Case Cam
36	146LG		Pressure Plate	92	13JRF		Screw	422	146LR		Brake Case Cam B
37	1071T	3546	Drag Washer	93	10E7H	7009	O Ring	423	146LL		B Side Plate Cam Lever
39	10CJ1	4795	Drag Washer	94	147G0		O Ring	424	14A1B		BR Retainer
40	109BB	3483	Anti-Reverse Ratchet	95	10MD0	5803	Spool Clutch Pin	425	14A0Y		B Side Plate Assembly
42	10JDX	4630	Idle Gear Spring	96	14A0M		Spool Assembly	501	146KM		Clutch Button Attachment
43	10HJF	4631	Idle Gear Pin	97	10GEW	7325	Bearing Retainer	502	10CRB	4781	Drive Gear
44	146L8		Idle Gear A	98	10LA8	4981	O Ring	503	146KL		Pinion Gear
45	10DSZ	7000	Screw	99	1057S	664	Spacer B	504	14A0Z		Frame Assembly
46	146LK		Drive Shaft Retainer	100	100N4	6290	Brake Pipe Gear Assembly				
47	10SAM	6837	Ball Bearing	101	10RMF	6182	Screw				
48	13PKS	7229	Washer	102	10E2J	6416	O Ring				
50	10SZ4	6577	O Ring	104	144NL		O Ring	701	14A1A		Handle Knob Seal Remover (Accessory)

Please note that the number of adjusting washers may not be the same as shown in the exploded views.
(Adjustment will vary with each individual product.)

(250711)_002