homestyles[®]

20 05103 0692


Pantry


IMPORTANT


Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.

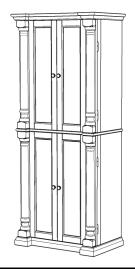

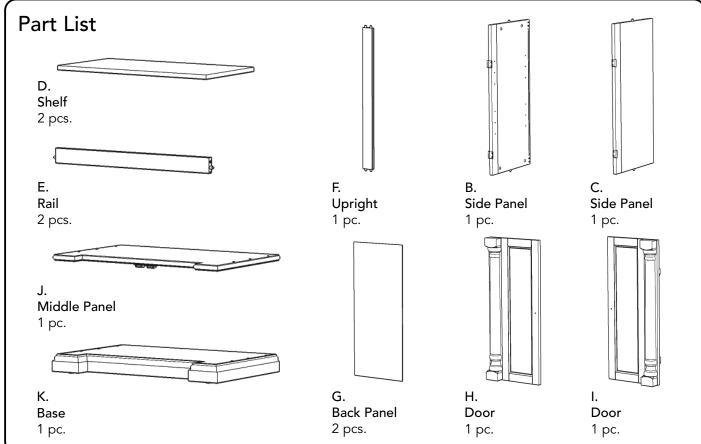

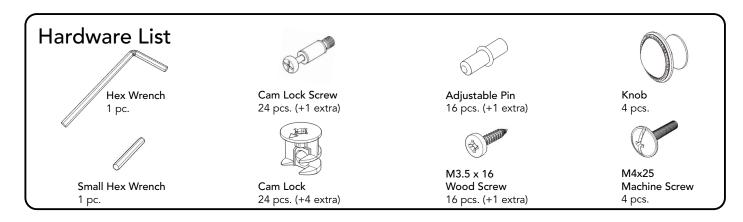


Carton 20 05103 0691 is also needed for assembly.

Tool(s) required for assembly: Phillips screwdriver, Level, Drill (8 volts or less), 3/8" Drill Bit

Assembly Instructions 2/8

IMPORTANT

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Make sure unit is level before tightening these screws.
- The unit must be level to work properly. Use the included adjustable levelers to level.
- Keep Hex Wrench as the bolts may need to be tightened in the future.

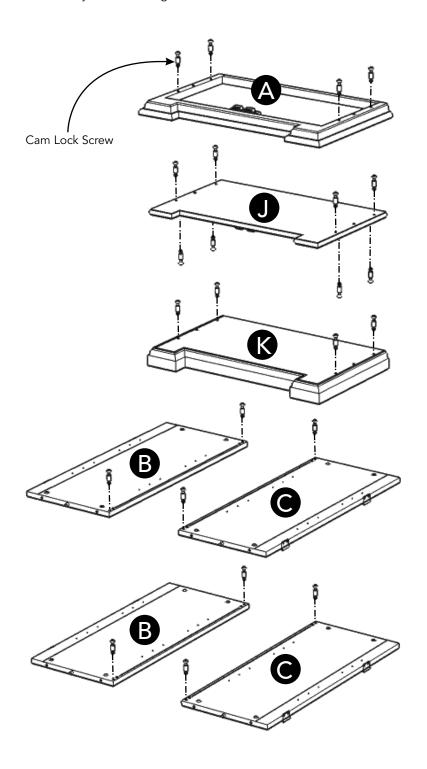

STEP 1

Insert Cam Lock Screws into pre-drilled holes in Top (A), Side Panels (B), (C), Middle Panel (J) and Base (K), then tighten. (See Figure 1)

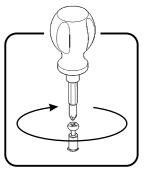


Figure 1

Assembly Instructions 3/8

STEP 2

Attach Rail (E) to Side Panel (C) with Cam Lock. (See Figure 2)

Attach Upright (F) to unit.

Slide Back Panels (G) into position.

Attach Rail (E) to unit with Cam Lock.



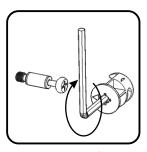


Figure 2

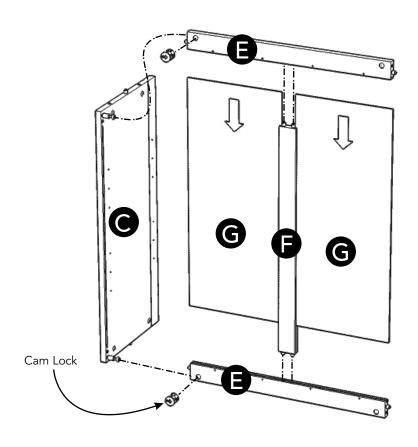


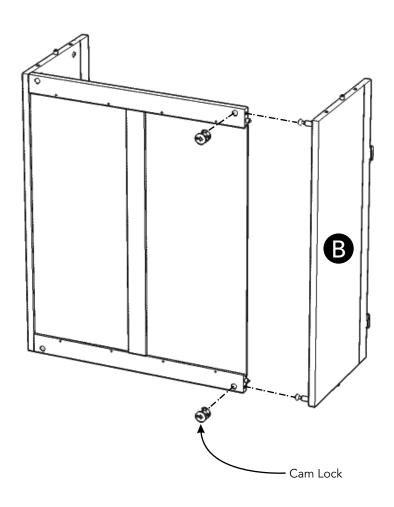

STEP 3

Attach Side Panel (B) to unit with Cam Locks.

Assembly Instructions 4/8

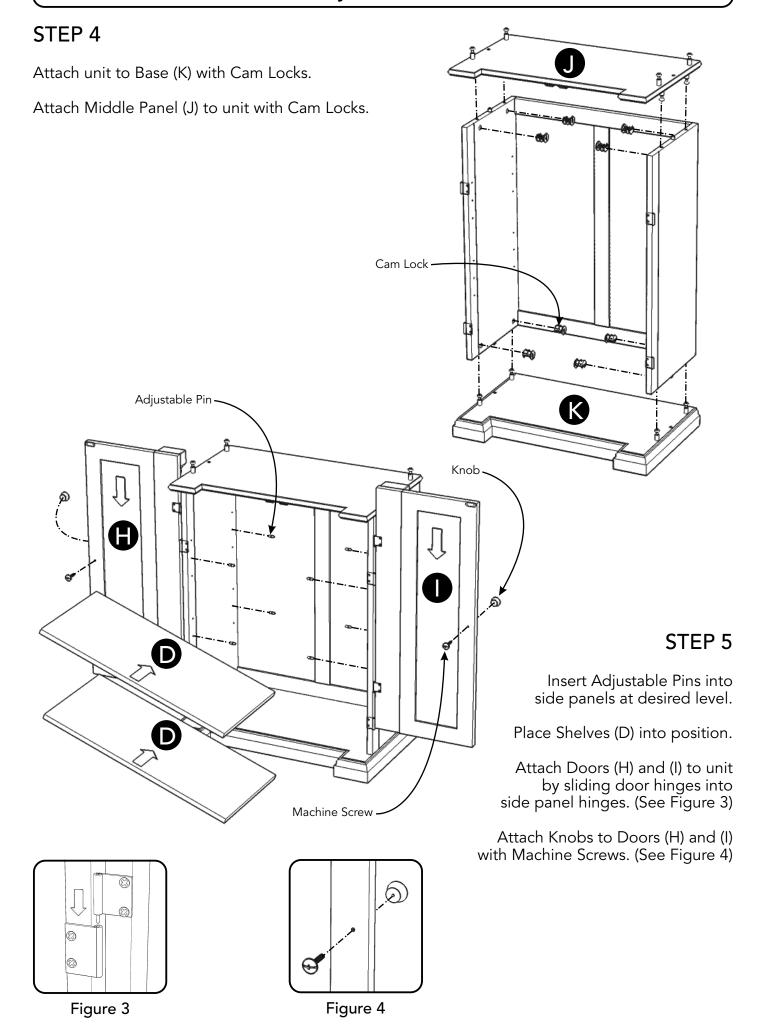

Assembly Instructions 5/8


STEP 6


Attach Rail (E) to Side Panel (C) with Cam Lock.

Attach Upright (F) to unit.

Slide Back Panels (G) into position.

Attach Rail (E) to unit with Cam Lock.

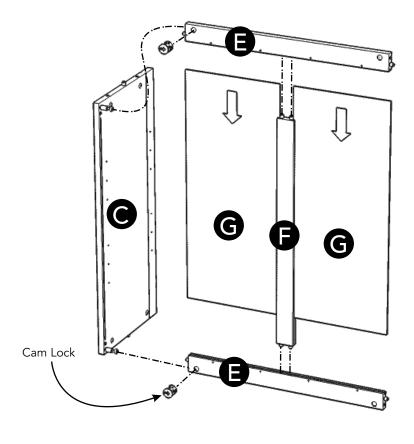

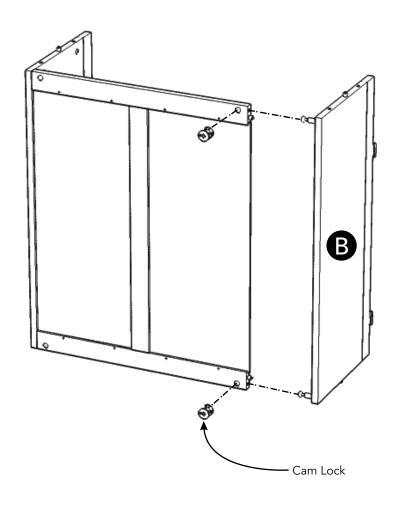

STEP 7


Attach Side Panel (B) to unit with Cam Locks.


Assembly Instructions 6/8

STEP 8

Attach unit from Step 7 to unit from Step 5 with Cam Locks.

Adjustable Pin-

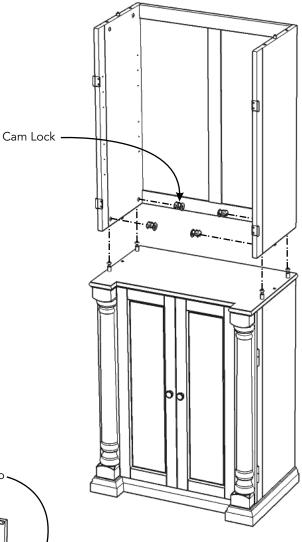

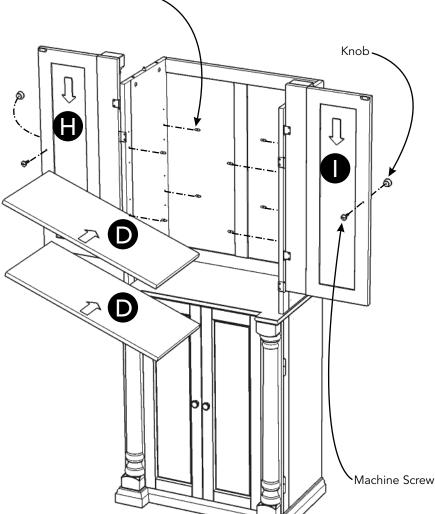

STEP 9

Insert Adjustable Pins into side panels at desired level.

Place Shelves (D) into position.


Attach Doors (H) and (I) to unit by sliding door hinges into side panel hinges.

Attach Knobs to Doors (H) and (I) with Machine Screws.

Assembly Instructions 7/8

STEP 10

Attach Top (A) to unit with Cam Locks.

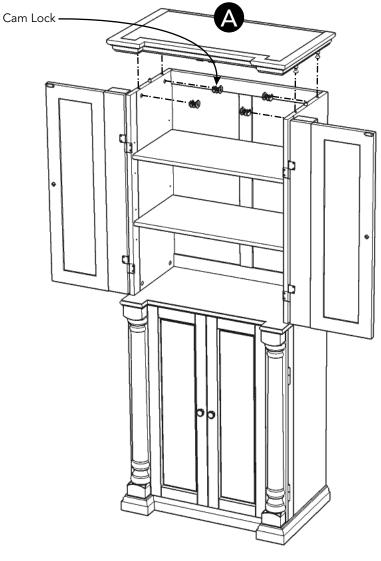

STEP 11


Level unit by adjusting the adjustable levelers on bottom of unit. (See Figure 5)

Insert Wood Screws into pre-drilled holes in unit, then tighten.

Note: Unit must be level before tighten these screws.



Figure 5

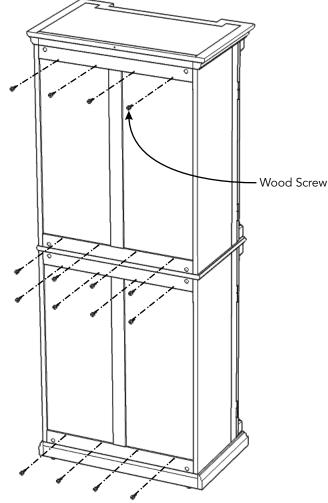

Assembly Instructions 8/8

IMPORTANT

• To help reduce the risk of the unit tipping over, the Tip-over Restraint must be installed following these instructions exactly.

STEP 12

Place unit at desired location.

Drill a 3/8" hole in wall in-line with pre-drilled hole at top of unit.

Move unit.

Insert Anchor into the wall hole and attach Bracket with Wall Screw.

Attach Bracket at pre-drilled hole at top of unit with Wood Screw.

Move unit back into place.

Slide Tip-over Restraint through Bracket on wall and Bracket on unit. (See Figure 6)

Put tie end of Tip-over Restraint into lock end of Tip-over Restraint and pull until tight.



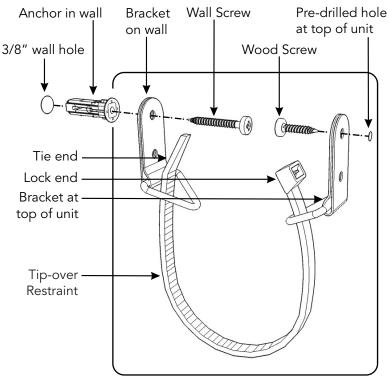


Figure 6

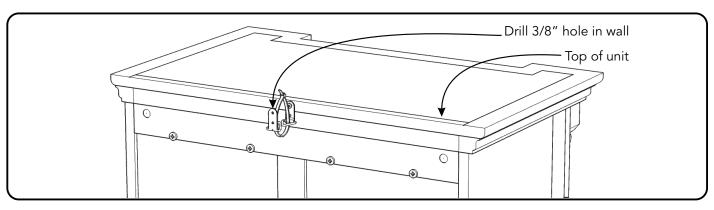

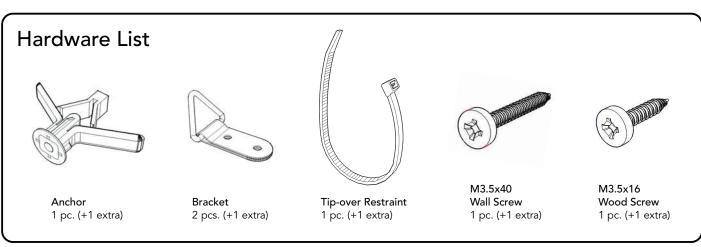

CARE INSTRUCTIONS

NEVER

allow liquids to remain on furniture. Absorption causes parts to warp and split and finishes to delaminate.

NEVER

use glass cleaners on finished furniture. Ammonia chemically attacks the finish.



Do not use power tools above 8 volts to assemble.

PREVENT

CRACKING



Do not place in direct sunlight.

PREVENT

PREVENT FADING



Do not write directly on surface.

PREVENT

MARKING



Do not place hot objects on surface.

PREVENT

PREVENT FINISH DAMAGE



Do not use rubber based placemats.

PREVENT DISCOLORING



Do not use commercial waxes and polishes.

PREVENT YELLOWING

CLEAN

with a soft cloth moistened in lukewarm soap and water. Buff with a dry clean cloth.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

www.homestyles-furniture.com/customer-service/replacement-parts

Home Styles Customer Service: www.homestyles-furniture.com, servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319