 


PARTS INCLUDED

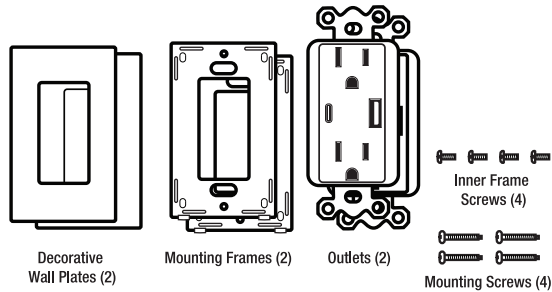

WARNING:

 
This product may represent a possible shock or fire hazard if improperly installed or attached in any way. Product should be installed in accordance with the owners manual, current electrical codes and/or the current National Electric Code (NEC).

RISK OF ELECTRIC SHOCK: TURN OFF THE MAIN POWER AT THE CIRCUIT BREAKER BEFORE INSTALLING.

RISK OF FIRE:
- DO NOT EXCEED ELECTRICAL RATINGS
- USE INDOORS ONLY

TAMPER RESISTANT RECEPTACLES

Built-in shutters keep children safe. Shutters remain closed if an object is inserted into only one side of the receptacle. This prevents paper clips or other objects from causing a shock. Both prongs of a plug must be inserted at the same time and must be straight. If inserted at an angle or if prongs of the plug are bent, there may be resistance. Gently rock the plug slightly left and right. The shutters will open when the prongs of the plugs are aligned.

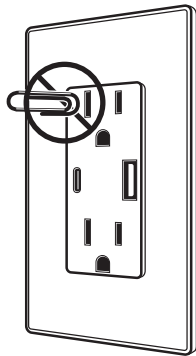

Supplier's Declaration of Conformity: 47 CFR § 2.1077 Compliance Information
Responsible Party: Feit Electric Company
4901 Gregg Road, Pico Rivera, CA 90660, USA, 562-463-2852
Unique Identifier: USB/AC/2

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device is to be installed in an outlet box that measures at least 4 in (L) x 2-1/8 in (W) x 1-7/8 in (D) and wired in accordance with NEC article 314 box fill requirements. Heavier gauge wire requires larger outlet box.

CAUTION:

This device is to be used with Class 2 USB connectors and interconnecting cables.

The Class 2 USB ports are not intended to physically support products or appliances.

The Class 2 USB cables must be routed away from the 120V receptacles and inserted plugs

This device is to be used with copper or copper clad wire only.

CAUTION:

To reduce the risk of fire and overheating, check for compatibility with the appliance manufacturer's charging instructions. Manufacturer's recommended terminal tightening torque is 1.0Nm.

LIMITED WARRANTY

This product is warranted to be free from defects in workmanship and materials for up to 2 years from date of purchase. If the product fails within the warranty period, please visit

feit.com/help for help. REPLACEMENT OR REFUND IS YOUR SOLE REMEDY. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY. LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES IS HEREBY EXPRESSLY EXCLUDED.

Some states and provinces do not allow the exclusion of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.



 
feit.com/help

MODEL USB/AC/2



WALL OUTLET WITH USB PORTS

Works with
smart-phones, tablets,
digital cameras

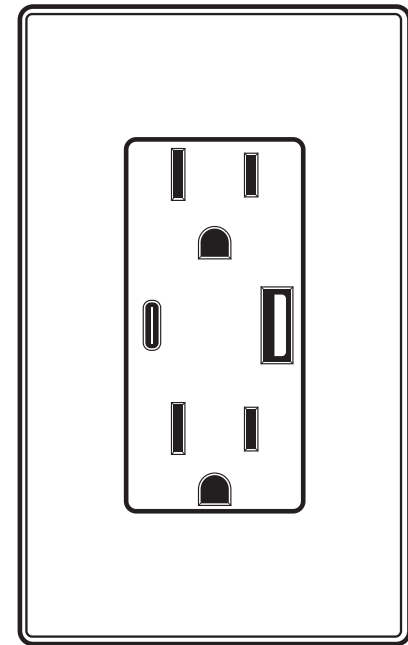

Output: USB-C: 5V---3A, 9V---2.22A, 12V---1.67A: 20W Max.
USB-A: 5V---3A, 9V---2A, 12V---1.5A: 18W Max.
USB-A + USB-C: 5V---3A, 15W Max

120 Volt • 15A • 60Hz

CONFORMS TO UL STD. 498
CERTIFIED TO CSA STD. C22.2 NO. 42

confirm info

Installation



WARNING: SHOCK HAZARD. MAY RESULT IN SERIOUS INJURY OR DEATH. **TURN OFF POWER AT CIRCUIT BREAKER BEFORE INSTALLING.**

 
IF YOU'RE UNFAMILIAR WITH PROPER ELECTRICAL WIRING OBTAIN THE SERVICES OF A QUALIFIED PERSON.

READ AND SAVE THESE INSTRUCTIONS


1 TURN POWER OFF

Turn power off at circuit breaker or remove fuse.

2 REMOVE EXISTING OUTLET

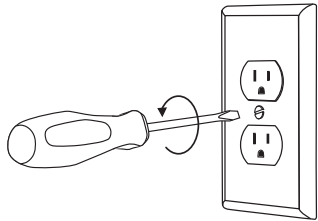

 Take off wall-plate and outlet by removing mounting screws.

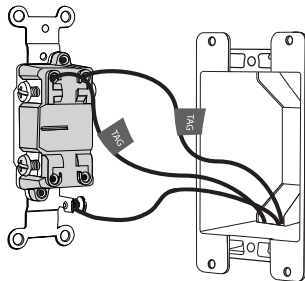

Carefully pull out outlet from wall. Label wires connected to existing outlet box and disconnect wires.

3 STRIP WIRES

 
Strip wires to 0.75 inch. Use with #14, or #12 copper or copper clad wire.

0.75 in.




4 WIRE YOUR NEW OUTLET

Insert wires into terminal holes and secure connections by tightening terminal screws as shown below.

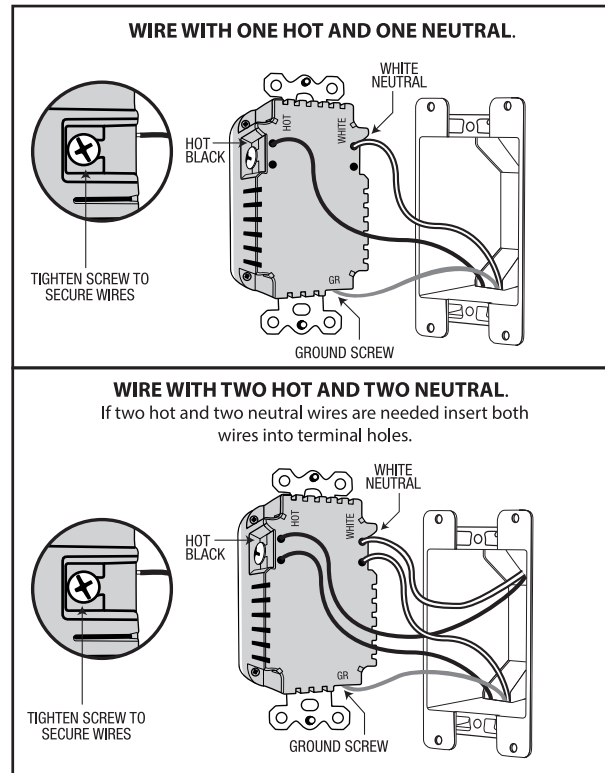


5 INSERT OUTLET INSIDE THE OUTLET BOX

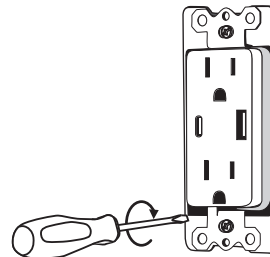 


- Position all wires inside the outlet box with care, leaving enough room to insert the device.
- Use provided mounting screws to attach the device securely inside the outlet box.

 
6 SEPARATE MOUNTING FRAME FROM WALL PLATE

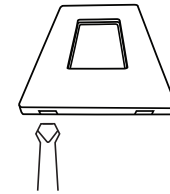

 Gently insert screwdriver into slots to separate mounting frame from wall plate.

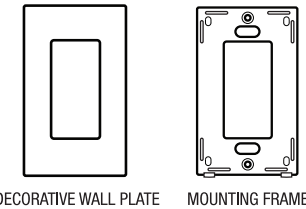


7 INSTALL MOUNTING FRAME

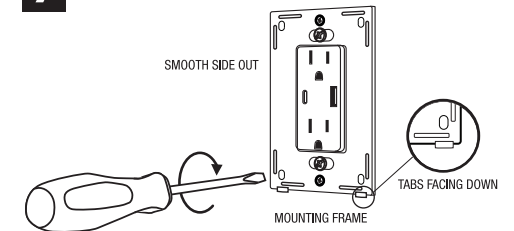 

Place the mounting frame over your installed outlet and secure it using provided screws.

8 INSTALL WALL PLATE

 Place the decorative wall plate over the installed mounting frame with the top first then the bottom. Gently push wall plate to ensure flush fit.

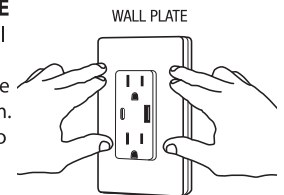

9 TURN POWER ON

Turn power on at circuit breaker or replace the fuse.