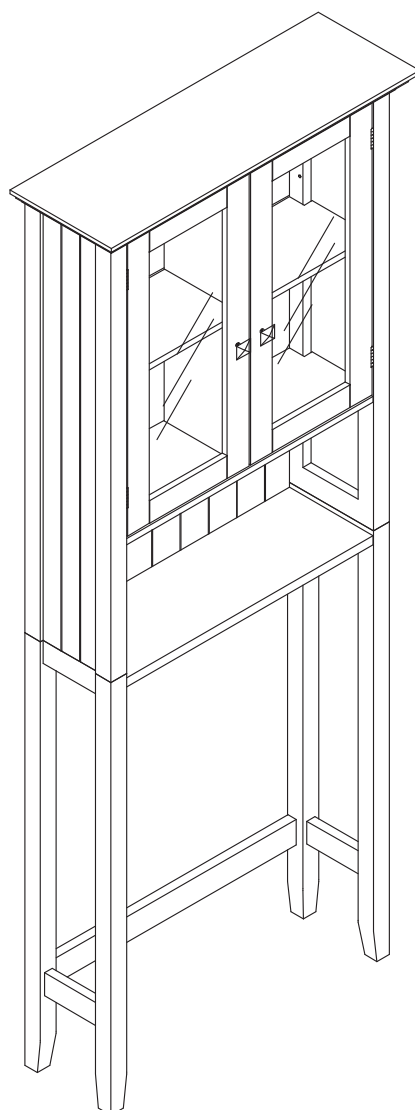 


ACADIAN / NORMANDY / BRUNSWICK

SPACE SAVER CABINET

MODEL # AXCBCACA-06





Questions, problems, assembly help, missing parts?

No need to return the product, we will gladly help and ship your replacement parts free of charge

Please call Customer Service at 1-866-518-0120 ext. 262

Monday to Friday between 9 am – 4 pm EST

or go to

www.simpli-home.com/parts request

In order to assist you in a timely manner, please have the following information ready:

Model # _____ Part Number or Letter _____

Purchased at _____ Date of Purchase _____

If you wish to return the product, please contact the retailer where the product was purchased.

IMPORTANT : Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

SAFETY INFORMATION

Identify all the parts and hardware. Do not discard of the packaging until you have checked that you have all of the parts and hardware required. Hardware package may have spare parts.

WARNING: This item contains small parts which can be swallowed by children and pets. Keep children and pets away during assembly. To avoid danger of suffocation, always keep plastic bags away from children and pets. We recommend that you assemble this unit on a carpeted floor to avoid scratches. If using power tools, set the tool to low torque to avoid damage.

May require 2 people for ease of assembly.

CARE and MAINTENANCE

To clean, use a soft or slightly damp cloth, then wipe with a clean, dry cloth. Dust with soft dry cloth.

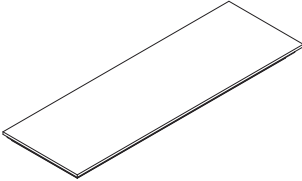 
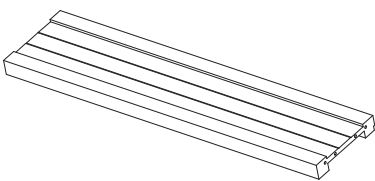 
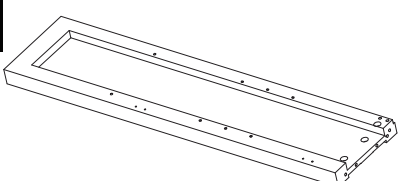 
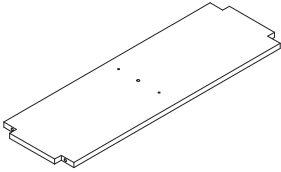 
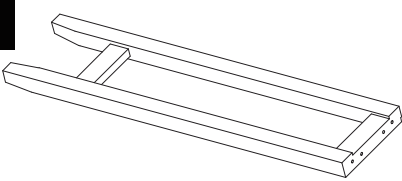 
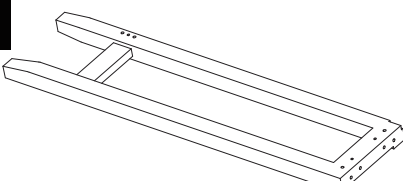 
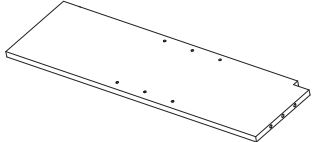 
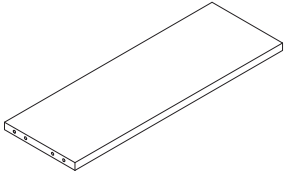 
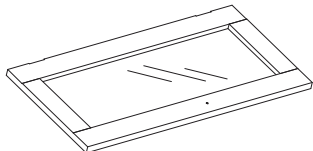 
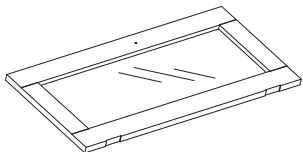 
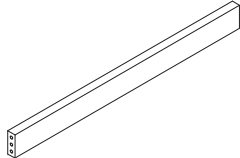 
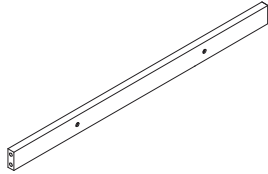 
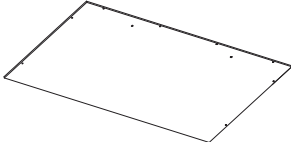 
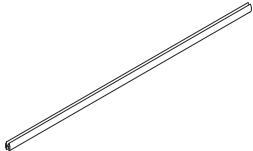 
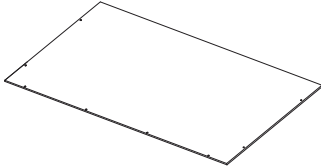 
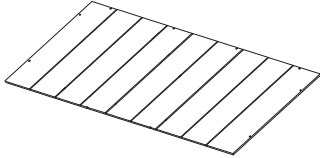 
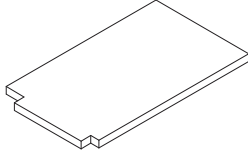 
Do not use ammonia-based cleaning products, as they will damage the finish.

Do not leave liquids or damp cloths on this furniture.

To avoid dulling of the finish, do not place furniture in direct sunlight.

Please inspect and tighten all screws or bolts on a regular basis to ensure proper performance and safety of your item.


PARTS DESCRIPTION

A  <p>CABINET TOP QTY 1</p>	B  <p>TOP LEFT SIDE PANEL QTY 1</p>	C  <p>TOP RIGHT SIDE PANEL QTY 1</p>
D  <p>MIDDLE SHELF QTY 1</p>	E  <p>BOTTOM LEFT SIDE PANEL QTY 1</p>	F  <p>BOTTOM RIGHT SIDE PANEL QTY 1</p>
G  <p>MIDDLE SUPPORT PLATE QTY 1</p>	H  <p>BOTTOM SHELF QTY 1</p>	I  <p>RIGHT SIDE DOOR QTY 1</p>
J  <p>LEFT SIDE DOOR QTY 1</p>	K  <p>BOTTOM REAR CROSS BAR QTY 1</p>	L  <p>REAR CROSS BAR QTY 1</p>
M  <p>TOP BACK PANEL QTY 1</p>	N  <p>PANEL CONNECTOR QTY 1</p>	O  <p>MIDDLE BACK PANEL QTY 1</p>
P  <p>BOTTOM BACK PANEL QTY 1</p>	Q  <p>ADJUSTABLE SHELF QTY 2</p>	

NEED HELP? For help with assembly or if you are missing a part,
Please call customer service at 1-866-518-0120 ext. 262 (9 am to 4 pm EST)

HARDWARE DESCRIPTION

 1

WOOD DOWEL
QTY 23

2

CAM BOLT
QTY 15

3

CAM LOCK
QTY 6

4

CAM LOCK
QTY 9

 
5

SCREW
QTY 18


6

SCREW
QTY 4

7

METAL HINGE
QTY 4

 8

MAGNET
QTY 2

9

METAL PLATE
QTY 2

10

SCREW
QTY 22

11

HANDLE
QTY 2

12

SCREW
QTY 2

13

SHELF SUPPORT
QTY 8

14

SCREW
QTY 2

15

SCREW
QTY 4

 
16

SCREW
QTY 2


17

PLASTIC ANCHOR
QTY 2


18

CAP
QTY 5

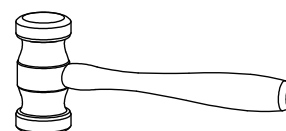 
Required -
Flathead screwdriver
Phillips screwdriver
Rubber mallet
Not Included



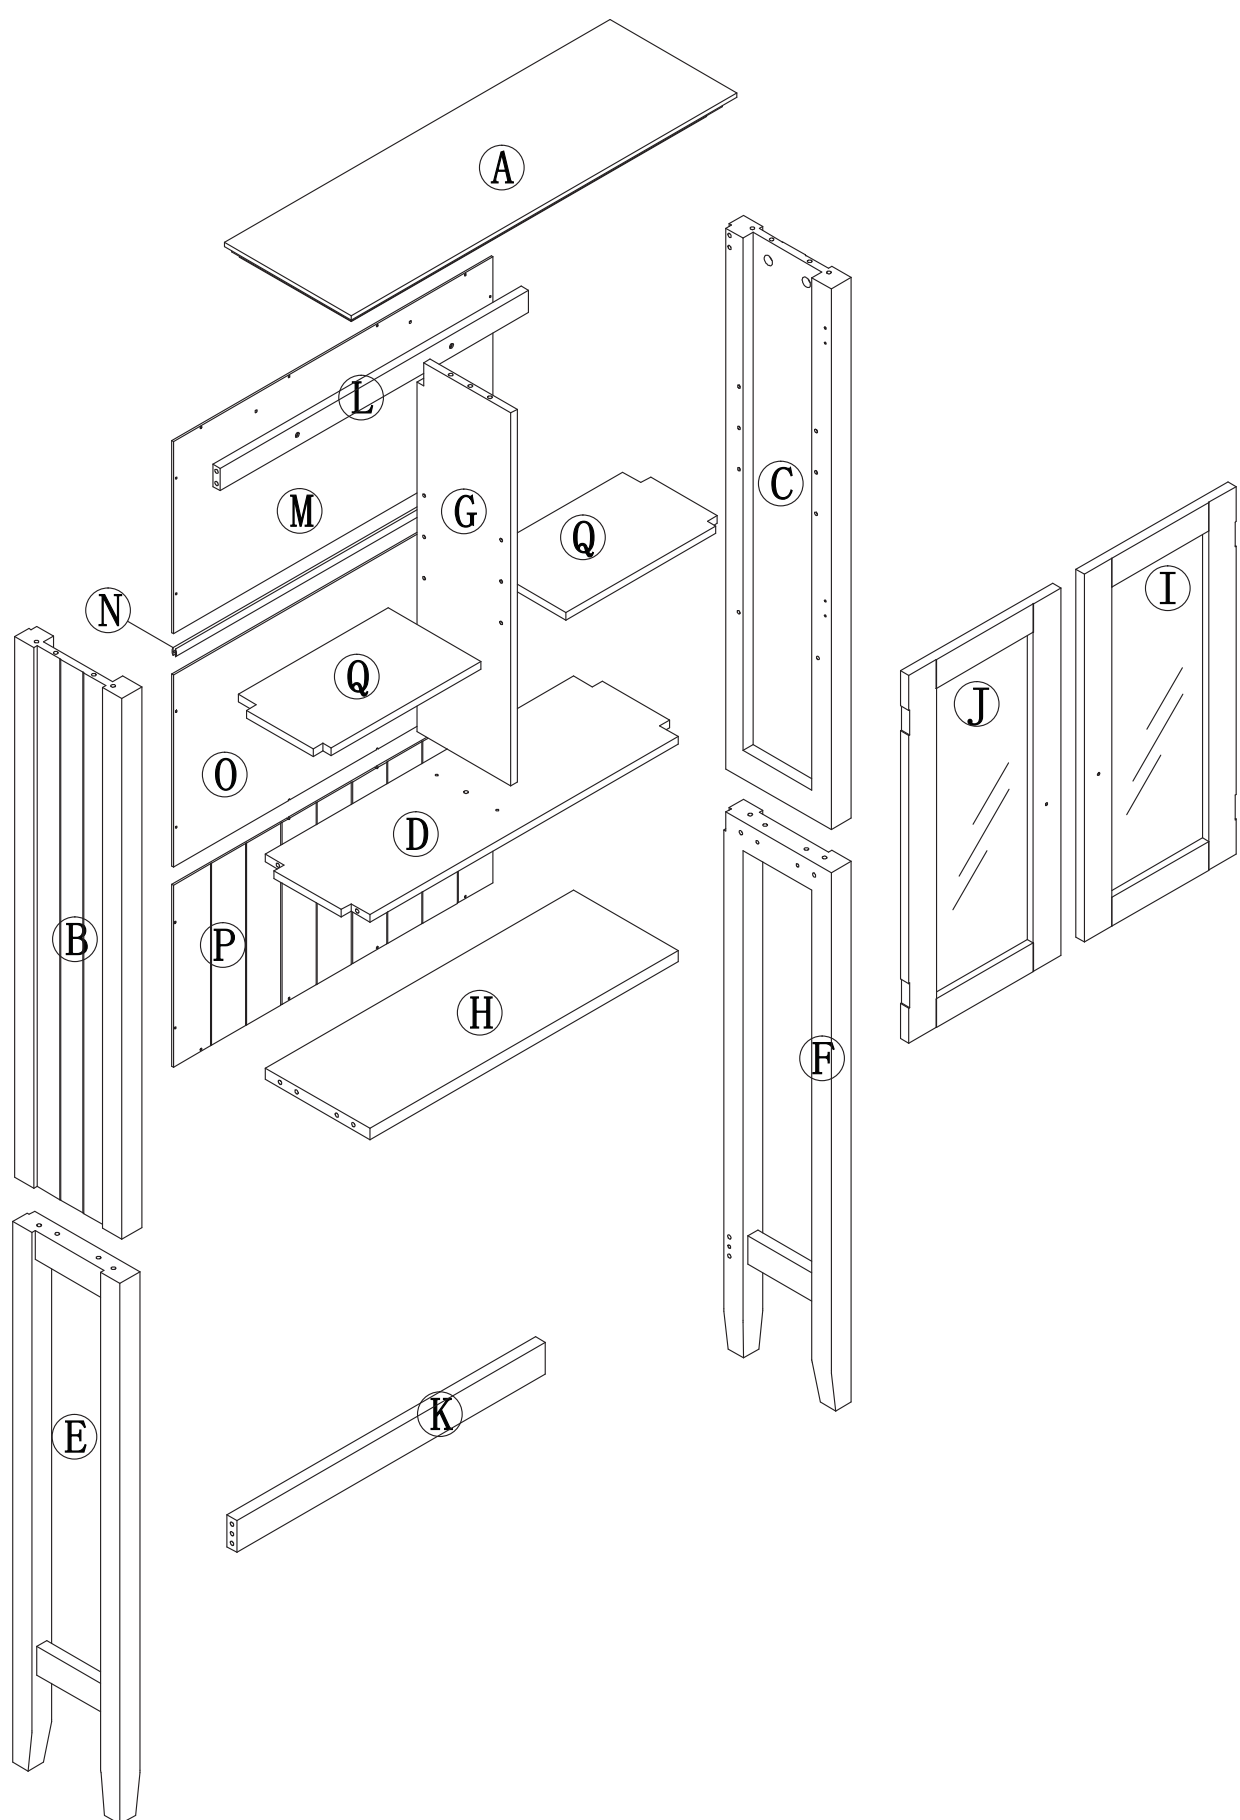 NEED HELP? For help with assembly or if you are missing a part,
Please call customer service at 1-866-518-0120 ext. 262 (9 am to 4 pm EST)



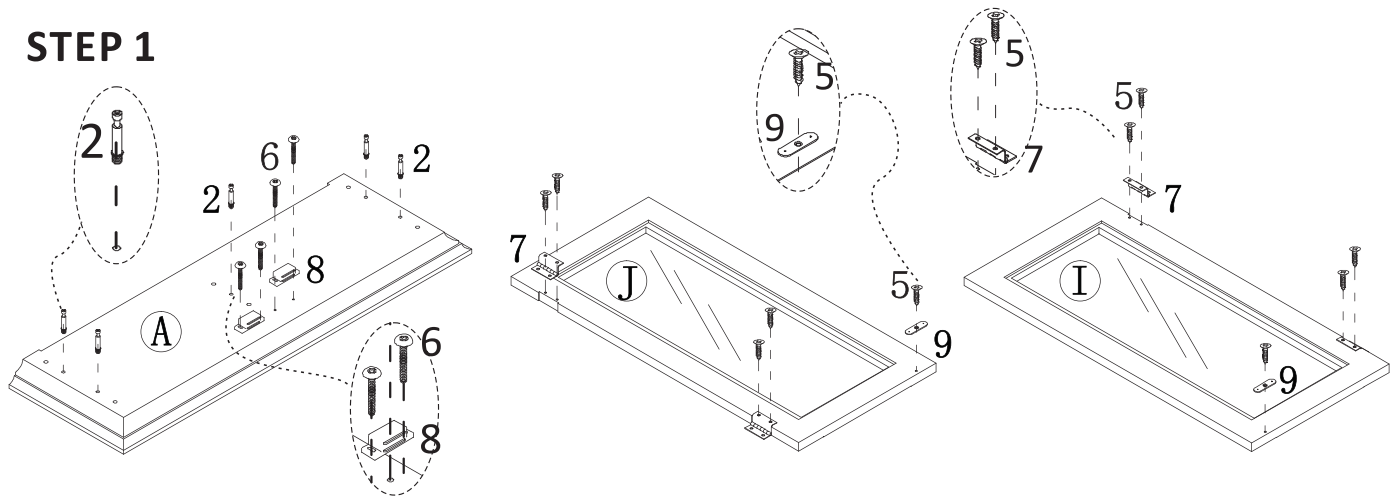 
STEP 1



Assembling the Cabinet Top, Left Side Door and Right Side Door

1. Lay down the cabinet top (A) and screw five cam bolts (2) into the pre-drilled holes using a Phillips screwdriver.
2. Attach the two magnets (8) to the cabinet top (A) by inserting four screws (6) through the holes on the magnet (8). Tighten using a Phillips screwdriver.
3. Lay down the left side door (J) and attach two metal hinges (7) to the left side door (J) by inserting four screws (5) through the holes on the metal hinge (7) and tighten the left side door (J) using a Phillips screwdriver.
4. Attach the metal plate (9) to the left side door (J) by inserting one screw (5) through the hole on the metal plate (9) and tighten using a Phillips screwdriver.
5. Lay down the right side door (I) and attach two metal hinges (7) to the right side door (I) by inserting four screws (5) through the holes on the metal hinge (7) and attach the right side door (I) using a Phillips screwdriver.
6. Attach the metal plate (9) to the right side door (I) by inserting one screw (5) through the hole on the metal plate (9) and tighten using a Phillips screwdriver.

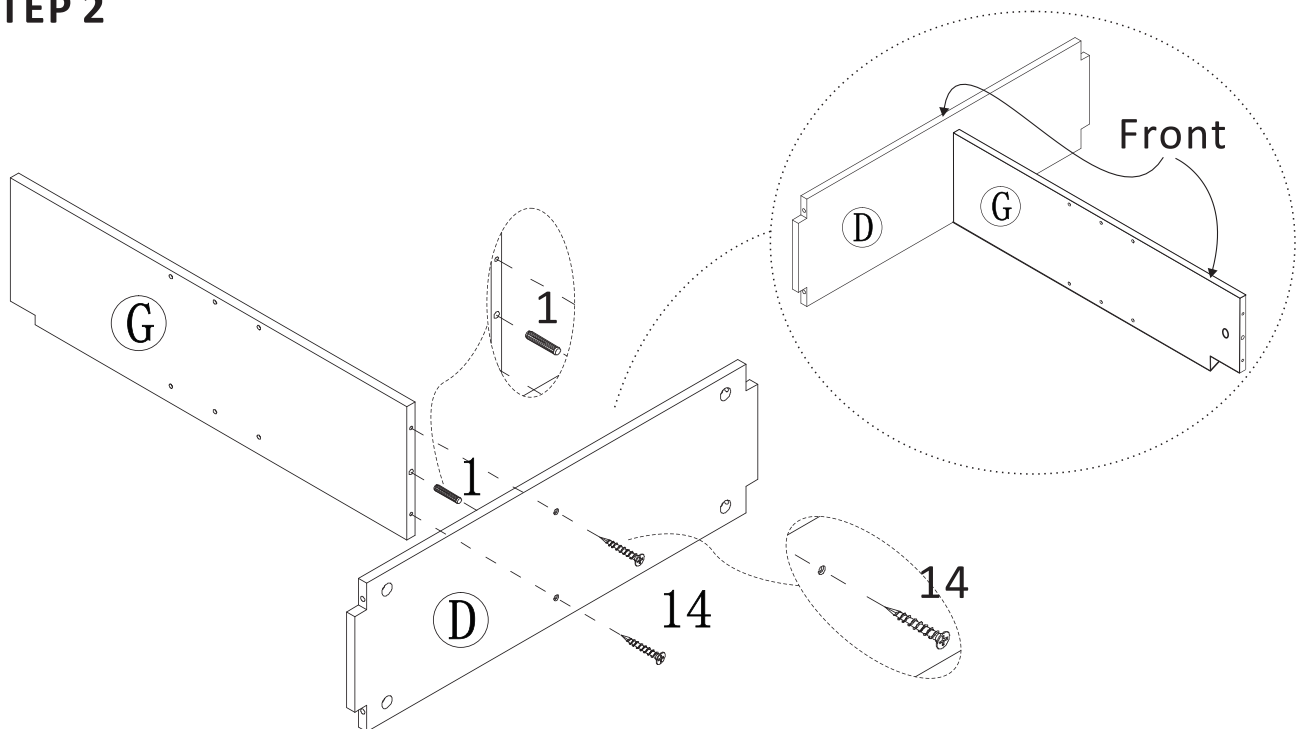 
STEP 2



Assembling the Middle Shelf and Middle Support Plate

1. Attach middle support plate (G) to the middle shelf (D) by inserting one wood dowel (1) into dowel hole on middle support plate (G) and middle shelf (D).
2. Insert two screws (14) through the holes on the middle shelf (D) and tighten using a Phillips screwdriver.

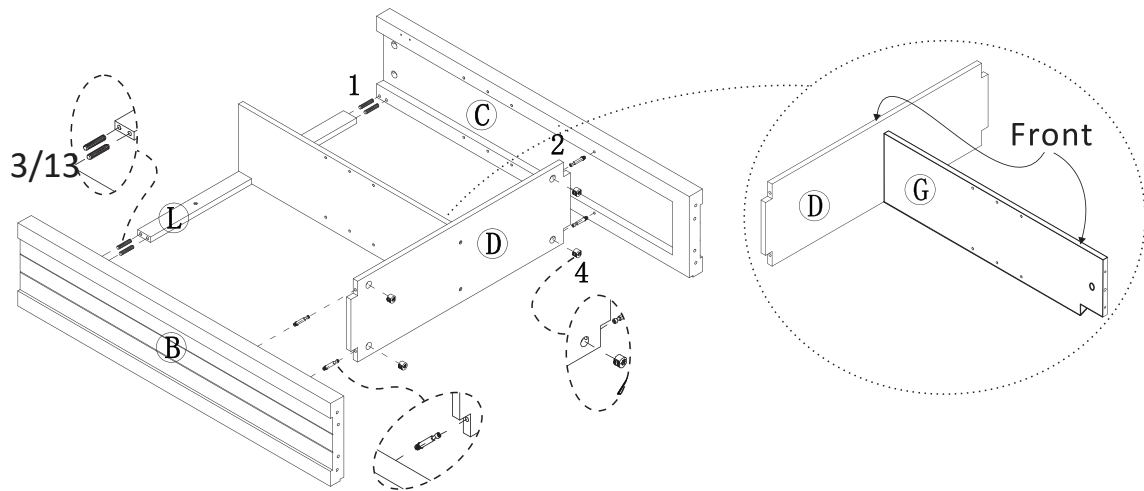 
STEP 3



Assembling Top Left Side Panel, Top Right Side Panel, Rear Cross Bar and Middle Shelf

1. Lay down the top left side panel (B) and screw two cam bolts (2) into the pre-drilled holes using a Phillips screwdriver.
2. Lay down the top right side panel (C) and screw two cam bolts (2) into the pre-drilled holes using a Phillips screwdriver.
3. Attach rear cross bar (L) to the top left side panel (B) by inserting two wood dowels (1) into dowel holes on rear cross bar (L) and top left side panel (B).
4. Insert two cam locks (4) into cam lock holes on the middle shelf (D) and top left side panel (B) and rotate clockwise to secure cam bolts in place using a Phillips screwdriver.
5. Attach rear cross bar (L) to the top right side panel (C) by inserting two wood dowels (1) into dowel holes on rear cross bar (L) and top right side panel (C).
6. Insert two cam locks (4) into cam lock holes on the middle shelf (D) and top right side panel (C) and rotate clockwise to secure cam bolts in place using a Phillips screwdriver.

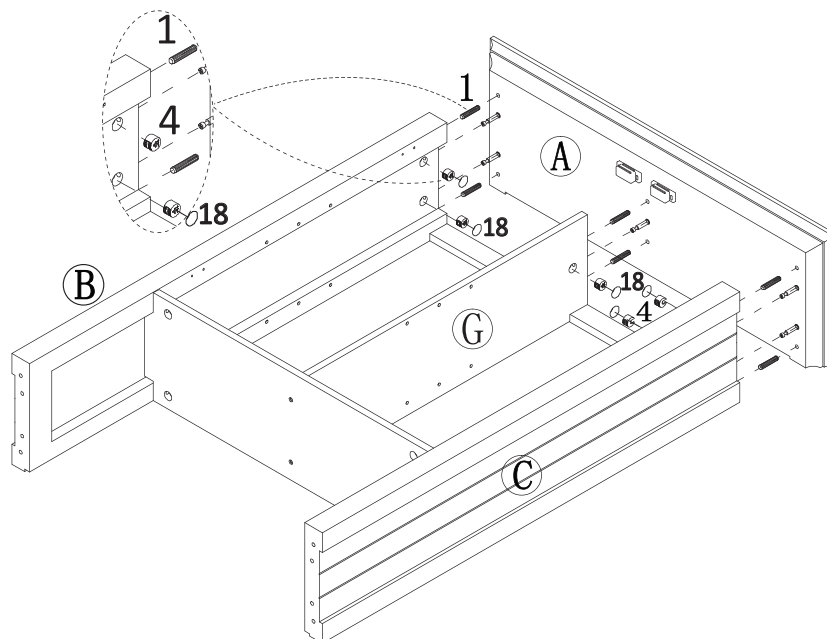 
STEP 4



Assembling Cabinet Top

1. Attach the cabinet top (A) to both pre-assembled side panels (B) and (C) and middle support plate by inserting six wood dowels (1) into dowel holes on both tops of side panel (B) and (C) and middle support plate (G).
2. Insert five cam locks (4) into cam lock holes on both tops of side panels (B) and (C) and middle support plate (G) and rotate clockwise to secure cam bolts in place using a Phillips screwdriver.
3. Cover the cam locks with caps (18) on left side panel (B) and right side panel (C) and middle support plate (G).

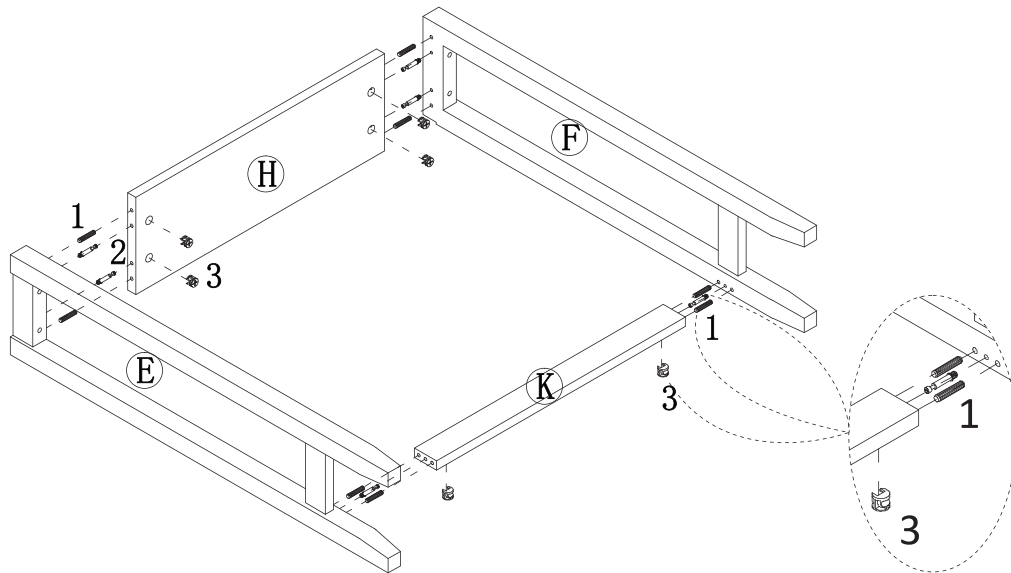 
STEP 5



Assembling the Bottom Left Side Panel, Bottom Right Side Panel and Bottom Rear Cross Bar, Bottom Shelf

1. Lay down the bottom left side panel (E) and screw three cam bolts (2) into the pre-drilled holes using a Phillips screwdriver.
2. Lay down the bottom right side panel (F) and screw three cam bolts (2) into the pre-drilled holes using a Phillips screwdriver.
3. Attach the bottom left side panel (E) to bottom shelf (H) and bottom rear cross bar (K) by inserting four wood dowels (1) into dowels holes on the bottom shelf (H) and bottom rear cross bar (K).
4. Insert three cam locks (3) into cam lock holes on bottom shelf (H) and bottom rear cross bar (K) and rotate clockwise to secure cam bolts are in place using a Phillips screwdriver.
5. Attach the bottom left side panel (E) to bottom shelf (H) and bottom rear cross bar (K) by inserting four wood dowels (1) into dowels holes on the bottom shelf (H) and bottom rear cross bar (K).
6. Insert three cam locks (3) into cam lock holes on bottom shelf (H) and bottom rear cross bar (K) and rotate clockwise to secure cam bolts are in place using a Phillips screwdriver.

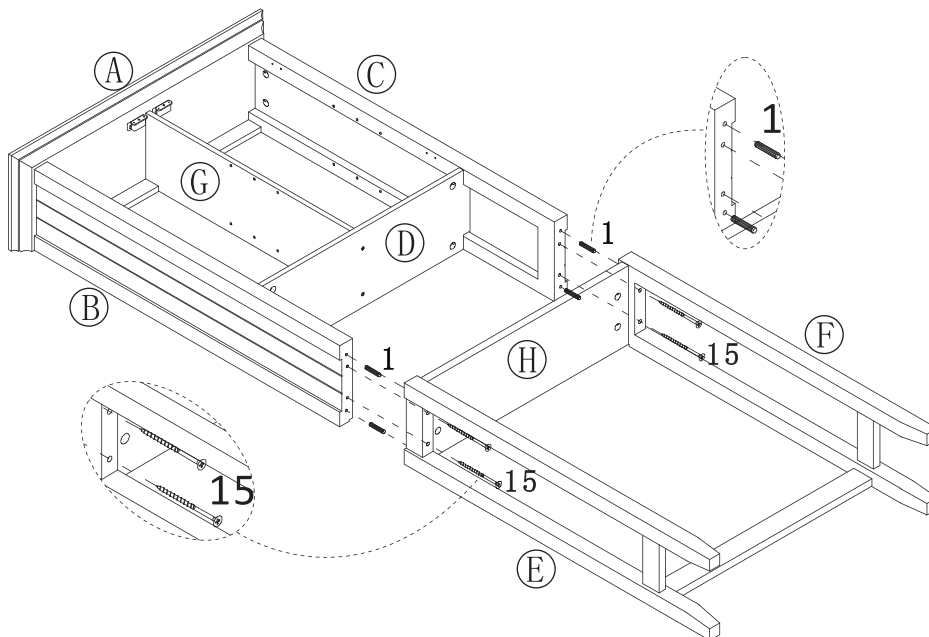 
STEP 6



Assembling the Top Part of the Cabinet

1. Attach both pre-assembled top side panels (B) and (C) to both pre-assembled bottom side panels (E) and (F) by inserting four wood dowels into holes (1) on both bottom side panels (E) and (F).
2. Insert four screws (15) through the holes on the bottom side panels (E) and (F) and tighten using a Phillips screwdriver.

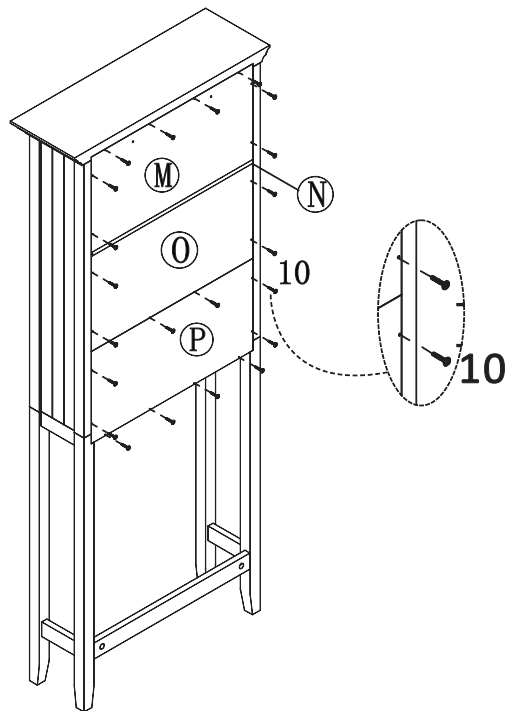 
STEP 7



Assembling the Top Back Panel, Middle Back Panel, Bottom Back Panel

1. Connect the top back panel (M) and middle back panel (O) with the panel connector (N).
2. Attach the top back panel (M), middle back panel (O) and bottom back panel (P) by inserting twenty-two screws (10) through the holes on the top back panel (M), middle back panel (O) and bottom back panel (P).

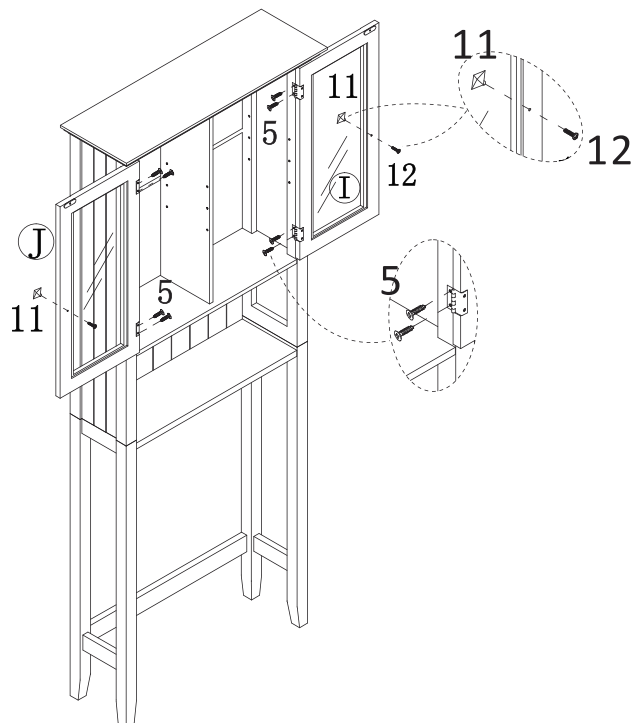 
STEP 8



Assembling the Door

1. Attach the left side door (J) to the top left side panel (B) by inserting four screws (5) through the holes on left side door hinges (J) and tighten.
2. Attach the right side door (I) to the top right side panel (C) by inserting four screws (5) through the holes on right side door hinges (I) and tighten.
3. Attach the handles (11) to both doors (J) and (I), insert two screws (12) through holes on both doors (J) and (I) and tighten to handles (11) using a Phillips screwdriver.

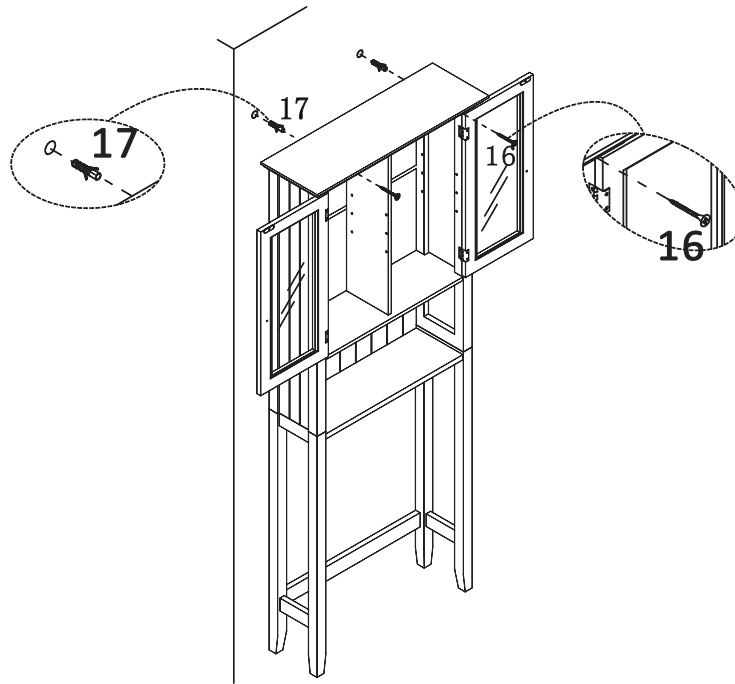 
STEP 9



Assembling the Anti-tip Restraint

1. Place the cabinet against the wall of the desired location.
2. Using a level, mark two holes on the wall through the holes of rear cross bar of the cabinet.
3. Drill two holes in the wall where marked.
4. Insert two plastic anchors (17) into the holes.
5. Align the space saver in place with holes, then insert two screws (16) through the holes on the back of the space saver into the anchors and attach the cabinet to the wall.

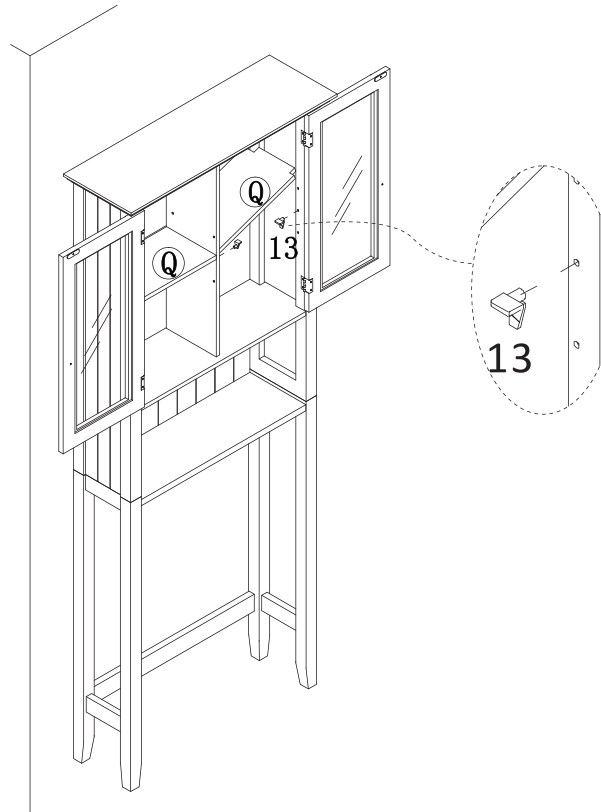 STEP 10



Assembling the Adjustable Shelf

1. Insert eight shelf supports (13) into holes in the space saver on both side panel (B) and (C) and middle support plate (G) at the same level.
2. Insert adjustable shelf (Q) into the space saver on top of the shelf supports (13).

WARRANTY

Thank you for purchasing a **Simpli Home – Wyndenhall – Brooklyn + Max** product. These products have been made to demanding, high-quality standards and are guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase. This warranty does not affect your statutory rights.

In case of any malfunction of your product (failure, missing parts, etc.) please contact us at our toll free service line at 1-866-518-0120 ext. 262 from 9 am to 4 pm, Monday to Friday, Eastern Standard Time or by email at customerservice@simpli-home.com

We reserve the right to repair or replace the defective product, at its discretion.

This product is guaranteed for 12 months if used for normal purposes. Any warranty is invalid if the product has been overloaded or subject to neglect, improper use or an attempted repair by other than an authorized agent. Heavy-duty or daily professional/commercial usage are not guaranteed.

Due to continuous product improvement, we reserve the right to change the product specifications without prior notice.

Question, problems, missing parts?

Before returning your product
please email Customer Support at
customerservice@simpli-home.com

or call

Customer Support at 1-866-518-0120 ext. 262
Monday to Friday between 9 am – 4 pm EST

For more information visit us on our website
www.simpli-home.com

Like us on facebook
www.facebook.com/simplihomefurnishings