



Item No: W-9648A
 Teamson Kids - Play Kitchen
 Enchanted Forest Kitchen -
 Sink/Washer

WARNING:

Small parts and sharp points may be present prior to assembly.

Care Instructions

 
 

To clean your product, use mild soap and water on a damp cloth. Do not use window cleaners or cleaning abrasives as they will scratch the surface and could damage the protective coating.

 
Customer Service

For questions regarding this product, or to receive replacement or missing parts, please contact customer service based on your location. Please have ready the model number and part number(s) located in this assembly instruction sheet when you contact us.

 
 
 

 
 





 
www.teamsonkids.com

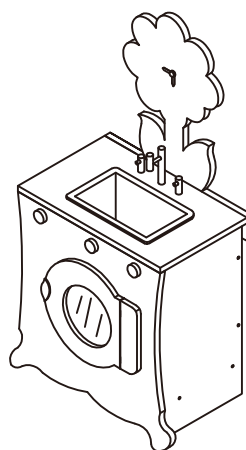HARDWARES:


- ①  19PCS
- ②  2PCS
- ③  6PCS




PRODUCT PARTS:

<p>A</p>  <p>1PC</p>	<p>B</p>  <p>1PC</p>	<p>C</p>  <p>1PC</p>	<p>D</p>  <p>1PC</p>	<p>E</p>  <p>1PC</p>	<p>F</p>  <p>1PC</p>
<p>G</p>  <p>1PC</p>	<p>H</p>  <p>2PCS</p>	<p>I</p>  <p>1PC</p>	<p>J</p>  <p>1PC</p>	<p>K</p>  <p>1PC</p>	<p>L</p>  <p>1PC</p>

 
STEP 1

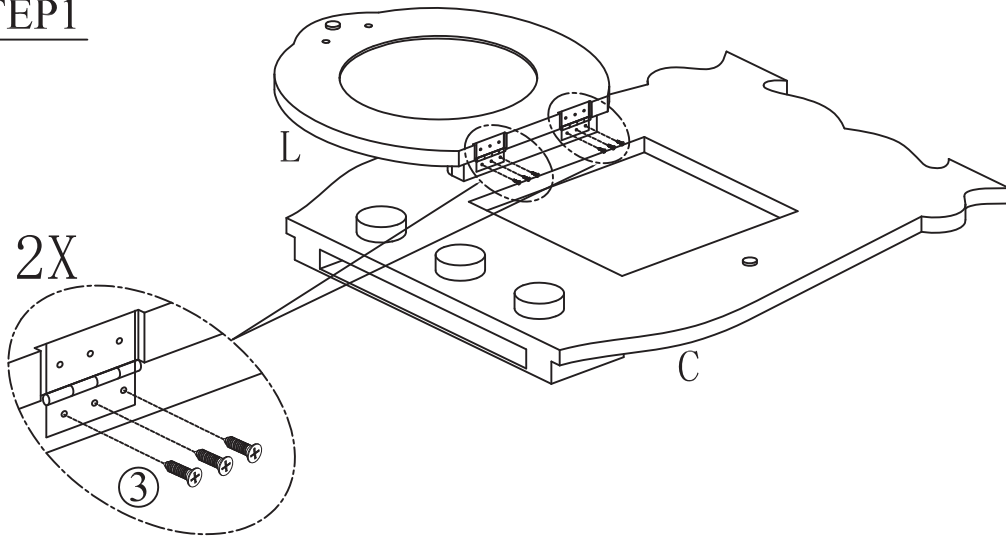

 
STEP 2

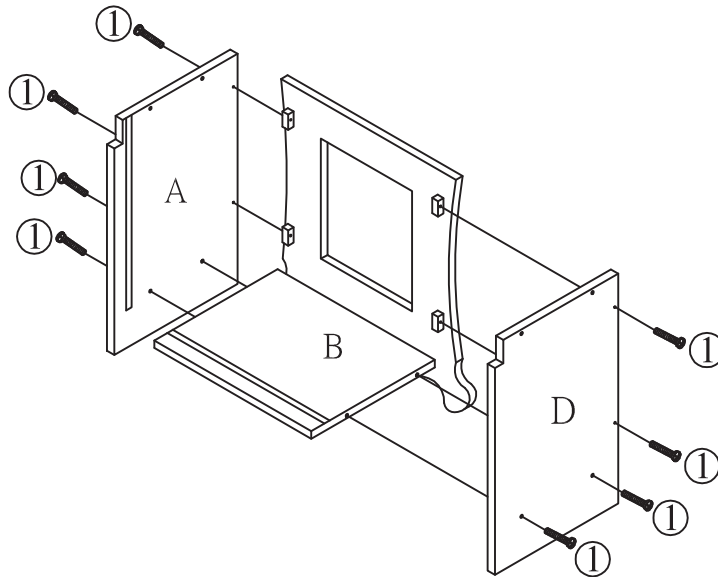

 
STEP 3

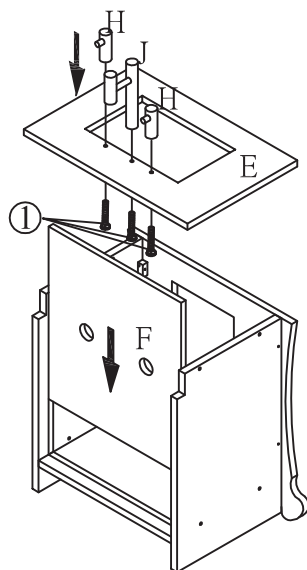

 
STEP 4

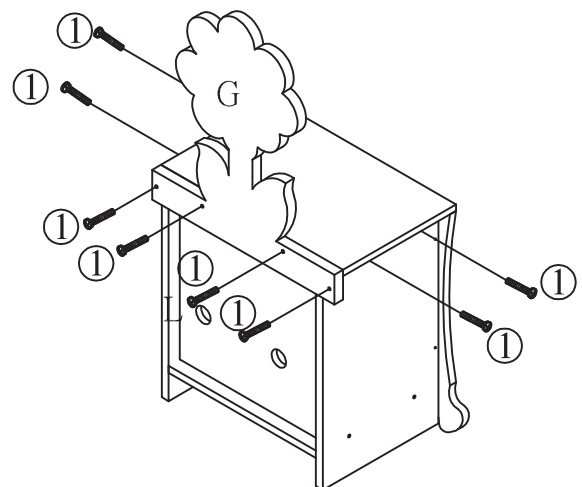

 STEP 5

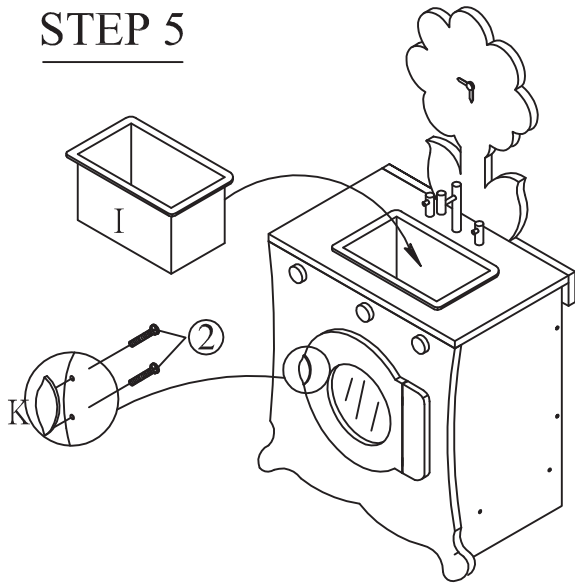

 STEP 6

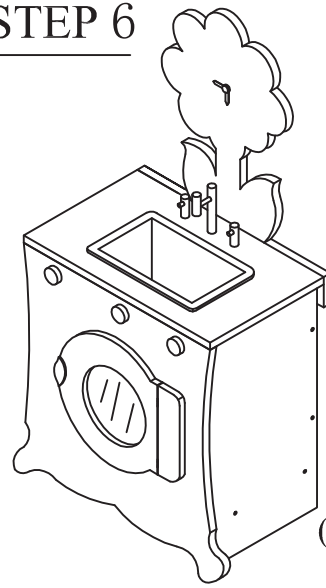

(Finished product)

MADE IN CHINA