



Single / Dual IR Emitter

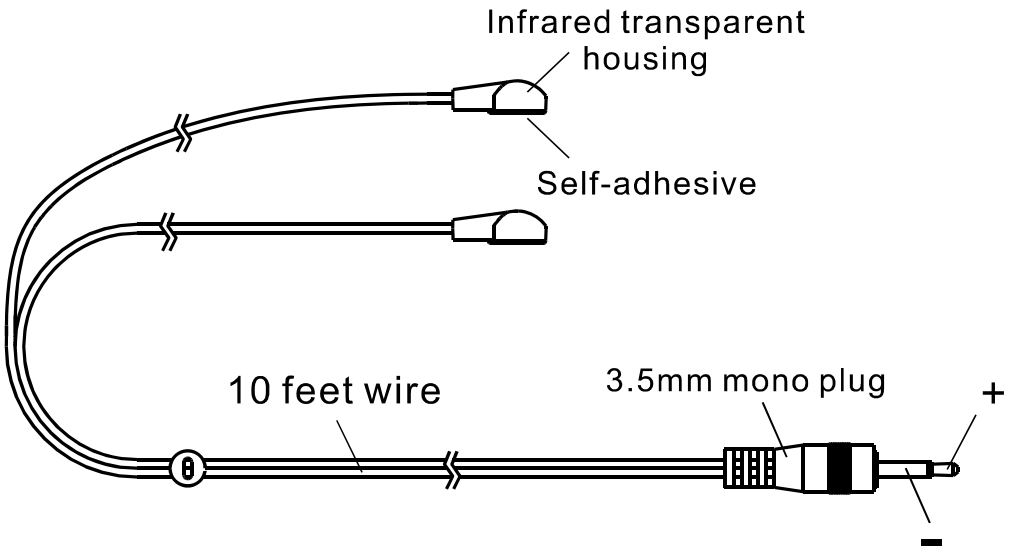


A. Standard installation

1. IR emitter attached directly to IR sensor window.
2. More reliable activated

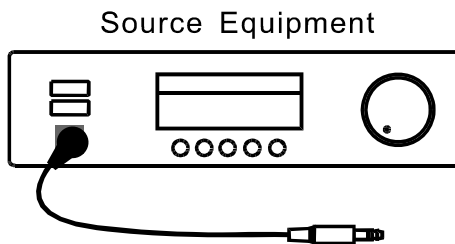

Single / Dual IR Emitter

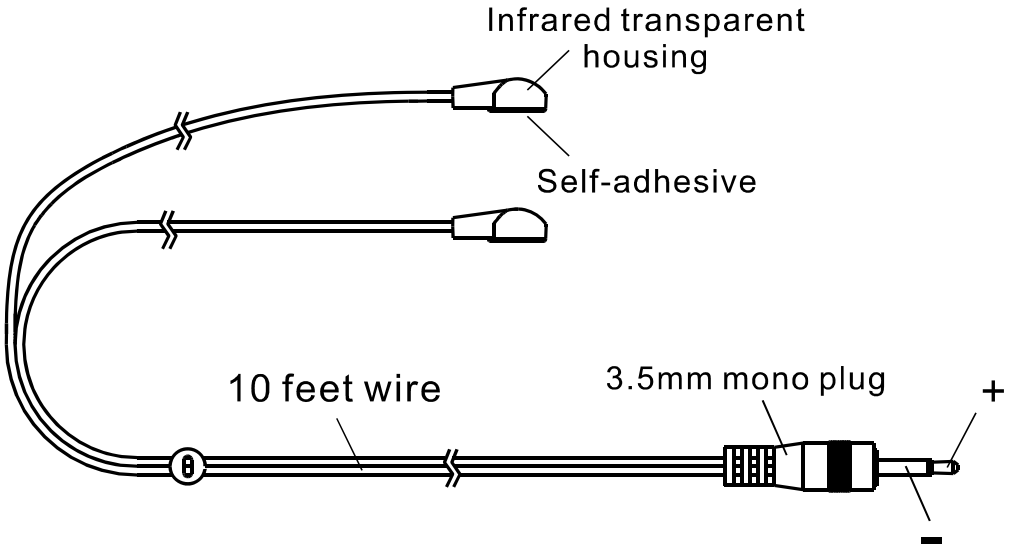

A. Standard installation

1. IR emitter attached directly to IR sensor window.
2. More reliable activated

