


USE AND CARE GUIDE

LED WALL MOUNT PACK

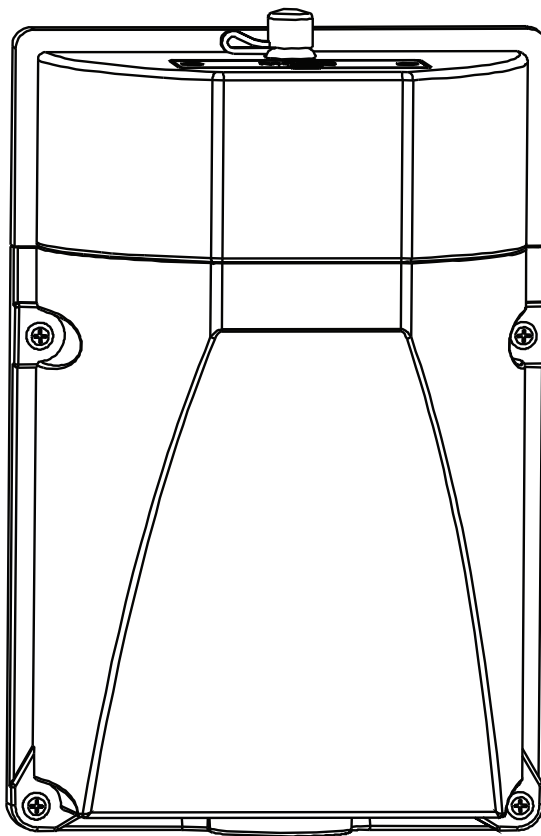

READ BEFORE INSTALLATION
SAVE THESE INSTRUCTIONS



Table of Contents

- Safety Information 2
- FCC Statement 2
- Care & Maintenance 2
- Warranty 2
- Pre-Installation 3
 - Tool Required 3
 - Hardware Included 3
- Installation 4
- Operation 5
- Troubleshooting 5

DUSK TO DAWN OPERATION:

The light will turn on at dusk and remain on through the night until dawn. The light will remain off throughout the day, until dusk.

NOTICE: To make sure this function works properly, always keep the wall switch in the “ON” position (including daytime).

NOTICE: A sensor cover (HH) is provided which can be used to block out light and bypass the sensor. This will keep the light continuous on and fixture can be controlled to turn on/off through the wall switch or a master photocell.

Safety Information

For your safety, always remember to:


- ❑ Follow all safeguards stated in the manual, in addition to normal safety precautions in working with electrical devices. Always follow basic safety precautions to reduce the risk of fire, electric shock and personal injury.
- ❑ **WARNING: RISK OF SHOCK:** House electric current can cause painful shock or serious injury unless handled properly. For your safety, always remember to:
 - Turn OFF the power supply at the fuse or circuit breaker box before you install the fixture.
 - Ground the fixture to avoid potential electric shocks and to ensure reliable starting.
 - Double check all connections to be sure they are tight and correct.
 - Wear rubber sole shoes and work on a sturdy ladder.
- ❑ This fixture is designed for use in a circuit protected by a fuse or circuit breaker. It is also designed to be installed in accordance with local electrical codes. If you are unsure about your wiring, consult a qualified electrician or local electrical inspector, and check your local electrical code.
- ❑ **WARNING: RISK OF CUTS:** Some metal parts in the fixture may have sharp edges. To prevent cuts and scrapes, wear gloves when handling the parts.
- ❑ Account for small parts and destroy packaging material, as these may be hazardous to children.

Supplier’s Declaration of Conformity:
47 CFR § 2.1077 Compliance Information

Responsible Party:
Feit Electric Company
4901 Gregg Road,
Pico Rivera, CA 90660, USA
Unique Identifier:
S5.5WPK5CCTDDBZ

FCC STATEMENT: This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. Any changes or modifications not expressly approved by the manufacturer could void the user’s authority to operate the equipment.

Product Specifications:
120/277 VAC, 50/60Hz, 33 Watts
Not for use with dimmers
Suitable for wet locations

 **WARNING:** These products may represent a possible shock or fire hazard if improperly installed or attached in any way. Products should be installed in accordance with the owners manual, current electrical codes and/or the current National Electric Code (NEC). Properly ground electrical enclosure. Use only UL or IEC approved wire for input/output connections.

 **CAUTION:** This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

Care & Maintenance

Periodically clean the fixture and diffuser using a mild, non-abrasive cleaner and soft cloth. When cleaning the fixture, make sure the power is turned off. Do not spray cleaner directly onto any part of the fixture or LEDs.

Limited Warranty

 
This product is warranted to be free from defects in workmanship and materials for up to 5 years from date of purchase. If the product fails within the warranty period, please contact Feit Electric at info@feit.com, visit feit.com/contact-us or call 1-866-326-BULB (2852) for instructions on replacement or refund. REPLACEMENT OR REFUND IS YOUR SOLE REMEDY. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY. LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES IS HEREBY EXPRESSLY EXCLUDED. Some states and provinces do not allow the exclusion of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.

Pre-Installation


TOOLS REQUIRED (NOT INCLUDED)




Phillips screwdriver




Hammer

 **NOTE:** Hardware not shown to actual size.

 HARDWARE INCLUDED



AA

 

BB



CC



DD



EE



FF



GG



HH

Part	Description	Quantity
AA	Wall Pack Fixture	1
BB	Reflector	1
CC	Lens	1
DD	Reflector Screws	2
EE	Lens Screws	4
FF	J-Box Screws	2
GG	Wire Connectors	3
HH	Sensor Cover	1


Installation

1 Turning Off the Power

- Turn the power OFF at the wall switch and fusebox or the circuit breaker.


2 Removing Lens

- Remove the Fixture Lens (CC) from the Wall Pack Fixture (AA) by unscrewing the four Lens Screws (EE).

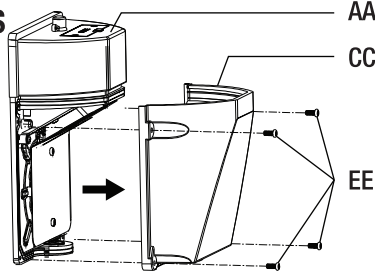


3 Removing Reflector

- Remove the Reflector (BB) from the Wall Pack Fixture (AA) by unscrewing the two Reflector Screws (DD).

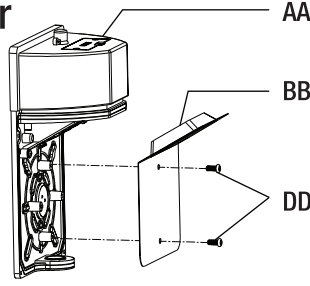


4 Opening the Knockouts

- Use a screwdriver and hammer (not provided) to knockout the screw holes on the Wall Pack Fixture (AA) according to the J-box being used.

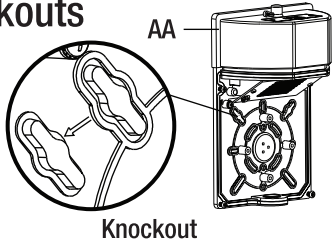


5 Connecting the Power Supply Wires

- Using Wire Connectors (GG), connect the 3 wires coming from the Wall Pack Fixture (AA) to the Junction Box Wires: Black - Line Voltage, White - Neutral, Yellow-Green or Green - Ground

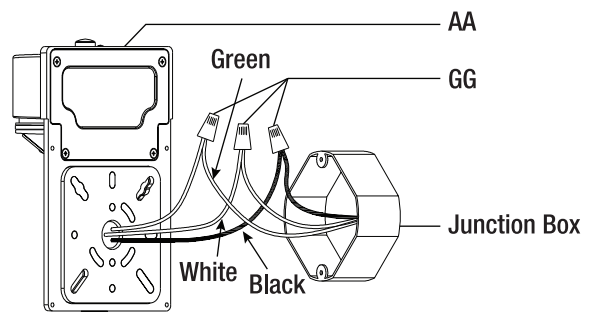


6 Affixing Fixture to J-Box

- Feed the junction box wires and fixture wires into the Junction Box. Mount the Wall Pack Fixture (AA) to the J-Box using the two J-Box Screws (FF) through the knockout screw holes.

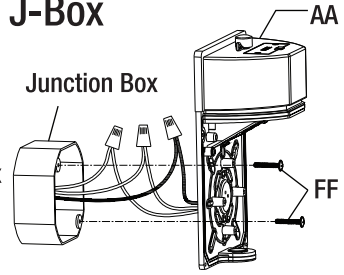


7 Replacing Reflector

- Re-assemble the Reflector (BB) to the Wall Pack Fixture (AA) by screwing in the two Reflector Screws (DD).

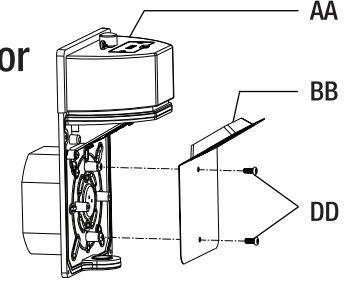


8 Replacing Lens

- Re-assemble the Fixture Lens (CC) to the Wall Pack Fixture (AA) by screwing in the four Lens Screws (EE).

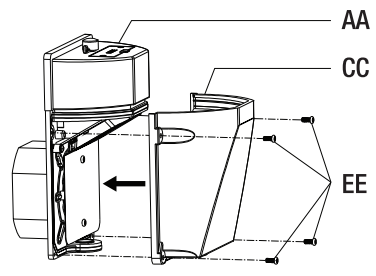

9 Bypassing Dusk-to-Dawn Sensor

- (Optional) To bypass the Dusk-To-Dawn Sensor to operate the Fixture by wall switch only, simply place the Dusk-To-Dawn Sensor Cover (HH) over the Sensor.

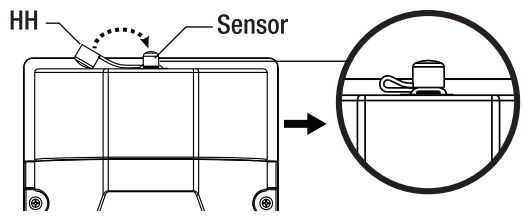

10 Turning the Power On

- Turn the power ON at the wall switch, circuit breaker or fuse box.


11 Applying Sealant

- Once the fixture is tightly secured to J-Box, apply silicone sealant around the base of the fixture to prevent moisture from reaching the connections.

Operation

CCT Switch

Select the color temperature:
 3K (3000K) – Soft White
 3.5K (3500K) – Neutral White
 4K (4000K) – Bright White
 5K (5000K) – Daylight
 6.5K (6500K) – Daylight Deluxe

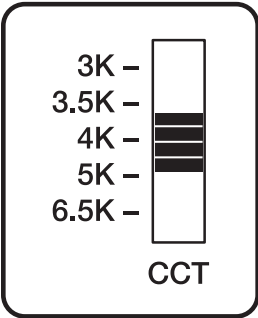

Troubleshooting

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
LED Wall Pack comes on during the day.	Dusk-to-Dawn sensor is in a shaded area and is fooled into thinking it is nighttime. Dusk-to-Dawn sensor is possibly dirty.	Shine a flashlight onto the light sensor. If the security light turns off then the fixture is mounted in an area that does not allow enough light to enter the sensor. Relocate LED Wall Pack. Clean sensor with a damp soft cloth.
LED Wall Pack cycles ON and OFF continuously.	Dusk-to-Dawn sensor is sensing reflected light from the LED Wall Pack.	Ensure no reflective materials are near to the wall pack. Relocate the LED Wall Pack to a different location where it no longer causes reflected light.