

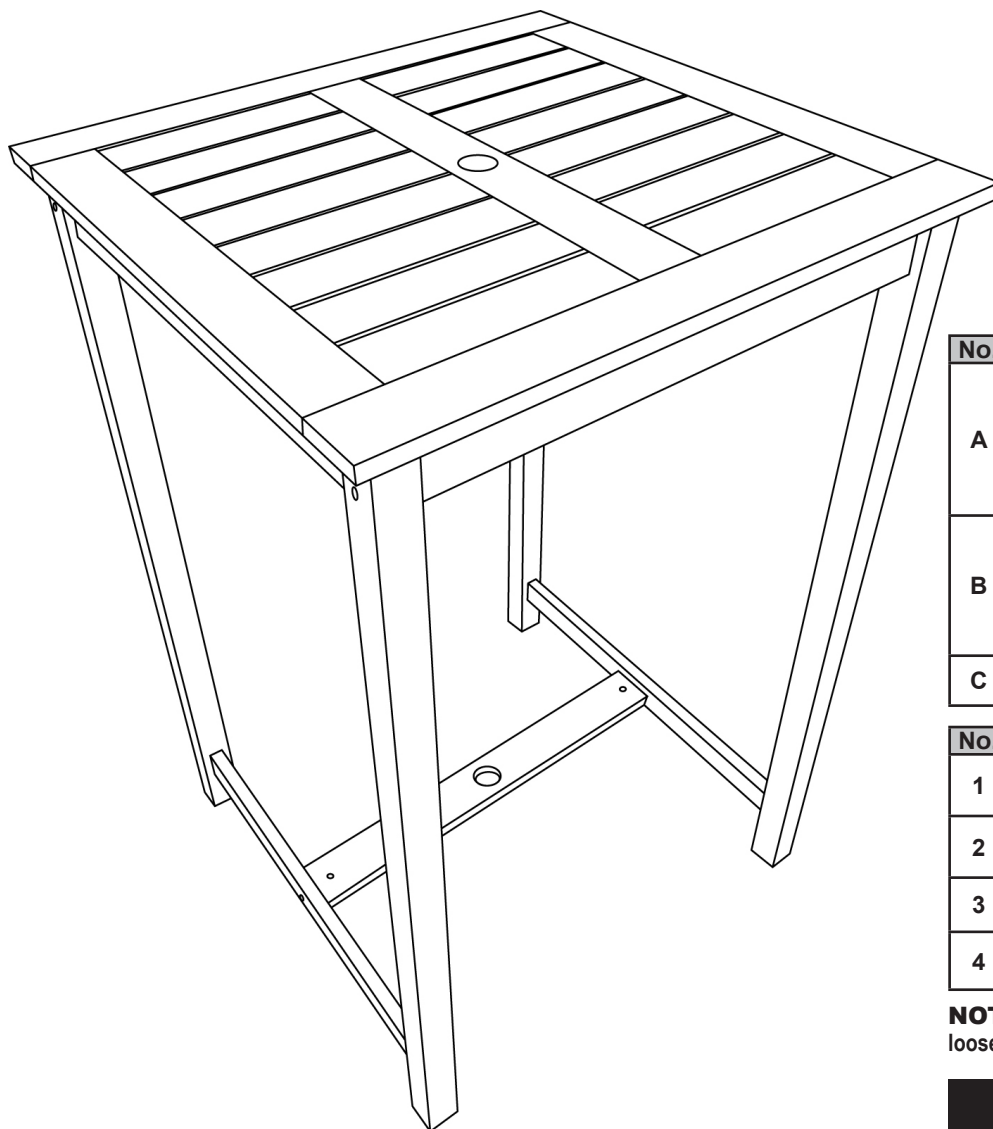
 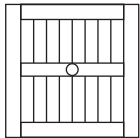


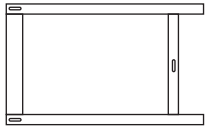



MERANTI WOOD SQUARE BAR HEIGHT TABLE STR-589

Read all assembly and care instructions carefully before using this product. Save this manual for future reference.
Assemble components on a soft, clean surface to avoid scratching or damaging the finish.



Inspect packaging to ensure all parts are accounted for before disposing of packing materials.

No.	PARTS	QTY.
A	 Table Top	1
B	 Leg Panel	2
C	 Leg Support	1

 No.	HARDWARE	QTY.
1	 JCBC M6 x 75mm Bolt with Barrel Nut	4
2	 JCBC M6 x 55mm Bolt with Barrel Nut	2
3	 Barrel Nut Driver	1
4	 Hex Key	1

NOTE: Save the hex key to use in the event hardware becomes loose and needs to be tightened.



2-PERSON
ASSEMBLY
RECOMMENDED

! HELPFUL HINT

Do not fully tighten hardware until all components are assembled. If hardware is tightened too soon, mounting holes may not align, and parts may not easily fit together.



WARNING



CHOKING HAZARD — This item contains small parts that can be swallowed by children. Keep children away during assembly.


ASSEMBLY

Read carefully and understand assembly before beginning.

Do not fully tighten hardware until all components have been loosely assembled.

STEP 1


A: 1
B: 1
1: 2

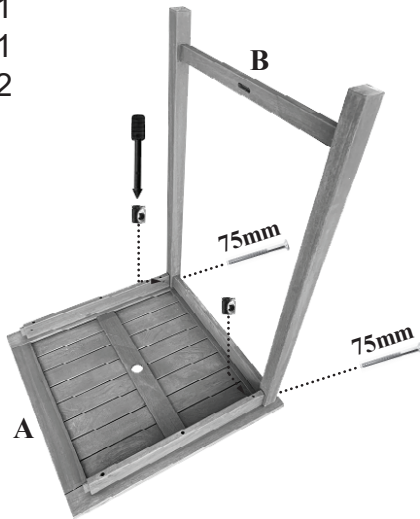

- Insert 2x Barrel Nut into the table top. Use the Barrel Nut Driver to align the barrel nut with the hole on the outside of the table top.
- Attach Leg Panel (B) to the table top by hand-tighten 2x 75mm Bolt; ensuring the bolt threads into the barrel nut.

STEP 2


C: 1
2: 1

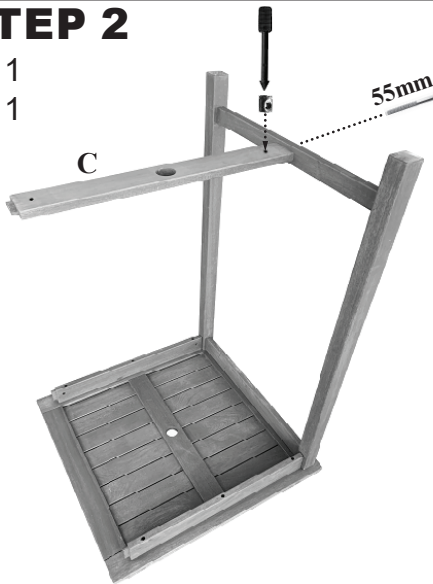

- Insert 1x Barrel Nut into Leg Support (C). Use the Barrel Nut Driver to align the barrel nut with the hole on the outside of the support.
- Attach the leg support to the bottom of the leg panel by hand-tightening 1x 55mm Bolt, ensuring the bolt threads into the barrel nut.

STEP 3

B: 1
1: 2
2: 1

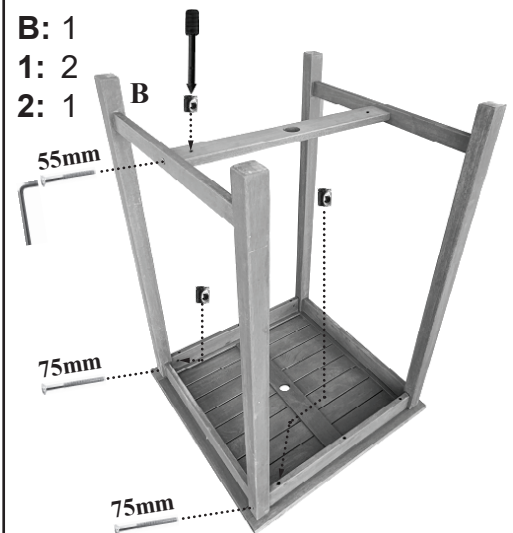

- Repeat Step 1 and Step 2 to affix the second leg panel.
- Tighten all hardware using Hex Key (4). Do not over-tighten, as doing so may damage the wood.

General Use & Care

SAFE USE: For residential use only. Only use on a flat, level surface. Do not sit or stand on the table.

MOVING: Always lift furniture when moving it around, never drag it.

INSPECT: Periodically check bolts and tighten as necessary.

EXPOSURE: Over time, sunlight and weather elements may degrade and change the color of natural wood. Avoid leaving wooden furniture in the rain or high-humidity climates as wood expands and contracts with moisture and humidity changes. If this item is not used for extended periods, cover it with a breathable cover or store it indoors.

WINTER CARE & STORAGE: Protect this item from inclement weather, especially ice and snow. Move it to an indoor location that is cool and dry. Covering while in storage is recommended to help prevent dust build-up.

CLEANING: Identify the direction of the woodgrain and wipe dust and debris using a soft, dry cloth. Surface mildew can be washed away using a very mild solution of soap and water and a soft cloth; after drying, oil treatment is recommended.

MAINTENANCE: Left untreated, the wood will turn a silvery gray color. To maintain the appearance, apply a suitable penetrating Wood, Teak or Linseed Oil (not included) twice a year. Bring furniture indoors and allow it to dry for at least 12 days before applying oil. Only apply oil to wooden surfaces. Use a soft cloth or soft brush and carefully apply oil as directed by the wood oil manufacturer.

WARNING: THE ONE-YEAR WARRANTY DOES NOT COVER DAMAGES OR DEFECTS CAUSED BY THE APPLICATION OF CHEMICAL TREATMENTS OR PROTECTIVE COATINGS.

Any modification to the product or failure to follow recommended care will void the product warranty.

WARNING:

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.