

 
Chair

IMPORTANT


Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.

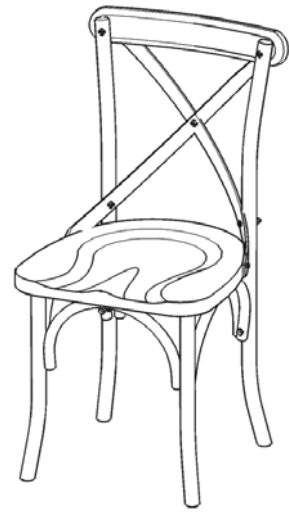


Part List

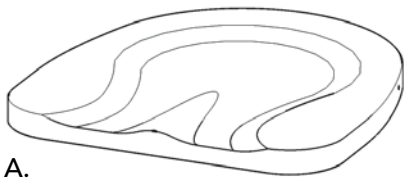 


A.
Seat
1 pc.



 
C.
Top Rail
1 pc.

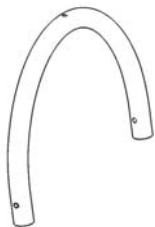

 
D.
Side Rail
2 pcs.

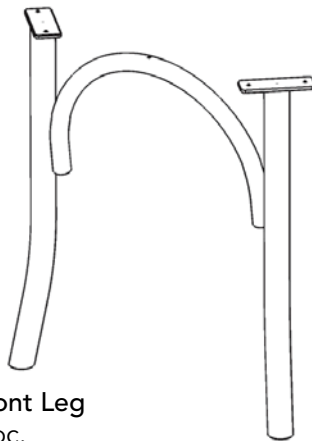

 B.
Front Leg
1 pc.

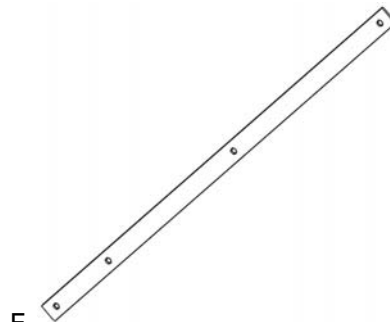

 E.
Back Rail
2 pcs.

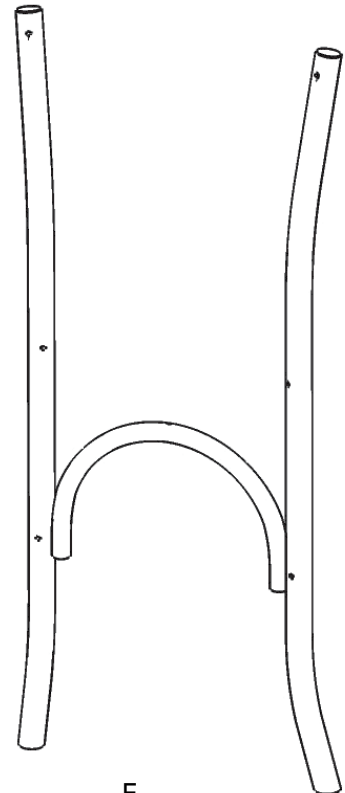

F.
Back Leg
1 pc.

Hardware List



Hex Wrench
1 pc.



Small
Hex Wrench
1 pc.



M6x16
Head Cap Bolt
4 pcs. (+1 extra)



M6x30
Flat Head Bolt
8 pcs. (+1 extra)



Small
Flat Washer
5 pcs. (+1 extra)



Flat Washer
4 pcs. (+1 extra)



Key Wrench
1 pc.



Nut Cap
5 pcs. (+1 extra)



M6x13
Bolt (short)
3 pcs. (+1 extra)



M6x40
Bolt
2 pcs. (+1 extra)



M6x60
Bolt (long)
2 pcs. (+1 extra)



Spring Washer
4 pcs. (+1 extra)

Tool(s) required for assembly: Slotted screwdriver, Level

Home Styles Customer Service: www.homestyles-furniture.com,
 servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319

Assembly Instructions 2/3

IMPORTANT

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Do not tighten all the bolts until each part is properly assembled.
- Keep Hex Wrench and Key Wrench in a safe place as the bolts may need to be tightened up in the future.

 
STEP 1

Attach Front Leg (B) to Seat (A) with Flat Washers, Spring Washers, Head Cap Bolts and Flat Head Bolt, tightening the bolts only half way. (See Figures 1 and 2)

Attach Side Rails (D) to unit with Flat Head Bolts, tightening the bolts only half way. (See Figures 2 and 3)


Attach Back Leg (F) to unit with Flat Head Bolts, tightening the bolts only half way.

Tighten all bolts on this step.

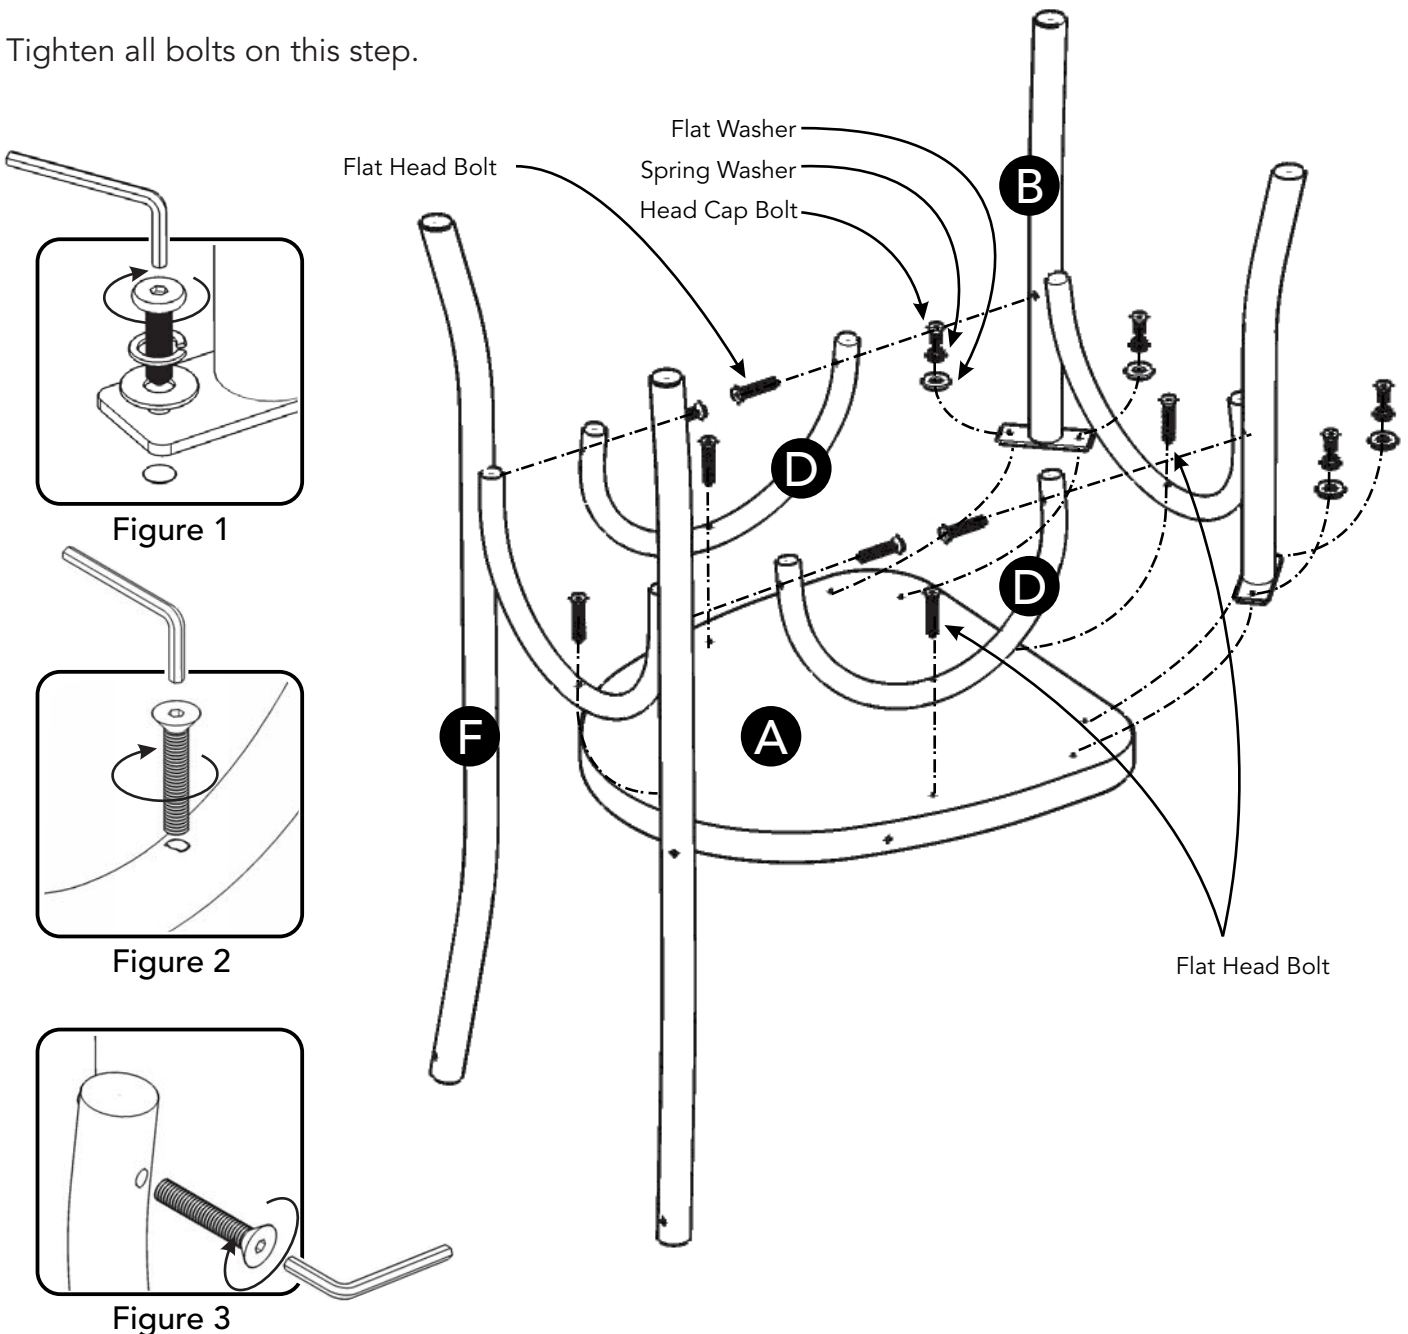

Assembly Instructions 3/3

 STEP 2

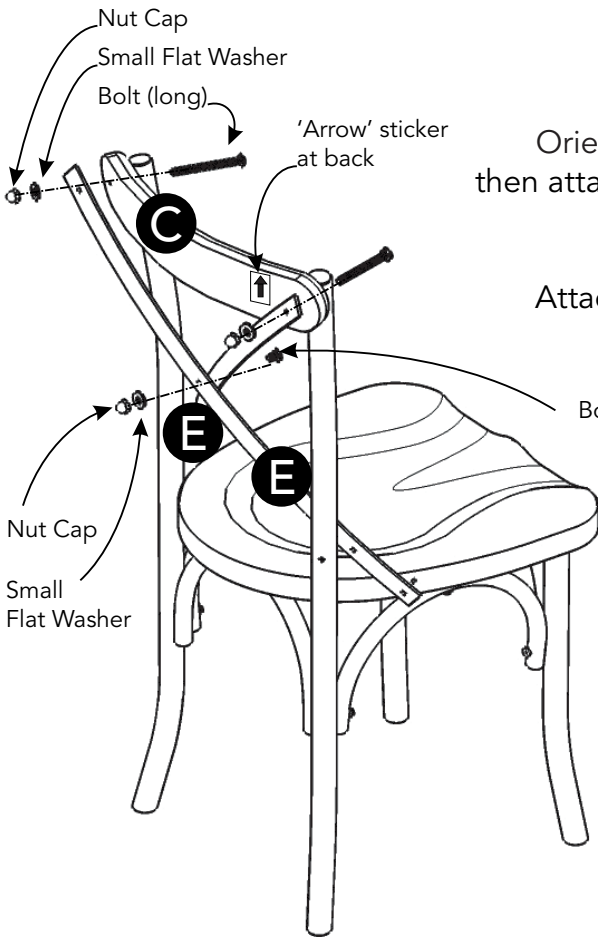

Orientate Top Rail (C) so the 'Arrow' sticker is at back of unit, then attach Top Rail (C) and a Back Rail (E) to unit with Bolt (long) Small Flat Washer and Nut Cap. (See Figure 4)

Attach other Back Rail (E) to unit with Bolt (long), Bolt (short), Small Flat Washers and Nut Caps. (See Figure 5)

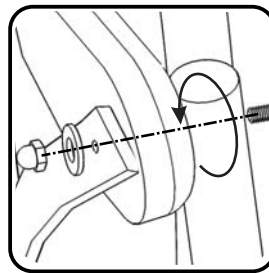 


Figure 4

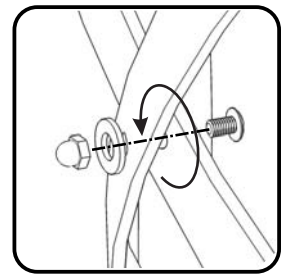 


Figure 5

STEP 3

Attach Back Rails (E) to back leg and seat with Bolts, Bolts (short), Small Washers and Nut Caps, bending Back Rails slightly to align the holes in the Back Rails to the holes in the back leg and seat. (See Figures 6 and 7)

Tighten all bolts and nut caps used in Steps 2 and 3.

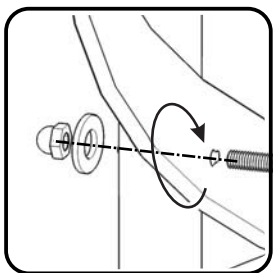 
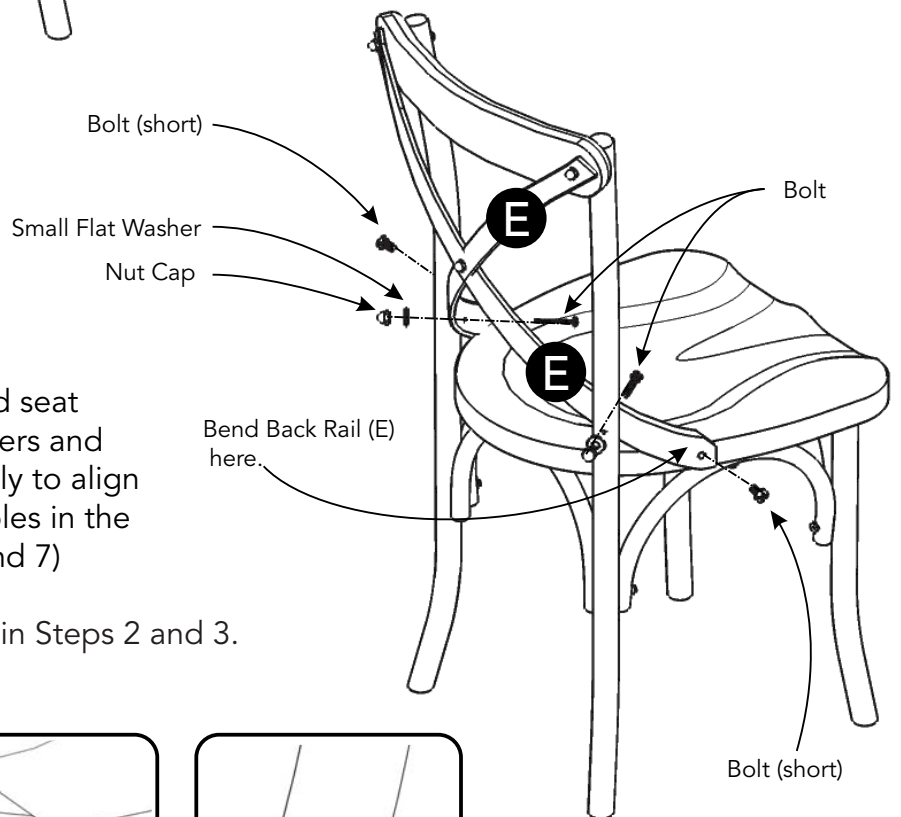 


Figure 6

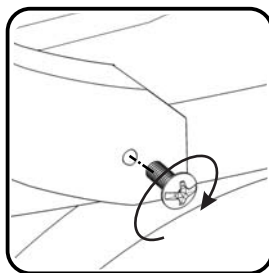 


Figure 7

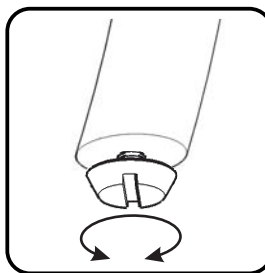 


Figure 8

STEP 4

To level the unit, adjust the adjustable levelers on the bottom of the legs. (See Figure 8)

Note: Unit must be level to work properly.

CARE INSTRUCTIONS

NEVER

allow liquids to remain on furniture.
Absorption causes parts to warp
and split and finishes to delaminate.

NEVER

use glass cleaners on
finished furniture. Ammonia
chemically attacks the finish.



Do not use power tools
above 8 volts to assemble.
**PREVENT
CRACKING**



 
Do not place
in direct sunlight.
**PREVENT
FADING**



Do not write
directly on surface.
**PREVENT
MARKING**



Do not place hot
objects on surface.
**PREVENT
FINISH DAMAGE**

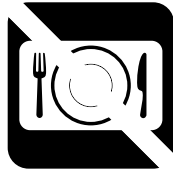

Do not use rubber
based placemats.
**PREVENT
DISCOLORING**



Do not use commercial
waxes and polishes.
**PREVENT
YELLOWING**

CLEAN

with a soft cloth moistened
in lukewarm soap and water.
Buff with a dry clean cloth.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

www.homestyles-furniture.com/customer-service/replacement-parts

Home Styles Customer Service: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319