

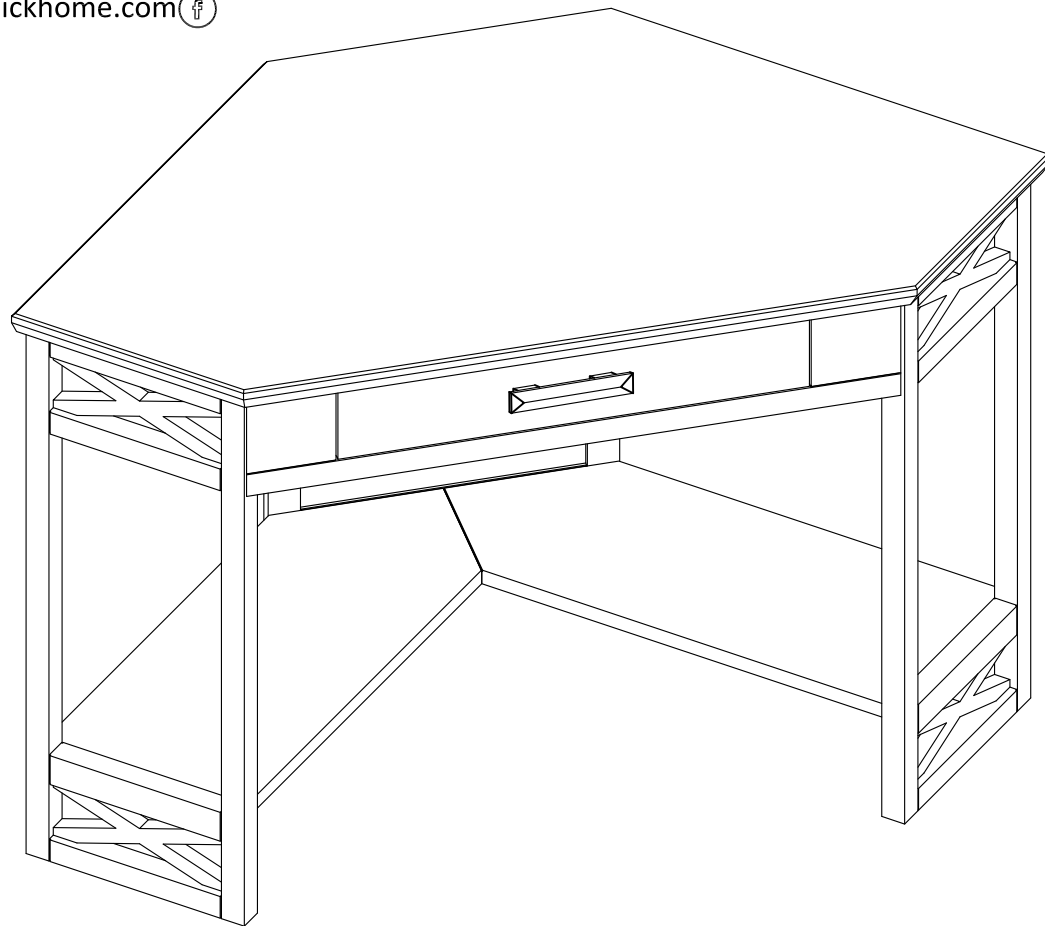
ITEM# 85430

White Corner Computer Desk



 

Leick
Home
SINCE 1910

2219 S. 19th St.
Sheboygan, WI 53081
Ph: 920-451-4060
Fax: 920-451-4063
info@leickhome.com

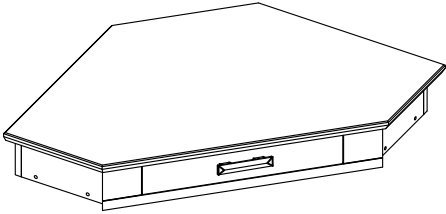
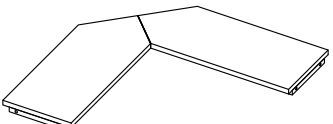
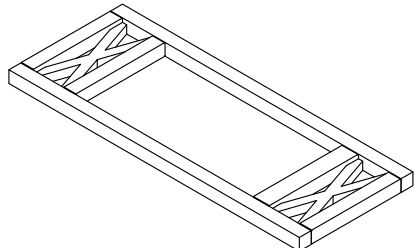
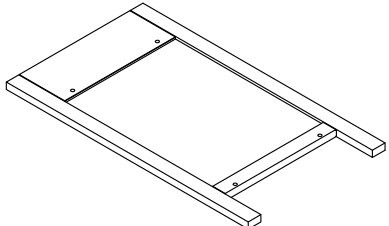
 www.leickhome.com 



Hardware List

Item	Description	Qty
a	 Bolt 1/4" * 1 1/4"	12PCS
b	 Allen wrench	1PC
c	 Flat Washer 1/4" * 16mm	12PCS
d	 Lock Washer	12PCS

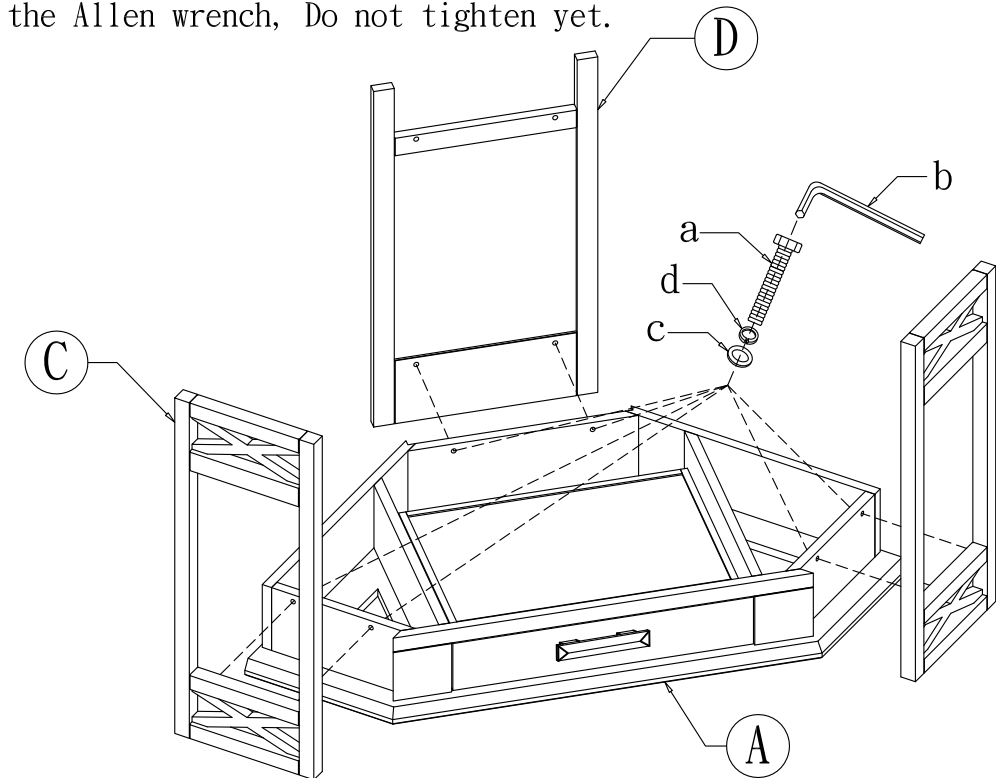
Parts List

Item	Description	Qty
 A	Top Assembly	1PC
 B	Shelf	1PC
 C	Side Frame	2PCS
 D	Back Frame	1PC

Assembly Instructions

step 1

Fasten (2) side frames and back frame with (6) bolts, flat washers and lock washers using the Allen wrench, Do not tighten yet.



step 2

Fasten the shelf to the side frames and the back frame with (6) bolts and flat washers and lock washers, tighten. Now tighten all bolts in step 1.

