

# PRE-LIT ARTIFICIAL GARLAND

Review all information before using this product. Save this manual for future reference.

## SHAPING

 
 
 
### TIPS:

- Before shaping, test the lights to ensure they work properly; see *Installing Batteries*.
- Shape garland on a scratch-resistant surface.
- Handle the attached decorations with care.
- Avoid undue strain or stress on the product conductors, connections, and wires.

The product is shipped with the branch tips compressed to the center. Each branch tip must be shaped to its proper position to give the product a natural look. This will also bring the piece to its advertised dimensions. The care and attention given to this process will result in a genuinely beautiful and appealing holiday decoration.

To begin shaping, carefully straighten the full length of the garland. Then, starting at one end, gently grasp the branch tips and spread them out away from the center spine. Work across the garland, adjust branches, and fill in gaps to achieve maximum fullness.

## INSTALLING BATTERIES

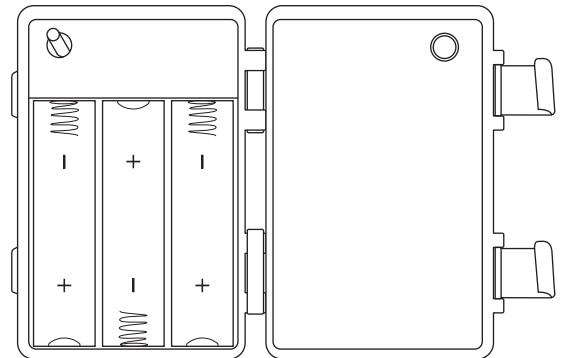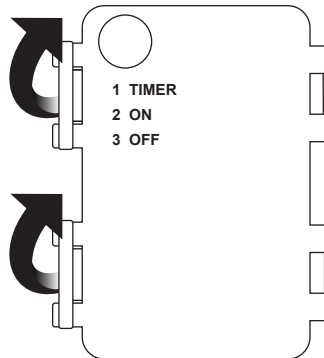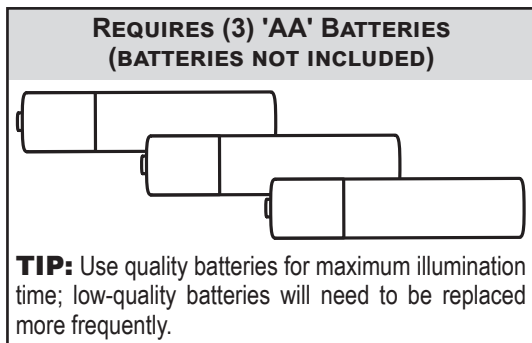

- Release the latches on the side of the battery box and flip the cover open.
- Paying attention to the positive(+) and negative(-) terminals, gently insert three 1.5-Volt 'AA' batteries (not included).
- Close the cover and engage the latches.

## OPERATION

- 1. TIMER:** Press the power button once to activate the timer function. When the timer function is on, the lights will illuminate for 6 hours then turn off automatically for 18 hours.
- 2. ON:** Press the power button a second time to turn the lights on. Lights will remain illuminated until the battery power has been expelled or the unit is manually turned off.
- 3. OFF:** Pressing the power button a third time will turn the lights off.

# GENERAL USE & CARE

**SAFE USE:** For indoor use only. Avoid high-traffic areas such as locations where children and pets play. Keep garland a safe distance away from all heat sources such as, but not limited to, heat vents, gas or electric heaters, fireplaces, candles, etc. Do not secure the wiring of the product with staples or nails or place them on sharp hooks or nails.

**EXPOSURE:** Over time, sunlight may degrade and change the color of the unit.

**CLEANING:** Clean the garland every couple of weeks to help keep it dust-free.

**STORAGE:** This unit is not intended for permanent installation. When not in use, maintain the product integrity by storing it as directed.

## Cleaning

**Do not use water, harmful additives, or abrasive materials to clean any part of this unit.**

- Ensure the power button is turned to the 'OFF' position before cleaning.
- Gently dust with a soft, dry cloth or a clean feather duster.

## Storage

1. Remove batteries from the battery box.
2. Remove decorations that are not pre-attached to the unit.
3. Carefully place the unit in the original box and tape it shut.
4. Store in a cool, dry place away from sunlight and moisture. Note, exposure to excessive heat or humidity may damage the branches and/or lighting system.

## Troubleshooting

- Press the power button to ensure it is in the 'ON' position.
- Make sure the batteries are installed correctly, observe polarity, and ensure contact is good.
- Install new batteries (not included). Do not mix old and new batteries.
- Do not use rechargeable batteries.
- Inspect the lights, wiring and battery box for signs of damage. If the lighting system is damaged, do not use.

## SAFETY STATEMENTS & WARNINGS

- For indoor use only. Damage resulting from outdoor exposure is not covered under warranty.
- For decorative purposes only — this item is not a toy!
- Keep the unit a safe distance away from all heat sources such as, but not limited to, heat vents, gas or electric heaters, fireplaces, candles, etc.
- Do not hang ornaments or other objects from the light string.
- Remove batteries before the unit is stored or if it will not be used for a long period of time.
- Promptly remove expelled batteries. Do not mix old and new batteries. Mixing batteries could cause leakage of the acid inside batteries, damaging the unit.
- Do not use rechargeable batteries.
- LED lights are not replaceable.
- Do not use the lights if there are signs of damage to the bulbs, wiring or battery box.
- Supervise children and pets at all times.

**Any modification to the product or failure to follow recommended care will void the product warranty.**

## WARNING!

**Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.**