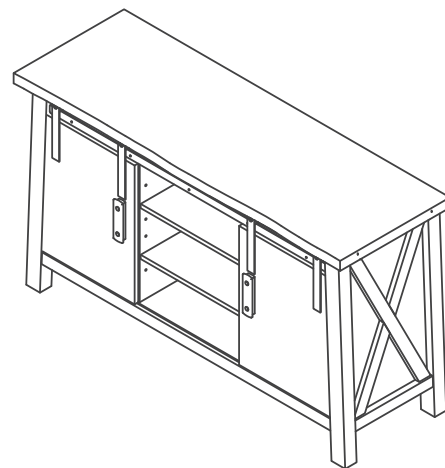 
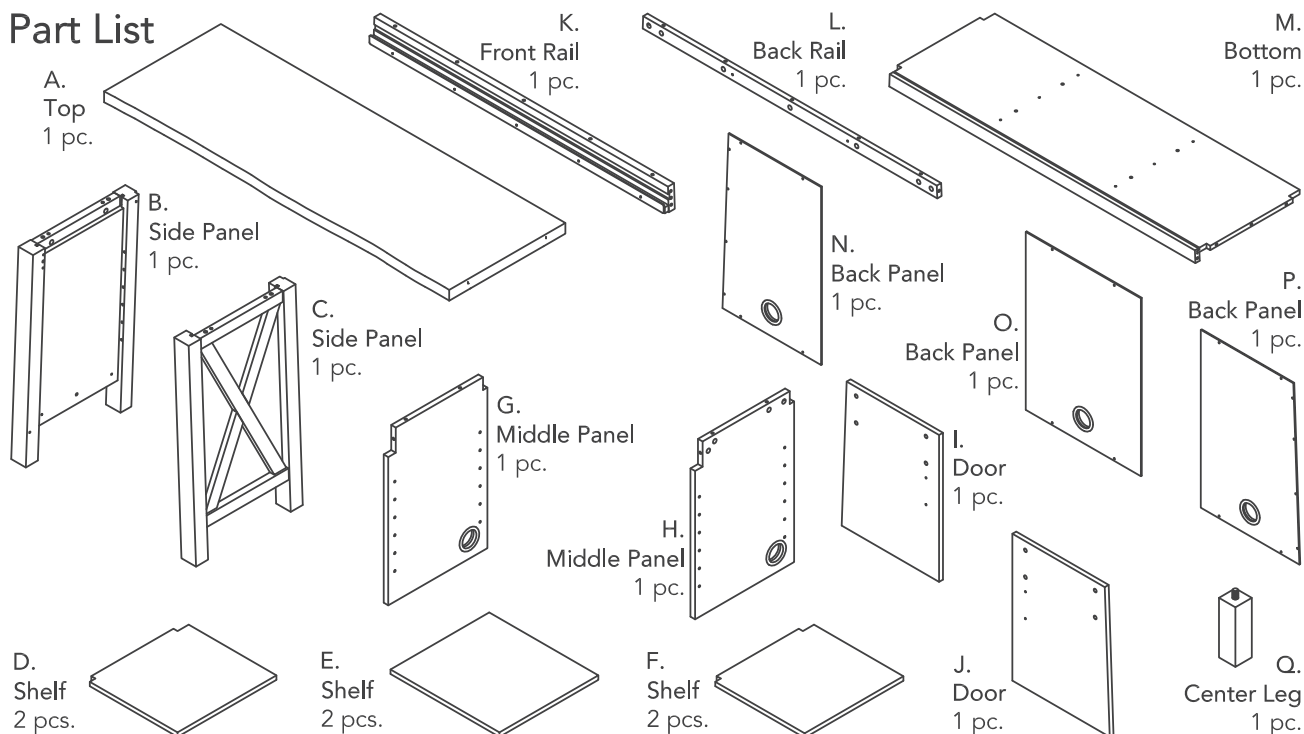 
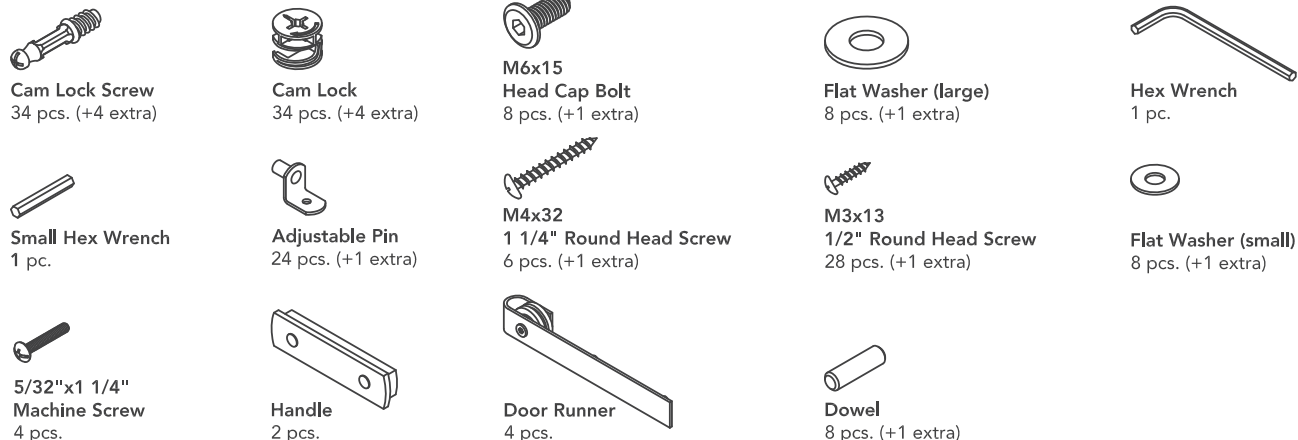 


**IMPORTANT**

Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.

**Part List****Hardware List**

Tool(s) required for assembly: Phillips screwdriver, Level, Pencil, Drill (8 volts or less), 3/8" Drill Bit

Home Styles Customer Service: [www.homestyles-furniture.com](http://www.homestyles-furniture.com),  
[servicedesk@homestyles-furniture.com](mailto:servicedesk@homestyles-furniture.com), 888-680-7460, 877-831-0319

 
## Assembly Instructions 2/7

### IMPORTANT

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Do not tighten all the screws until each part is properly assembled.
- The unit must be level to work properly. Use the included adjustable levelers to level.
- Keep Hex Wrench as the bolts may need to be tightened in the future.

### STEP 1

Insert Cam Lock Screws into pre-drilled holes in Top (A), Side Panels (B), (C), Front Rail (K) and Back Rail (L), then tighten.

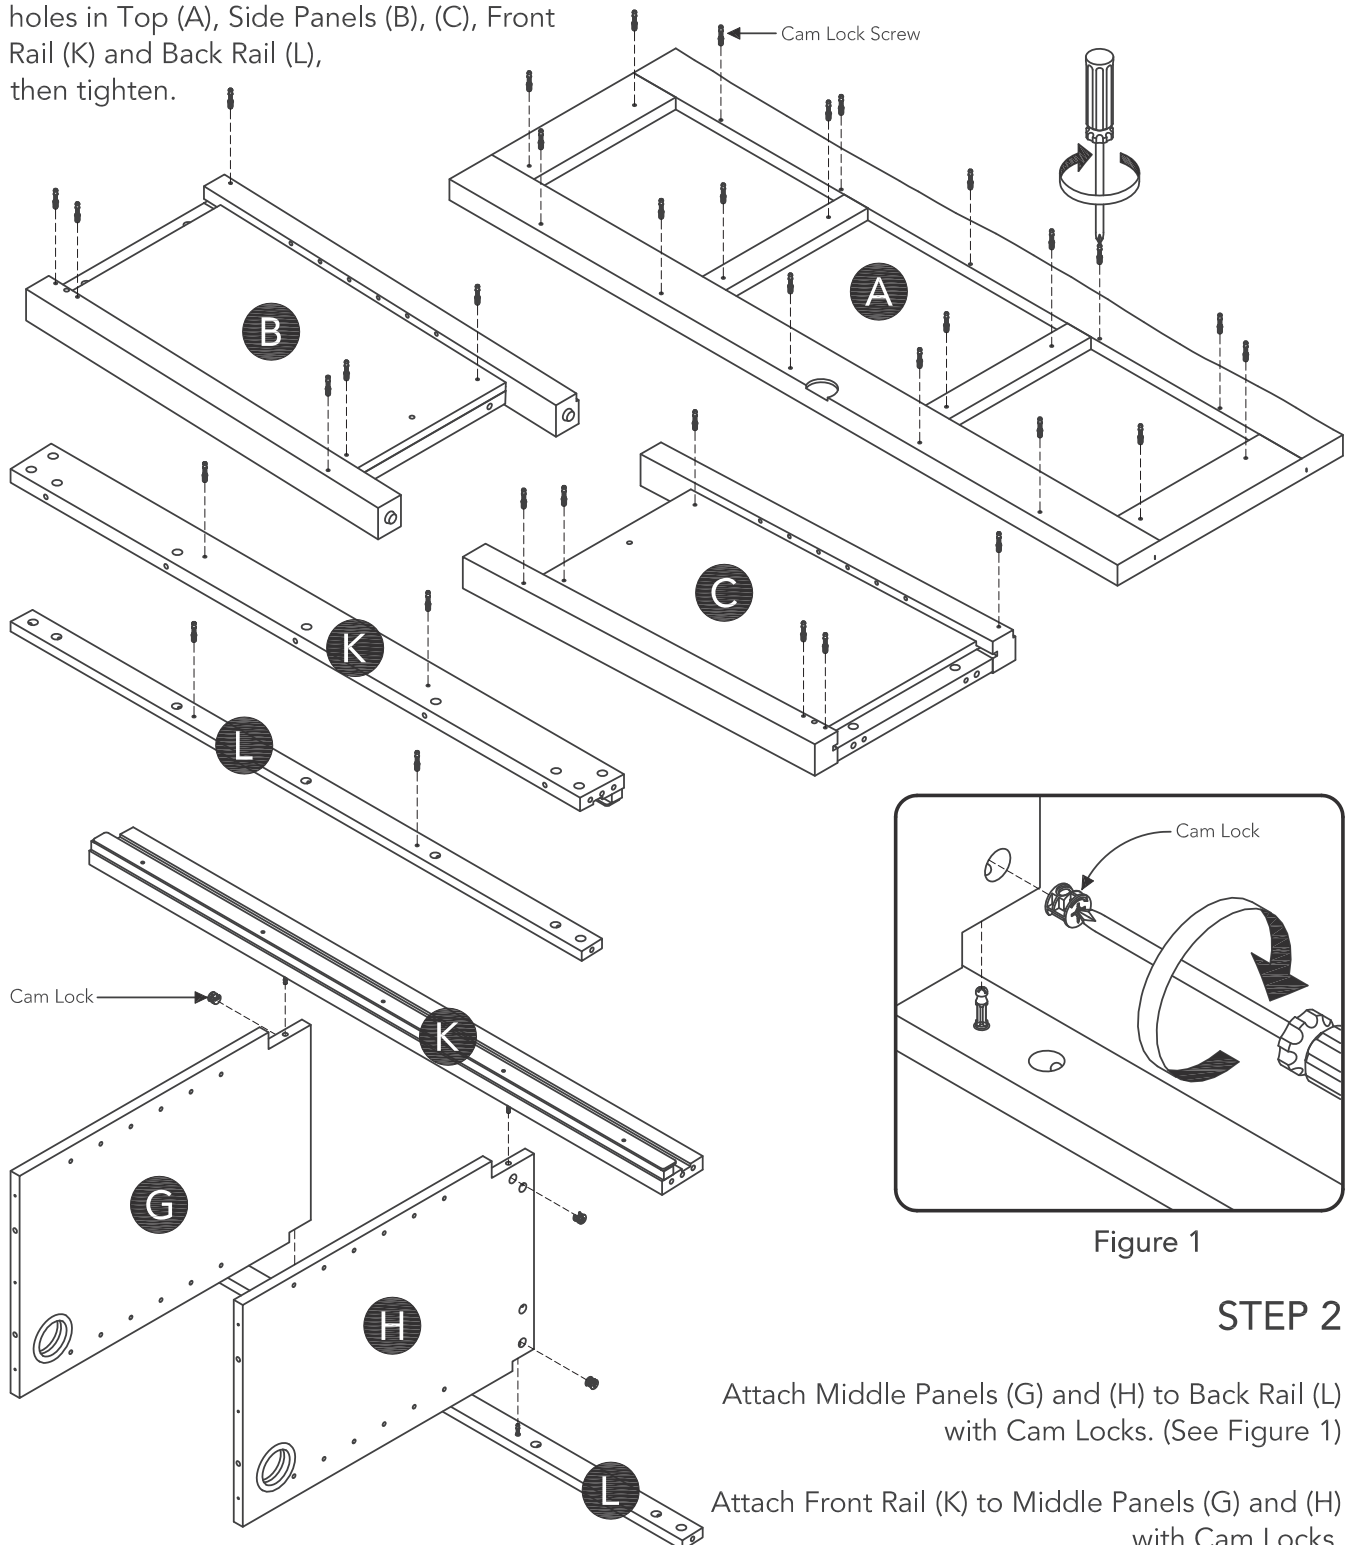

### STEP 2

 
Attach Middle Panels (G) and (H) to Back Rail (L) with Cam Locks. (See Figure 1)

Attach Front Rail (K) to Middle Panels (G) and (H) with Cam Locks.

## Assembly Instructions 3/7


### STEP 3

Attach Bottom (M) to unit with Dowels and 1 1/4" Round Head Screws.

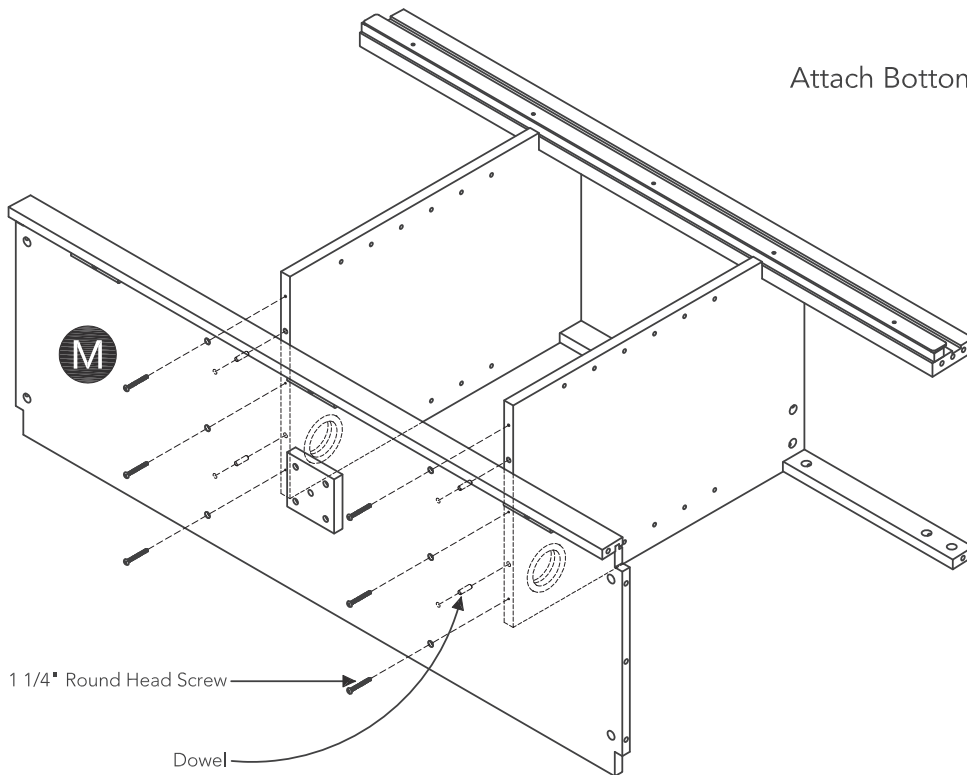

### STEP 4

 Attach Side Panels (B) and (C) to unit with Dowels and Cam Locks.

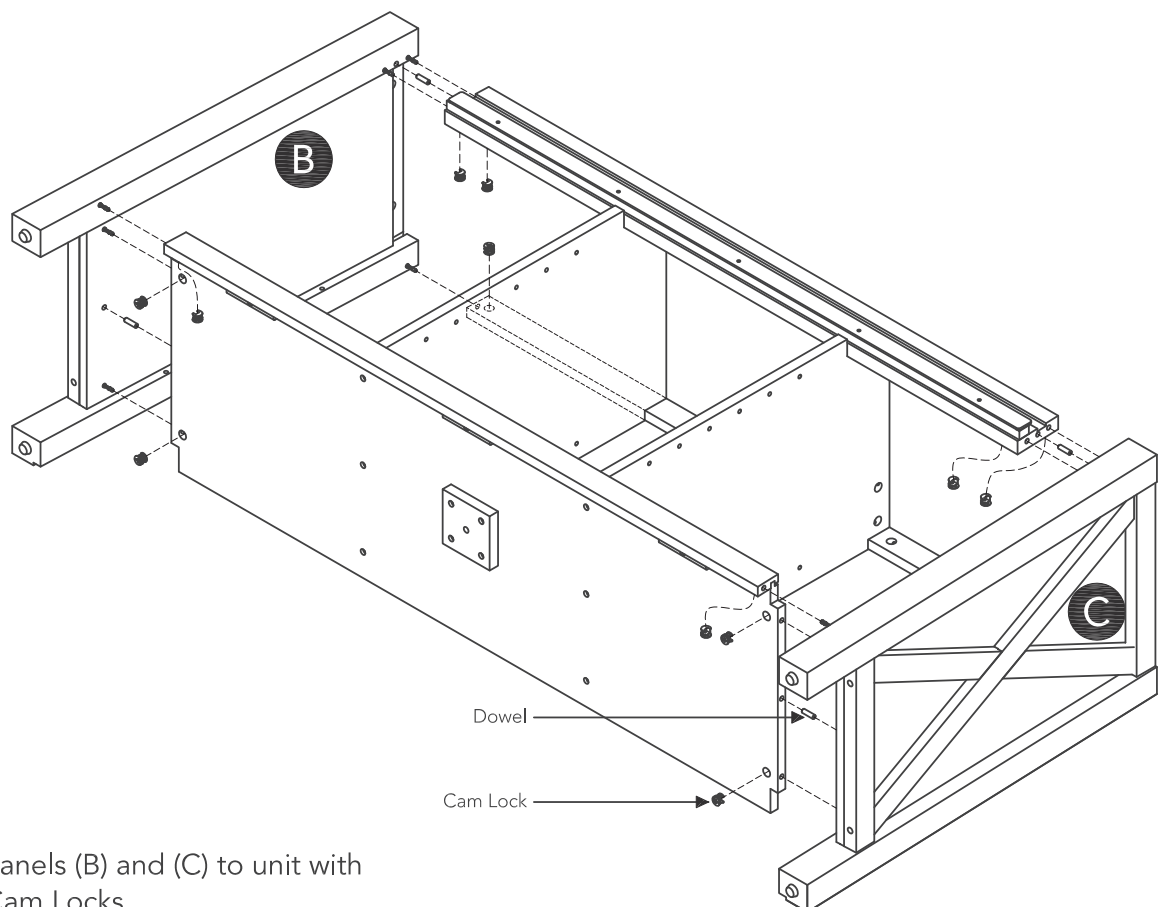

## STEP 5

Attach Top (A) to unit with Cam Locks.

Attach Center Leg (Q) to unit, then tighten.

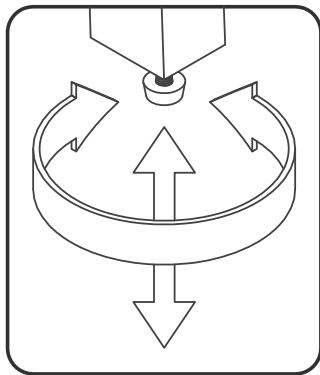 
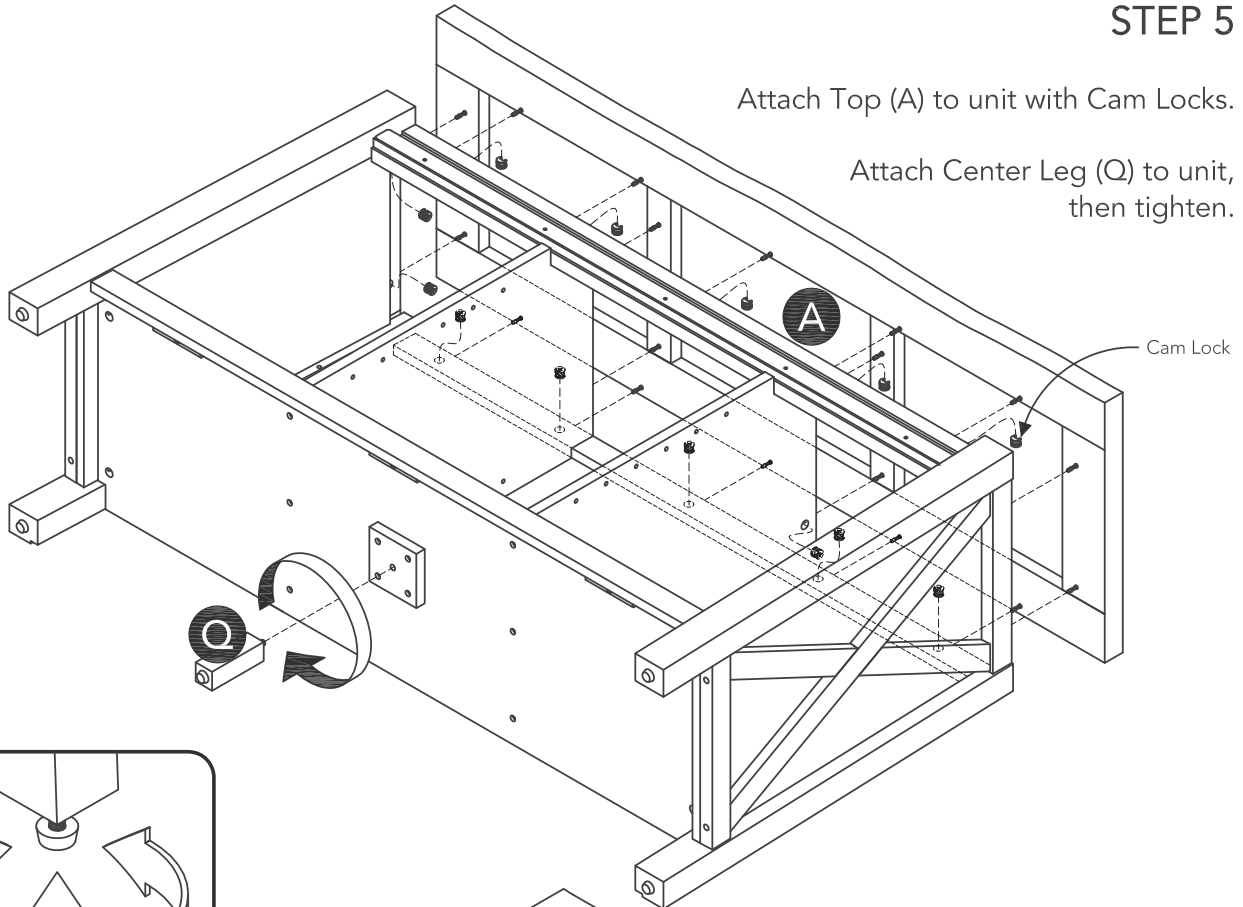 


Figure 2

Flat Washer (small)  
1/2" Round Head Screw


## STEP 6

 Turn unit to its upright position.

Level unit by adjusting the adjustable levelers on bottom of unit. (See Figure 2)

Note: Unit must be level to proceed.

Attach Back Panels (N), (O) and (P) to unit with 1/2" Round Head Screws and Flat Washers (small).

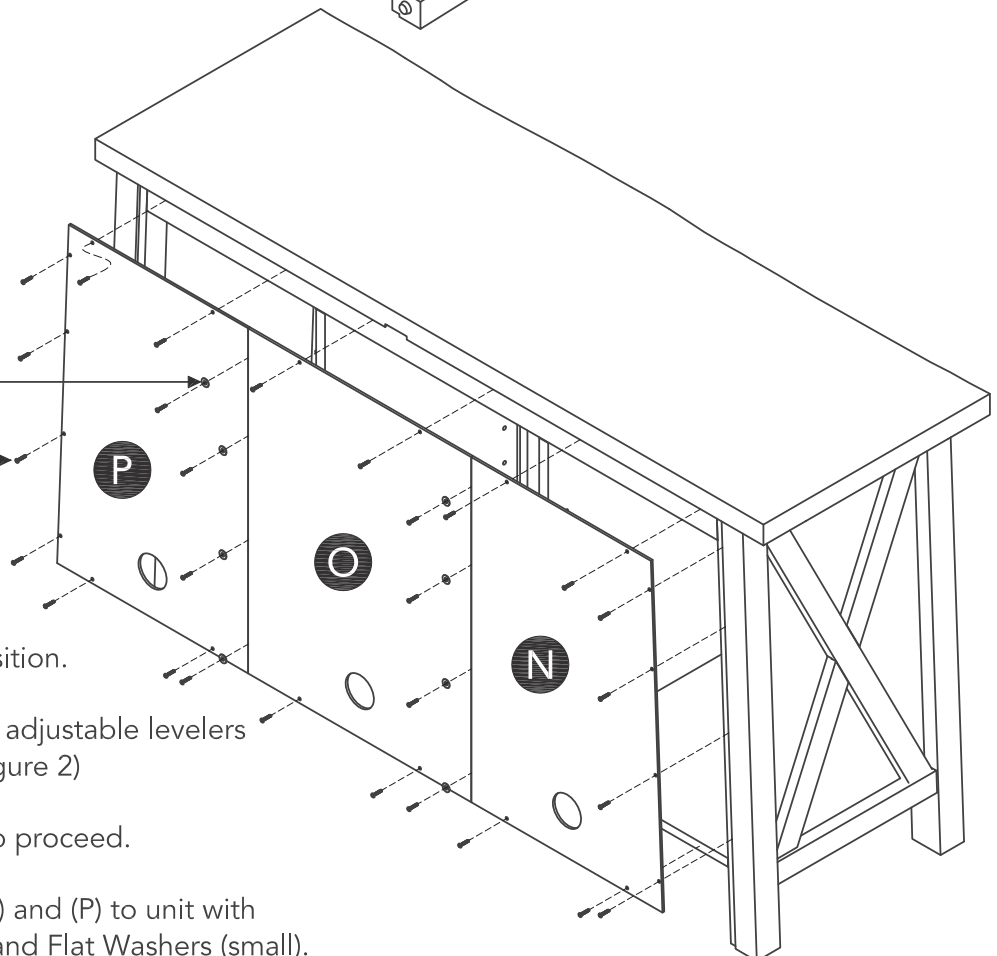

## Assembly Instructions 5/7

### IMPORTANT

- To help reduce the risk of the unit tipping over, the Tipover Restraint must be installed following these instructions exactly.

### STEP 7

Place unit at desired location.

Mark wall with pencil just above and in-line with hole in Top (A). (See Figure 3)

Move unit.

Drill a 3/8" hole in wall 1 1/2" below mark.

Insert Anchor into the wall hole and attach Tipover Restraint to Anchor with 1 1/2" Round Head Screw and Flat Washer. (See Figure 4)

Move unit back into place and insert Tipover Restraint into unit through hole in Top (A). (See Figure 5)

Attach Tipover Restraint to unit with 1/2" Round Head Screw and Flat Washer. (See Figure 6)

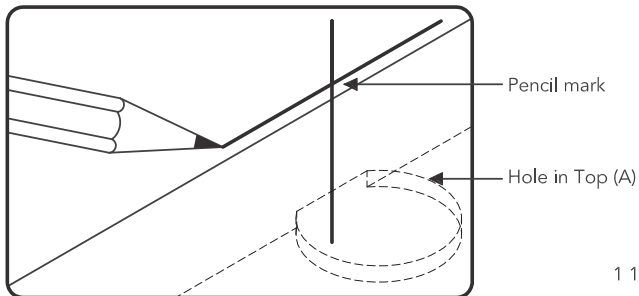 
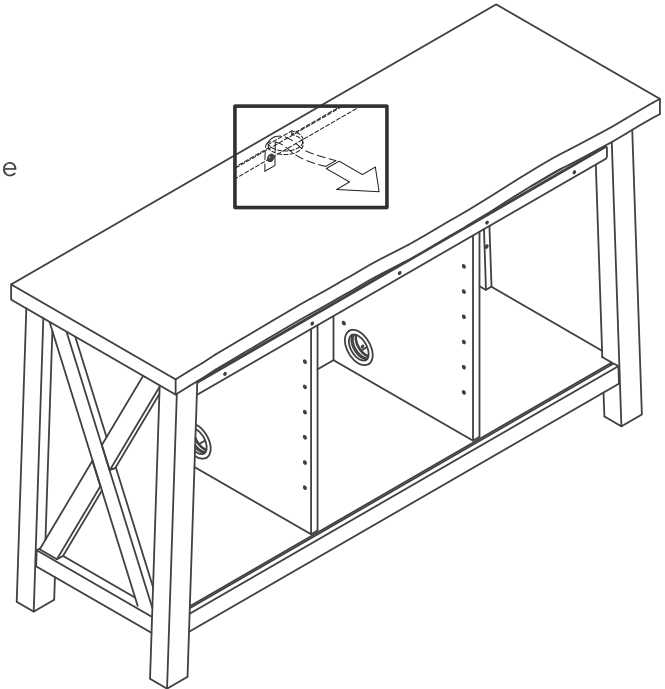 


Figure 3

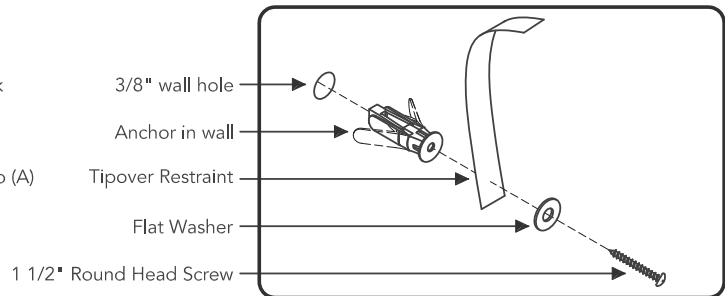 


Figure 4

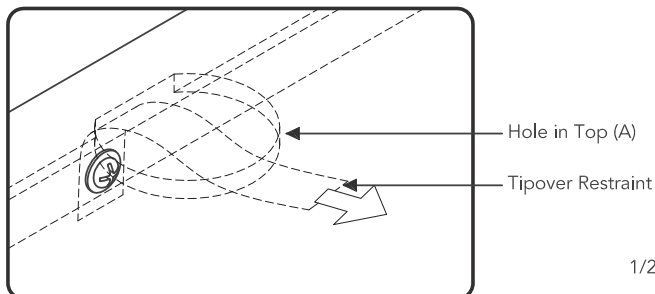 


Figure 5


 
 
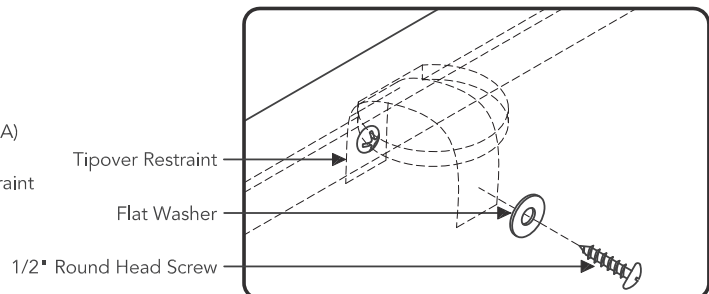 



Figure 6

### Hardware List

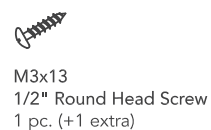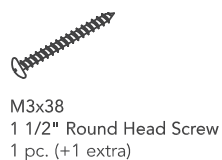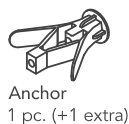 

## STEP 8

 Insert Adjustable Pins into side panels and middle panels at desired level.

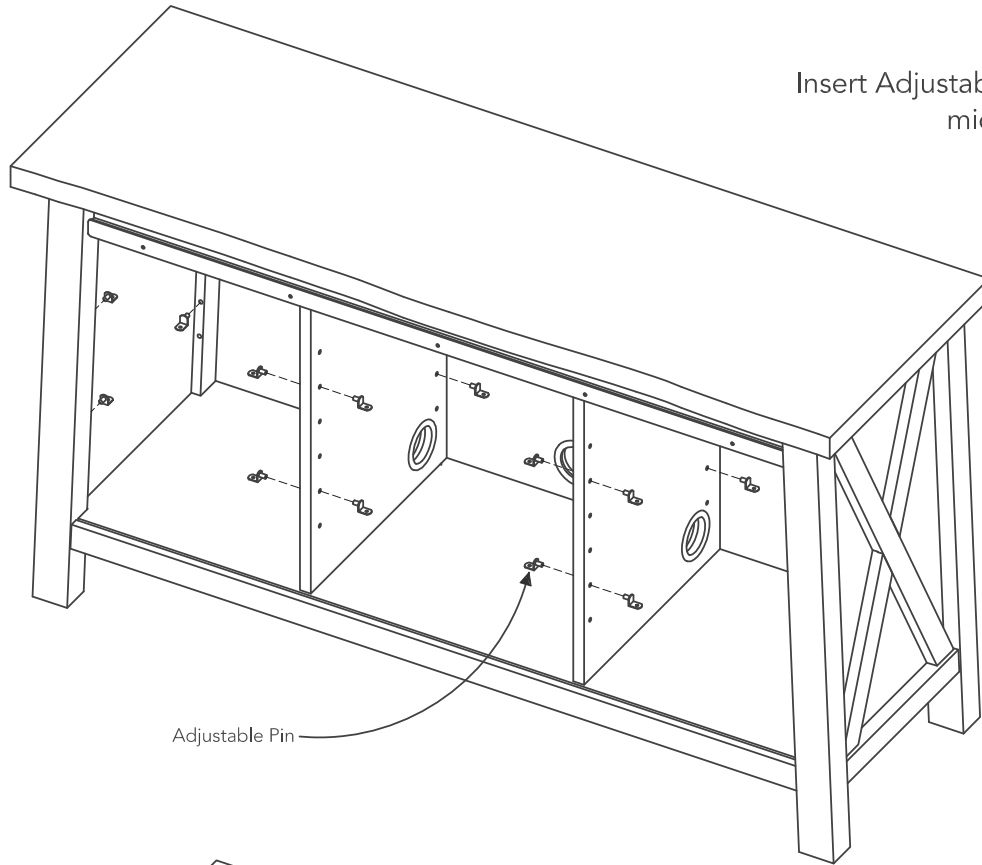


## STEP 9

Orientate Shelves (E) with Arrow labels pointing to front.

Place Shelves (D), (E) and (F) into position.

 Note: Arrow labels are on bottom side.

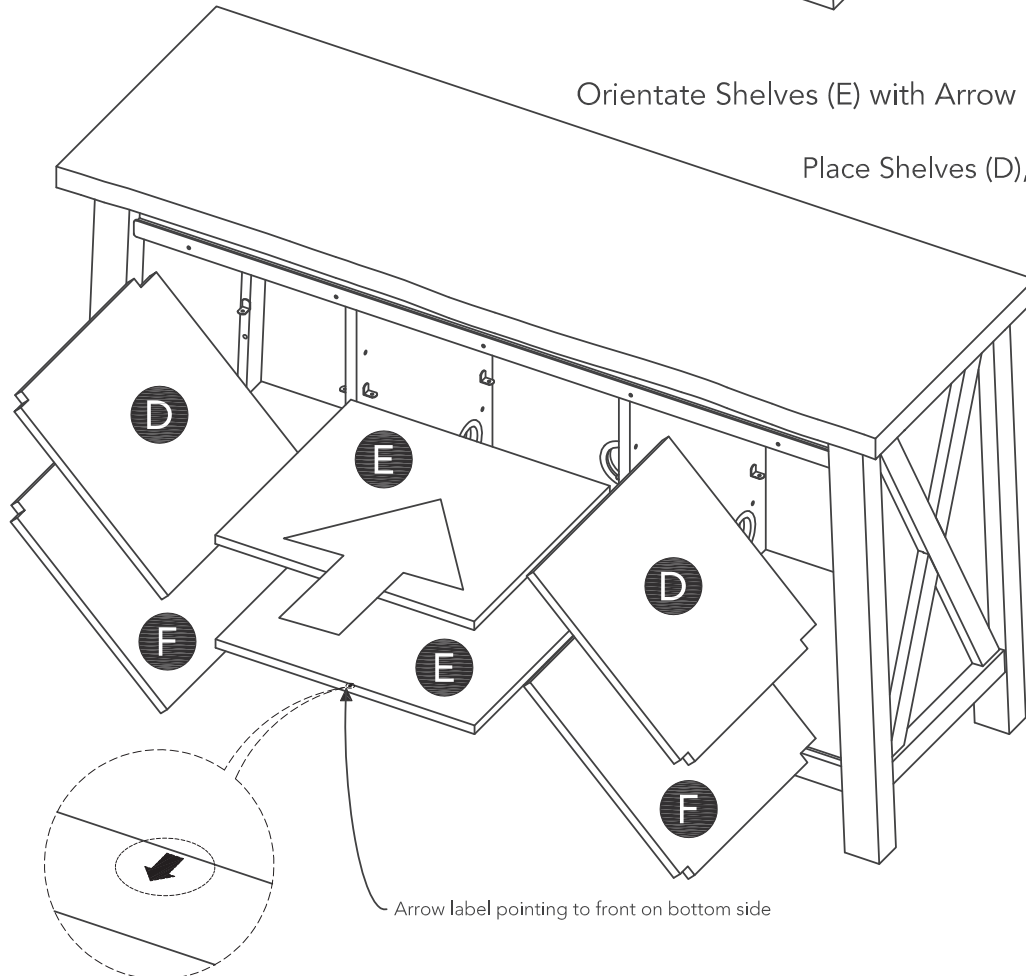

## Assembly Instructions 7/7

### STEP 10

Attach Door Runners to Doors (I) and (J) with Head Cap Bolts and Flat Washers (large).

Tighten Head Cap Bolts with Hex Wrench.  
(See Figure 7)

Attach Handles to Doors (I) and (J) with Machine Screws.

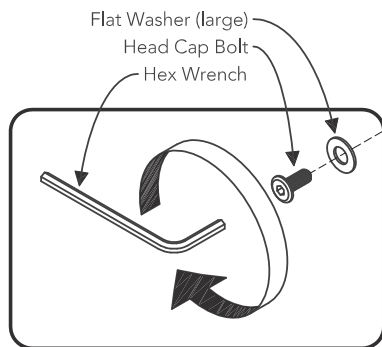 


Figure 7

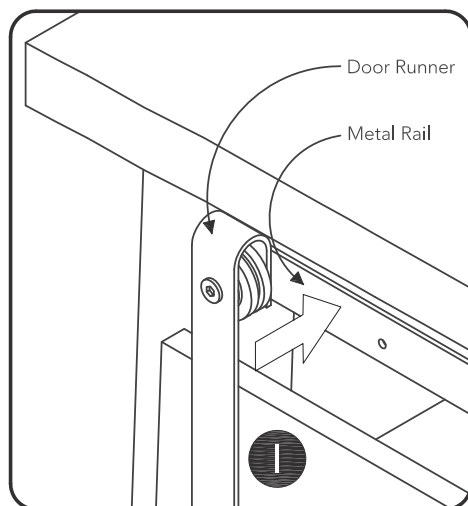 
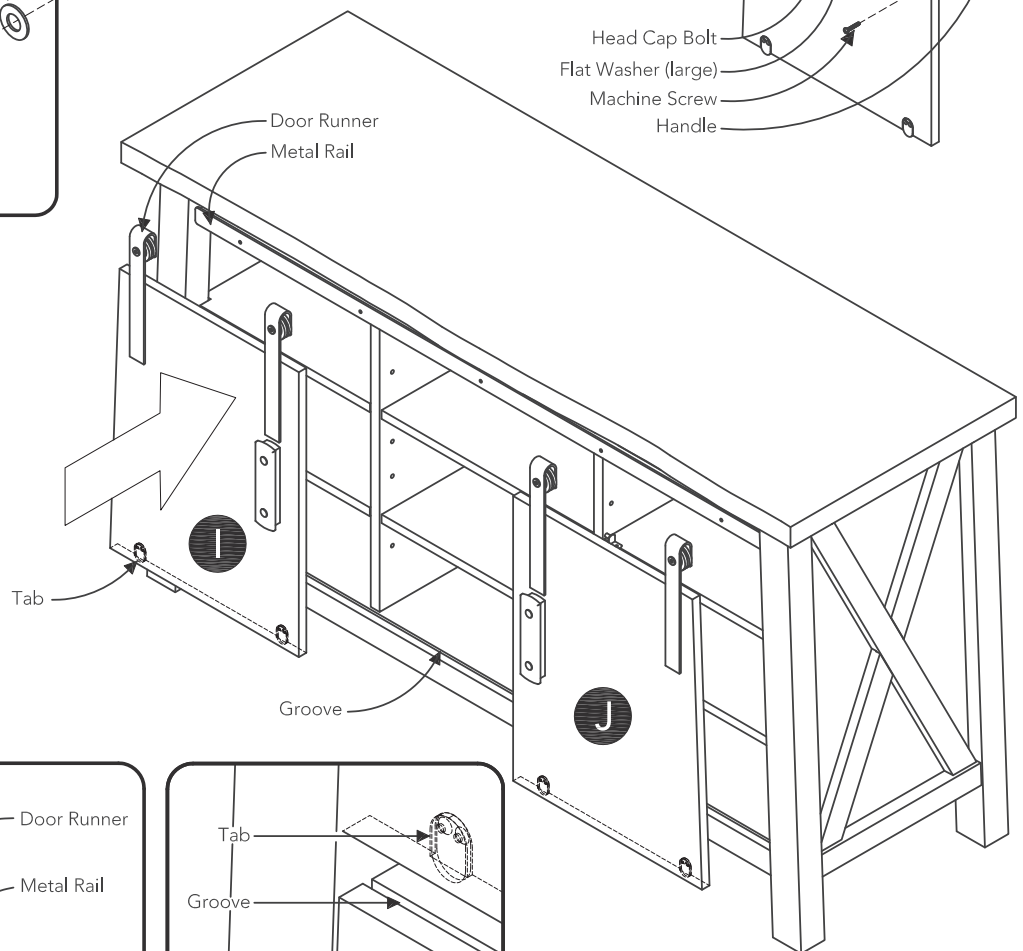 
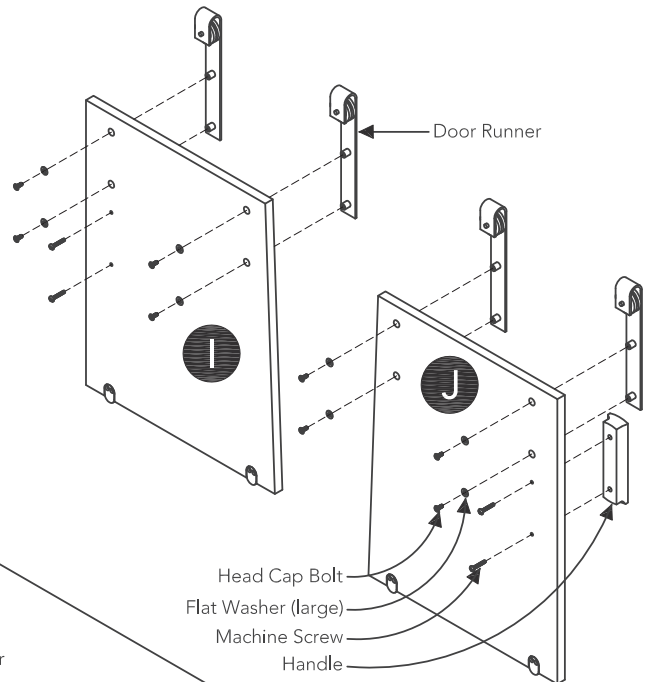 


Figure 8

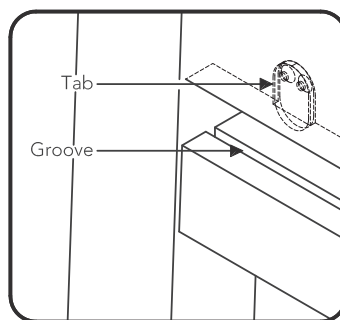 


Figure 9

### STEP 11

Attach Doors (I) and (J) to unit by placing Door Runners on top of Doors (I) and (J) onto metal rail and putting tabs on bottom of Doors (I) and (J) into groove. (See Figures 8 and 9)



# CARE INSTRUCTIONS

## NEVER

allow liquids to remain on furniture.  
Absorption causes parts to warp  
and split and finishes to delaminate.

## NEVER

use glass cleaners on  
finished furniture. Ammonia  
chemically attacks the finish.



Do not use power tools  
above 8 volts to assemble.

**PREVENT  
CRACKING**



Do not place  
in direct sunlight.

**PREVENT  
FADING**



Do not write  
directly on surface.

**PREVENT  
MARKING**



Do not place hot  
objects on surface.

**PREVENT  
FINISH DAMAGE**



Do not use rubber  
based placemats.

**PREVENT  
DISCOLORING**



Do not use commercial  
waxes and polishes.

**PREVENT  
YELLOWING**

## CLEAN

with a soft cloth moistened  
in lukewarm soap and water.  
Buff with a dry clean cloth.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

[www.homestyles-furniture.com/customer-service/replacement-parts](http://www.homestyles-furniture.com/customer-service/replacement-parts)

Home Styles Customer Service: [www.homestyles-furniture.com](http://www.homestyles-furniture.com),  
[servicedesk@homestyles-furniture.com](mailto:servicedesk@homestyles-furniture.com), 888-680-7460, 877-831-0319