

homestyles

5523-682


Corner Cabinet

IMPORTANT

Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.


Do not use power tools above 8 volts to assemble.

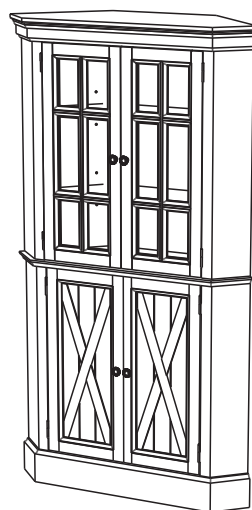

Part List




C.
Side Panel
1 Pc.

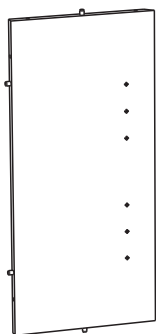


D.
Side Panel
2 Pcs.




E.
Side Panel
1 Pc.

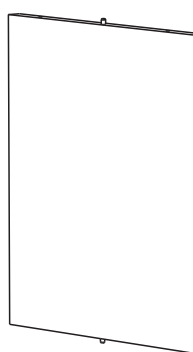

F.
Back Panel
1 Pc.

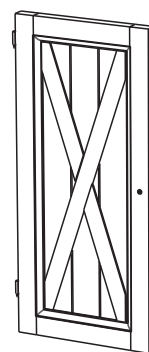


I.
Door
1 Pc.

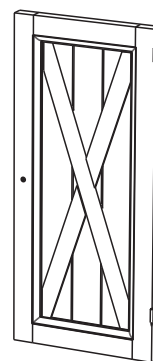

J.
Door
1 Pc.



K.
Side Panel
1 Pc.

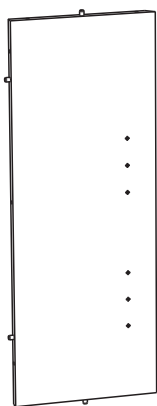

L.
Side Panel
1 Pc.




M.
Side Panel
1 Pc.




N.
Side Panel
1 Pc.



O.
Back Panel
1 Pc.

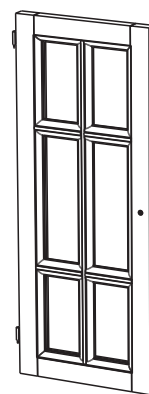

P.
Door
1 Pc.

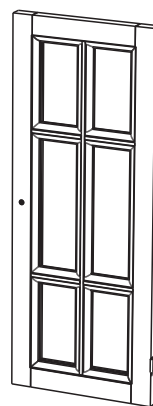

Q.
Door
1 Pc.

Carton 5523-681 is also needed for assembly.

Tool(s) required for assembly: Phillips screwdriver, Level

homestyles Customer Service: www.homestylesfurniture.com,
servicedesk@homestylesfurniture.com, 888-680-7460

Assembly Instructions 2/7

IMPORTANT

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Do not tighten all the bolts until each part is properly assembled.
- The unit must be level to work properly. Use the included adjustable levelers to level.

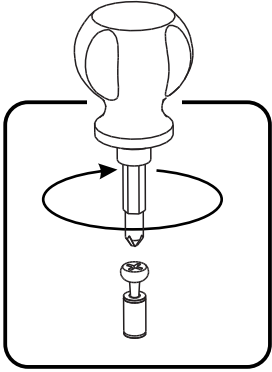 


Figure 1


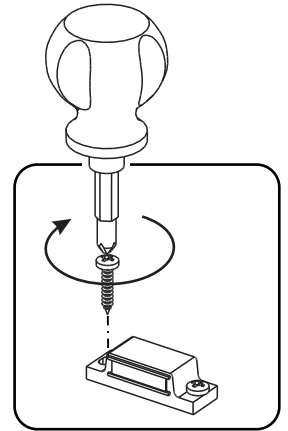 


Figure 2

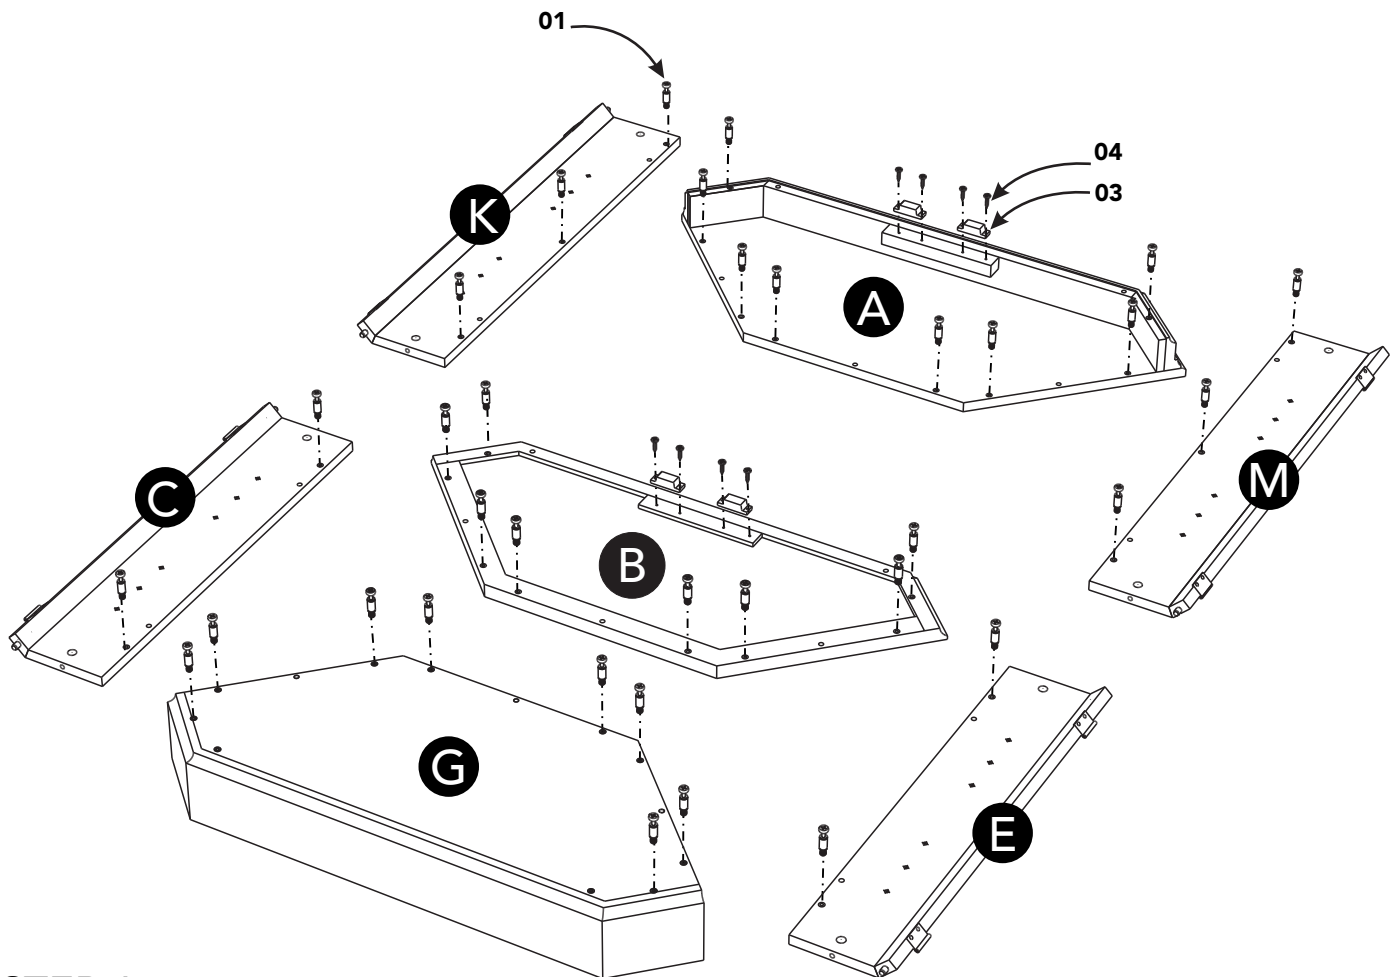 

STEP 1

Insert 34 pcs. of **01** into pre-drilled holes in Top (A), Side Panels (C), (E), (K), (M), Fixed Shelf (B) and Base (G), then tighten. (See Figure 1)

Attach 4 pcs. of **03** to Top (A) and Fixed Shelf (B) with 8 pcs. of **04** into pre-drilled holes. (See Figure 2)


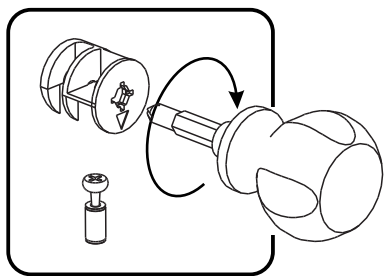 



Figure 3

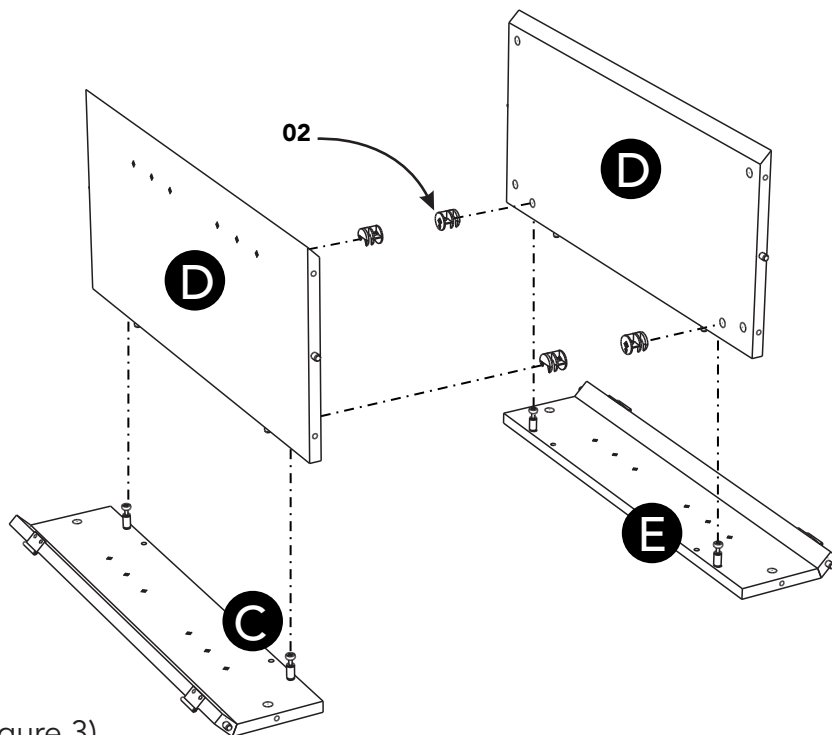 

STEP 2

Attach Side Panel (C) to Side Panel (D) with 2 pcs. of **02**. (See Figure 3)

 Attach Side Panel (E) to Side Panel (D) with 2 pcs. of **02**.

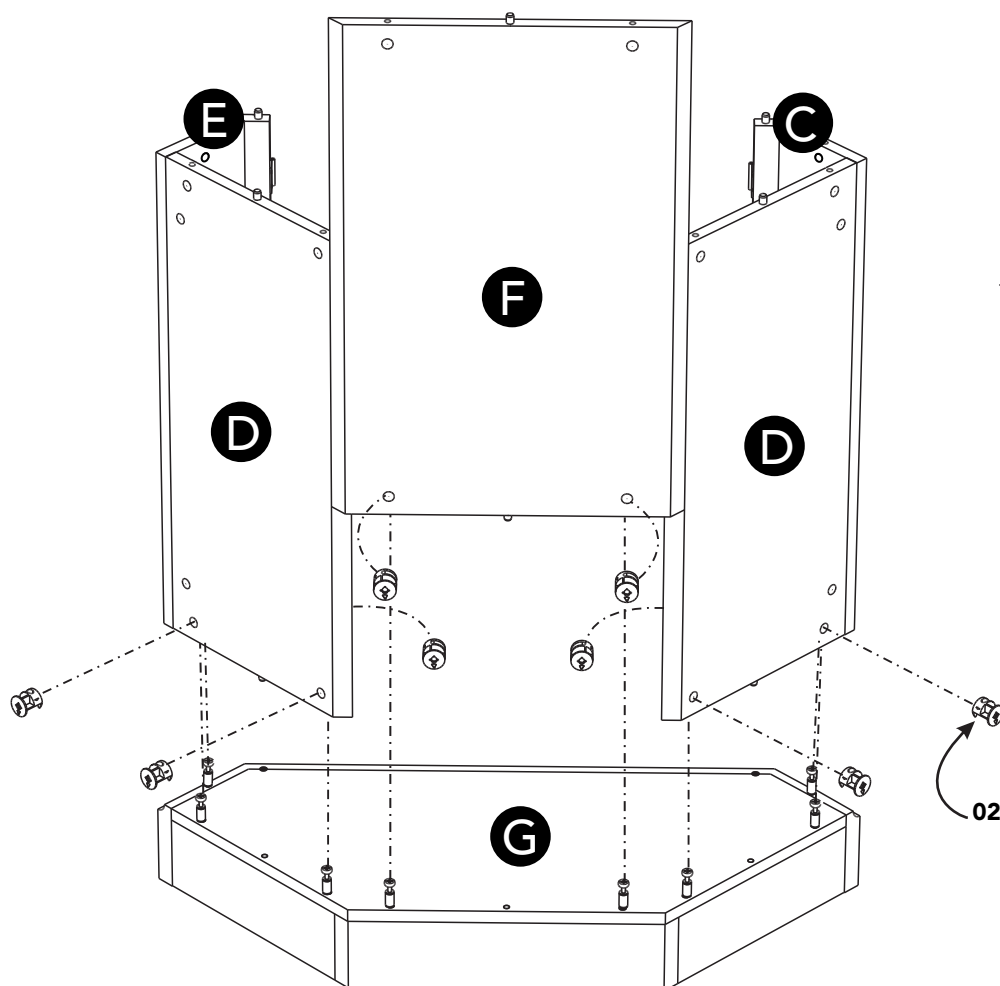

STEP 3

Attach side unit (C, D) and side unit (E, D) from Step 2 to Base (G) with 6 pcs. of **02**.

Attach Back Panel (F) to unit with 2 pcs. of **02**.

Assembly Instructions 4/7

STEP 4

Insert 8 pcs. of **05** into side panels at desired level. (See Figure 4)

Place Shelves (H) into position.

Attach Doors (I) and (J) to unit by sliding door hinges into side panel hinges. (See Figure 5)

Attach 2 pcs. of **07** to Doors (I) and (J) with 2 pcs. of **06**. (See Figure 6)

Attach Fixed Shelf (B) to unit with 2 pcs. of **02**.

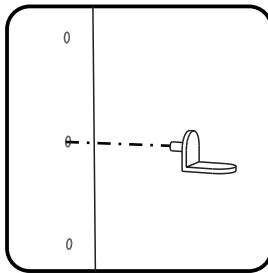
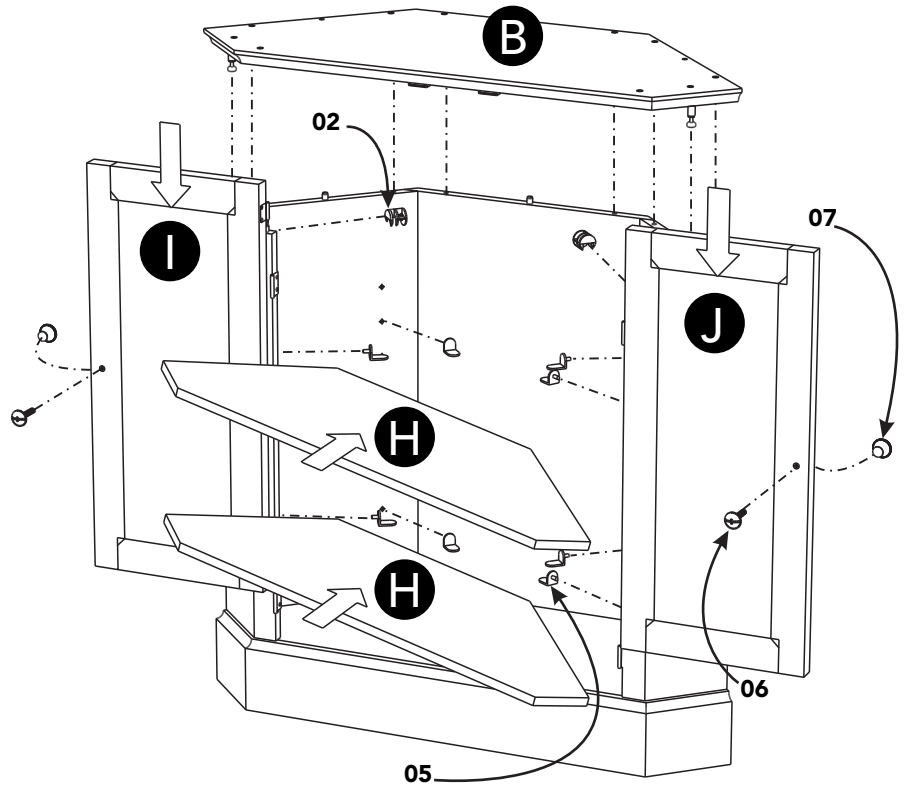


Figure 4

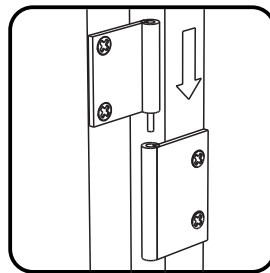 


Figure 5


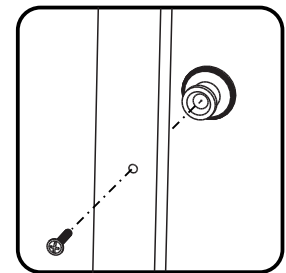 


Figure 6

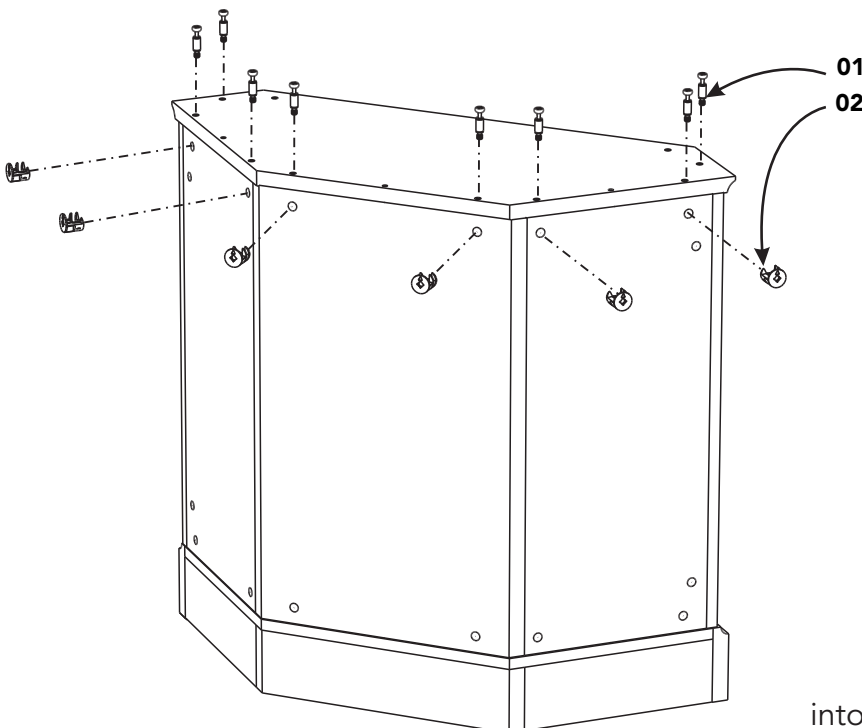 



STEP 5

Insert 8 pcs. of **01** and 6 pcs. of **02** into pre-drilled holes in unit, then tighten.

STEP 6

Attach Side Panel (K) to Side Panel (L) with 3 pcs. of **02**.

Attach Side Panel (M) to Side Panel (N) with 3 pcs. of **02**.

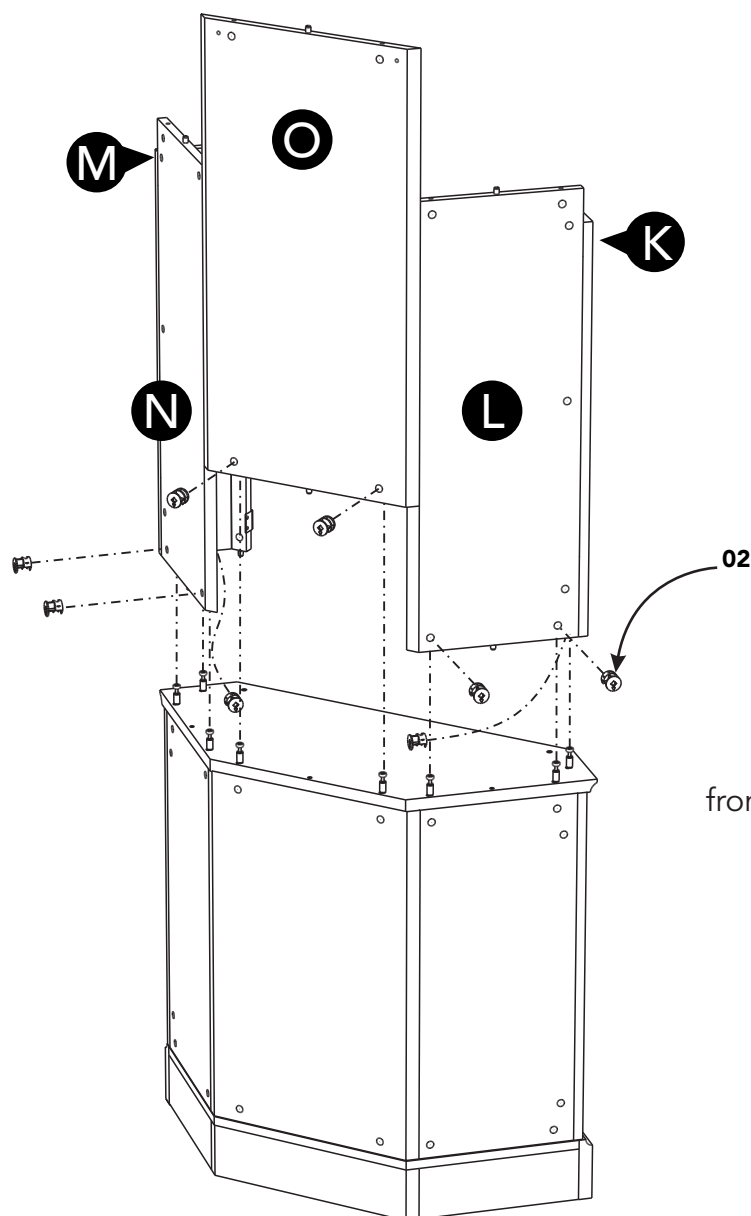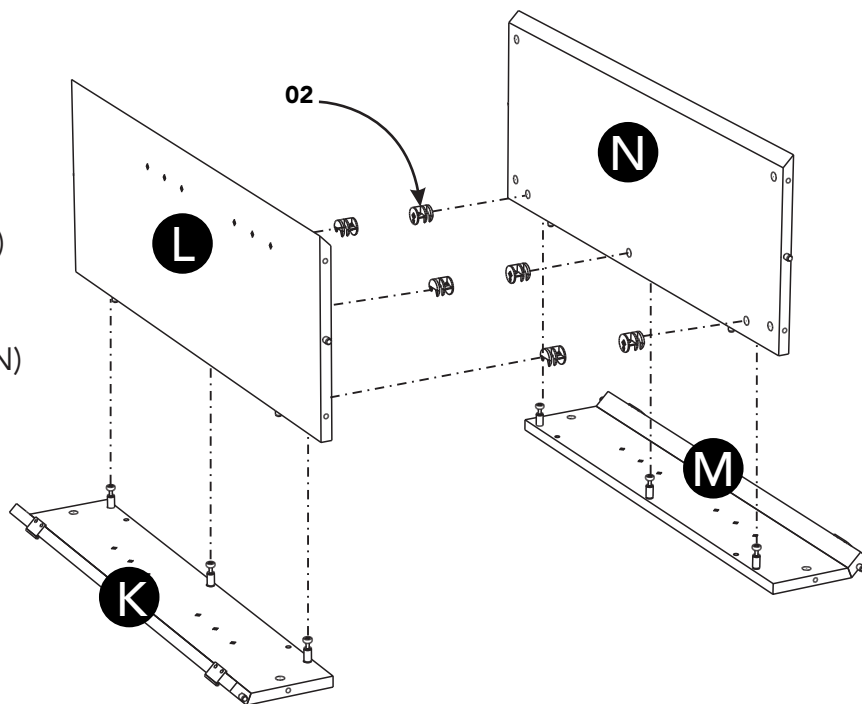

STEP 7

Attach side unit (K, L) and side unit (M, N) from Step 6 to unit from Step 5 with 6 pcs. of **02**.

Attach Back Panel (O) to unit with 2 pcs. of **02**.

STEP 8



Insert 8 pcs. of **05** into side panels at desired level.

Place Shelves (H) into position.

Attach Doors (P) and (Q) to unit by sliding door hinges into side panel hinges.

Attach 2 pcs. of **07** to Doors (P) and (Q) with 2 pcs. of **06**.

Attach Top (A) to unit with 2 pcs. of **02**.

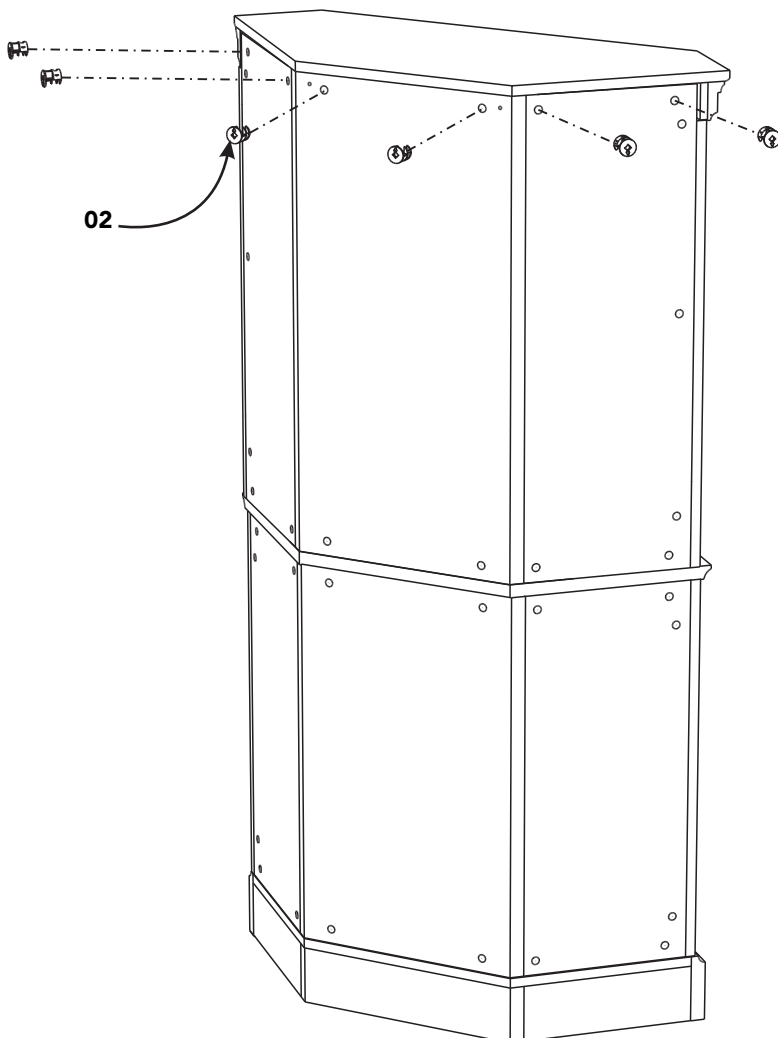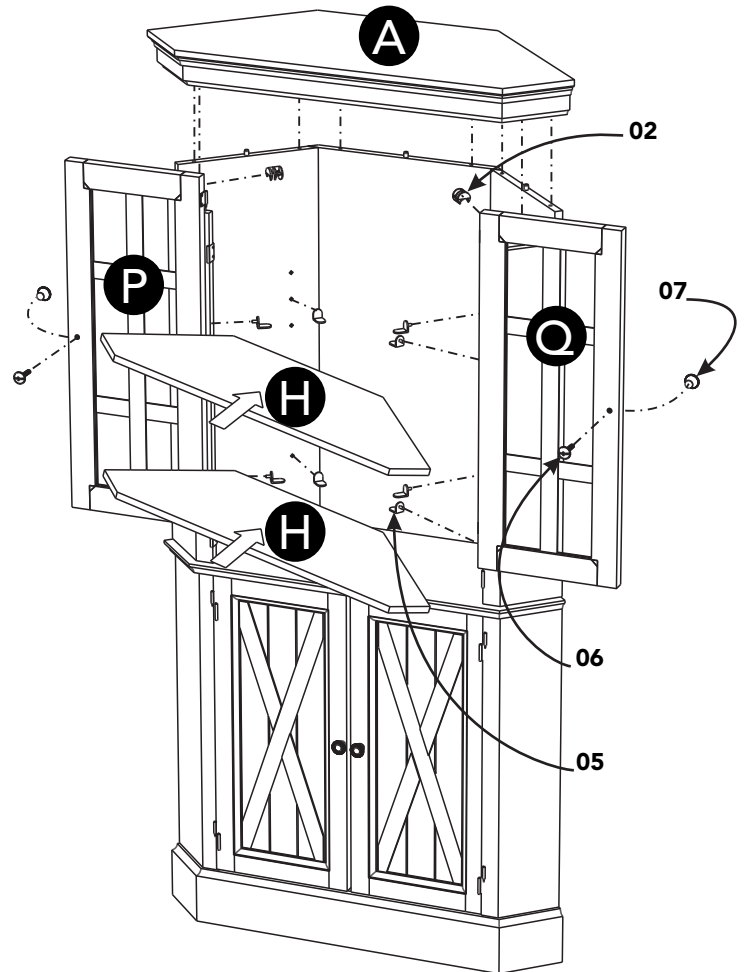

STEP 9

Insert 6 pcs. of **02** into pre-drilled holes of unit, then tighten.

Level unit by adjusting the adjustable levelers on bottom of unit.
(See Figure 7)

Note: Unit must be level to work properly.

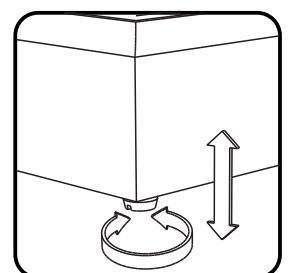


Figure 7

Assembly Instructions 7/7

IMPORTANT

- To help reduce the risk of the unit tipping over, the Tipover Restraint must be installed following these instructions exactly.

STEP 10

Place unit at desired location.

Drill a 3/8" hole in wall in-line with pre-drilled hole at top of unit.

Move unit.

Insert Anchor into the wall hole and attach Bracket with Wall Screw.

Attach Bracket at pre-drilled hole at top of unit with Wood Screw.

Move unit back into place.

Slide Tipover Restraint through Bracket on wall and Bracket on unit.
(See Figure 8)

Put tie end of Tipover Restraint into lock end of Tipover Restraint and pull until tight.



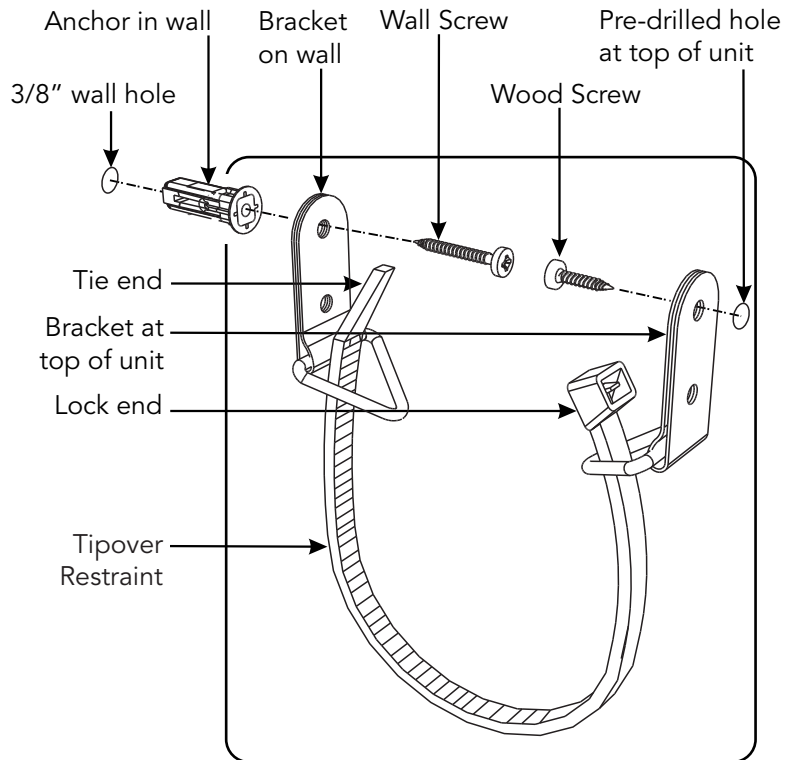



Figure 8

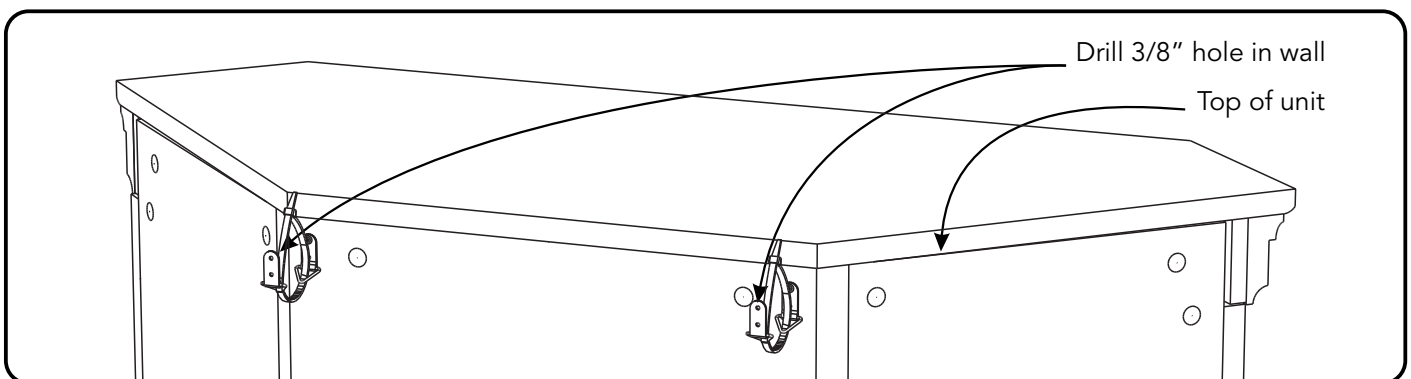


Hardware List

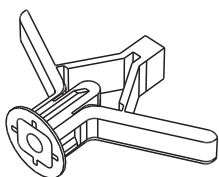


Anchor
2 pcs. (+1 extra)

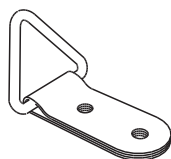


Bracket
4 pcs. (+1 extra)

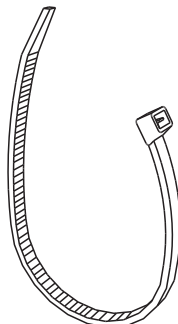

Tipover Restraint
2 pcs. (+1 extra)

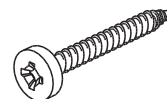

M3.5x40
Wall Screw
2 pcs. (+1 extra)

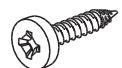

M3.5x16
Wood Screw
2 pcs. (+1 extra)


Corner Cabinet

IMPORTANT


Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.


Do not use power tools above 8 volts to assemble.

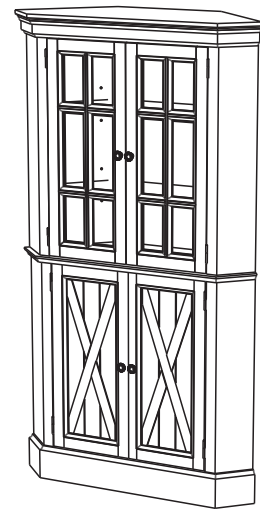


Part List

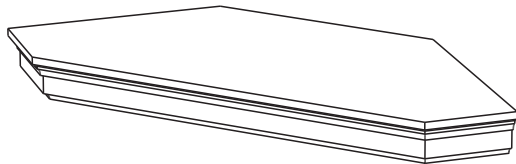


A.
Top
1 Pc.

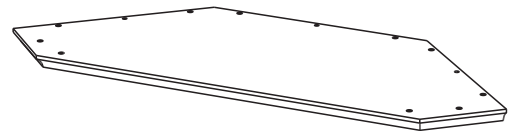

B.
Fixed Shelf
1 Pc.

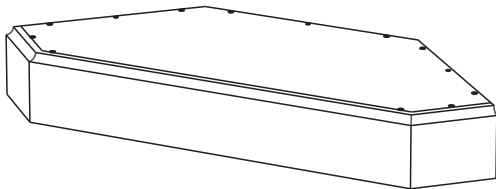


G.
Base
1 Pc.

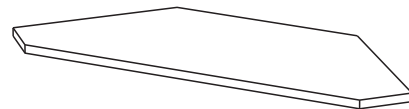

H.
Shelf
4 Pcs.


Hardware List

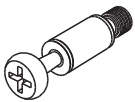


01
Cam Lock Screw
42 pcs. (+2 extra)



02
Cam Lock
42 pcs. (+6 extra)

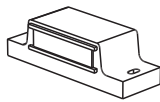

03
Magnet
4 pcs.

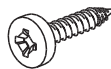

04
Wood Screw
8 pcs. (+1 extra)



05
Adjustable Pin
16 pcs. (+1 extra)



06
Machine Screw
4 pcs.



07
Knob
4 pcs.

For assembly see instructions in carton 5523-682.

CARE INSTRUCTIONS

NEVER

allow liquids to remain on furniture.
Absorption causes parts to warp
and split and finishes to delaminate.


NEVER

use glass cleaners on
finished furniture. Ammonia
chemically attacks the finish.



Do not use power tools
above 8 volts to assemble.

**PREVENT
CRACKING**

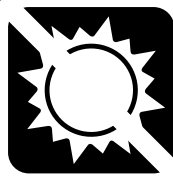

Do not place
in direct sunlight.

**PREVENT
FADING**




Do not write
directly on surface.

**PREVENT
MARKING**



Do not place hot
objects on surface.

**PREVENT
FINISH DAMAGE**

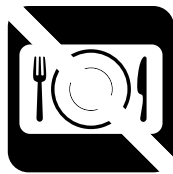

Do not use rubber
based placemats.

**PREVENT
DISCOLORING**



Do not use commercial
waxes and polishes.

**PREVENT
YELLOWING**

CLEAN

with a soft cloth moistened
in lukewarm soap and water.
Buff with a dry clean cloth.



homestyles will provide replacements free of charge for missing or damaged parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retailer, **homestyles** is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged parts may be requested via contact info below.

homestyles Customer Service: www.homestylesfurniture.com,
servicedesk@homestylesfurniture.com, 888-680-7460