
Hennessy / Hartland / Corbett

Deluxe 46 inch Laundry Cabinet with Faucet and Dual SS Sink

Model # AXCLDYHEN46-SS

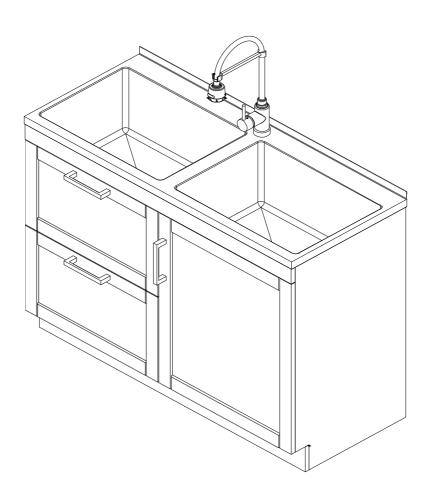







It's time to register your product warranty.

It's quick and easy. And you'll be happy you did.



- ✓ Activate your **1-year** warranty.
- ✓ Automatic entry to win a \$500 gift certificate.
- ✓ Earn instant rewards and save.



simpli-home.com/product-registration

 
Review your product and collect rewards!

Thank you for your purchase! We hope you enjoy it. We'd love your feedback. Please share a review and get instant rewards!











Share photos and get your cash back!



Send us images or share them on social and qualify for instant rewards. You may even receive store credit on your entire purchase!







simpli-home.com/share-images

For fastest customer service:



- 1. Open your phone's camera.
- 2. Point your phone's camera at the QR code to scan.
- 3. Click on the pop up.
- 4. You'll be taken to our customer service page.
- 5. Fill the form with your order information and issue.
- 6. Submit form.
- 7. A customer service associate will contact you.

Other ways to contact us...



Email Us

customerservice@simpli-home.com



Visit Us

Visit our site directly at www.simpli-home.com



Call Us

1-866-518-0120 Monday to Friday 9am to 5pm EST

^{*}If you've purchased from a retailer and you wish to return the product, please contact the retailer directly.

IMPORTANT: Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

Safety Information

This furniture is designed for indoor use.

Identify all the parts and hardware. Do not discard of the packaging until you have checked that you have all the parts and hardware required. Hardware package may have spare parts.

WARNING: This item contains small parts which can be swallowed by children and pets. Keep children and pets away during assembly. To avoid danger of suffocation, always keep plastic bags away from children and pets.

We recommend that you assemble this unit on a carpeted floor to avoid scratches. If using power tools, set the tool to low torque to avoid damage.

May require 2 people for ease of assembly.

Care & Maintenance


To clean, use a soft or slightly damp cloth, then wipe with a clean, dry cloth. Dust with a soft dry cloth.

Do not use ammonia-based cleaning products, as they will damage the finish.

Do not leave liquids or damp cloths on this furniture.

To avoid dulling of the finish, do not place this furniture in direct sunlight.

Please inspect and tighten all screws or bolts on a regular basis to ensure proper performance and safety of your item.

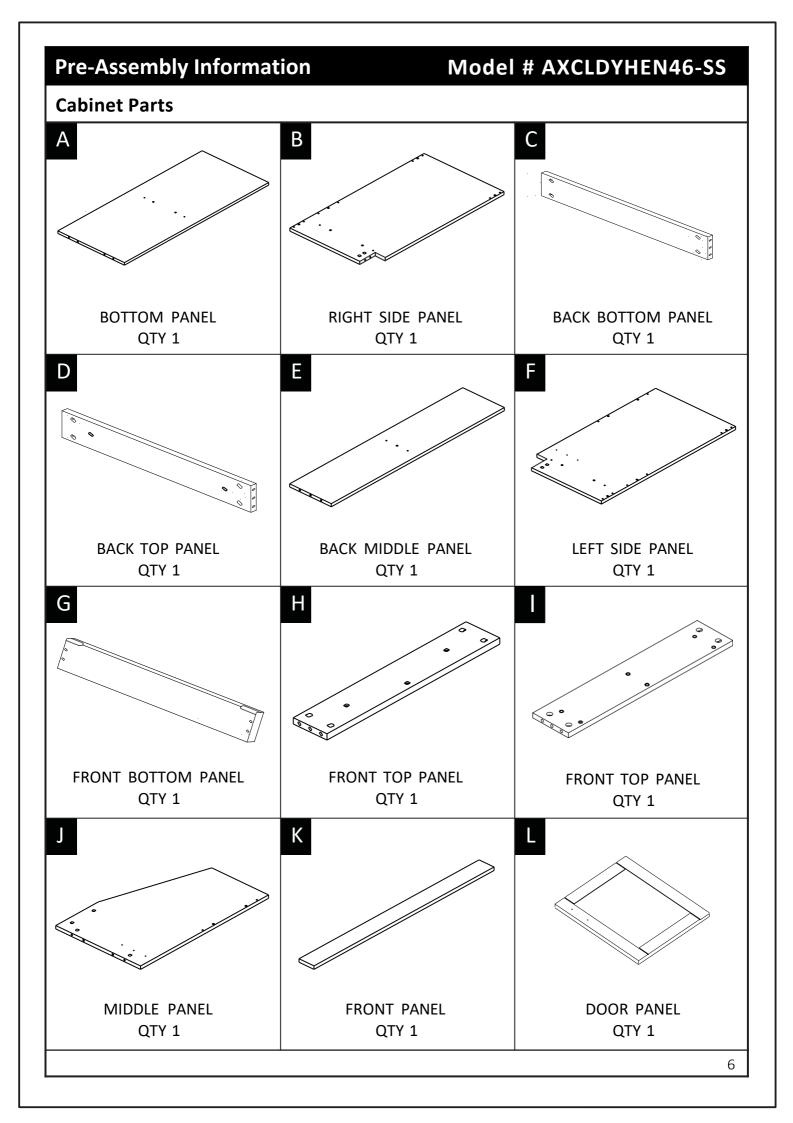

Pre-Assembly Information Model # AXCLDYHEN46-SS Cabinet Parts Ν M M1 M2 DRAWER BACK DRAWER PANEL DRAWER FRONT QTY 2 QTY 1 QTY 1 P Р1 P2 DRAWER LEFT AND RIGHT DRAWER BOTTOM SINK QTY 2 QTY 1 QTY 1 S FRONT TOP PANEL QTY 1

Pre-Assembly Information Model # AXCLDYHEN46-SS Drain Parts DRAIN PLUG ASSEMBLY DRAIN BOWL ASSEMBLY DRAIN WASHER BLACK QTY 1 QTY 1 QTY 1 5 6 THREAD WASHER **COUPLING BLACK** PIPE WASHER QTY 1 QTY 1 QTY 1 7 8 9 **COUPLING BLACK** PIPE WASHER WHITE STRAIGHT DRAIN PIPE BLACK QTY 2 QTY 1 QTY 1 11 10 12 DRAIN CHANNEL BLACK PIPE COVER BLACK **OUTER DRAIN CHANNEL** QTY 1 QTY 1 QTY 1

Pre-Assembly Information

Model # AXCLDYHEN46-SS


Faucet Parts





FAUCET BODY QTY 1



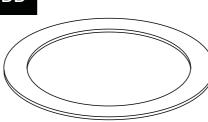


FAUCET WASHER RUBBER QTY 2






FAUCET WASHER STEEL QTY 1

 DD




BRASS NUT ASSEMBLY QTY 1

ΕE

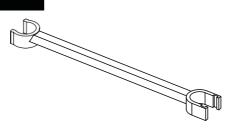

FAUCET SUPPORT BAR QTY 1

 
FF




INSERT QTY 1

Pre-Assembly Information Model # AXCLDYHEN46-SS Hardware Parts I ${ m I\hspace{-.1em}I}$ \equiv **CAM LOCK** WOOD DOWEL **CAM PIN QTY 37 QTY 37 QTY 24** IVV \mathbf{W} **SELF-TAPPING SCREW** PHILLIPS SCREW M4 x 14 M4 x 25 M4 x 40 **HANDLE** M4 x 23 QTY 21 **QTY 17** QTY 9 QTY 3 QTY 6 $\mathbf{I}\!\mathbf{X}$ VII W WALL ANCHOR and SCREW SLIDE RAIL SLIDE RAIL M6 x 60 QTY 2 QTY 2 2 SETS Required Phillips screwdriver Adjustable Wrench **Not Included**

10

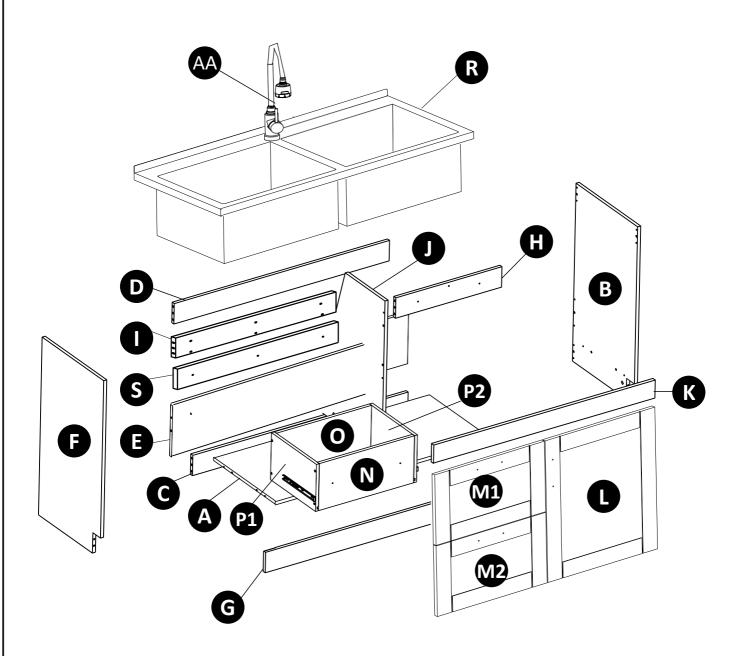


Step 1

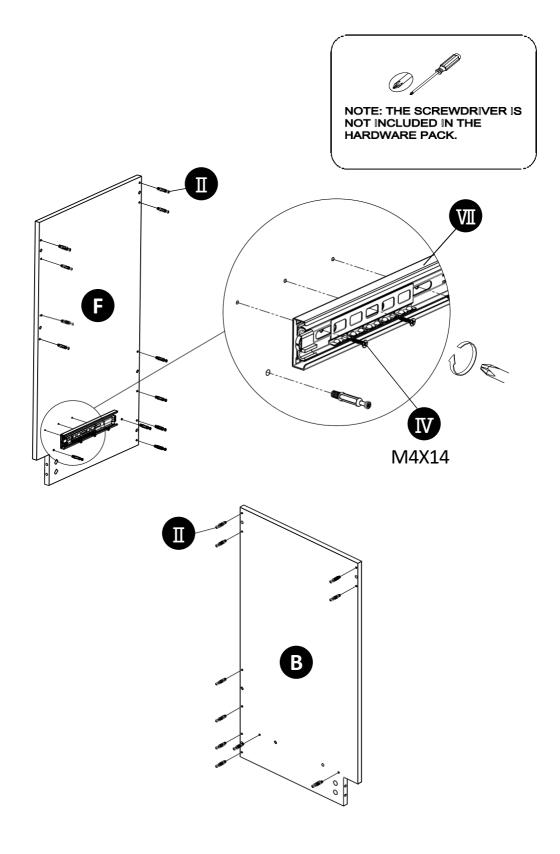

- 1. Screw Cam Pins (II) into the pre-drilled small holes on Left Panel (F) and Right Panel (B).
- 2. Insert Self-Tapping Screw W M4 x 14 through the hole of Slide Rail W, then screw into the small hole of Left Side Panel F.


Step 2



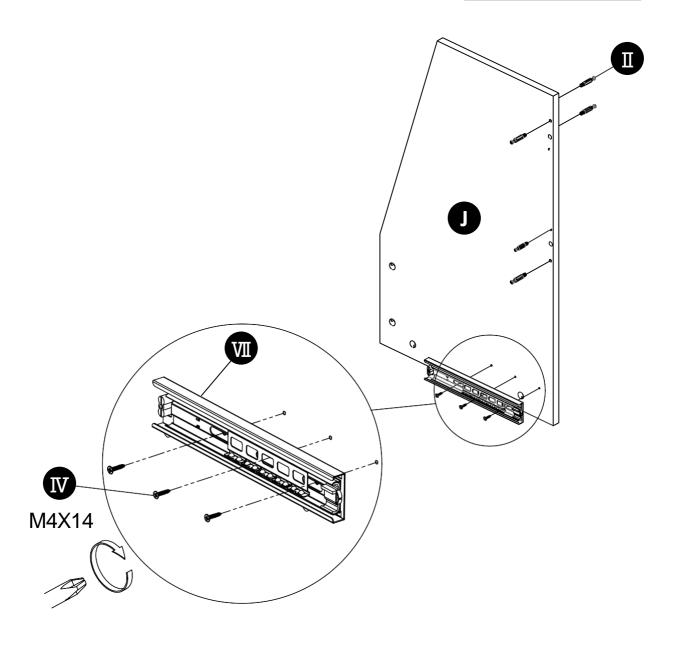


- 1. Screw Cam Pins II) into the pre-drilled small holes on Middle Panel (J).
- 2. Insert Self-Tapping Screw (v) M4 x 14 through the hole of Slide Rail (vii), then screw into the small hole of Middle Panel (J).

Step 3

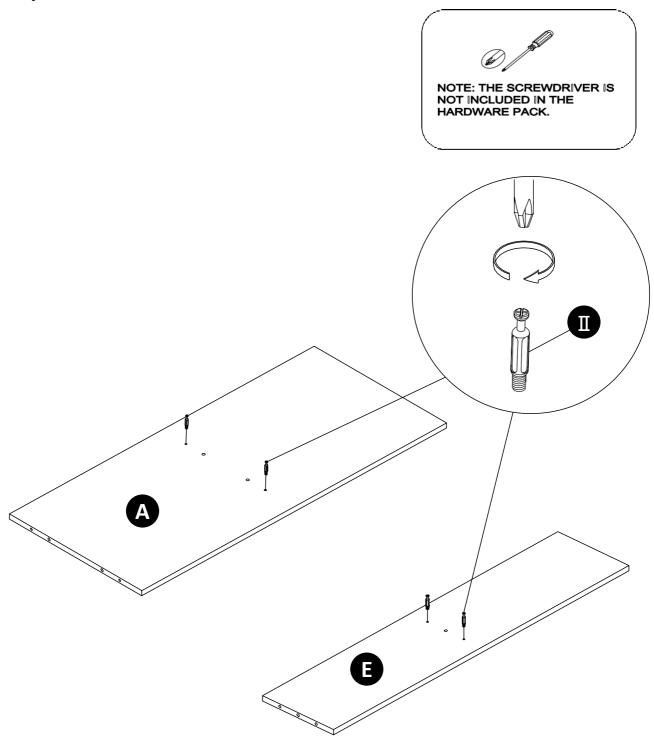


1. Screw Cam Pins (II) into the pre-drilled small holes on Bottom Panel (A) and Back Middle Panel (E).

Step 4

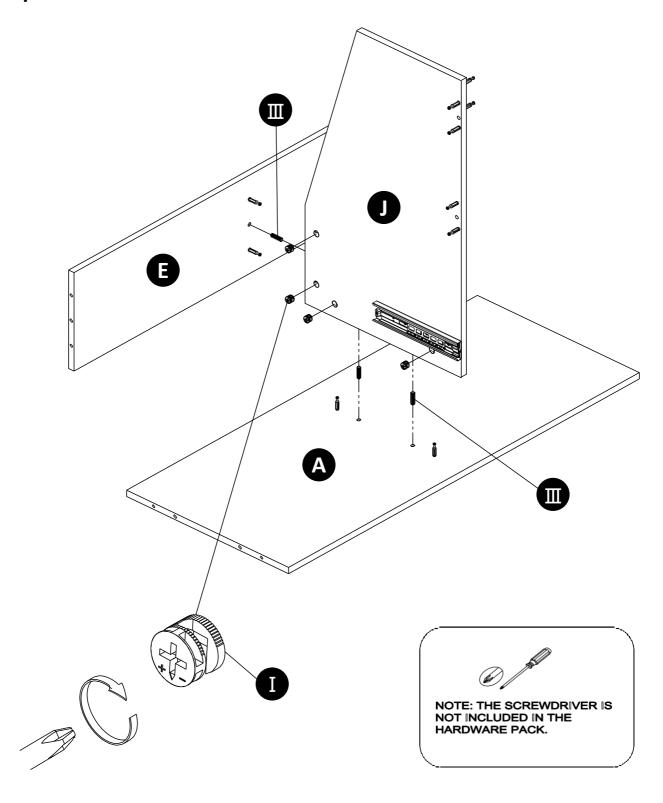


- 1. Insert Wood Dowels 1 into the pre-drilled holes of Middle Panel J.
- 2. Attach Middle Panel (J) to Back Middle Panel (E) and Bottom Panel (A).
- 3. Insert Cam Locks (I) into pre-drilled holes on Middle Panel (J).
- 4. Tighten with the Screwdriver.

Step 5

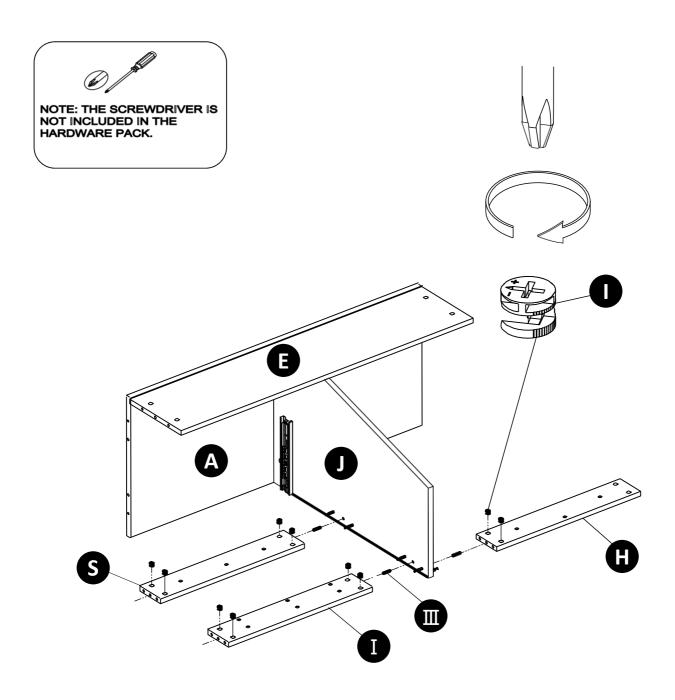


- 1. Insert Wood Dowels 1 into the pre-drilled holes of Front Top Panels 1, H and S.
- 2. Attach Middle Panel (1) to Front Top Panels (1), (H) and (S).
- 3. Insert Cam Locks (I) into the pre-drilled holes of Front Top Panels (I), (H) and (S).
- 4. Tighten with the Screwdriver.


Step 6

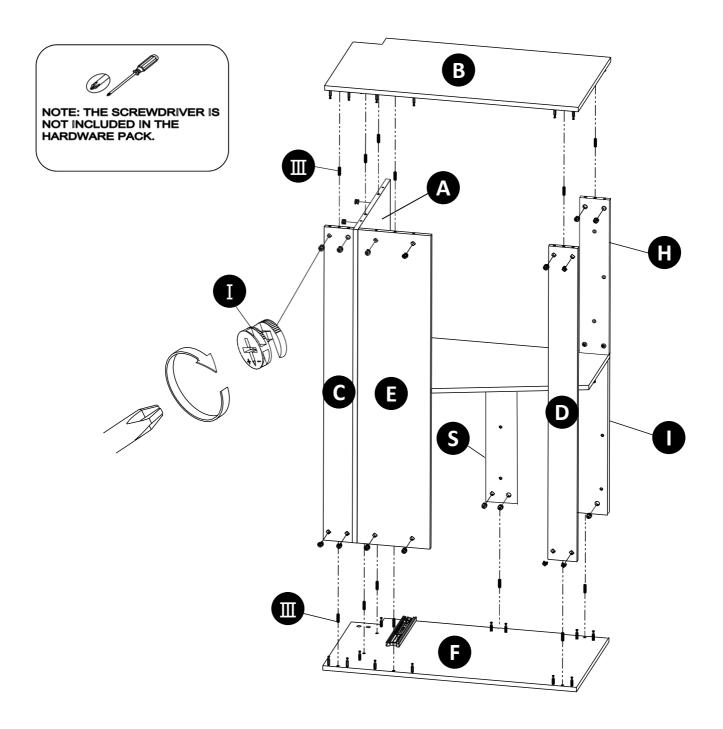

- 1. Insert Wood Dowels (III) into the pre-drilled holes of Bottom Panel (A), Front Top Panels (H), (I) and (S), Back Bottom Panel (C), Back Middle Panel (E) and Back Top Panel (D).
- 2. Attach Bottom Panel (A), Front Top Panels (H), (1) and (S), Back Bottom Panel (C), Back Middle Panel (E), Back Top Panel (D) to Right Side Panel (B) and Left Side Panel (F).
- 3. Insert Cam Locks (I) into pre-drilled holes on Bottom Panel (A), Front Top Panels (H), (I) and (S), Back Bottom Panel (C), Back Middle Panel (E) and Back Top Panel (D).
- 4. Tighten with the Screwdriver.


Step 7

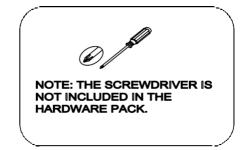

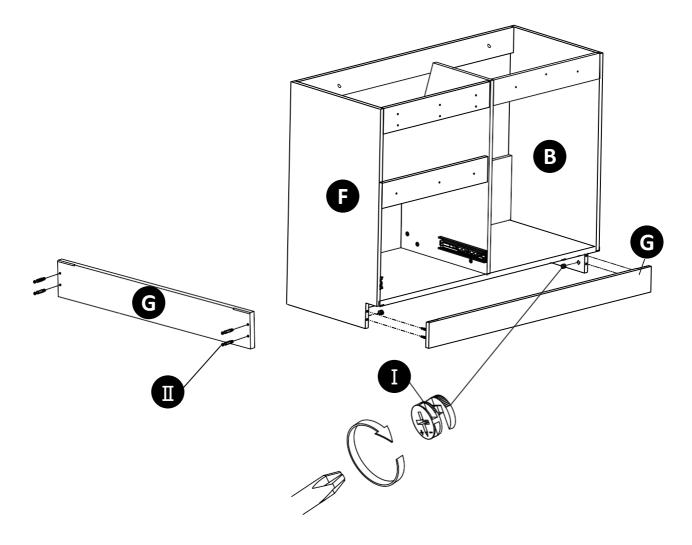

- 1. Screw Cam Pins (II) into the pre-drilled small holes on Front Bottom Panel (G).
- 2. Insert Front Bottom Panel G with Cam Pins II into the pre-drilled holes on both Side Panels B and F.
- 3. Insert Cam Locks (I) into pre-drilled holes on both Side Panels (B) and (F).
- 4. Tighten with the Screwdriver.


Step 8

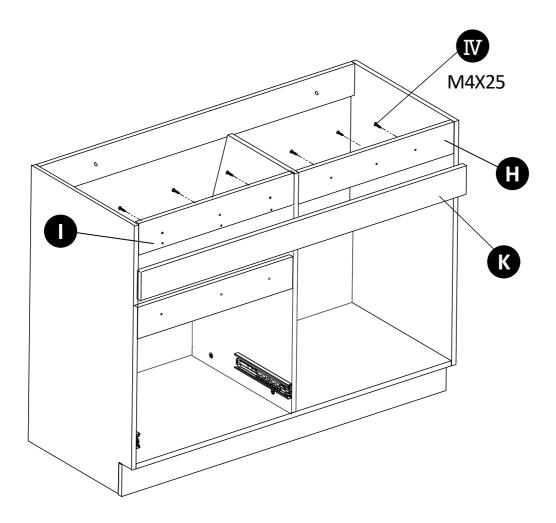

1. Insert Self-Tapping Screws (v) M4 x 25 though the holes of Front Top Panels (1) and (H), and screw into the Top Panel (K).


Step 9




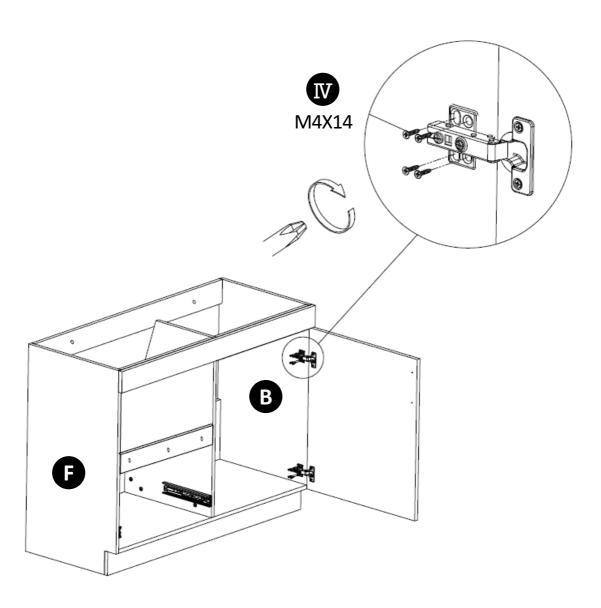

1. Use the Screwdriver to attach the right door hinges to Right Side Panel B with Self-Tapping Screws W M4 x 14.


Step 10

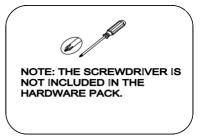


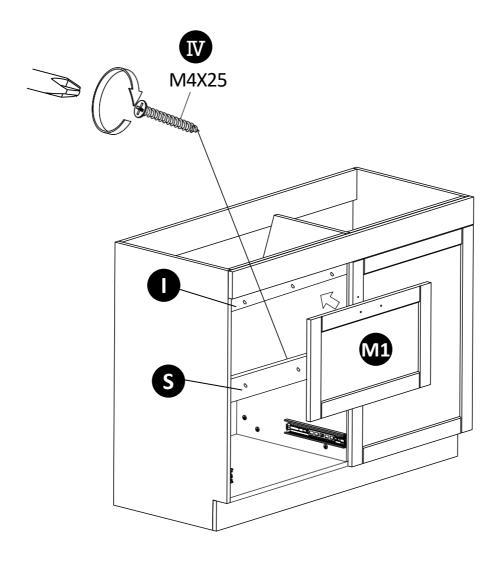

1. Insert Self-Tapping Screws (TV) M4 x 25 though the holes of Front Top Panels (1) and (S), and screw into the Drawer Panel (M).


Step 11

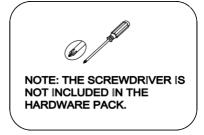

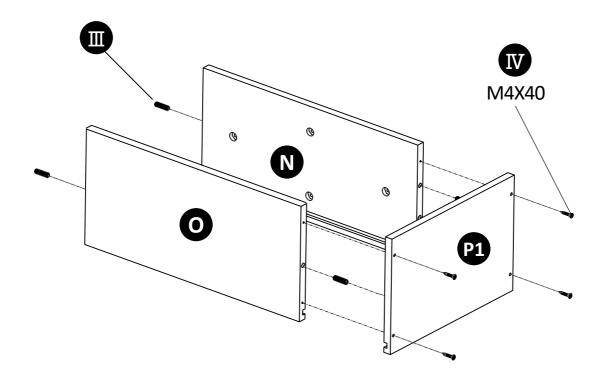


- 1. Insert Wood Dowels (III) into the holes of Drawer Front (N) and Drawer Back (O).
- 2. Attach Drawer Left (P1) to Drawer Front (N) and Drawer Back (O).
- 3. Use the Screwdriver to attach the Drawer Left (2) with Self-Tapping Screws (17) M4 x 40.

Step 12

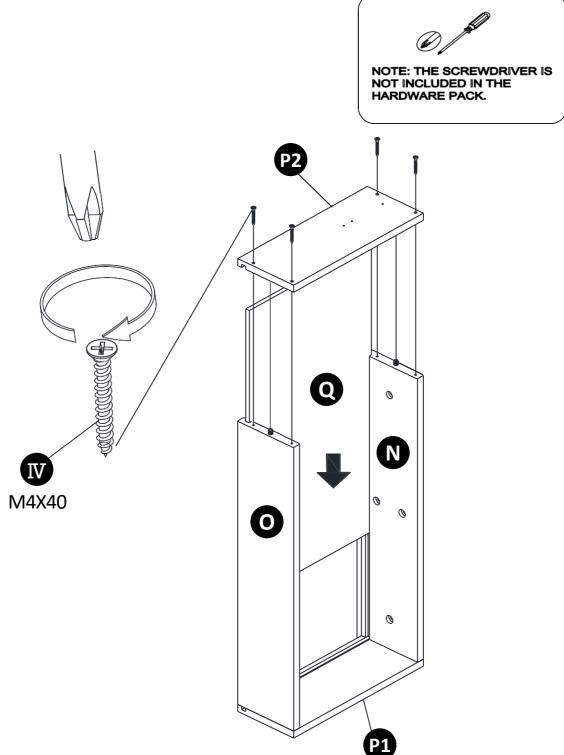


- 1. Place the Drawer Bottom (into the slot of the Drawer Front (N), Drawer Back (i) and Drawer Left (P1).
- 2. Attach Drawer Right P2 to Drawer Front N and Drawer Back O.
- 3. Use the Screwdriver to attach the Drawer Right ② with Self-Tapping Screw W M4 x 40.

Step 13

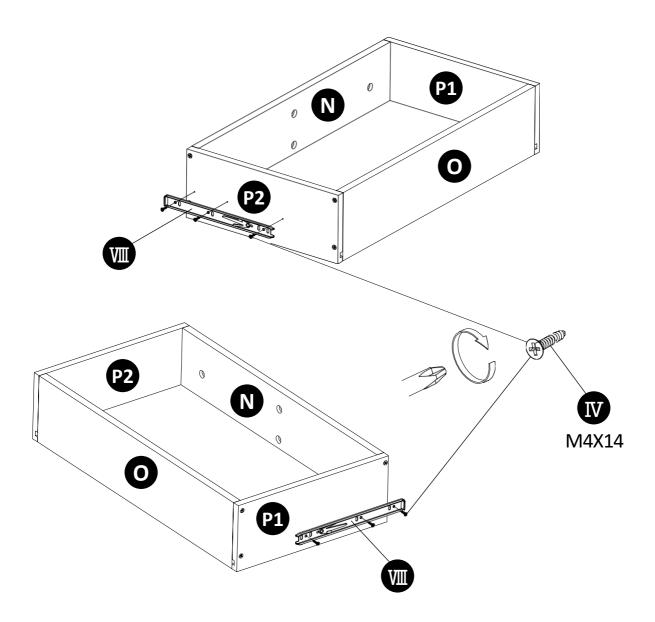


1. Use the Screwdriver to attach the Slide Rails (III) with Self-Tapping Screws (IV) M4 x 14 into the small holes of Drawer Left (P1) and Drawer Right (P2).

Step 14

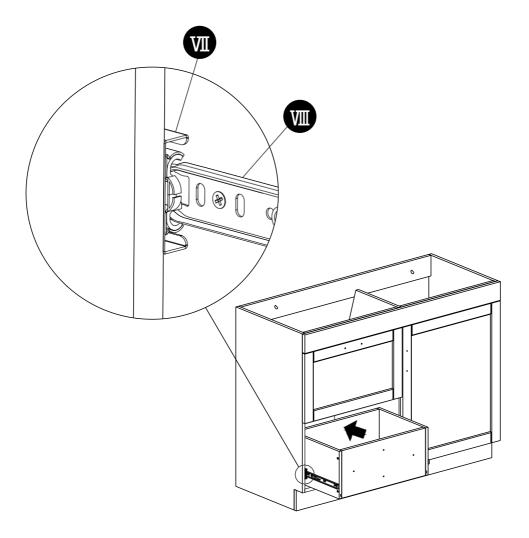

1. Place the Drawer into the cabinet.


Step 15

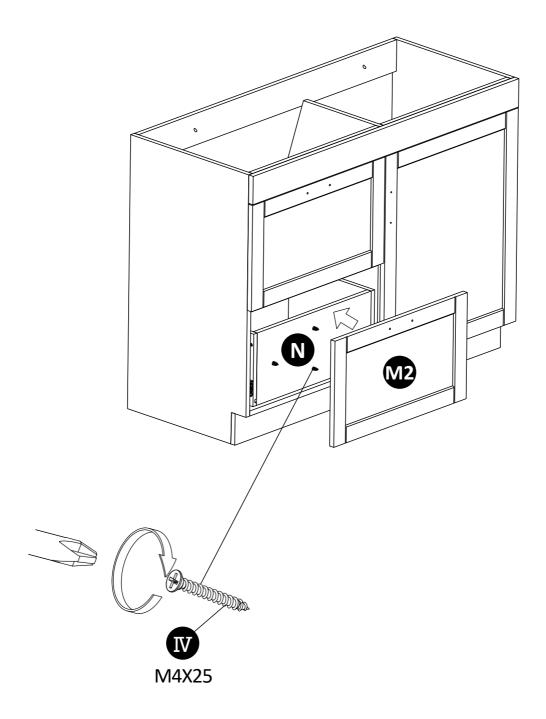


1. Insert Self-Tapping Screws (x) M4 x 25 though the holes of Drawer Front (x) and screw into the Drawer Panel (x).

Step 16



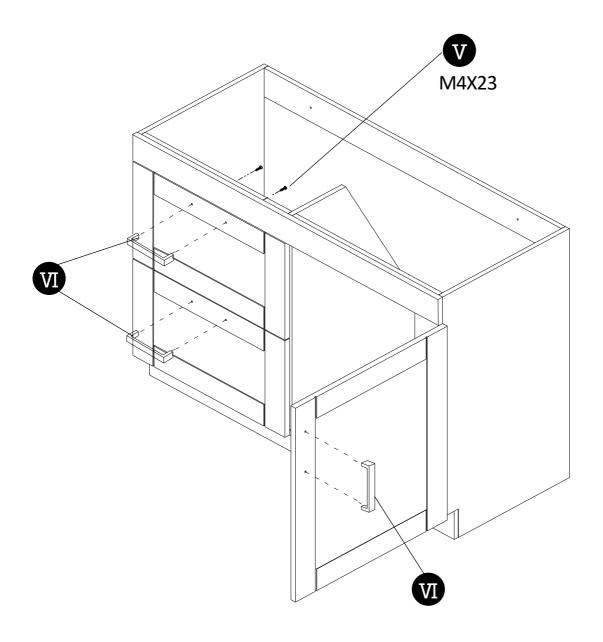


1. Use the Screwdriver to attach the Handle (v) with Philips Screws (v) M4 x 23.

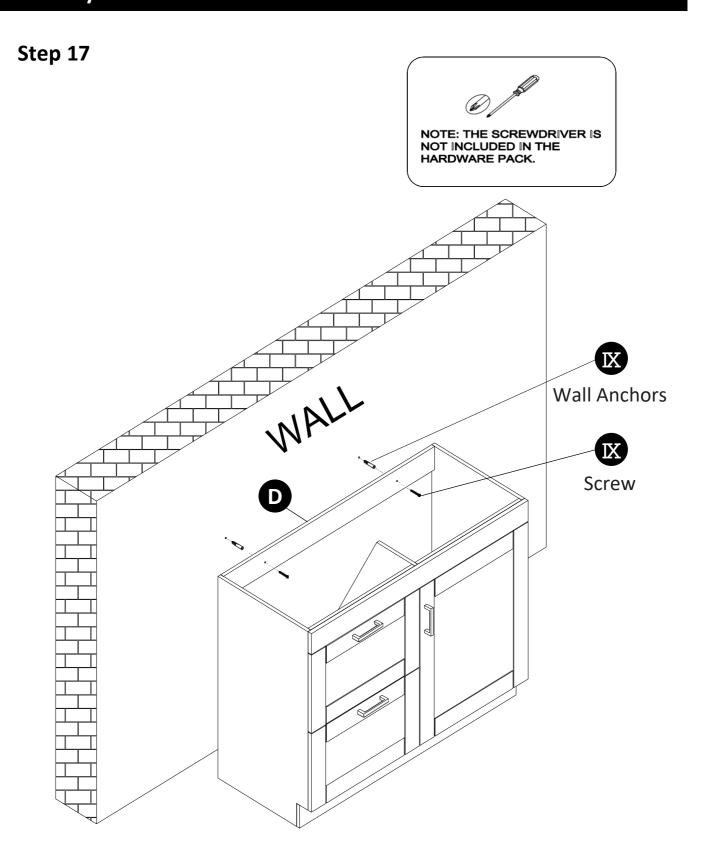


- 1. Pierce holes in the wall and insert Wall Anchors (X) into the holes.
- 2. Insert the Screw (X) through Panel (D) and then insert it into the Wall Anchor to lock in place.

Step 18

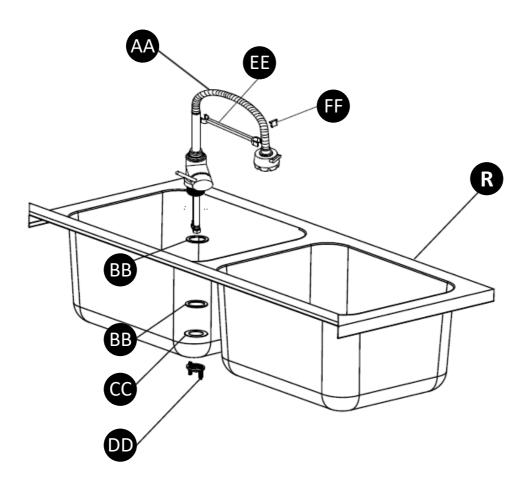


- 1. Place a Rubber Washer (BB) onto the end of the Faucet (AA) and insert the faucet through the top of the Sink (R).
- 2. From underneath the Sink (R), secure the Faucet (AA) to the Sink (R) using a Rubber Washer (BB), Steel Washer (C) and Brass Nut Assembly (D).
- 3. Clip the Faucet Support Bar (EE) onto the neck of Faucet (AA) and use Insert (FF) on the back of Faucet (AA) neck to hold it in place.

Step 19

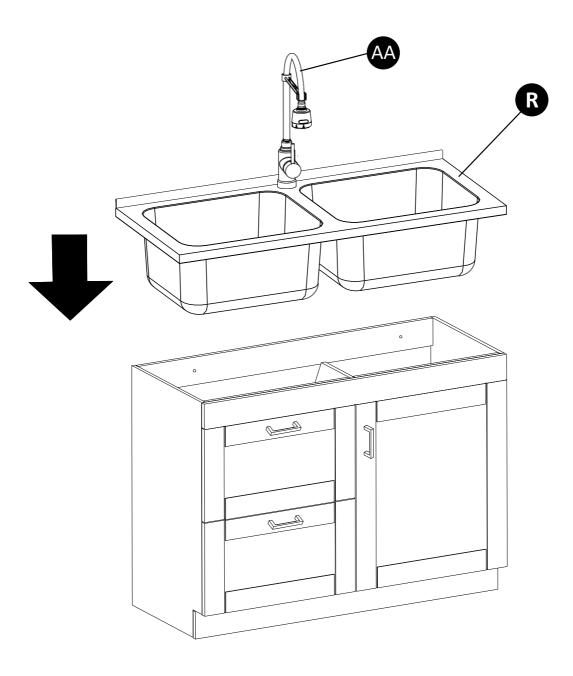


1. Place the Sink® with the attached Faucet Body (AA) on top of the cabinet.


Step 20

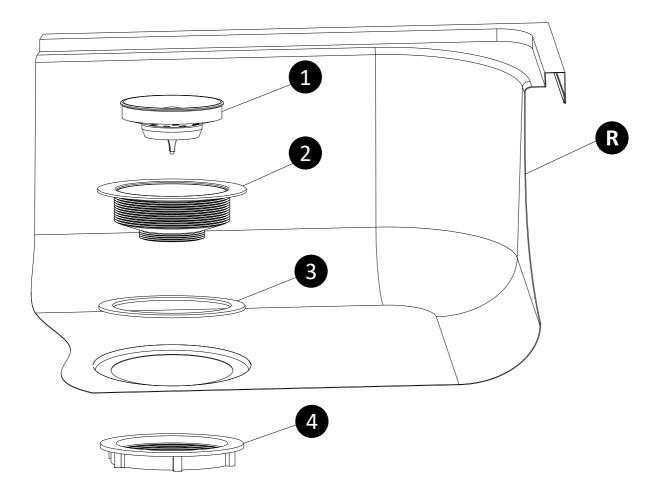

- 1. Put the Drain Washer (3) on the top of the drain opening in the Sink (R).
- 2. Put the Drain Bowl Assembly ② on the Drain Washer ③ through the drain opening.
- 3. From underneath the sink fasten the Threaded Washer 4 onto the Drain Bowl Assembly 2 and tighten.
- 4. Insert the Drain Plug Assembly 1 into the Drain Bowl Assembly 2.


Step 21

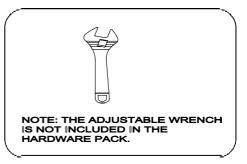

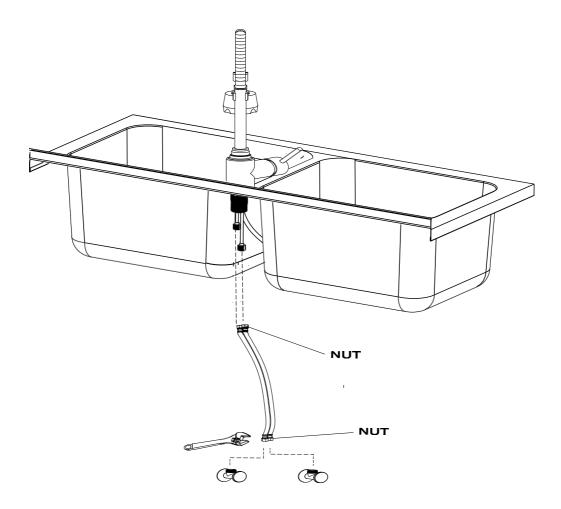


- 1. Fasten the nuts of the hoses (not included in package) to the nut ends of the faucet body.
- 2. Fasten the nuts of the hoses (not included in package) to the water outlet:
 - Red striped hose to Hot water supply
 - Blue striped hose to Cold water supply
- 3. Ensure to only tighten the nut and not twist the supply hose.
- 4. Leakage may occur if hoses are twisted.

Step 22

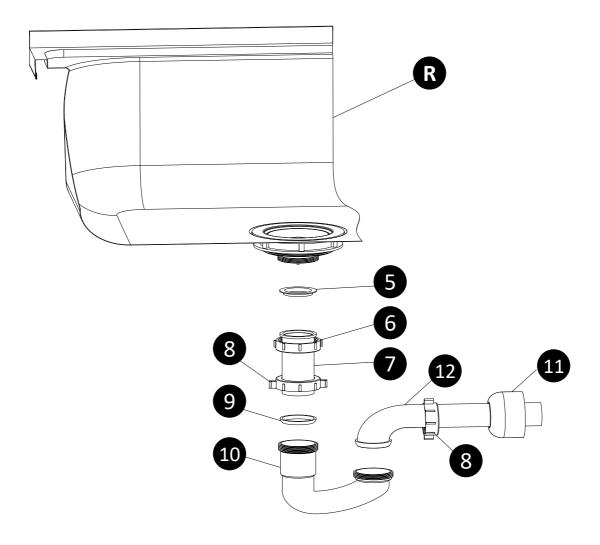

- 1. Put a Pipe Washer (5) onto the Straight Drain Pipe (7). Connect the Straight Drain Pipe (7) to the drain and fasten the Coupling (6).
- 2. Put the Coupling (8) into the Straight Drain Pipe (7) and put a Pipe Washer (9) into the Straight Drain Pipe (7).
- 3. Connect the Drain Channel 10 to the Straight Drain Pipe 7 and fasten with the Coupling 8.
- 4. On the Drain Channel (1), wrap teflon tape (not included) around the threaded end that connects to the Outer Drain Channel (12).
- 5. Connect the Outer Drain Channel (12) to the Drain Channel (10) and fasten with the Coupling (8).
- 6. Insert the Outer Drain Channel (12) into the Drain Channel (10) and cover with the Pipe Cover (11).

Step 23

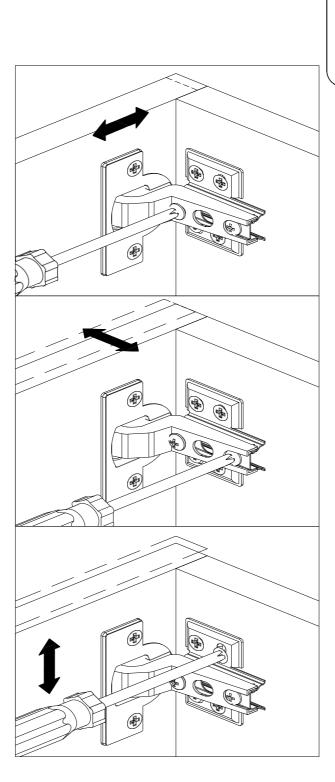



1.Use the Screwdriver to re-align or adjust the hinges that attach the doors to the cabinet.