


# VIVA SOL

## LADDERBALL PREMIUM WOODEN SET

VIVA SOL. Translated: "Long live the Sun"  
And long live all the fun you can have  
under it. Viva Sol creates memorable  
outdoor experiences by combining  
craftsmanship with gamesmanship.

# OWNER'S MANUAL

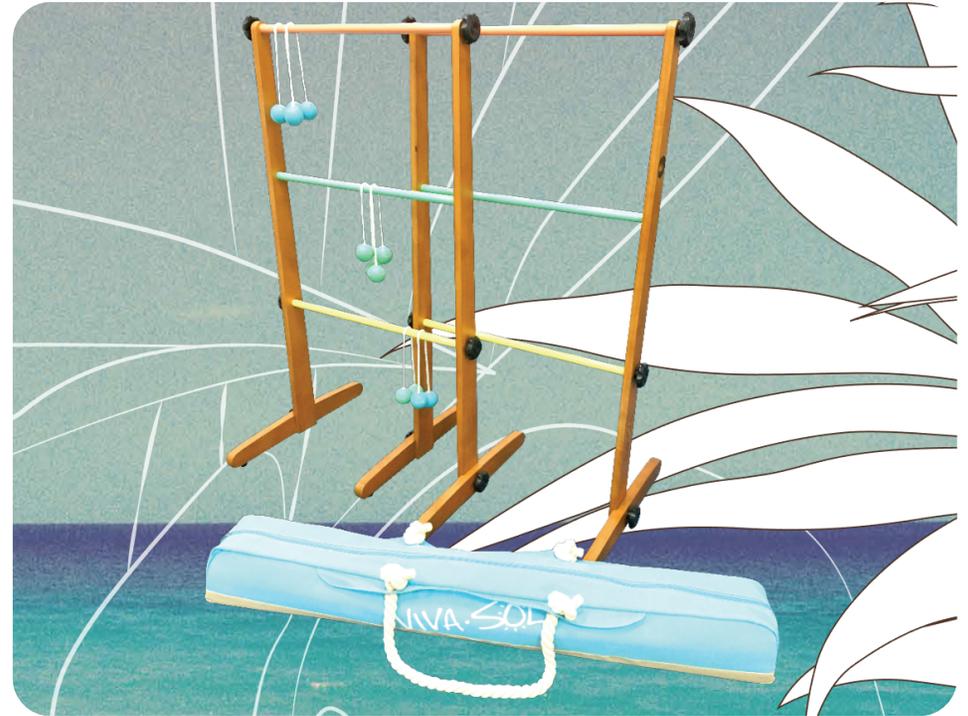

Check out our website to get more information and exciting news on other **VIVA SOL** Products.

[www.LONGLIVESUN.com](http://www.LONGLIVESUN.com)

Product Info - Playing Tips - News & Events - Replacement Parts

## ASSEMBLY INSTRUCTIONS:

1. Attach **P1** to **P2** with Screw Knob **H1** as shown in **Figure 1** and **Detail A**. Screw Knob until the parts are secure but **do not** over tighten. Follow the same procedure to attach **P1** to **P3**. See **Detail F**.

**Note:** Part **P3** does not have a logo or bottle opener.

2. Attach yellow tube **P6** and Pink Tube **P4** to Vertical Support **P2** with **H1** screw knob, screw all the way but **do not** over tighten. See **Figure 1** and **Detail B** & **Detail C**.

3. Assemble **P3** assembly to pink tube **P4** and Yellow Tube **P6** with **H1** Screw knobs but only tighten the knobs half way. See **Figure 2** and **Detail D**.

4. Carefully insert green tube **P5** into the holes of both **P2** and **P3** and tighten remaining **H1** Screw knobs until the ladder assembly is secure but **do not** over tighten hardware.

5. Repeat Steps **1-4** to assemble second Ladder.

### NOTE:

BECAUSE THE NATURE OF SOLID WOOD, RELATIVE HUMIDITY AND SEASONAL CHANGES WILL EXPAND AND CONTRACT. IT WILL RESULT IN THE WARP OF THE VERTICAL LADDER SUPPORT. BUT AFTER CUSTOMERS ASSEMBLE IT WITH PROPER HARDWARE, IT WON'T AFFECT THE STABILITY AND PLAYABILITY OF THE OVERALL DEVICE.

### NOTE:

DO NOT OVER TIGHTEN THE SCREW KNOBS BECAUSE IT MAY TORQUE THE FRAME PREVENTING IT FROM RESTING EVENLY ON THE GROUND. IF THE LEGS ARE NOT RESTING FIRMLY ON THE GROUND TRY LOOSENING ALL SCREW KNOBS AND RE-TIGHTEN WITH LESS PRESSURE.

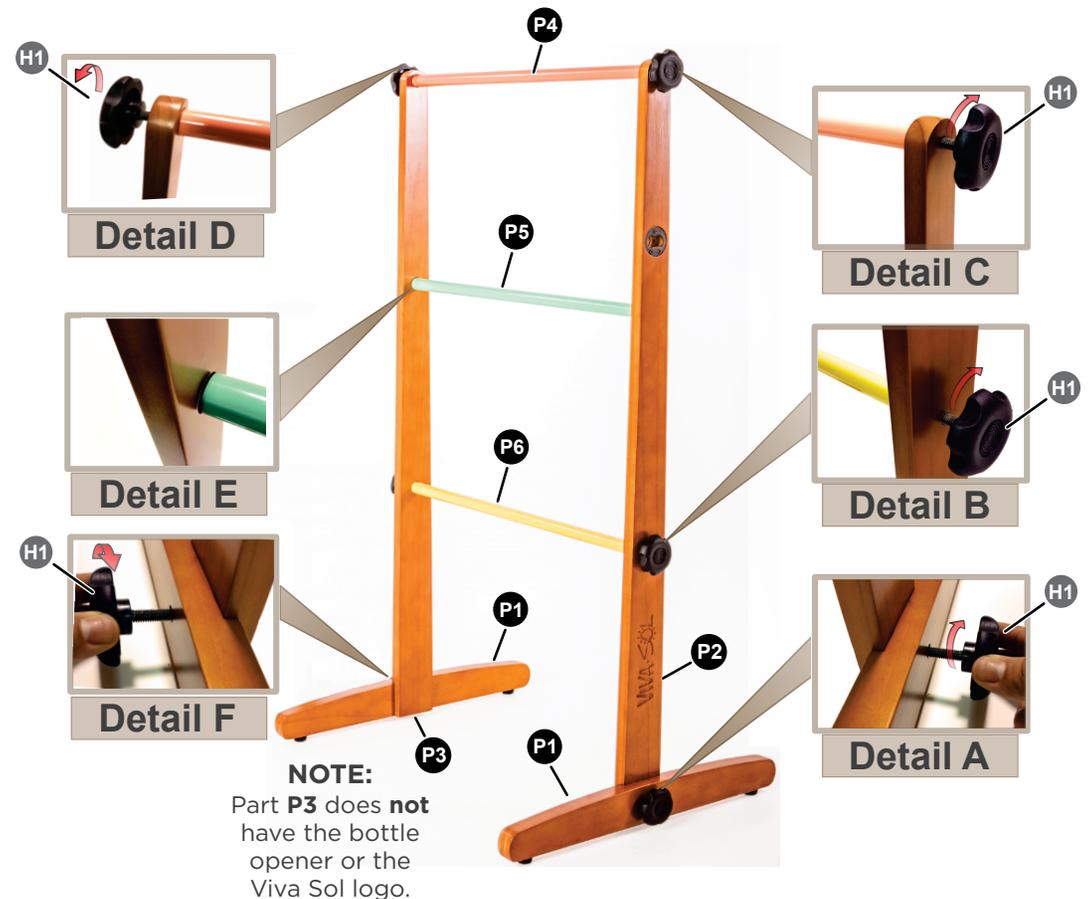


Figure 1



**NOTE:** Disassemble completely before attempting to insert into storage bag. Store screw knobs and bolas in the storage pouches and the rest of the game components inside the storage bag.

**NOTE:** This game should be played outdoors but must be stored in a cool dry location indoors when not in use.

### SAFETY WARNING

- This product is not a toy. Adult supervision is required for all children under twelve (12) years of age.
- **DO NOT** use the bolas or frame tubes for anything other than their intended purpose. Improper use (swinging or pulling) may result in personal injury or property damage.
- **DO NOT** wrap the bolas around any part of your body.
- **DO NOT** stand or step on the ladder toss frame. It is not intended to bear weight and it will break.
- **Always** make sure to have a clear open space to play this game. Throwing bolas, as with any hard object, can be dangerous to those around you.


### Replacement Parts List for Ladderball Set.

PART #	DESCRIPTION	QTY.
VS3000-P1	HORIZONTAL LADDER SUPPORT	4
VS3000-P2	VERTICAL LADDER SUPPORT W/ BOTTLE OPENER	2
VS3000-P3	VERTICAL LADDER SUPPORT	2
VS3000-P4	PINK TUBE	2
VS3000-P5	YELLOW TUBE	2
VS3000-P6	GREEN TUBE	2
VS3000-H1	SCREW KNOB	12
VS3000-A1	BLUE BOLAS	3
VS3000-A2	GREEN BOLAS	3
VS3000-A3	SCREW KNOB / BOLAS STORAGE POUCH	2
VS3000-A4	CARRY BAG	1

## GAME SETUP

Playing Area – Select an open area that provides approximately 25 ft. (7.62 m) --approx. ten paces apart--between the two foul lines (front of the Ladder Ball frames). Allow children to set the distance with their own stride. The width of the court depends on the skill level of the players.

Play is between two players or teams. One member from each team will stand next to each ladder. Players will want to make sure to stand away from the ladder when not tossing the Bolas.

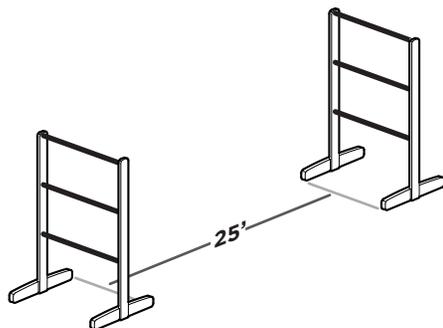

## GAME RULES

- Object of the Game – To “out-toss” your opponents by wrapping your Bolas around the scoring rungs. First Player/Team to reach 21 points wins!
- Game Play - For the first round, decide Player 1 and/or Team 1 by tossing a coin, or some other suitable method. For following rounds, the team scoring the highest points in the previous round is the first to toss in the next round.
- Each round consists of one person (either Player 1 or Player 1/Team 1) tossing Bolas. Play continues alternating Player/Team until each player has had one Bola toss.
- Bolas may be tossed in any way the player chooses, as long as they are tossed individually.
- Players must not step across the foul line (front edge of the Ladder Ball Frame) during a throw, or the results of that throw will be reversed (other Bolas that were moved will be restored to their position before that throw).
- Scoring - Points accumulate with each Bola landing on a rung. Bolas may wrap around another Bola with both Bolas scoring. If that second Bola has one ball on either side of the next rung down, it scores points from both rungs. A cord may also wrap around a vertical bar between rungs.
- Point Values (based on difficulty level) are as follows:  
Top Rung = 3 Points, Middle Rung = 2 Points, Bottom Rung = 1 Point
- No Score - Bolas that miss the ladder or bounce off the ground do not count in scoring.
- Use the side rail scoring to track both player/team scores.
- To Win – There are alternatives for declaring a winner: 1) the winning team must lead by at least two points; or 2) requiring an exact score to win. If a round's score would put a team over twenty-one, that round's score is not used.

## 90-Day Limited Warranty

This consumer warranty extends to the original consumer purchase of any ESCALADE® SPORTS Product (hereinafter referred as the "Product").

**WARRANTY DURATION:** This Product is warranted to the original consumer purchase of a period of ninety (90) days from the original purchase.

**WARRANTY COVERAGE:** ESCALADE® SPORTS warrants to the original Consumer Purchaser that any Product of its manufacture is free from defects in material and workmanship when used for the intended purpose under normal use and conditions. THIS WARRANTY IS VOID IF THE PRODUCT HAS BEEN DAMAGED BY ACCIDENT, UNREASONABLE USE, NEGLIGENCE, IMPROPER SERVICE, FAILURE TO FOLLOW INSTRUCTIONS PROVIDED WITH THE PRODUCT OR OTHER CAUSES NOT ARISING OUT OF DEFECTS IN MATERIAL AND WORKMANSHIP.

**WARRANTY PERFORMANCE:** During the above ninety (90) day warranty period, ESCALADE® SPORTS shall repair or replace with a comparable model, and Product, or component thereof, which may prove defective under normal use and proper care, and which our examination shall disclose to our satisfaction to be thus defective, please contact our Warranty Dept.

1-866-873-3528 / Warranty Dept.

Or Write us at:

Escalade® Sports, Inc. - P.O. Box 889, Evansville, IN 47706 - Attn: Warranty Dept.

Or E-mail us at:

customerservice@escaladesports.com

Other than shipping requirements no charge will be made for such repair or replacement of in-warranty Products. ESCALADE® SPORTS strongly recommends that the Product is insured for value prior to mailing.

**WARRANTY DISCLAIMERS:** ANY IMPLIED WARRANTIES ARISING OUT OF THIS SALE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE ABOVE NINETY (90) DAY WARRANTY PERIOD. ESCALADE® SPORTS SHALL NOT BE LIABLE FOR LOSS OF USE OF THE PRODUCT OR OTHER CONSEQUENTIAL OR INCIDENTAL COSTS, EXPENSES OR DAMAGES INCURRED BY THE CONSUMER OF ANY OTHER USE.

Some states do not allow the exclusion or limitation of implied warranties or consequential or incidental damages, so the above limitations or exclusions may not apply to you.

**LEGAL REMEDIES:** This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.