homestyles

Buffet

5520-61

IMPORTANT

Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.





Tool(s) required for assembly: Phillips screwdriver, Level, Pencil, Drill (8 volts or less), 3/8" Drill Bit homestyles Customer Service: www.homestylesfurniture.com, servicedesk@homestylesfurniture.com, 888-680-7460

Assembly Instructions 2/13

IMPORTANT

- Use a soft cloth between these parts and the floor.
- Do not use power tools above $\frac{1}{8}$ volts to assemble.
- Do not tighten all the bolts until each part is properly assembled.
- The unit must be level to work properly. Use the included adjustable levelers to level.



Assembly Instructions 3/13

STEP 3

Attach Magnets to Middle Panel (D) with 1/2" Round Head Screws. (See Figure 2)





Figure 2



STEP 4

Attach Middle Panel (D) to Bottom Panel (I) with Dowels and 1" Round Head Screws.

Assembly Instructions 4/13



Assembly Instructions 5/13



Assembly Instructions 6/13

STEP 9

Π

Knob

Attach Top (A) to unit with Dowels, Cam Locks and 1" Round Head Screws.

Note: A Philips screwdriver 5" or less in length is recommended.



Assembly Instructions 7/13

STEP 11

Attach Doors (N) and (O) to unit by sliding door hinges into side panel hinges. (See Figure 4)

Level unit by adjusting the adjustable levelers on bottom of unit. (See Figure 5)



Figure 4





Figure 6



STEP 12

Attach Wedges to unit with 1/2" Flat Head Screws. (See Figure 6) Note: Unit must be level before tightening these screws.

Assembly Instructions 8/13



middle panels at desired level.



Assembly Instructions 9/13

IMPORTANT

• To help reduce the risk of the unit tipping over, the Tipover Restraint must be installed following these instructions exactly.

STEP 15

Place unit at desired location.

Mark wall with pencil just above and in-line with hole in Top (A). (See Figure 7)

Move unit.

Drill a 3/8" hole in wall 1 1/2" below mark.

Insert Anchor into the wall hole and attach Tipover Restraint to Anchor with 1 1/2" Round Head Screw and Flat Washer. (See Figure 8)

Move unit back into place and insert Tipover Restraint into unit through hole in Top (A). (See Figure 9)

Attach Tipover Restraint to unit with 1/2" Round Head Screw and Flat Washer. (See Figure 10)





Assembly Instructions 10/13



Note: Drawer assembly is not complete until 3/4" Flat Head Screws are used in a later step.



Assembly Instructions 11/13

STEP 20

Loosen slightly two screws pre-installed on back of drawer fronts.





STEP 21

Insert drawers into unit, then adjust drawer front panels left or right and up or down until drawer gaps look proportional.

STEP 22

Pull drawers open slowly and re-tighten screws from Step 20.

Make sure front panels do not move and lock drawer front panels into position with 3/4" Flat Head Screws.

Note: These 3/4" Flat Head Screws must be installed to complete the drawer assembly.





Assembly Instructions 12/13

STEP 23

Slide Drawers (P) into position.



Assembly Instructions 13/13

IMPORTANT

• If magnetic door catches are too strong and door difficult to open, magnetic power can be reduced and door made easier to open by doing following:













CARE INSTRUCTIONS

NEVER

allow liquids to remain on furniture. Absorption causes parts to warp and split and finishes to delaminate.

NEVER

use glass cleaners on finished furniture. Ammonia chemically attacks the finish.



homestyles will provide replacements free of charge for missing or damaged parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retailer, **home**styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged parts may be requested via contact info below.

homestyles Customer Service: www.homestylesfurniture.com, servicedesk@homestylesfurniture.com, 888-680-7460