



Purchase Date: ___ / ___ / ___ Order/Customer Reference Number: _____

Thank you for choosing Sunnydaze Decor. We stand behind our brand and the quality of the items we sell. Replacement parts or products can be requested within the 1-year warranty period. Proof of purchase must be provided. This includes the date of the purchase as well as photos of the product defect. Photos are used to determine the cause of the defect and to provide future quality control. The request will be reviewed, and replacement pieces will be sent at our discretion. For warranty information, visit <https://tiny.cc/SunnydazeWarranty>

If you have any questions, comments or concerns, feel free to contact us by phone at 833-982-1977, by email: customerservice@sunnydazedecor.com, or via our contact us page at <https://tiny.cc/SunnydazeContact>

ACACIA WOOD PLANTER

Review all information carefully before using this product. Save this manual for future reference.



GENERAL USE & CARE

LOCATION: For indoor and outdoor use. Only use on a flat, level surface.

Be mindful when placing outdoors, the liners do not have drainage holes; soil could quickly become waterlogged during heavy rain. Leaks and/or run-off from planters could cause damage to surfaces.

FILLING & WATERING: Lightweight potting soil is recommended for filling the liner. Take care when watering, the plastic liners do not have drainage holes. If using the planter outdoors, we recommend a location that will not receive too much rain, such as a covered porch or under an awning.

MOVING: Always lift the planter from the bottom when moving it, never drag or slide it as doing so can damage the planter and/or surfaces. Slowly and gently set the planter down to prevent breakage.

CLEANING:

WOOD: Identify the direction of the woodgrain. Following the direction of the woodgrain, wipe surfaces with a soft cloth.

PLASTIC LINER: Mix 1 part distilled vinegar with 4 or 5 parts warm water. Use a soft cloth to wash the liner. Rinse thoroughly and dry.

EXPOSURE: Over time, sunlight and weather elements may degrade and change the color of this product. Manufacturer is not liable for damage caused by exposure to weather elements.

MAINTENANCE: Apply a suitable wood oil (not included) to wooden surfaces at least once a year, or when the wood looks particularly dry. Follow application instructions as provided by the wood oil manufacturer.

WINTER CARE & STORAGE: Store in a dry, indoor location. Cover to prevent dust build-up.

WARNING: THE ONE-YEAR WARRANTY DOES NOT COVER DAMAGES OR DEFECTS CAUSED BY THE APPLICATION OF CHEMICAL TREATMENTS, PROTECTIVE COATINGS, TOUCH-UP PAINT, OR CLEANING PRODUCTS.

Any modification to the product or failure to follow recommended care will void the product warranty.

If you experience issues or the product was damaged during transit, please contact our customer service team through one of the methods mentioned at the top of the page.

Please have the item number and order information ready to expedite response time.

WARNING!

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.

