


LED MULTI DIRECTIONAL SHOP LIGHT WITH MOTION DETECTION

IMPORTANT SAFETY INSTRUCTIONS AND INSTALLATION GUIDE

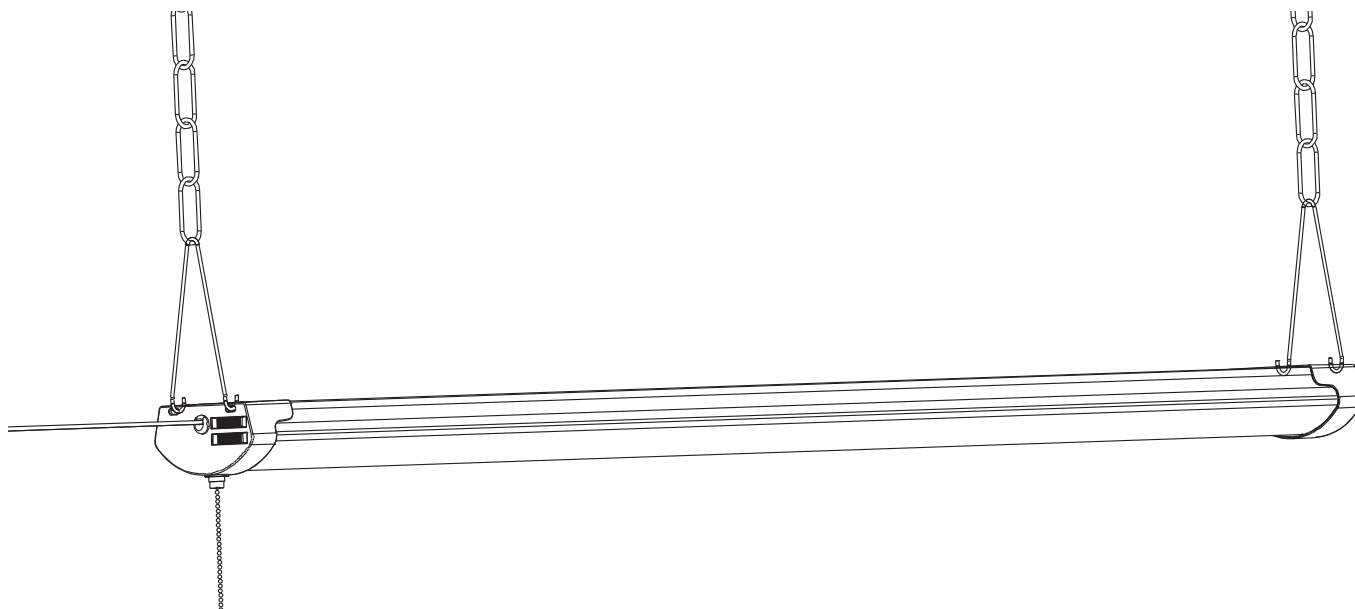

**IMPORTANT, RETAIN FOR FUTURE
REFERENCE: READ CAREFULLY**



Table of Contents

Safety Information	2
Radiation Exposure Statement	2
FCC Statement	2
Warranty	2
Pre-Assembly	3
Product Dimensions	3
Hang Mount Installation	4
Flush Mount Installation	5
Linking Multiple Shop Lights and Cable Organization	5
Operation	6

Safety Information

For your safety, always remember to:

- ❑ Ensure the fixture power is off before and during installation.
- ❑ Double-check all connections to be sure they are tight and correct.
- ❑ Wear rubber soled shoes and work on a sturdy wooden ladder.
- ❑ Account for small parts and destroy packing material, as these may be hazardous to children.



CAUTION: Cannot be installed on a radiant-heating ceiling.



CAUTION: Hooks are to engage the chain only and not the electric cord. Excess cord should be kept out of the workspace such as by securing it to one of the supporting chains with a cable tie.

IMPORTANT SAFETY INSTRUCTIONS - This portable light-emitting-diode (LED) luminaire has a polarized plug (one blade is wider than the other) as a feature to reduce risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit squarely in the outlet, reverse the plug. If it still does not fit, contact a certified electrician. Never use with an extension cord unless the plug can be fully inserted. Do not alter the plug.



NOTE: This fixture is designed for use in a circuit protected by a fuse or circuit breaker. It is also designed to be installed in accordance with local electrical codes. If you are unsure about your wiring, consult a qualified electrician or local electrical inspector, and check your local electrical code.

Product Specifications

- 120VAC, 60Hz, 85 Watts
- Not Dimmable
- Suitable for Damp Locations



CAUTION: Ensure the fixture power is off before or during installation.



WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



WARNING: RISK OF SHOCK. House electric current can cause painful shock or serious injury unless handled properly.

NOTICE: All connections must be in accordance with local electrical standards and the National Electrical Code (N.E.C.) or Canadian Electrical Code (C.E.C) as appropriate.

Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustrations on the installation instructions.

IMPORTANT: THIS FIXTURE IS INTENDED TO BE ONLY INSTALLED DIRECTLY BENEATH A CEILING-MOUNTED RECEPTACLE.

FCC STATEMENT

Supplier's Declaration of Conformity:

47 CFR § 2.1077 Compliance Information

Responsible Party: Feit Electric Company

4901 Gregg Road, Pico Rivera, CA 90660, USA

Unique Identifier: SHOP840/3WY/MOT, ITM. / ART. 1806331

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. Any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.


Radiation Exposure Statement

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment. This device should be installed and operated with a minimum distance of 20cm between the radiator and your body.

Limited Warranty


This product is warrantied to be free from defects in workmanship and materials for up to 3 years from date of purchase. If the product fails within the warranty period, please contact Feit Electric at info@feit.com, visit feit.com/contact-us or call 1-866-326-BULB (2852) for instructions on replacement or refund. REPLACEMENT OR REFUND IS YOUR SOLE REMEDY. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY. LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES IS HEREBY EXPRESSLY EXCLUDED. Some states and provinces do not allow the exclusion of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.

TOOLS REQUIRED (NOT INCLUDED)

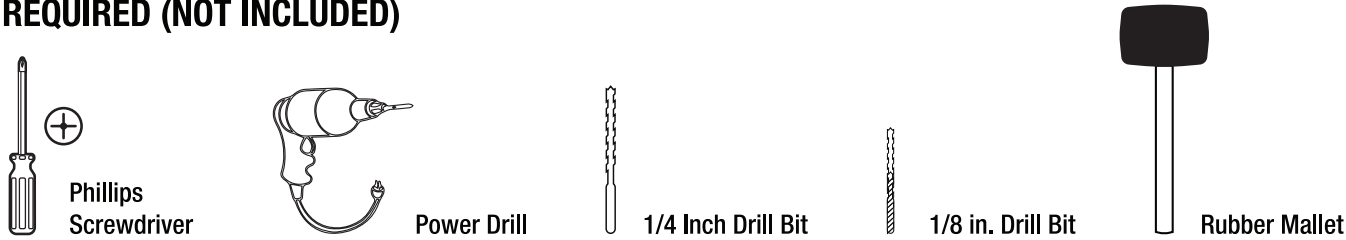


HARDWARE INCLUDED

 NOTE: Hardware not shown to actual size.

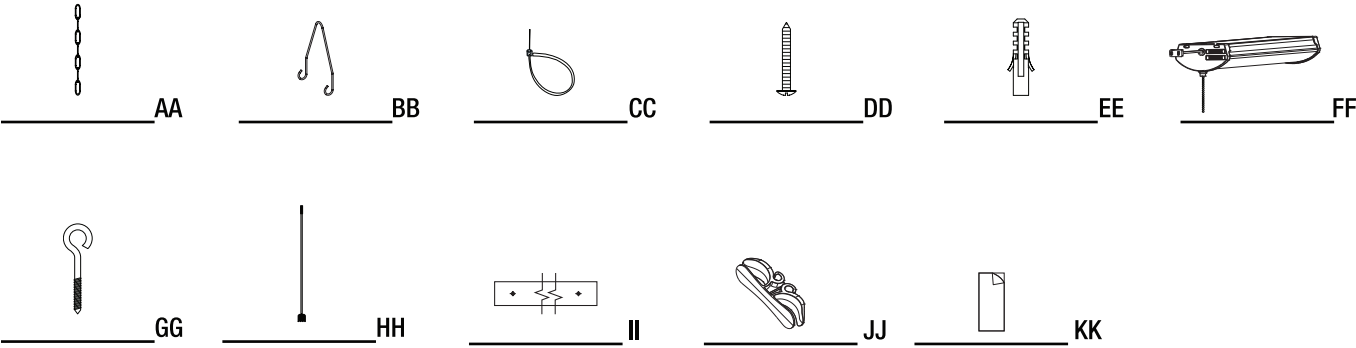

Part	Description	Quantity
AA	6 in. Hanging Chain	2
BB	V-Hook	2
CC	Cable Tie	2
DD	Mounting Screw	2
EE	Wall Anchor	2
FF	Shop Light Fixture	1
GG	Hanging Hook	2
HH	Pull Chain Extension	1
II	Mounting Template	1
JJ	Cable Management Clip	1
KK	Double-Sided Adhesive Tape	1

Product Dimensions

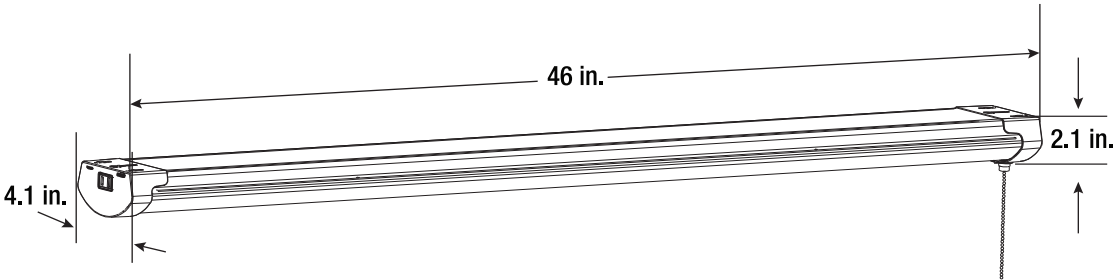


Hang Mount Installation

1 Turning off the Power

Ensure the fixture power is off before and during installation.

2 Mark the Mounting Location

 
Locate a sturdy ceiling mounting location suitable for fixture installation. Measure and mark spacing approximately 46in. apart for the hanging hooks.



3 Install the Hanging Hooks


Attach the two hanging hooks (GG) to the ceiling at the marked location. If the mounting location is into concrete or drywall, drill two holes using a 1/4-inch drill bit. Insert the two wall anchors (EE) using a rubber mallet. Screw the hanging hooks (GG) into the wall anchors (EE).

If the mounting location is directly into solid wood, drill two holes using a 1/8-inch drill bit. Screw the hanging hooks (GG) directly into the solid wood.

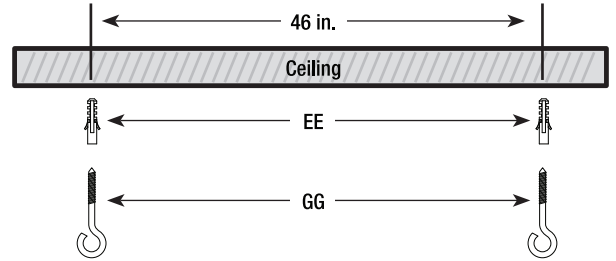


4 Attaching the Chain, V-Hooks, and Fixture

Slip the V-Hooks (BB) through the chain (AA), then insert the V-Hooks (AA) into the two hanging holes located on the endcap of the fixture. Repeat this for the other end of the fixture.

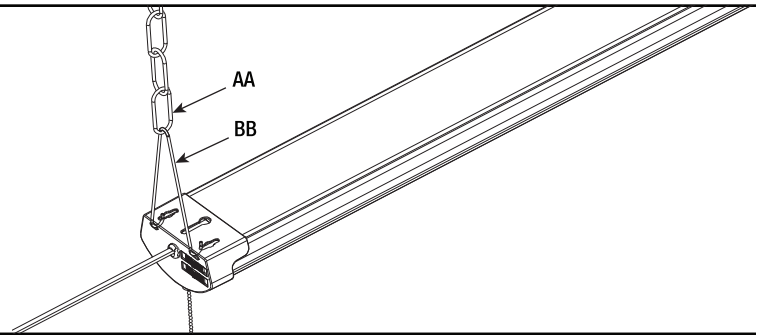


5 Hanging the Fixture

Hook the chain onto the Hanging Hooks (GG) and repeat for the other side.

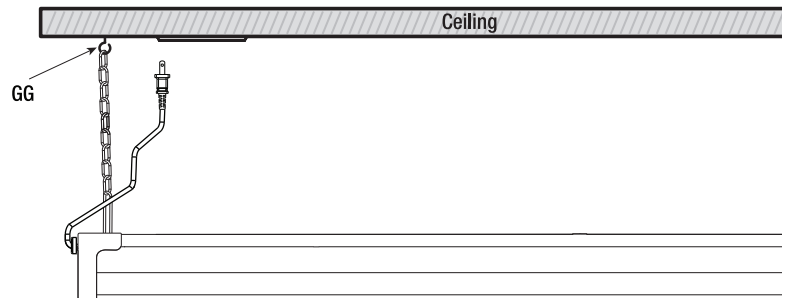

6 Connect the Power Cord.

Connect the power cord to a receptacle directly above the fixture. Use the cable tie (CC) to secure the cord to the hanging chain (AA).

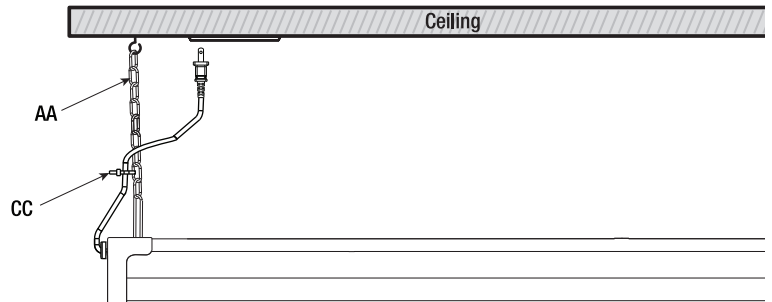

7 Turning on the Power

Turn the fixture ON/OFF using the pull chain or wall switch.


Flush Mount Installation

1 Turning off the Power

Ensure the fixture power is off before and during installation.


2 Attaching the Anchors and Screws

 Locate a sturdy ceiling mounting location suitable for fixture installation. Using the provided mounting template (LL), measure and mark spacing approximately 44in. apart for the wall anchors.




3 Install the Anchors and Screws

If the mounting location is into concrete or drywall, drill two holes using a 1/4-inch drill bit. Insert the two wall anchors (EE) using a rubber mallet. Install the mounting screws (DD) into the wall anchors (EE). Do not tighten fully. Leave about 1/16-inch space for the fixture (FF) to grasp the mounting screws (DD).
If the mounting location is directly into solid wood, drill two holes using a 1/8-inch drill bit. Install the mounting screws (DD) directly into the solid wood using the 1/8-inch holes. Do not tighten fully. Leave about 1/16-inch space for the fixture (FF) to grasp the mounting screws (DD).
Depending on the true flatness of the mounting surface, you may need to adjust screw spacing slightly.

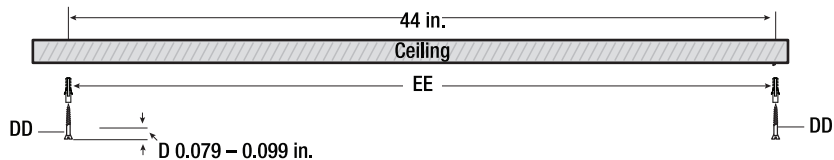

4 Securing the Fixture

 Lift the fixture (FF) up to the mounting screws (DD) fitting into place through large openings. The fixture should be firmly fixed against the mounting screws (DD). Push the fixture forward or backward to lock in place. Plug in the power cord to the outlet.





5 Turning on the Power

Turn the fixture ON/OFF using the pull chain or wall switch.

Linking Multiple Shop Lights and Cable Organization

Link up to 4 shop lights total.

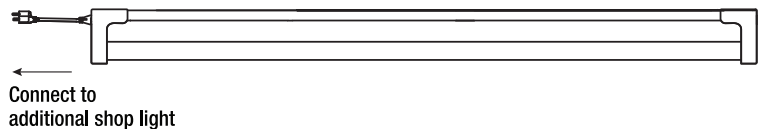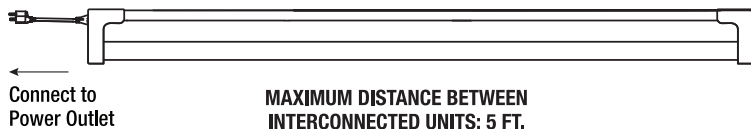

Link the shop lights using the receptacle on the other end of the end cap. Link up to 3 additional shop lights (4 total shop lights).





NOTE: Receptacle for use with other Feit Electric SHOP840/3WY/MOT shop lights only.

Using the double-sided adhesive tape (KK), attach the cable management clip (JJ) to a nearby wall or ceiling and organize the remaining loose cable.



NOTE: The double-sided adhesive tape may cause surface damage if removed. Not recommended for mounting on brick or concrete. Feit Electric is not responsible for damage to mounted surfaces.

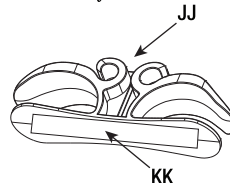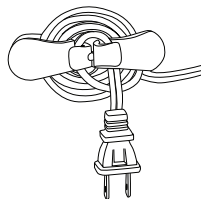

CAUTION: This shop light is provided with a fused receptacle to energize up to 3 additional shop lights (4 total shop lights). It is rated for a maximum of 5A. If overloaded the fuse will open and the receptacle will become inoperable (shop light will continue to work).

1 3 Light Modes:

1. Downlight + Ambient Light (10,000 Lumens)
2. Downlight Only (5,000 Lumens)
3. Ambient Light Only (500 Lumens)



When powered on for the first time, the fixture defaults to Downlight + Ambient Light mode (10,000 lumens).

How to Operate the Light Modes

Using the Pull Chain Switch: Pull the chain quickly to cycle through the available modes. Stop pulling when your desired mode is active. After 10 seconds, the fixture will automatically save your selection and return to this mode the next time it is turned on.

Using a Standard Wall Switch: Flip the switch off and on to cycle through the modes. Stop once your desired mode is selected. After the light is powered off for at least 3 seconds, the fixture will save your selection and will turn on in that mode the next time it's used.

Memory Function: The fixture automatically remembers the last mode selected and will return to that mode the next time it is powered on.

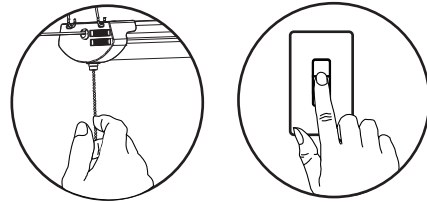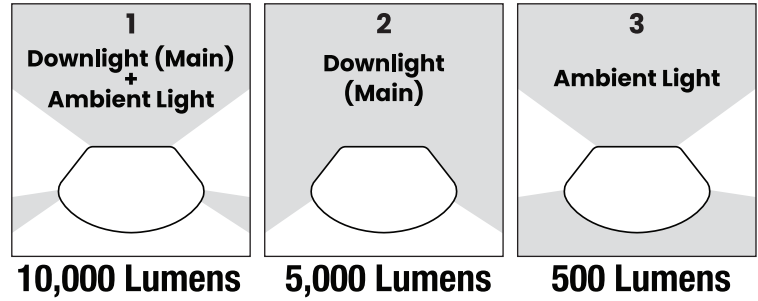


- 1 time: Downlight (Main) + Ambient Light
2 times: Downlight (Main)
3 times: Ambient Light

2 Motion Timer

Set the motion timer by selecting the desired duration on the slider for the fixture to stay on after motion has been detected.



Motion Timer Switch

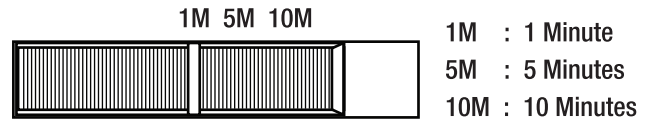

3 Motion Detection

Turn on the motion detection by selecting the slider to the desired detection range. When OFF is selected, motion detection is turned off and the fixture is only controlled by the pull chain or wall switch.

Motion Detection Switch

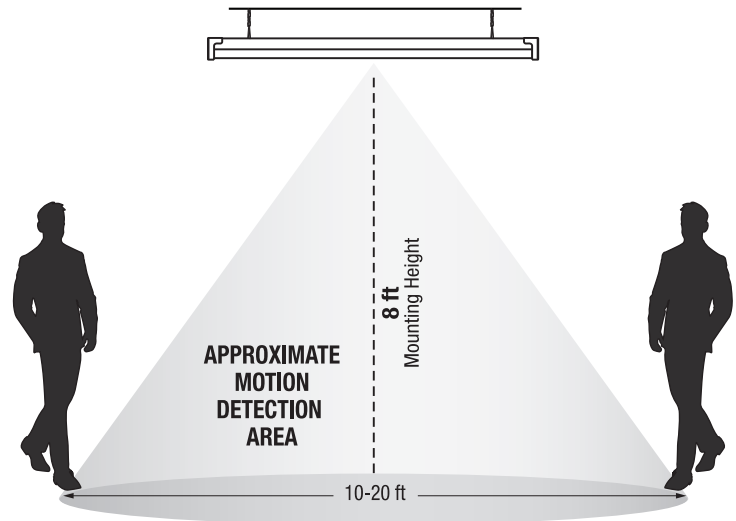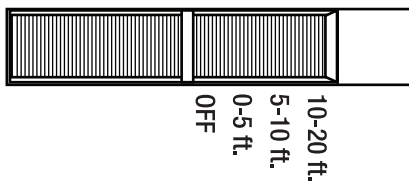

Distributed by:
Costco Wholesale Corporation
P.O. Box 34535
Seattle, WA 98124-1535
USA
1-800-774-2678
www.costco.com
MADE IN CHINA

Need Help?

Thank you for your purchase.
Questions, comments or feedback?

We'd love to hear from you.

Visit feit.com/help for support or connect with us:



@FeitElectric



@FeitElectricInc



feitelectricleighting

