pump from stalling. pressure and prevents the inflator's the inflator to gradually reach the desired beginning inflation. This operation allows manually to 40 psi or less before is recommended that the tire is deflated requiring pressure greater than 50 psi, it When inflating truck or trailer tires

counterclockwise direction the tire valve threads by turning in a 8. Remove the air hose attachement from power outlet.

7. Unplug the power cord from 12V DC power switch to the "O" (OFF) position. 6. Once desired pressure is reached, turn

recommended air pressure. position and inflate to the manufacturer's 5. Turn inflator power switch to "I" (OV) lighter receptacles.

DO NOT use with older 8-Amp cigarette power outlet rated 15-Amps or higher. **▲ WARNING:** For use with any 12V DC

4. Plug power cord into 12V DC power outlet. stem threads in a clockwise direction. the hose attachment onto the valve inflator to the valve stem by turning 3. Attach the air hose connector from the 2. Remove valve cap from stem.

inflator is in the "O" (OFF) position. 1. Confirm that the power switch on the

OPERATING INSTRUCTIONS - TIRES

power outlet: Input 12V with 15A fuse Cord - Plugs into any 12V vehicle • 10 Ft. Power Cord with 12V Power

Presta Valve Adapter Needle, Raft & Toy Inflator Nozzles, • Air Accessories Include: Sports Ball • 15" Air Hose with Screw-On Chuck LED lights

Dual On/Off Switches for Inflator and Тіте Етегдепсіея

•3 Super Bright LED Lights for Night-•Large Dial Pressure Gauge

SEATURES

FILL AIR TANKS OR AIR SHOCKS. • THIS INFLATOR IS NOT DESIGNED TO ngninon be turned on.

nowever, some vehicles require that the operate with vehicle ignition off; Most vehicle 12 Volt power outlets will

VENTILATION.

ALWAYS ALLOW FOR PROPER asphyxiation resulting in death can occur. SUCH AS A GARAGE as bodily injury or ENGINE INSIDE A CONFINED AREA **WARNING:** DO NOT RUN VEHICLE

vehicle's engine running. you operate your inflator with your • For best results, it is recommended that

not work at its maximum output level. vehicle's battery is weak, the inflator will performance from your inflator. If your fully charged to get the best

Your vehicle's 12 Volt battery must be

or dust mask if operation is dusty. USE SAFETY GLASSES. Also use face

> attachments that are included. Operate the inflator only with the

any strong solvent to clean the inflator. dasoline, petroleum-based products, or when cleaning. Never use brake fluids, oil and grease. Always use a clean cloth Keep inflator dry, clean, and free from

damp or wet locations. Do not operate or store your inflator in a

atmospheres. Internal sparks may ignite

liquids or in gaseous or explosive • Do not operate inflator near flammable

Disconnect power when not in use.

occnr yoze or power cord as damage may

• DO NOT carry the inflator by the air

.bebnettenu • NEVER leave the inflator running

areas. NEVER use in traffic or other unsafe

10 MINUTES OF CONTINUOUS USE. AT LEAST 10 MINUTES AFTER EACH ALLOW THE COMPRESSOR TO COOL 10 minutes continuously.

• DO NOT run compressor for more than anuud nae:

oberating. Place compressor on ground elinw bnsh ni bloh ton od - TOH e

MCAUTION

personal injury and/or property damage. OBJECTS. Over inflation can cause object. DO NOT OVER-INFLATE recommended pressure for any inflatable NEVER exceed the manufacturer's

PERSONAL INJURY CAN OCCUR. INFLATING. BODILY HARM OR FOR ANY PURPOSE OTHER THAN and other inflatables. DO NOT USE equipment, air mattresses, beach toys tires, bike tires, ATV tires, sports

This inflator is designed to inflate car receptacies.

with older 8 Amp cigarette lighter rated 15 Amps or higher. Do NOT use For use with any 12V DC power outlet

could cause bodily harm or injury. damage to your inflator/vehicle and overheat. Overheating can cause cause the inflator and power cord to debris. A dirty 12 Volt power outlet can outlet is free of any ash residue or sure that your vehicle's 12 Volt power

• USE 12 VOLT DC power only. Make is not intended for use by children. CHILDREN. The inflator is not a toy and

KEEP OUT OF THE REACH OF

ENING AMPRING

instructions for future reference. property damage. Save these can result in personal injury and/or before use. Failure to follow instructions Read and understand all instructions

AMARNING

IMPORTANT SAFETY INFORMATION

cause damage to equipment. information, that if not followed, may **▲NOTICE** Notice indicates important

moderate injury. not avoided, MAY result in minor or potentially hazardous situation which, it **▲CAUTION** Caution indicates a

:Kunfui snouəs not avoided, could result in death or potentially hazardous situation which, if A WARNING Warning indicates a

avoided, will result in death or serious injury. imminently hazardous situation which, it not ▲ DANGER Danger indicates an

SAFETY GUIDELINES / DEFINITIONS

OPERATING INSTRUCTIONS - INFLATABLES

- 1. Confirm that the power switch on the inflator is in the "O" (OFF) position.
- 2. To use the inflation accessories, screw either piece into the air hose connector from the inflator by turning the hose attachment onto the inflation accessory threads in a clockwise direction until secure.
- 3. Plug power cord into 12V DC power

▲WARNING: For use with any 12V DC power outlet rated 15-Amps or higher. DO NOT use with older 8-Amp cigarette lighter receptacles.

- 4. Insert the appropriate inflation accessory into the inflatable object (tire, football, raft, etc.).
- 5. Turn inflator power switch to "I" (ON) position and inflate to the manufacturer's recommended air pressure.
- switch to the "O" (OFF) position. DO NOT OVER INFLATE OBJECTS.
- 7. Unplug the power cord from 12V DC power outlet.

6. When the object is firm, turn power

TROUBLE SHOOTING

INFLATOR DOES NOT WORK WHEN SWITCHED TO "ON":

- •Power cord may not be plugged in completely. Check the connection.
- · Check vehicle power outlet and power plug terminals for dirt. Use a nonconductive probe, not fingers or metal,
- · Check vehicle power outlet fuse, which should be a minimum of 15 Amps.
- Fuse may have blown. Check fuse in power plug adaptor and replace if necessary with one of the same amperage. NEVER replace a blown fuse with a fuse having a higher rating.

UNIT IS RUNNING BUT TIRE IS NOT INFLATING:

- · Check that the air hose connector is attached properly to the tire valve stem.
- · Check for tire leaks or damage, and check air hose for breaks and leaks at fittings.

INFLATOR FEELS HOT OR RUNS SLOWLY:

- · Unit may have overheated. Shut the unit off and allow to cool for 20-25 minutes.
- NEVER use this inflator for more than 10 minutes continuously.
- · Voltage may be too low. Check condition of vehicle battery.



12V Tire Inflator with LED Light

Model No. 60402

OPERATOR'S MANUAL

Your tire inflator has been engineered and manufactured for dependability, ease of operation, and operator safety. When properly cared for, it will give vou years of trouble-free performance.



AWARNING

Please read and save these instructions. Read carefully before attempting to assemble, install, operate or maintain the product described. Protect yourself and others by observing all safety information. Failure to comply with instructions could result in personal injury and/or property damage! Retain this manual for future reference.

For assistance with this product call 800-426-1262 between 7 a.m. and 4 p.m. Pacific time.