







# ASSEMBLY INSTRUCTION

Item#: 638-85287-DKW Connelly Hall Console

\*\*\* Please make sure you have all parts indicated below prior to assembly.

**This unit is heavy and can best be assembled with the help of two or more people**

NO	HARDWARE LIST		Q'TY
A		FLAT WASHER	21
B		LOCK WASHER	21
C		BOLT	21
D		ALLEN WRENCH	1

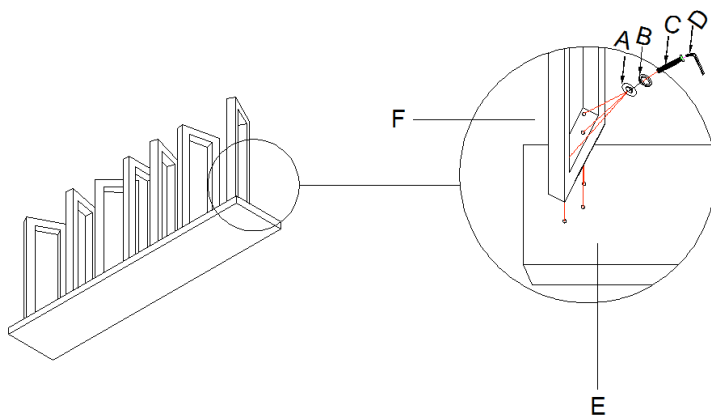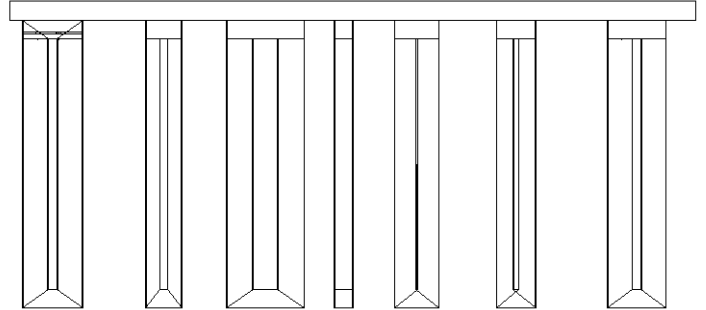


**Diagram 1**

1. Place console top (E) upside down on a soft surface to prevent it from being scratched. (See diagram 1)

2. Align holes on metal leg (F) to holes on top. Secure metal leg to top by using lock washers (B), flat washers (A) and bolts (C), tighten with allen wrench (D) in clockwise direction.

**Caution: Do not over tighten.**

## Instruction Note (For Adjustable Leveler)

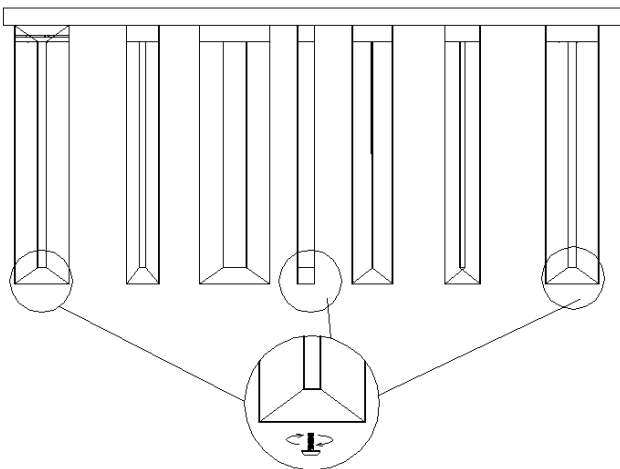

**Diagram 2**

1. The adjustable levelers are packed in hardware bag. If you find this console is not horizontal, please insert the levelers to the underneath of left, center and right legs, then adjust levelers under the legs accordingly to make sure this console to be upright and horizontal. (See Diagram 2)

2. When moving furniture, please lift instead of towing to avoid scratching floor.

**Cleaning Instruction: Clean finished parts with a mild dishwashing liquid and water solution on a damp cloth. Polish the finish with soft cloth and an industry recognized furniture polish.**