

BOX 1 - HEADBOARD			BOX 3 - SIDERAILS				
PART NO.	IMAGE	DESCRIPTION	QUANTITY	PART NO. IMAGE DESCRIPTION QUANTIT			QUANTITY
A		HEADBOARD	1	G		SIDERAIL	2
В		LEFT HEADBOARD LEG	1	BOX 4 - S PART NO.	LAT ROLL IMAGE	DESCRIPTION	QUANTITY
С		RIGHT HEADBOARD LEG	1	Н		SLAT ROLL	1
HARDWARE KIT PACKED IN BOX 1							
1		ALLEN BOLT (6X35mm)	8			R BOX MAY CONTAIN (TRA HARDWARE	
2	0	SPRING WASHER (M6)	8				
3	0	FLAT WASHER (M6)	8		<b>}</b>	0:30	
4		ALLEN KEY	1			NOT PRO	


1

#### **BOX 2 - STORAGE FOOTBOARD**


PART NO.	IMAGE	DESCRIPTION	QUANTITY		
D		STORAGE FOOTBOARD	1		
E		CENTER SLAT	1		
F		LEG SUPPORT	3		
HARDWARE KIT PACKED IN BOX 2					
5	(1) The state of t	WOOD SCREW (8X30mm)	9		
6		ALLEN BOLT (6X40mm)	10		

ALLEN KEY

### ASSEMBLE ON A SOFT SURFACE

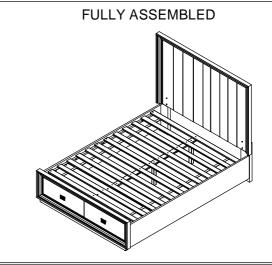


# STEP 1: USE HARDWARE KIT PACKED IN BOX 1 FOR STEP 1.

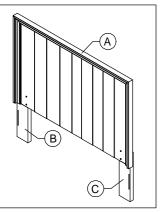

7


UPDATED: JULY 26TH, 2023

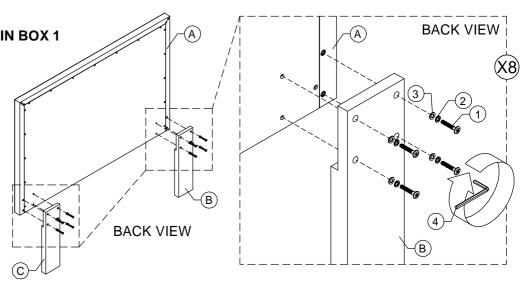




### **STEP 2:**


USE HARDWARE KIT PACKED IN BOX 2 FOR STEP 2 AND ALL REMAINING STEPS.

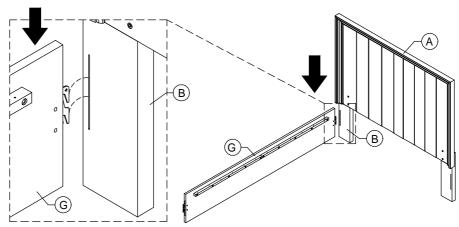


### STEP 3:

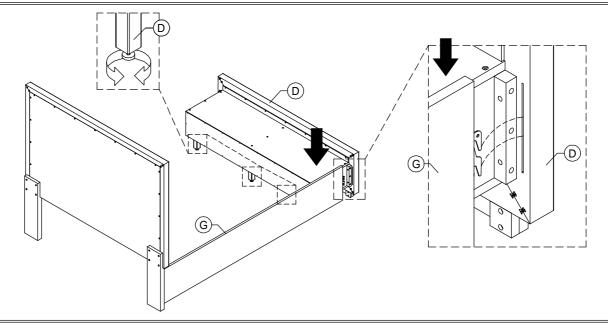



### STEP 4:

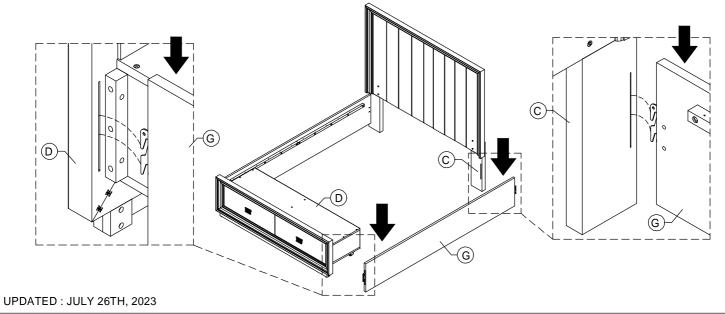





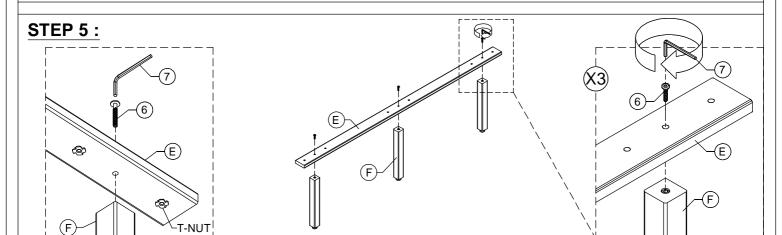

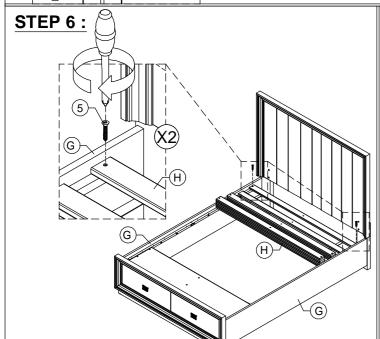

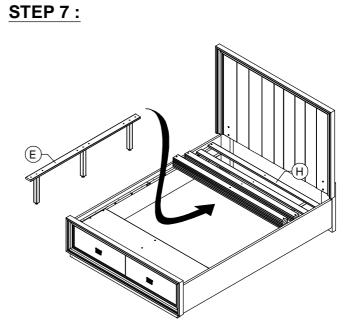


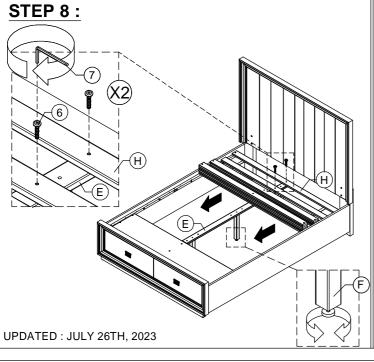


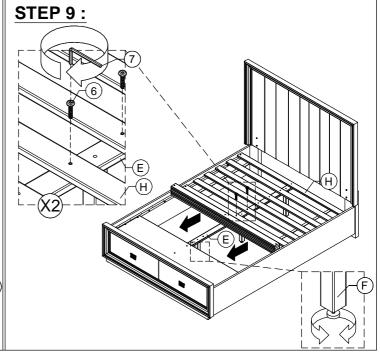



### **STEP 10:**

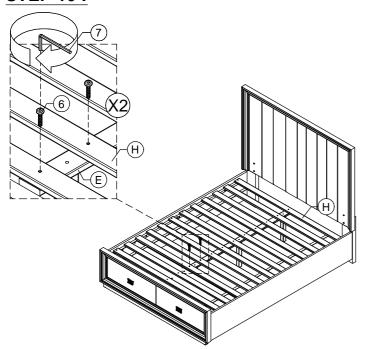

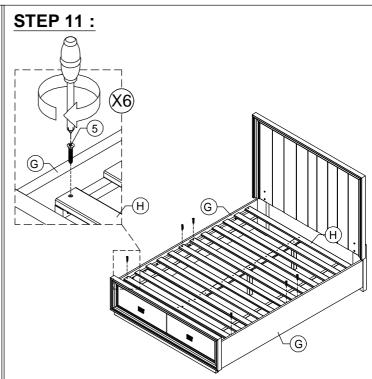

#### **STEP 12:**



#### **ASSEMBLY COMPLETE**

 
### INSTRUCTIONS FOR ADJUSTING LEVELER:

Position the bed in your space and locate the leveler under each leg support (**F**).

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each leg support is applying equal, upward pressure on the center slat.

UPDATED: JULY 26TH, 2023



#### MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.



BOX 1 - HEADBOARD				BOX 3 - SIDERAILS			
PART NO.	IMAGE	DESCRIPTION	QUANTITY	PART NO.	IMAGE	DESCRIPTION	QUANTITY
A		HEADBOARD	1	G		SIDERAIL	2
				BOX 4 - SLAT ROLL			
В		LEFT HEADBOARD LEG	1	PART NO.	IMAGE	DESCRIPTION	QUANTITY
С		RIGHT HEADBOARD LEG	1	н		SLAT ROLL	1
HARDWARE KIT PACKED IN BOX 1				47			
1		ALLEN BOLT (6X35mm)	8	YOUR BOX MAY CONTAIN EXTRA HARDWARE			
2	0	SPRING WASHER (M6)	8				
3	0	FLAT WASHER (M6)	8		<u> </u>		
		ALLEN KEY				0:30	

1

#### **BOX 2 - STORAGE FOOTBOARD**

7

UPDATED: JULY 26TH, 2023

PART NO.	IMAGE	DESCRIPTION	QUANTITY			
D		STORAGE FOOTBOARD	1			
E		CENTER SLAT	1			
F		LEG SUPPORT	3			
HARDWARE KIT PACKED IN BOX 2						
5	<b>3</b>	WOOD SCREW (8X30mm)	9			
6		ALLEN BOLT (6X40mm)	10			


ALLEN KEY

ALLEN KEY

### ASSEMBLE ON A SOFT SURFACE

NOT PROVIDED




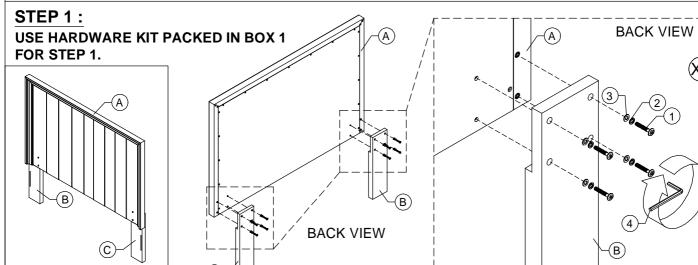




### **STEP 2:**


USE HARDWARE KIT PACKED IN BOX 2 FOR STEP 2 AND ALL REMAINING STEPS.

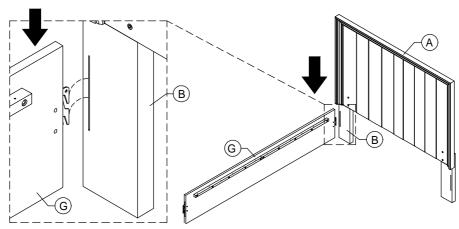


### **STEP 3:**

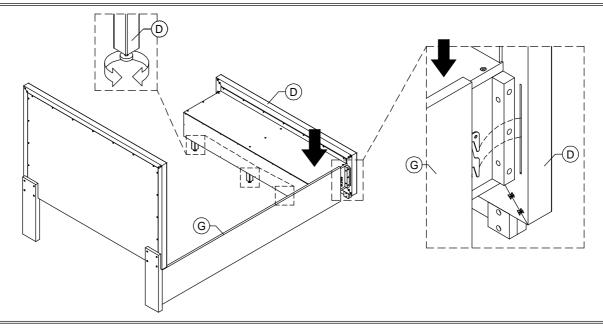



### **STEP 4:**

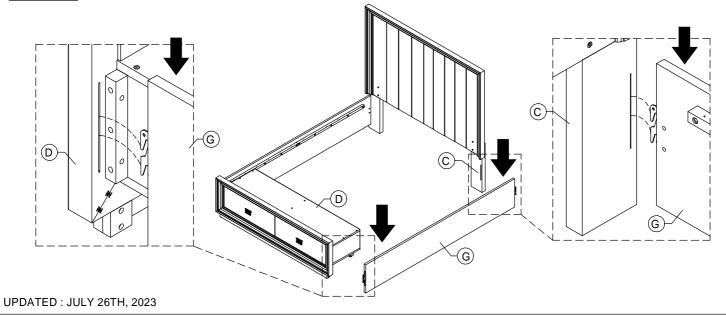





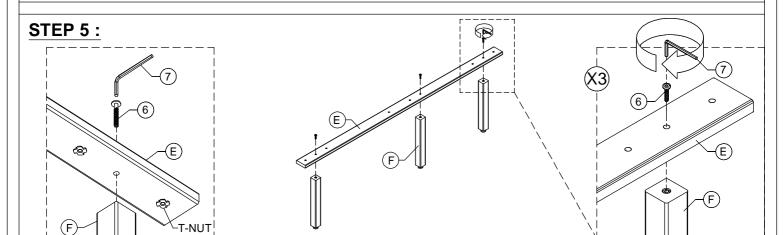

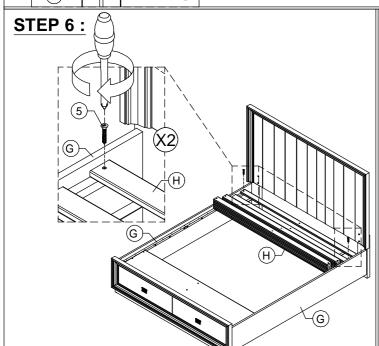

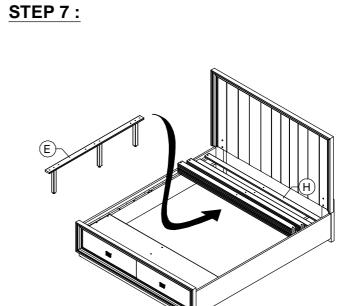


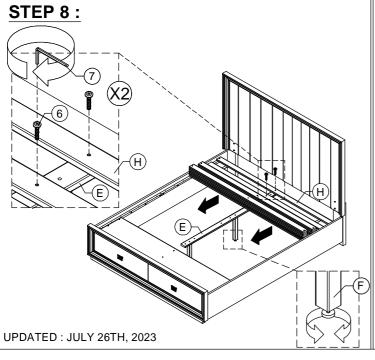


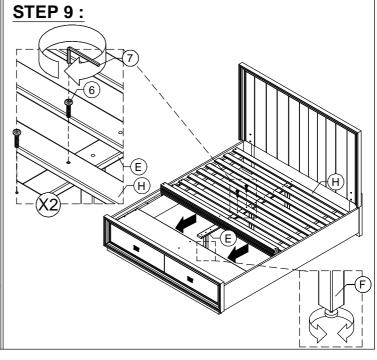



### **STEP 10:**

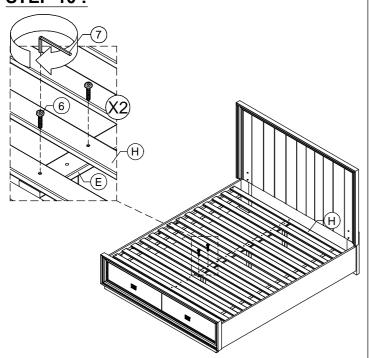

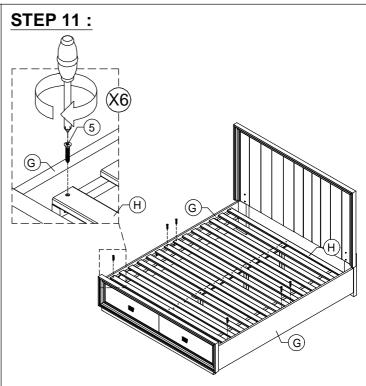

#### **STEP 12:**



**ASSEMBLY COMPLETE** 

 
### INSTRUCTIONS FOR ADJUSTING LEVELER:

Position the bed in your space and locate the leveler under each leg support (**F**).

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each leg support is applying equal, upward pressure on the center slat.

UPDATED: JULY 26TH, 2023



#### MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.