

User's Manual

BV2750UA

MOBILE DVD PLAYER
WITH USB AND SD MEMORY CARD PORTS
AND FRONT PANEL AUX INPUT



BV2750UA

MOBILE DVD PLAYER
WITH USB AND SD MEMORY CARD PORTS
AND FRONT PANEL AUX INPUT

03.2012



iPod® is a trademark of Apple, Inc.
registered in the U.S. and other countries.

tech support: www.bossaudio.com/support

BOSS®
AUDIO SYSTEMS

BOSS Audio Systems
3451 Lunar Court • Oxnard, CA 93030

www.bossaudio.com

800.999.1236

BOSS®
AUDIO SYSTEMS

 
ACCESSORIES

<input type="checkbox"/> Remote control	1Pc
<input type="checkbox"/> Extra Infrared Remote Sensor	1Pc
<input type="checkbox"/> Power Connector	1Pc
<input type="checkbox"/> User Manual	1Pc
<input type="checkbox"/> Audio/Video connecting cable	1Pc
<input type="checkbox"/> Mounting Screw	some
<input type="checkbox"/> 1Din bracket	1Pair
<input type="checkbox"/> Plastic frame	1Pc

- To ensure the safety of the products during transportation, the internal mechanism was fixed up by screws. Please remove the fixing screws when you first use the product.
- In case of possible damage to the components of the product, the length of the fixing screws should be less than 5 MM when installing mounting brackets.

CONNECTION

【Rear Panel Connections】

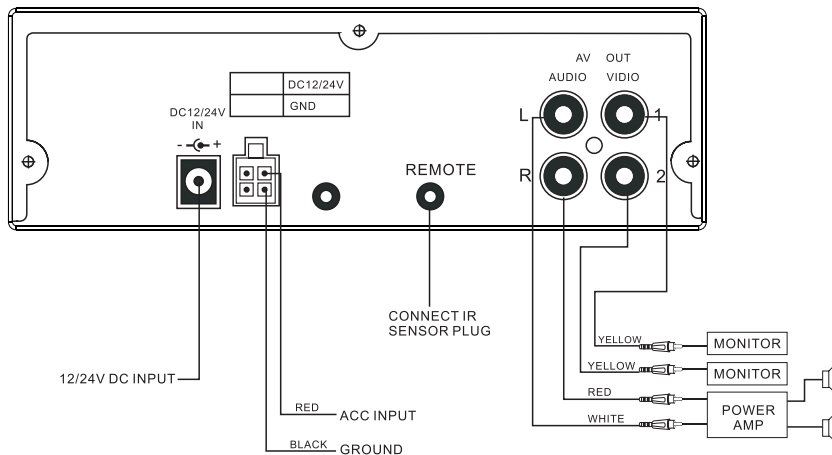

CONTENTS

REMOTE CONTROL	02
FRONT PANEL.....	04
DISPLAY SCREEN.....	05
REAR PANEL.....	05
BASIC OPERATION.....	06
POWER ON/OFF.....	06
MENU SELECTION.....	06
FWD/REV.....	06
TRACK SELECTION.....	07
SUBTITLE LANGUAGE SELECTION.....	07
AUDIO CHANNEL SELECTION.....	07
OSD.....	07
SYSTEM MENU SETUP.....	07
USB/SD OPERATION.....	12
SPECIFICATION.....	12
TROUBLE SHOOTING.....	13
ACCESSORIES.....	16
CONNECTION.....	16

REMOTE CONTROL

(01) POWER

Power on or power off the unit.

(02) MODE

Press this button to select DVD or Aux in or USB or SD mode

(03) ◀◀

While playing, press this button to skip to previous chapter or track.

(04) ▲ (Up direction button)

When the screen display the DVD menu or system menu, the player is under waiting state, you can press this button to move cursor and select the desired item.

(05) ◀ (Left direction button)

When the screen display the DVD menu or system menu, the player is under waiting state, you can press this button to move cursor and select the desired item.

(06) ENTER

Press this button to execute the entered number or the selected item.

(07) ◀◀

Reverse to search the disc.

(08) ▼ (Down direction button)

 
When the screen display the menu of DVD disc or system menu, the player is under waiting state, you can press this button to move cursor and select the desired item.

(9) GOTO

In media play mode, press to play cooperatively used with numeric buttons.

(10) REPEAT

Repeat the selected chapter or title.

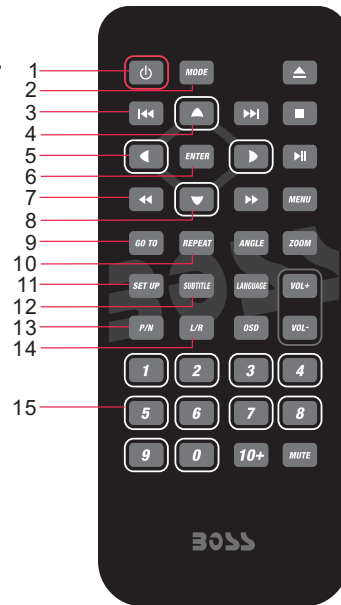

Problem	Action
The remote control does not work properly.	<ul style="list-style-type: none"> ➤ Remove the obstacle between the DVD player and the remote control. ➤ The remote control is positioned too far from the DVD video player. Operate the remote control within the operating distance. ➤ Point the remote control at the remote sensor of the DVD video player. ➤ If the batteries in the remote control are exhausted, please replace batteries with new ones.
Disc playback failure	<ul style="list-style-type: none"> ➤ No disc is inserted. (No disc symbol appears on the screen). Please insert the intended disc. ➤ The disc is placed upside down. Place the disc with the playback side down. ➤ The disc is dusty. Please clean the disc. ➤ There could be humidity in the unit. Please turn on the power and stay for 30 minutes without running the disc.

Disc playback failure	<ul style="list-style-type: none"> ➤ No disc is inserted. (No disc symbol appears on the screen). Please insert the intended disc. ➤ The disc is placed upside down. Place the disc with the playback side down. ➤ The disc is dusty. Please clean the disc. ➤ There could be humidity in the unit. Please turn on the power and stay for 30 minutes without running the disc.
The player fails to play from the beginning.	<ul style="list-style-type: none"> ➤ Because the play mode is in the Program, Random, Repeat or Repeat A-B mode. Press these relative functions again to restore the play mode. (Please refer to the Advanced Operations Chapter.) ➤ While the DVD Title/Chapter or DVD Setup menu is displayed on the TV screen directly, or, while playing Video CD that includes PBC function, the Setup menu is displayed on the TV screen.
Stop playing automatically	<ul style="list-style-type: none"> ➤ Some discs have recorded the automatic pause signal in the original recording. The unit will stop playing automatically at the segment where the signal is recorded.

If the remedies indicated above cannot solve the problem you encounter, consult your local dealer for service.

Problem	Action
SOUND	
No sound	<ul style="list-style-type: none"> ➤ Check for the proper connections of the unit with the TV set and amplifier. ➤ When the amplifier is connected, check if the amplifier power has been turned on and if the cable has been inserted into the appropriate jack. ➤ Please change the audio cable with a new one if the cable is damaged. ➤ If the unit has been played in Slow or Pause mode, press Play to return to the normal playback mode. ➤ If the unit is played in X8, X16, X32 mode, press Play to return to the normal playback speed mode. ➤ When the unit is in System Setting Menu / Program Menu, press System Setting / PRG Play to exit the system Menu / program menu. Or you can press Play to return to the normal playback mode. ➤ If the unit is in the mute mode, please press Mute again to enable the normal sound play. ➤ Turn on the unit's digital output if it is off. ➤ If the sound track 2 of the SVCD is not recorded, no sound will be output when the track 2 is selected. Open up the Console Menu, and select track 1 for playback in the audio selection.
Noise	<ul style="list-style-type: none"> ➤ The disc is dusty and needs to be cleaned. ➤ The noise comes from other interfaces except for DIGITAL OUT OPTICAL or COAXIAL interface if the played CD is DTS standard..
No stereo sound effect when playing video CD or CD	<ul style="list-style-type: none"> ➤ Check if the digital output is turned on. ➤ Press Stereo to select stereo sound.
Operations	

(11) SETUP

For machine setup, please refer to the chapter about machine setup.

(12) SUBTITLE

Switch DVD subtitle channel.

(13) P/N

Switch to PAL or NTSC or AUTO system.

(14) L/R

Switch VCD audio channel.

(15) NUMBER BUTTONS:

[0], [1],... [9] number buttons are used to enter number, e.g. Track No., DVD chapter No., time data, etc.

(16) ▲

Press this button, the disc will be unloaded from the player, and press it again the disc will be loaded.

(17) ■

While playing, press this button once to pause playing, and then press to resume playing. But if you press twice, the playing will be stopped completely.

(18) ►►

While playing, press this button to skip to next chapter or track.

(19) ►||

 
Play or pause current playing.

(20) ► (Right direction button)

When the screen display the DVD menu or system menu, the player is under waiting state, you can press this button to move cursor and select the desired item.

(21) MENU

While playing DVD, press this button to display the option menu included in the disc (whether it works depends on the type of disc).

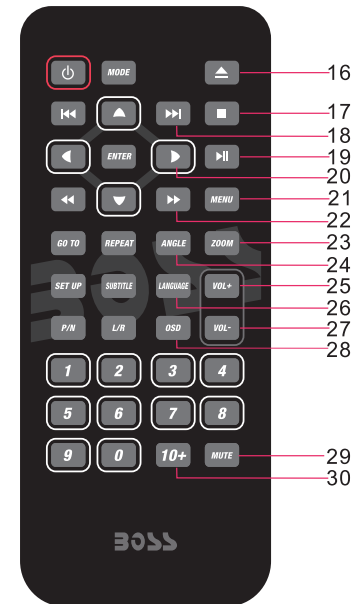

- (22) ►►
Search the disc forward.
- (23) ZOOM
Press this key can zoom the pictures by several kinds of zoom multiple.
- (24) ANGLE
Press to change the view angle on multi-angle DVD disc.
- (25) VOL+
Volume up.
- (26) LANGUAGE
Multi-language selection.
- (27) VOL-
Volume down.
- (28) OSD
Display the unit status such as playing time, playing track information.
- (29) MUTE
Switch on/off the audio output.
- (30) 10+
When you need choose songs with the number over 10, press 1 time, then press the next digits. When you need choose songs with the number over 20, press 2 times, then press the next digits. For example "13", press 10+, then press "3".

FRONT PANEL

- ⏻ : Power on/Power off
- MODE: Mode switch
- ▲ : Up button / VOL+
- ▼ : Down button / VOL-
- ◀ : Left button / Previous track
- ▶ : Right button / Next track
- ⊙ : Enter button
- ▶|| : Play or pause
- ▲ : Eject or loading the disc
- AUX IN: Audio input jack
- USB: USB slot
- SD CARD: SD card slot
- IR: Remote control sensor
- RESET: Reset button

TROUBLE SHOOTING

Before requesting services for this DVD player, please check the items below for a possible cause of the problem you are encountering. Some simple checks or a minor adjustment on your part may eliminate the problem and restore the proper operation.

PROBLEM	ACTION
POWER	
The power supply is disconnected.	➤ Please check if the AC power cord has been connected correctly.
PICTURE	
No picture	<ul style="list-style-type: none"> ➤ Replace the breakage video cable before you turn on the player. ➤ Re-check if the connector of player has been properly connected to TV set. ➤ Connect the video cable securely into the appropriate jacks and ensure that the equipment is connected firmly. ➤ Ensure that the power of TV set is turned on. ➤ Make sure if the appropriate video input mode is selected on the TV, so that the video image can be displayed on the screen properly.
Picture distortion	<ul style="list-style-type: none"> ➤ The disc is dusty and needs to be cleaned. ➤ It is normal for some distortion to occur when the Progressive Scan Mode of DISPLAY Setup is selected, even if the TV set is compatible with the progressive scan mode (525p). Therefore, please change the Scan Mode to Interlaced Scan.
Picture not suit TV screen	➤ The troubled images may not be able to fill up the whole TV screen even after the Picture Mode of the Audio Menu is set. This is because the DVD images are fixed in width.

USB/SD OPERATION

When insert the USB/SD Storage Device into the USB/SD slot, the player will auto search the directories saved MP3 / JPEG files. Also we can use mode button on remote controller to switch state between usb and disc.


Note: The USB / SD port function just be valid for flash memory USB/SD device (Support format: MP3, WMA, MPEG -4)

Noted: When power on, the default is AUX mode if without DISC/USB/SD, and the default is DVD if DISC inside.

SPECIFICATIONS


General	Power Supply	DC 12V/24V
	Power Consumption	10 Watt.
	Net Weight	1.2kg
	Dimensions	L160 x W160 x H50 mm
	Operating Temperature Range	-20°C~65°C
Disc	Disc Type	12 cm CD/CD-R/CDRW 12cm DVD/DVD-R/DVD+RW
	Playable	CD-Audio/HDCD/MP3/WMA /VCD/SVCD/Kodak Picture CD /DVD/DIVX/MPEG
Video Output	Composite Video	1.0 Vp-p (75 ohm load)
Audio	Analog Audio	2 channel Dolby AC-3 or DTS downmix 2 Vrms (@1KHz)
	S/N Ratio	≥85 dB
	Dynamic	≥80 dB

DISPLAY SCREEN

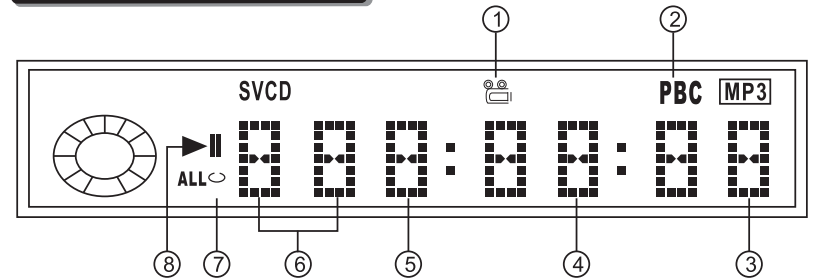

1. Angle selection
2. PBC on/off symbol
3. Second display
4. Minute display
5. Hour display
6. Chapter or title select
7. Repeat symbol
8. Play/Pause symbol

 REAR PANEL

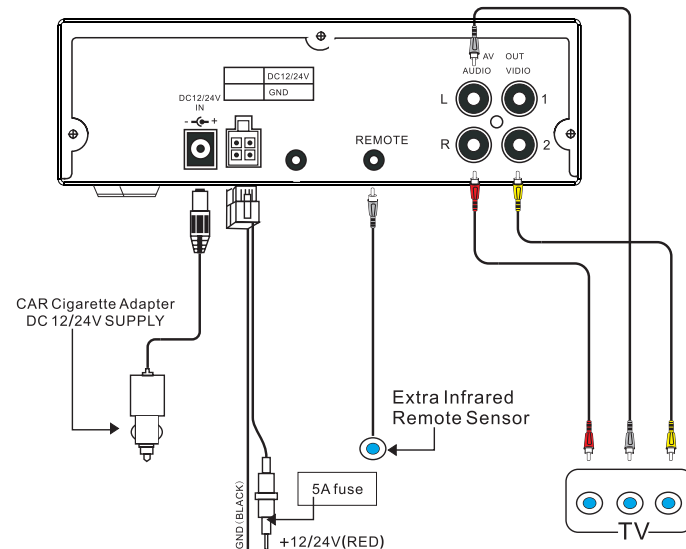

POWER ON/OFF

1. Press **⏻** /POWER button on remote controller or on the front panel of player.
2. When normal playback, press **⏻** / POWER button for about 3 seconds, unit will power off.
3. Operate TV remote control to shift TV to proper video input mode (VIDEO IN).
4. Put a disc into the disc entrance, with label side upward.
5. The player will slot in the disc automatically, and begin to read it. It can identify different disc formats then display it on the TV screen. If directory or menu picture display on the screen, you can press the direction buttons (**▲**, **▼**, **◀** and **▶**) on the remote control to move cursor to desired title and press [ENTER] button to select it, also you can directly press number buttons to select track.

MENU SELECTION

If the DVD disc has menu, you can display the menu by pressing MENU button, then you can select a popular item to play according to following procedures.

1. Press MENU the screen display menu picture, the content to be selected varies with different discs.
2. Press the directory buttons (**↑**, **↓**, **←** or **→**) to select the desired item.
3. Press ENTER to confirm the selected item.

FWD/REV

When you press FWD/REV under the play mode, the unit will start to forward / reverse. You can play discs at various speeds. With each consecutive press of FWD / REV, the playback speed changes. There are 4 speed levels for DVD discs in FWD/REV: X2, X4, X8, X16, X32. There are 4 speed levels for disc types other than DVD disc: X2, X4, X8, X16, X32. Press PLAY to resume the normal playback.

【Set password】




The password option is initialized locked, and you cannot set the ratings limit or change the password. In order for the ratings feature work, the password mode must be turned on. If you want to set the ratings limit, you will need to enter the default password, which is 1369, then press enter to confirm. To change the password, you will be prompted for the old password, then be prompted for a new. Enter a 4-digit number (this is your password).

Notes: Some time, the password is 4 - digit number, the default is 1369.

The rating feature is a rating limit system, like movie ratings. It works with DVD discs that have been assigned a rating. This helps you control the types of DVDs that your family watches.

There are two rating options: NO ADULT and KID SAFE. Select the VIEW ALL option to cancel the rating limit. The default setting is VIEW ALL.

【Use Default settings】

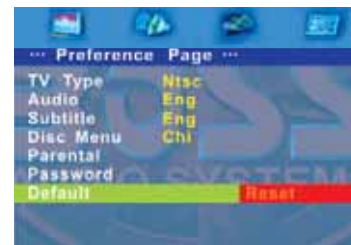


Choose this option to resume all the setup options to default settings.

16 : 9 (Wide Screen): Choose this setting if your DVD player is connected to a wide screen TV. You'll see the movies in their original aspect ratio (height- to-width ratio). If you choose this setting and you don't have a wide screen TV, the images on the screen may appear distorted due to vertical compression.

4 : 3 LB (Letter Box): Choosing this setting if your DVD player is connected to a normal ratio TV. You'll see the entire frame of the movie, but it will take up a smaller portion of the screen vertically. The movie might appear with black bars at the top and bottom of the screen.

【TV System】

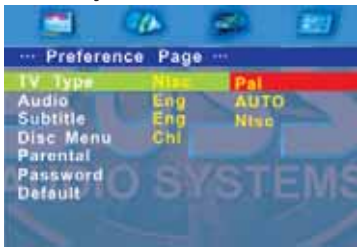

According to the Color System of the TV, you can choose the TV System.


AUTO : Choose this settings if your DVD player is connected to a multi-system TV.

NTSC : Choose this settings if your DVD player is connected to a NTSC TV.

PAL : Choose this settings if your DVD player is connected to a PAL TV.

The default setting is NTSC.

【Rating set】

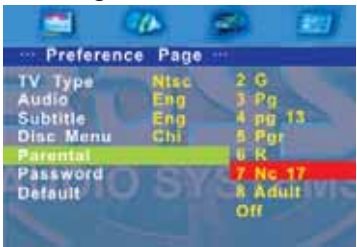

Press **↑/↓/←/→** direction button to select a item, then press **ENTER**.

TRACK SELECTION

There are more than one operation procedures available:

1. Press **▶▶** or **◀◀** to skip to the next or the previous track and play.
2. For those discs with track number, directly press number buttons to enter the No. of desired track. If the screen displays “Φ” there may be three possible reasons:
 - (1) The track in the disc is not numbered.
 - (2) The number entered is beyond the scope.
 - (3) The disc has no number select function .
3. Select among the song track list (such mp3 etc. menu list)

SUBTITLE LANGUAGE SELECTION

For DVD discs, you can press **SUBTITLE** to switch the subtitle language. Keep pressing it, and the screen will display available languages alternatively.

AUDIO CHANNEL SELECTION

For DVD discs, you can press **LANGUAGE** to switch the audio channel.

And for other discs, press **L/R** button to switch L/R channel.

OSD

Press **OSD** button, TV screen will display current playing time and state, i.e. playing time and remaining time, playing chapter/track information, press **OSD** each time, the screen will show a time alternatively.

SYSTEM MENU SETUP

Press **SETUP** button on the remote control to bring up the System Setup Menu when the unit is under the stop/playback mode.

【Language Setup】

 
Press ↑/↓/←/→ direction button to select a item, then press ENTER.

【OSD Language】



OSD menu set allow user to choose language for OSD menu and information display set option (as picture).


【Subtitle】

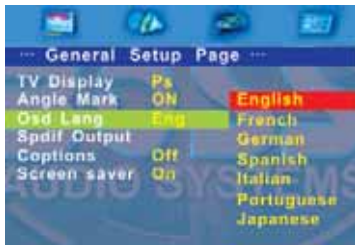

User can set subtitle language(DVD disc) option.

Note: Some disc can use subtitle display different from menu set.

 
【Audio】

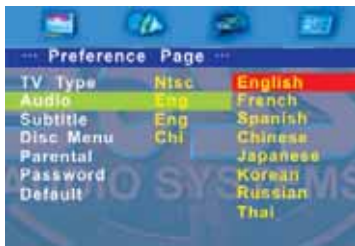

User can set initials dub language setup(DVD disc).

Note: Some DVD discs dub language are different from dub language setup.

 
【DVD MENU】

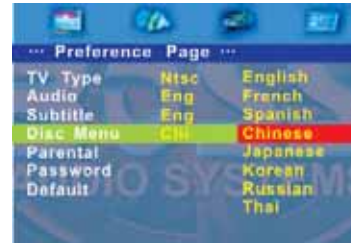

User can set DVD menu language(DVD disc)item select as.

Note:Some DVD menu use as different language display.

 【Video Set】

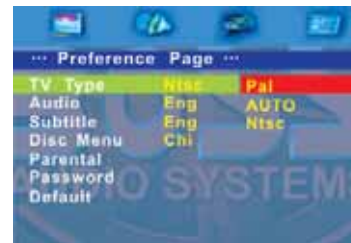

Press ↑/↓/←/→ direction button to select an item, then press ENTER.

【Aspect Ratio】

