 


INSTRUCTIONS FOR SETUP

To contact NEMO Customer Service
Email: journey@nemoequipment.com
Phone: 800-997-9301

1 Stake Corners

Secure the corner grommet anchor points by pounding stakes into the ground with a rock or hard object. If the ground is too hard, tie the anchors to a rock or another heavy object.





2 Set up Poles

Slide the pole with red tips through the front pole sleeve and connect it to the grommets with red webbing. Insert the pole with silver tips in the back sleeve and connect to the grommets in grey webbing.



3 Tarp Pole/Anchor Tarp Pole

Insert the tarp pole end tip into the black metal ring at the front of the oversized vestibule and extend pole. Then anchor the tarp pole by staking out the front guy line.

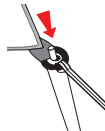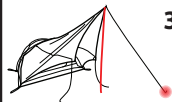


4 Stake Out Vestibule(s)

Stake out the remaining two guylines on the front vestibule, along with the two rear vestibule stake points. Tighten all LineLocs and cord tensioners to ensure proper tension in the fly.



5 Attach Inner Tent

Attach the inner tent to the underside of the rainfly by passing toggles attached to the inner tent through the rings attached to the rain fly. Finally, attach the corners of the inner tent to the rain fly using the side release buckles. Tension SR buckles as needed.

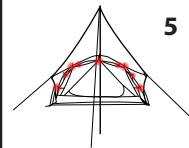

©2018 NEMO Equipment, Inc.



Remember to leave no trace. Before leaving your campsite, take a thorough look around making sure you have not left anything behind, out of place, or damaged.

FRONT PORCH™ 2P