


SHIMANO

TRAX

S A-RB

TRX-500PG

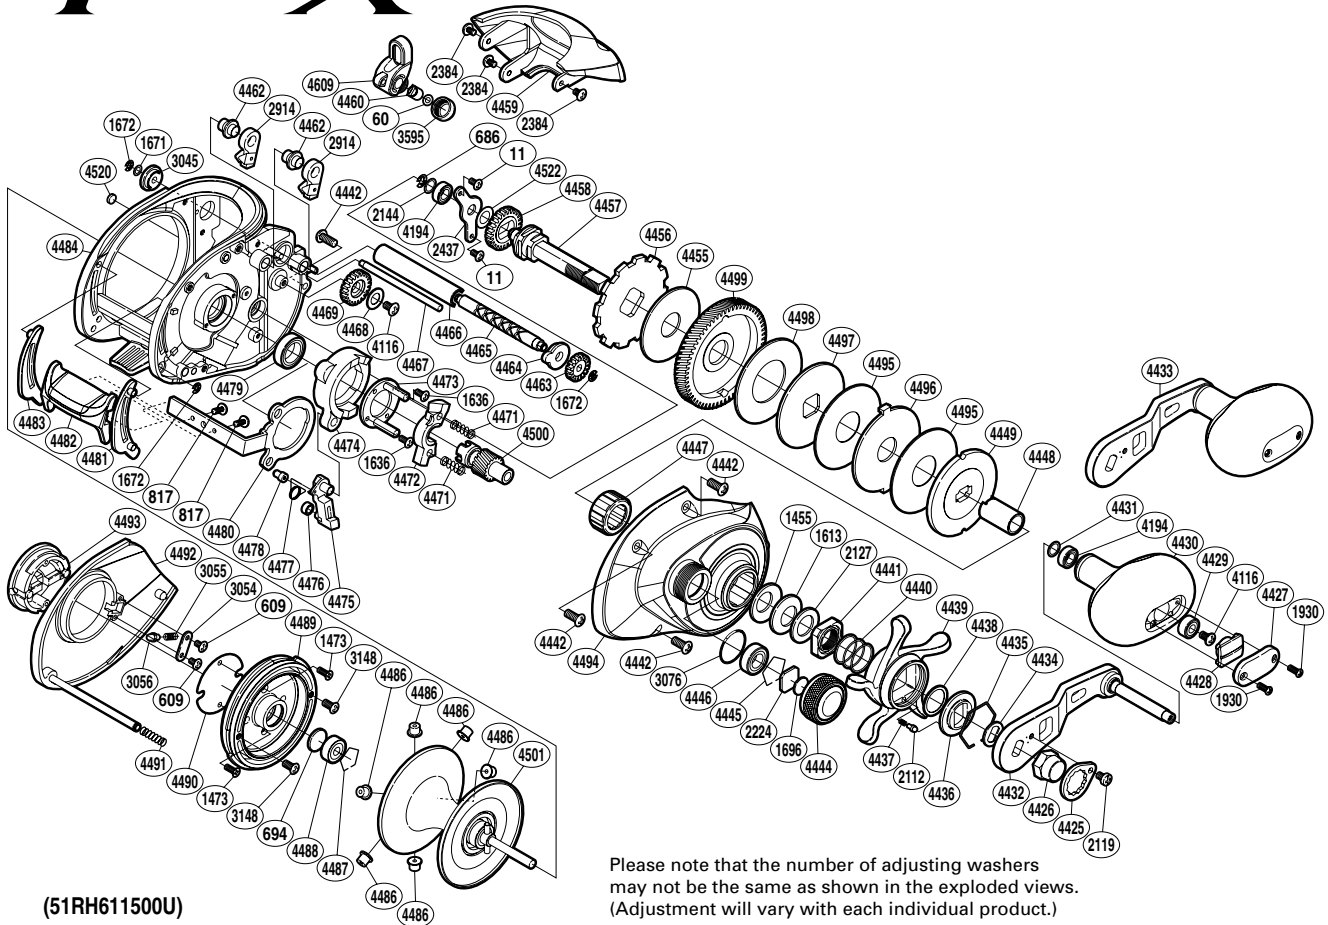

(51RH611500U)

Please note that the number of adjusting washers may not be the same as shown in the exploded views. (Adjustment will vary with each individual product.)

Part No.	Description	Part No.	Description	Part No.	Description
BNT0011	Screw	BNT4428	Handle Knob Seal	BNT4469	Idle Gear
BNT0060	Spacer	BNT4429	Ball Bearing	BNT4471	Yoke Spring
BNT0609	Screw	BNT4430	Handle Knob	BNT4472	Yoke
BNT0686	E Lock	BNT4431	Washer	BNT4473	Clutch Cam Retainer
BNT0694	Spacer B	BNT4432	Handle Shank Assembly	BNT4474	Clutch Cam
BNT0817	Screw	BNT4433	Handle Assembly	BNT4475	Clutch Pawl
BNT1455	Coned Disc Spring (8H)	BNT4434	Drive Shaft Shield	BNT4476	Clutch Pawl Bushing
BNT1473	Screw	BNT4435	Click Plate Retainer	BNT4477	Clutch Pawl Spring
BNT1613	Coned Disc Spring (8L)	BNT4436	Star Drag Click Plate	BNT4478	Clutch Pawl Spring Collar
BNT1636	Screw	BNT4437	Click Spring	BNT4479	Ball Bearing
BNT1671	Washer	BNT4438	Washer	BNT4480	Clutch Plate
BNT1672	E Lock	BNT4439	Star Drag	BNT4481	Clutch Bar Guide B
BNT1696	Cast Control Spacer	BNT4440	Star Drag Spring	BNT4482	Quick-Fire II Clutch Bar
BNT1930	Screw	BNT4441	Star Drag Nut	BNT4483	Clutch Bar Guide A
BNT2119	Screw	BNT4442	Screw	BNT4484	One-Piece Frame
BNT2122	Click Pin	BNT4444	Cast Control Cap	BNT4486	Brake Collar
BNT2127	Star Drag Spacer	BNT4445	Bearing Retainer	BNT4487	Bearing Retainer
BNT2144	Washer	BNT4446	Ball Bearing	BNT4488	Ball Bearing
BNT2224	Spool Tension Spacer	BNT4447	Roller Clutch Bearing	BNT4489	Brake Case
BNT2384	Screw	BNT4448	Roller Clutch Inner Tube	BNT4490	Brake Case Spacer
BNT2437	Drive Shaft Retainer	BNT4449	Pressure Plate	BNT4491	Damper Spring
BNT2914	Anti-Reverse Pawl	BNT4455	Drag Washer	BNT4492	Left Side Plate
BNT3045	Worm Bushing B	BNT4456	Anti-Reverse Ratchet	BNT4493	Turnkey Dial
BNT3054	Click Pin Retainer	BNT4457	Drive Shaft	BNT4494	Right Side Plate
BNT3055	Click Spring	BNT4458	Idle Gear	BNT4495	Drag Washer
BNT3056	Click Pin	BNT4459	Thumb Rest	BNT4496	Eared Washer
BNT3076	O Ring	BNT4460	Line Guide Pawl	BNT4497	Drag Washer
BNT3148	Screw	BNT4462	Anti-Reverse Pawl Shaft	BNT4498	Drag Washer
BNT3595	Pawl Cap	BNT4463	Idle Gear	BNT4499	Drive Gear
BNT4116	Screw	BNT4464	Worm Bushing A	BNT4500	Pinion Gear
BNT4194	Ball Bearing	BNT4465	Worm Shaft	BNT4501	Spool Assembly
BNT4425	Handle Nut Plate	BNT4466	Level Wind Guard	BNT4520	Anti-Thrust Washer
BNT4426	Handle Nut	BNT4467	Level Wind Guide	BNT4522	Washer
BNT4427	Handle Knob I.D. Plate	BNT4468	Washer	BNT4609	Line Guide

(250108)