

### BATTERY WARNING:

- Remove the cover as shown and insert 2AA batteries following the + and - icons inside the vacuum
- Remove dead or exhausted batteries
- Do not mix old and new batteries
- Do not mix standard (carbon zinc), alkaline, rechargeable (nickle cadmium) or lithium batteries
- Do not recharge non-rechargeable batteries
- Dispose of batteries safely, following guidelines for your area
- Clean the battery contacts and also those of the device prior to battery installation

Insert 2 AA batteries (not included) by pressing the side tab and releasing the top, as shown.



### Turning on/off



To start and stop the vacuum, press the top button.

### Using the attachment

Insert nozzle into center of vacuum bottom.



Use the nozzle to get into hard to reach areas.

## Emptying Vacuum

To empty, twist the top counterclockwise to separate from bottom.



Use the brush to clean out vacuum debris.

## Reassembly

Align the arrow symbols on top and bottom of vacuum.



## Reassembly



To close, twist the top clockwise to attach to bottom.



Shop all  
our artist  
accessories



770329  
Artist Desktop Vacuum  
© Faber-Castell USA, Inc.  
Cleveland, Ohio 44131