

KINGSTON

REPAIR AND MAINTENANCE

INSTRUCTIONS

REPAIRS

1. Turn off the engine and disconnect the battery.
2. Remove the cover of the engine.
3. Remove the air filter and clean it.
4. Check the oil level and top up if necessary.
5. Check the spark plug and replace if necessary.
6. Check the timing belt and replace if necessary.
7. Check the water pump and replace if necessary.



DISASSEMBLY

1. Turn off the engine and disconnect the battery.
2. Remove the cover of the engine.
3. Remove the air filter and clean it.
4. Check the oil level and top up if necessary.