

ITEM# 81586

Bella Maison 60" corner TV console

Leick
Home
SINCE 1910

2219 S. 19th St.

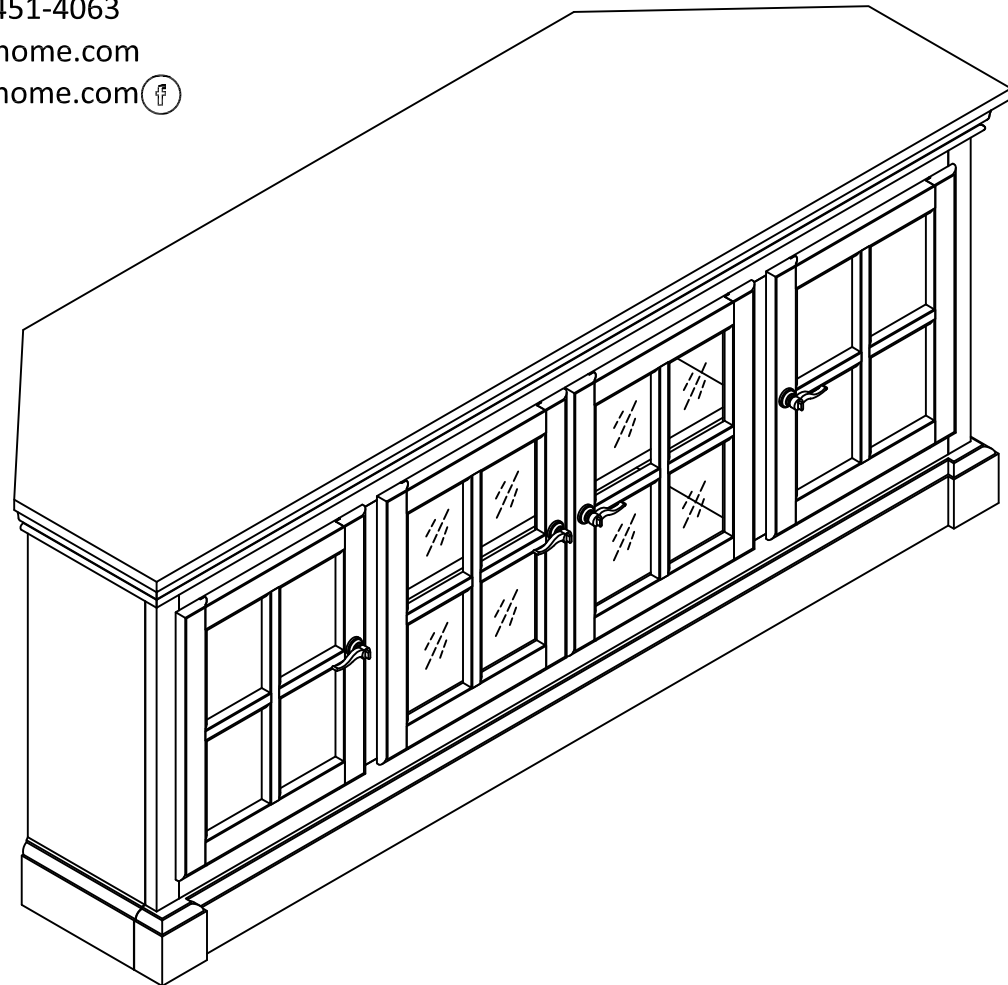 
Sheboygan, WI 53081

Ph: 920-451-4060

Fax: 920-451-4063

info@leickhome.com

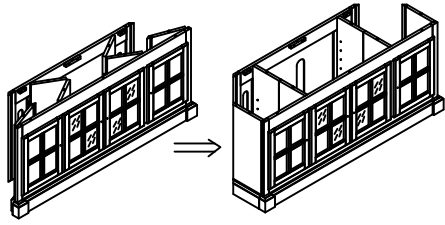 
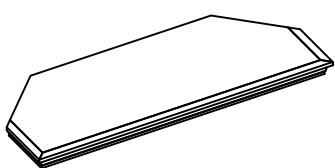 
 
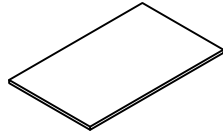 
 
 
 
 
 
www.leickhome.com



Hardware List

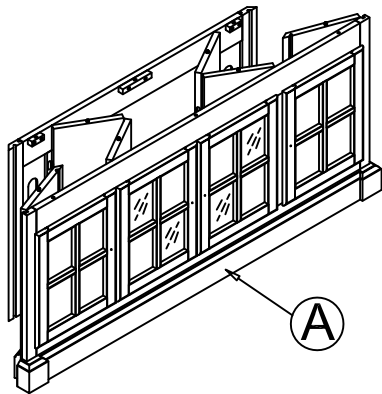 
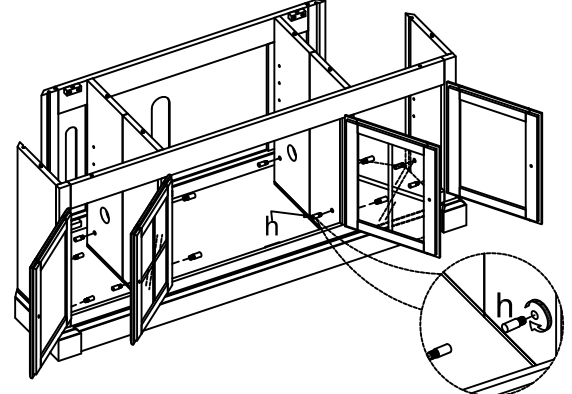 
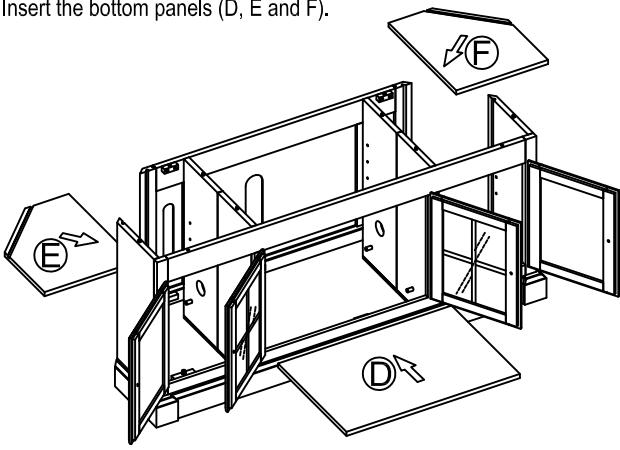 
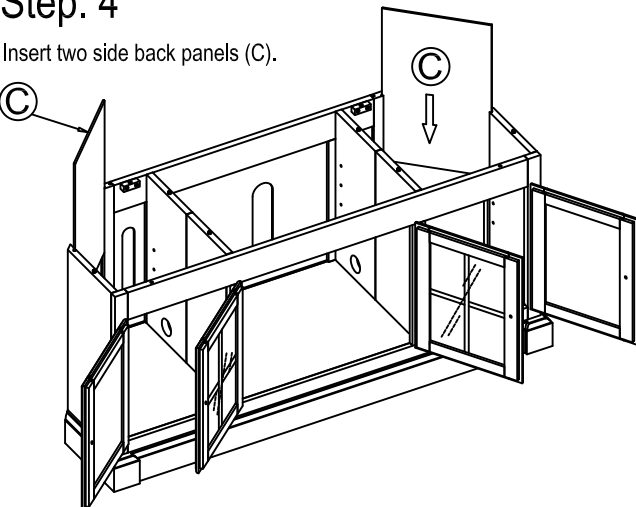 
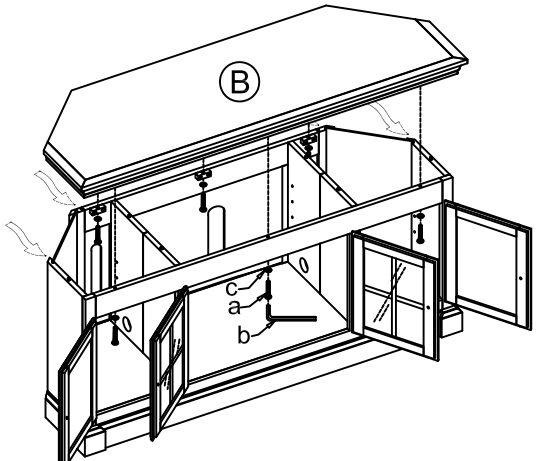 
Item	Description	Qty
a	Bolt 1/4" X 1-1/8"	6PCS
b	Allen wrench	1PC
c	Washer 1/4" X 12mm	6PCS
d	Flat Shelf Supports	12PCS
e	Left Door Pull	2PCS
f	Right Door Pull	2PCS
g	Machine screw for door pull 5/32" X 3/4"	4PCS
h	Rounded Shelf Supports	12PCS

Parts List

Item	Description	Qty
	Cabinet	1PC
	Top Panel	1PC
	Side Back Panel	2PCS
	Middle Bottom Panel	1PC
	Left Side Bottom Panel	1PC
	Right Side Bottom Panel	1PC
	Middle Adjustable Shelf	1PC
	Left Side Adjustable Shelf	1PC
	Right Side Adjustable Shelf	1PC

Assembly Instructions

Two person assembly recommended.

<p>Step: 1 Unfold Cabinet.</p> 	<p>Step: 2 2.1 Open four doors. 2.2 Screw-in 12 round shelf supports (h) onto vertical panels & side panels.</p> 
<p>Step: 3 Insert the bottom panels (D, E and F).</p> 	<p>Step: 4 Insert two side back panels (C).</p> 
<p>Step: 5 5.1 Place the top panel (B) above the case, make sure all wooden dowels are fully inserted into the holes on top panel's bottom surface. 5.2 Fasten the top panel (B) with 6 bolts. Slightly push the upper frame of back panel inward to keep it aligned with top panel's back edge if needed while inserting the allen bolt.</p> 	<p>Step: 6 6.1 Install flat shelf supports (d) and insert shelves (G, H and I). 6.2 Install door pulls (e and f).</p> 