

THE BATTERY

THE BATTERY IS THE HEART OF THE CAR. IT PROVIDES THE POWER TO START THE ENGINE AND TO RUN THE ELECTRICAL SYSTEMS. IT IS ESSENTIAL FOR THE CAR TO OPERATE.

THE BATTERY IS MADE OF LEAD AND ACID. IT IS A RECHARGEABLE BATTERY. IT CAN BE RECHARGED BY THE ALTERNATOR WHEN THE ENGINE IS RUNNING.

THE BATTERY IS LOCATED IN THE FRONT OF THE CAR. IT IS PROTECTED BY A BATTERY COVER. IT IS IMPORTANT TO CHECK THE BATTERY LEVELS REGULARLY.

MAINTENANCE

Item	Frequency	Notes
Check battery level	Weekly	Use a hydrometer to check the specific gravity of the cells.
Check electrolyte level	Weekly	Top up with distilled water if necessary.
Check battery terminals	Monthly	Clean any corrosion and tighten the terminals.
Check battery cover	Monthly	Ensure the cover is secure and undamaged.

FOR MORE INFORMATION, CONTACT YOUR LOCAL DEALER.

DISASSEMBLY



DISASSEMBLY INSTRUCTIONS:
1. Disconnect the negative terminal.
2. Disconnect the positive terminal.
3. Remove the battery cover.
4. Remove the battery cells.