 


# B E R N H A R D T

## ASSEMBLY INSTRUCTIONS FOR 305-865 CREDENZA

Thank you for purchasing Bernhardt furniture. Please check all packing materials to ensure proper assembly. Please read all instructions carefully before starting the assembly process. Some parts are large and heavy and require at least two people to assemble, in order to prevent possible injury and/or damage to the piece.

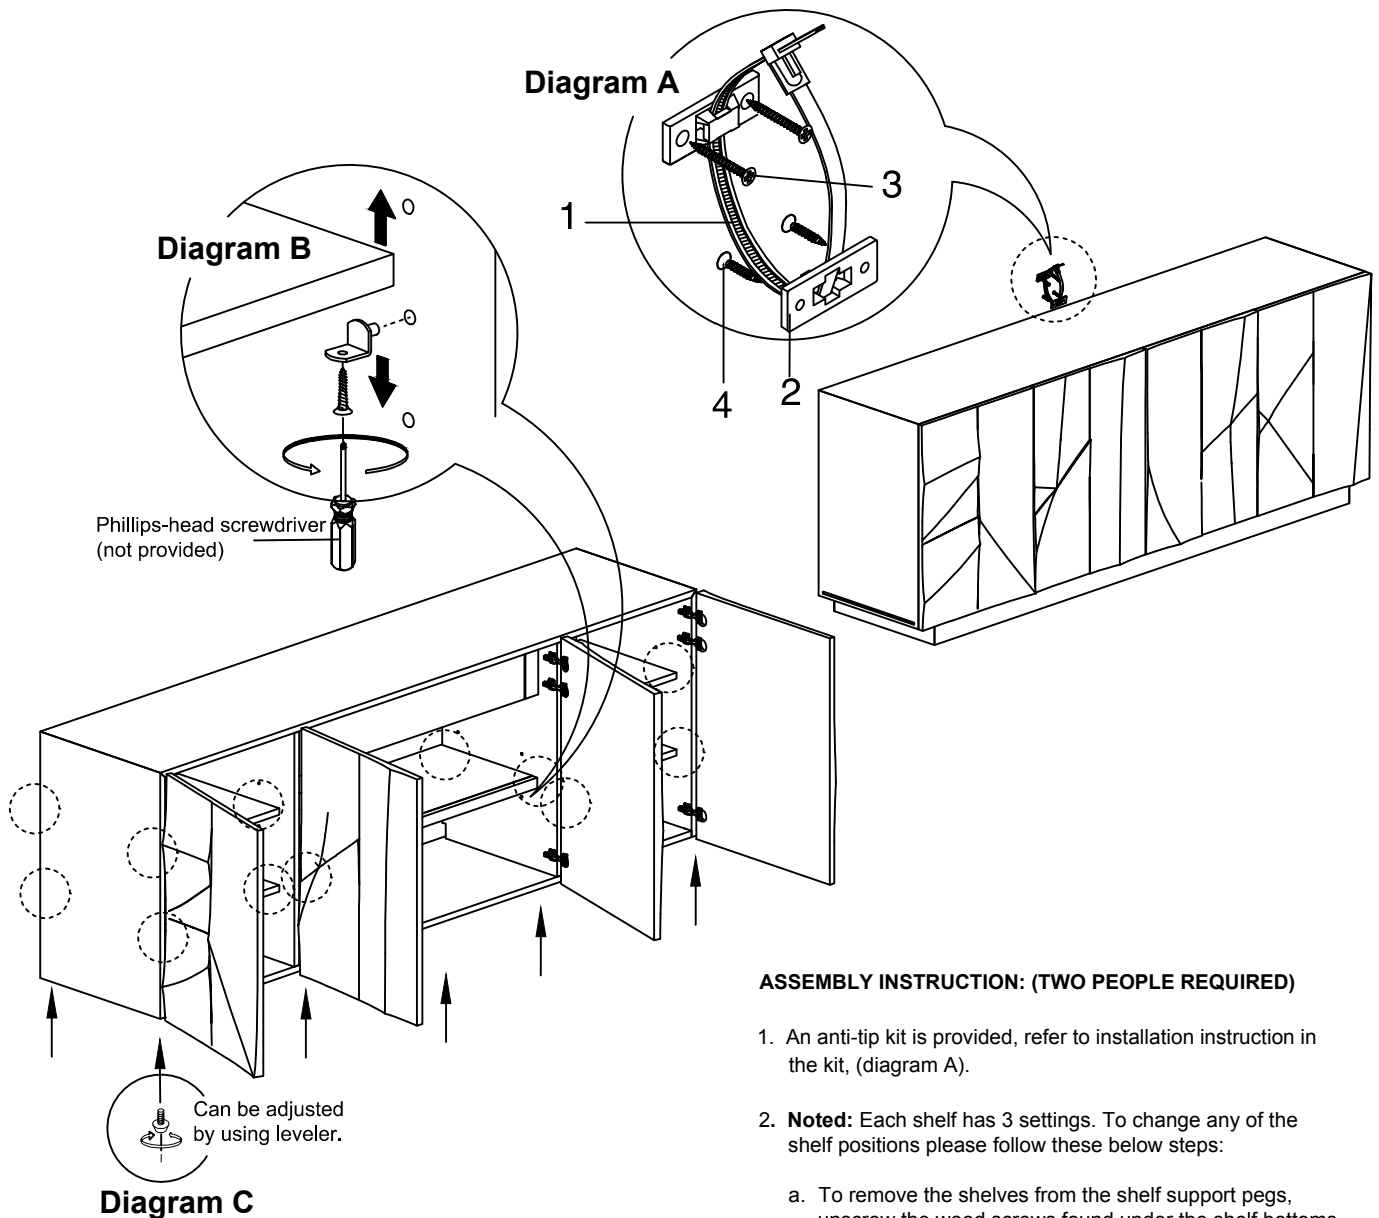

### ASSEMBLY INSTRUCTION: (TWO PEOPLE REQUIRED)

1. An anti-tip kit is provided, refer to installation instruction in the kit, (diagram A).
2. **Noted:** Each shelf has 3 settings. To change any of the shelf positions please follow these below steps:
  - a. To remove the shelves from the shelf support pegs, unscrew the wood screws found under the shelf bottoms.
  - b. Remove the shelf support pegs and insert them into the corresponding holes of the new desired position.
  - c. Place the shelf onto the shelf support peg and make sure each shelf is stable.
  - d. Insert the original wood screws through the holes of shelf support pegs and into pre-drilled holes on the shelves.
  - e. Tighten the screws using a Phillips-head screwdriver (not provided). Do not over tighten, (diagram B).
3. Level the case using the screw-in levelers on the legs, (diagram C).

### HARDWARE PACK

NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
1		Plastic brackets		2pcs
2		Restraint strap		1pc
3		Phillip Screws	M4x30mm	2pcs
4		Phillip Screws	M4x19mm	2pcs

### CLEANING INSTRUCTIONS:

Clean surfaces with a clean soft damp cloth.

# B E R N H A R D T


## European Hinge Door Adjustment

Thank you for purchasing Bernhardt Furniture. In some instances, the doors may hang uneven or not close correctly making it necessary to adjust the European Door Hinge.

Please read all instructions carefully before starting the adjustment process. Some parts are large and heavy and require **AT LEAST TWO PEOPLE** to adjust, to help prevent possible injury and/or damage to the piece.

Adjust Hinge so Door Strike Plate aligns with Magnetic Door Catch in the Case and Closes Securely.


To adjust Height:

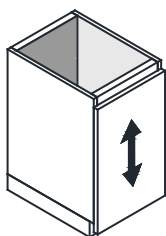

1. Loosen the top and bottom screws which are attached to the frame of all door hinges.
2. Slightly adjust the height either up or down. Re-tighten the screws slightly, close the door to check the alignment. Continue until door height is correct.
3. Once correct height is set, firmly tighten the screws.




To adjust Depth:

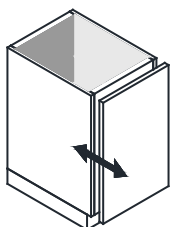

1. Use the screw at the back of the slider to adjust door depth.
2. Turn the screw clockwise to move the door out and counterclockwise to move the door in.



To adjust Side to Side:

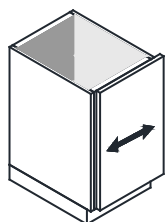

1. Use the screw at the front of the slider to adjust door side to side.
2. Turn the screw clockwise to move the door to the left and counterclockwise to move the door to the right.



**NOTE:** Hinge replacement part order requires hinge location on case. Left door, center door, right door.