

Thank you for choosing Sunnydaze Decor. We stand behind our brand and the quality of the items we sell. Replacement parts or products will be sent at our discretion within the 1-year warranty period. Proof of purchase, with the date of purchase as well as photos of the merchandise defect, must be provided. Photos are used to determine the cause of defects and for future quality control. Register your warranty at <https://tiny.cc/SunnydazeWarranty>. If you have any questions, comments or concerns, feel free to contact us by phone at 833-982-1977, by email: [customerservice@sunnydazedecor.com](mailto:customerservice@sunnydazedecor.com), or via our contact us page at <https://tiny.cc/SunnydazeContact>

# MERANTI WOOD PATIO SWING WITH CANOPY













## STR-338














Read all assembly and care instructions carefully before using this product.  
Save this manual for future reference.

**Assemble components on a soft, clean surface to avoid scratching or damaging the finish.**



Inspect packaging to ensure all parts are accounted for before disposing of packing materials.

NO.	PARTS	QTY.
A	 A-Frame Leg	4
B	 Lower Stretcher	2
C	 Top Rail	1
D	 Bottom Rail	1
E	 Top Stretcher	2
F	 Stabilizer Bracket	2
G	 Short Canopy Frame	2
H	 Long Canopy Frame	2
I	 Backrest	1
J	 Seat	1
K	 Arm Frame (L&R)	2
L	 Canopy	1

NO.	HARDWARE	QTY.
1	 Chain with Hardware: 1) Plastic Tube 1) JCBC M8x55mm Bolt 1) M8 Eye Hook 2) M8 Lock Nut 2) 5/16 x 23 Washer 2) M8x25mm Plastic Washer  1) JCBC M6x45mm Bolt 1) M6 U-Bolt 1) M6 Lock Nut 1) M6 x 13 Washer	2
2	 M4 Hex Key	1
3	 M5 Hex Key	1
4	 Barrel Nut Driver	1
5	 M10 Spanner	1
6	 M13 Spanner	1
7	 JCBC M6 x 65mm Bolt	4
8	 JCBC M6 x 60mm Bolt	10
9	 JCBC M6 x 55mm Bolt	4
10	 JCBC M6 x 45mm Bolt	22
11	 Barrel Nut	8
12	 M6 x 13 Washer	10
13	 M6 Lock Nut	10

### WARNING

**CHOKING HAZARD** — This item contains small parts that can be swallowed. Keep children away during assembly.

**NOTE:** Save the included tools. Wood expands and contracts with changes in temperature and moisture, which may require hardware to be tightened.


# ASSEMBLY

Read carefully and understand assembly before beginning.

Do not fully tighten bolts until all components have been loosely assembled.

## STEP 1

A: 4  
B: 2  
10: 4

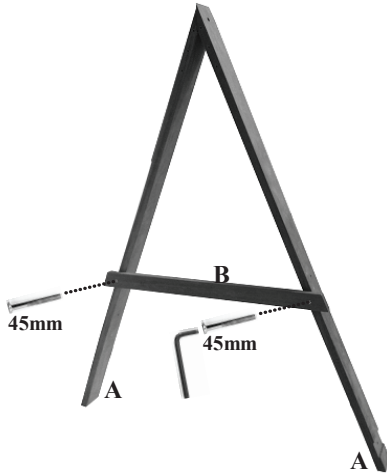


Ensure the notch for the bottom rail is facing outward.


- Align Lower Stretcher (B) with A-Frame Legs (A).
- Secure by using two M6 x 40mm Bolts (10).
- Repeat for the other side.

## STEP 2

E: 2  
10: 8

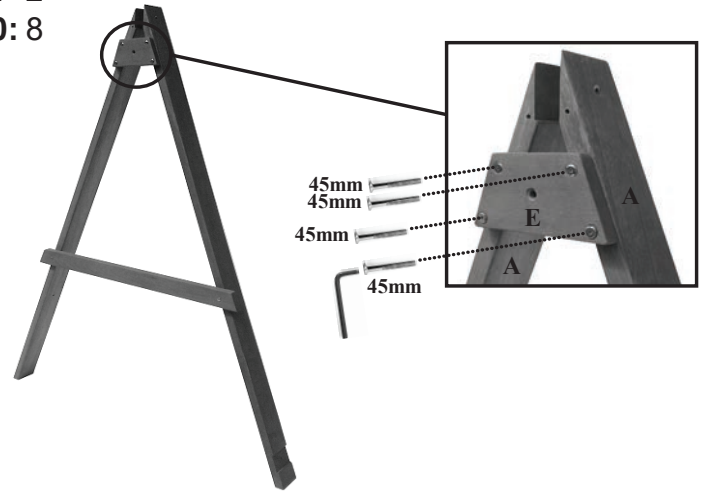


- Align Top Stretcher (E) with the top of the legs, as shown.
- Secure using four M6 x 40mm Bolts (10).
- Repeat for the other side.

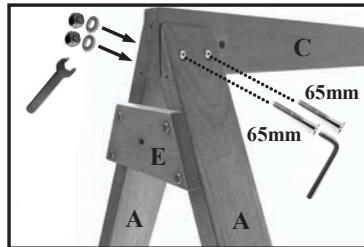

## STEP 3

C: 1      7: 4      12: 4      13: 4

- Align Top Rail (C) between the top of the A-frame leg assembly.
- Secure using two M6 x 65mm Bolts (7), Washer (12), and Lock Nut (13). **NOTE:** install with the nut on the back of the swing—the side the bottom rail will be installed.

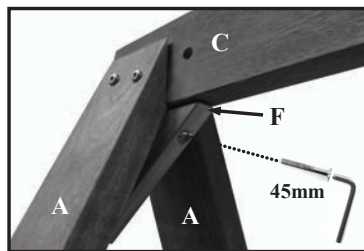


## STEP 4

F: 2      10: 2

- Attach Stabilizer Bracket (F) to Top Rail (C) and Top Stretcher (E) using one M6 x 45mm Bolt (10).
- Repeat for the other side.

### Important Reminder:

Do not fully tighten hardware until all components have been assembled. If hardware is tightened too soon, mounting holes may not align, and parts may not easily fit together.

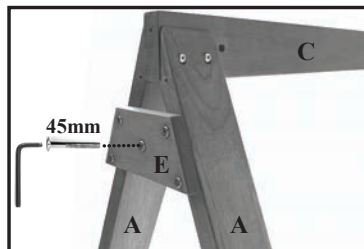



## STEP 5

10: 2

- Insert one M6 x 45mm Bolt (10) through Top Stretcher (E) to secure it to Stabilizer Bracket (F).
- Repeat for the other side.

## STEP 6


D: 4  
9: 2  
10: 4  
12: 4  
13: 4

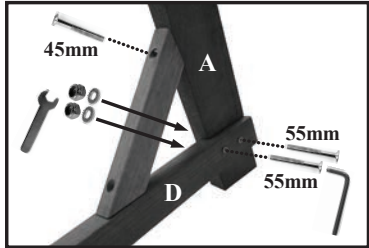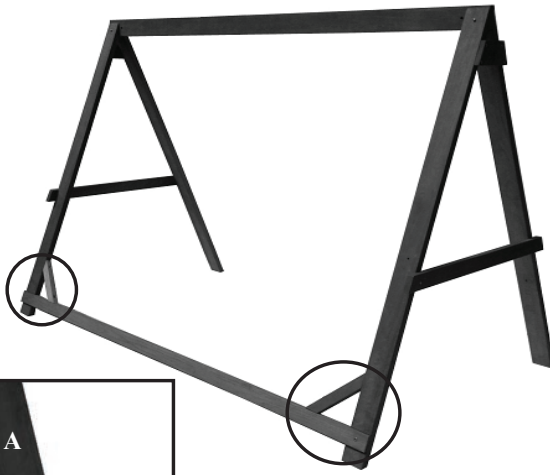

- Align Bottom Rail (D) with the back of Frame Legs (A).
- Secure the inside of the bottom rail using one M6 x 45mm Bolt (10), as shown.
- Secure the outside of the bottom rail using two M6 x 55mm Bolts (9), Washers (12), and Lock Nuts (13).
- Repeat on the opposite side.

## STEP 7


G: 2  
H: 2  
8: 4  
11: 4

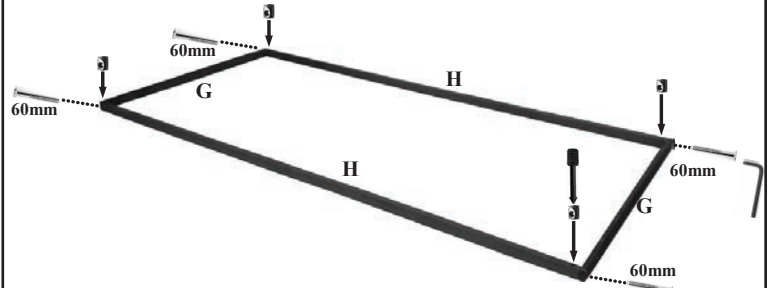

- Insert two Barrel Nuts (11) into each Long Canopy Frames (H). Use the Barrel Nut Driver (4) to align the opening in the nut with the hole on the outside of the frame.
- Secure each Short Canopy Frames (G) to the long frames using two M6 x 60mm Bolts (8), ensuring the bolt threads into the barrel nut.

## STEP 8


10: 4

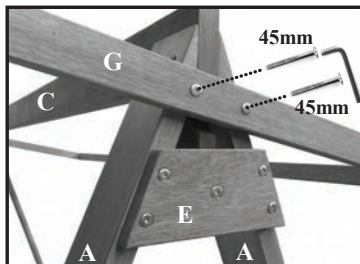

- Align the assembled canopy frame with the top of the A-Frame legs and secure using two M6 x 45mm Bolts (10).
- Repeat for the other side.

## STEP 9


I: 1  
J: 1  
K: 2  
8: 6  
11: 4  
12: 2  
13: 2

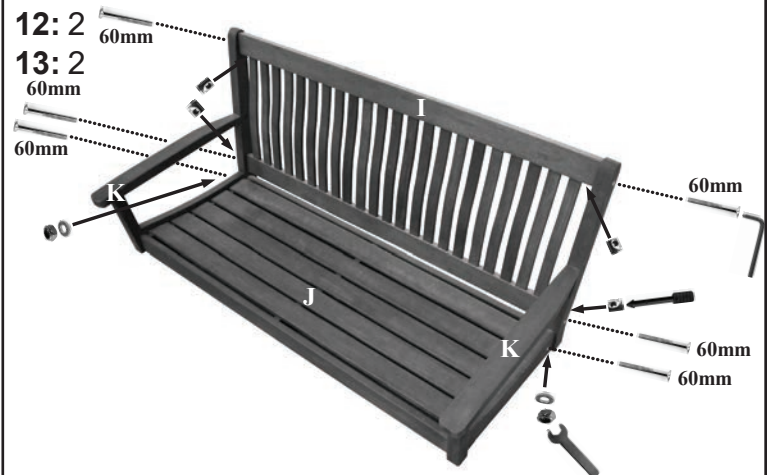

- Insert four Barrel Nuts (11) into Backrest (I). Use the Barrel Nut Driver (4) to align the opening in the nut with the hole on the outside of the frame.
- Attach left & right Arm Frame (K) to Backrest (I) and Seat (J) using six M6 x 60mm Bolts (8), two Washers (12) and two Lock Nuts (13), as shown.


## STEP 10

1: 2

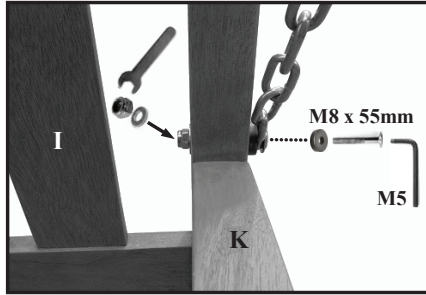


- Remove the washer and lock nut from the bolt side of Chain (1).
- Ensuring the plastic washer remains on the bolt, insert it through the outside of the arm frame. Replace the washer and nut over the bolt and secure using the M5 Hex Key (3) and a spanner.
- Repeat on the other side.

## STEP 11

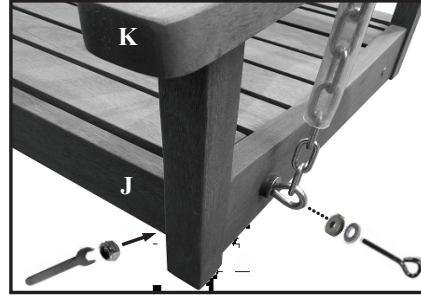

- Remove the lock nut from the eye hook end of Chain (1).
- Ensuring the metal and plastic washers remain on the eye hook, insert it through the seat panel. Replace the nut onto the eye hook and secure using a spanner.
- Repeat on the other side.

## STEP 12

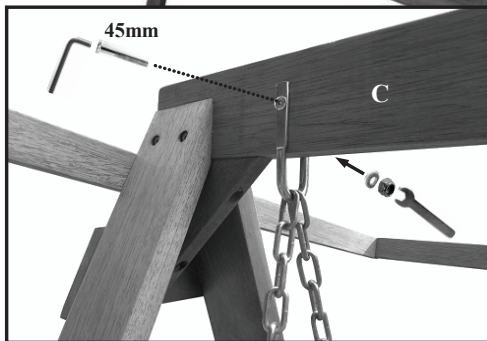

- Remove all hardware from the U-Bolt on Chain (1).
- Attach the U-Bolt to Top Rail (C) using the removed hardware, as shown.
- Repeat on the other side.

## STEP 13

L: 1



- Place and tie Canopy (L) onto the canopy frame.
- Check to make sure all hardware at all assembly points are securely tightened. Do not use the swing before checking hardware.

# General Use & Care

**SAFE USE:** For residential use only. Only use on a flat, level surface. Do not stand on the seat. Remove and store the canopy during windy conditions or when swing will not be used for extended periods.

**MOVING:** Always lift furniture when moving it, never drag it.

**INSPECT:** Periodically check bolts and hanging hardware, tighten as necessary.

**CLEANING:** Identify the direction of the woodgrain. Following the direction of the woodgrain, wipe surfaces with a soft, dry cloth. Do not use harsh chemicals or abrasive materials or a pressure washer to clean.

**EXPOSURE:** Over time, sunlight and weather elements may degrade and change the color of natural wood. Avoid leaving wooden furniture in the rain or high-humidity climates as wood expands and contracts with moisture and humidity changes. If this item is not used for extended periods, cover it with a breathable cover or store it indoors.

**WINTER CARE & STORAGE:** Protect this item from inclement weather, especially ice and snow. Move to a cool, dry indoor location. Covering while in storage is recommended to help prevent dust build-up.

**MAINTENANCE:** Left untreated, the wood will turn a silvery gray color. To maintain the appearance, apply a suitable penetrating Wood, Teak or Linseed Oil (not included) twice a year. Bring furniture indoors and allow it to dry for at least 12 days before applying oil. Only apply oil to wooden surfaces. Use a soft cloth or soft brush and carefully apply oil as directed by the wood oil manufacturer.

**WARNING: THE ONE-YEAR WARRANTY DOES NOT COVER DAMAGES OR DEFECTS CAUSED BY THE APPLICATION OF CHEMICAL TREATMENTS OR PROTECTIVE COATINGS.**

## SAFETY STATEMENTS & WARNINGS

- Do not exceed the weight capacity of the swing.
- Do not use the swing if there are signs of weakness in the wood or hanging hardware.
- Inspect hardware often and tighten loose hardware.
- Remove the canopy during windy conditions.
- Do not put hot items on or near furniture.
- Keep furniture a safe distance from heat sources such as fire pits, patio heaters, and grills.
- Do not allow children to use this product unsupervised.
- Do not use harsh chemicals or abrasive materials to clean the furniture.

**Any modification to the product or failure to follow recommended care will void the product warranty.**

## WARNING!

**Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.**